

# **Assembly Instruction**

<u>CAUTION:</u> Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

ITEM#:LIT4491A

# **Care and Cleaning**

To clean the outside of the fixture, use a dry or slightly dampened clean cloth(use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth(use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time:30 minutes

#### **Part List and Hardware List**

				••			
PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Wire Nut	W	3X	G	Hanging Loop		1X
В	Mounting Plate		1X	Н	Upper Frame		1X
С	Mounting Screw	Į.	2X	I	Lampbody		1X
D	Canopy		1X	J	Tube	<del></del>	1X
Е	Chain	000	1X	К	Shade		1X
E1	Closable Link		2X	L	Bulb		3X
F	Fixture Loop	E-111-3	1X				

#### Installation

### Step 1

Unpack all parts from cartons carefully.

Insert the wires of the Lampbody(I) through one end of the Tube(J), fix it by turning the Tube(J) clockwise.


Place the Upper Frame(H) onto the threaded portion of the Tube(J) and fix it by turning the Hanging Loop(G) clockwise till tight.


Screw the Chain(E)to the lock of the Canopy (D) and Hanging Loop(G) with Closable Link(E1) as diagram

Insert each hook of acrylic beads of Upper Frame (H) to the holes in the the Lampbody(I) as diagram.

Attach the Shade(K) to the Lampbody(I) by inserting the hooks of the Shade(K) to the holes of the Lampbody(I)


Insert each hook of acrylic beads of Shade(K) to the holes in the the Lampbody(I) as diagram.

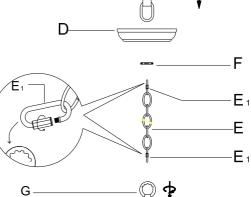

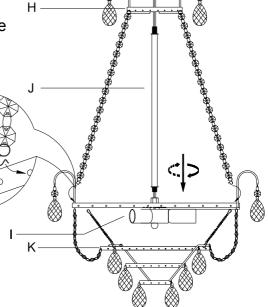

#### Step 2 Wire connection

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:		
Black	White		
*Parallel Cord(round&smooth)	*Parallel Cord(square&ridged)		
Clear, Brown, Gold or Black without Tracer(colored stripes	Clear,Brwn,Gold or Black without Tracer(colored stripes)		
Insulated Wire(not green)with copper metal conductor	Insulated Wire(not green)with Silver metal conductor		



\*Note: When parallel wire(SPTI&SPTII)is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left)



#### **Grounding Instructions:**


- a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
- b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

#### Step 3

Install the Mounting Plate(B) to the junction box with Mounting Screw (C)

Attach the Canopy(D) to the junction box and fix it by turning the Fixture Loop(F) clockwise to the lock of the Mounting Plate(B).

Insert the bulbs (L) into the Socket of the Lampbody(I)

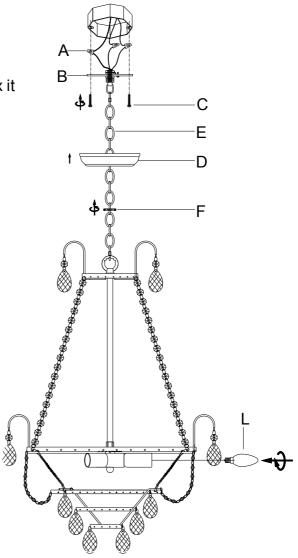

PLEASUE USE ON/OFF TYPE"B" BULB MAX 40-WATT OR CFL BULB MAX 9-WATT THERE ARE 3PCS 25W BULBS IN THE BOX.

# Step 5

Consult a qualified electrician to ensure correct branch circuit conductor.

**ENJOY YOUR LAMP**