


# 7 PC SOFA SET

Style # IT-610049T

## ASSEMBLY INSTRUCTIONS

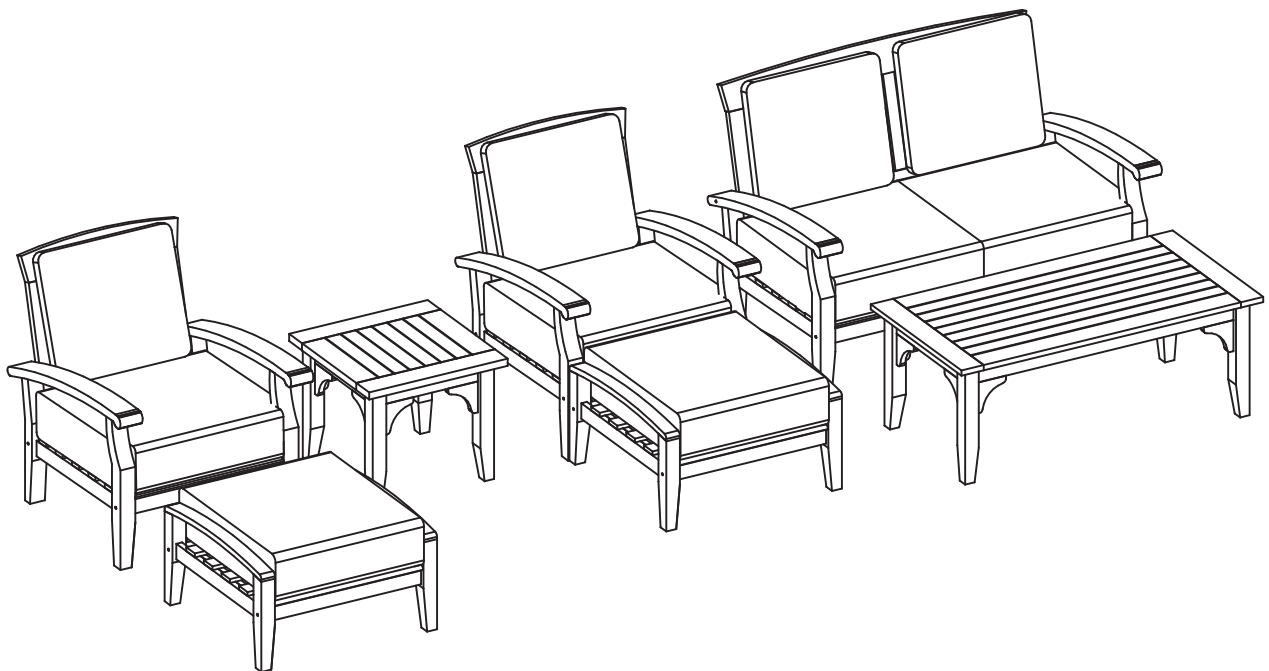


### CUSTOMER SERVICE INFORMATION

Please do not return to the store. If any pieces are missing call our toll free number at 1-888-287-4275 from 9:00 am to 5:00 pm CST (Monday to Friday) for replacement parts. For faster service, have the style number handy when calling.

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.  
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

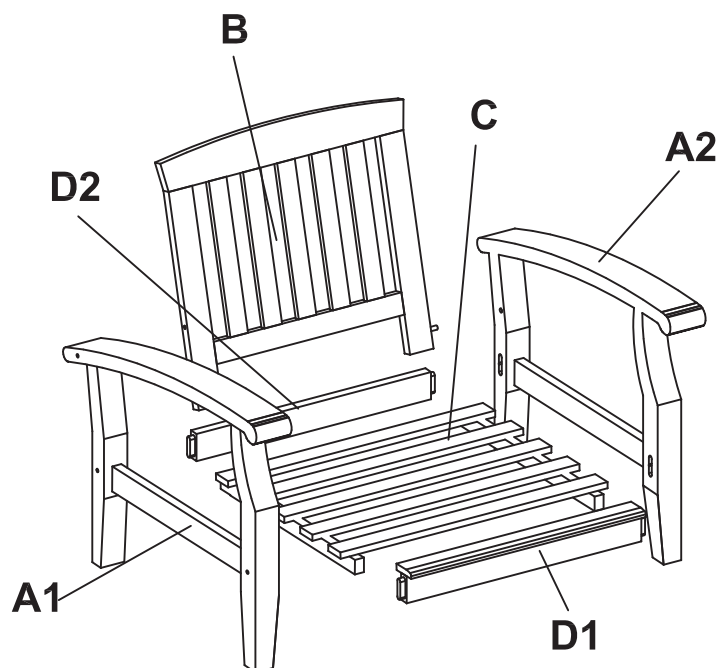



- \* ASSEMBLE YOUR UNIT IN AN AREA FREE FROM ANY OBJECTS THAT MIGHT SCRATCH THE SURFACE OF YOUR UNIT.
- \* EXAMINE ALL PACKING MATERIAL BEFORE DISCARDING, SHORTAGES MAY OCCUR FROM PARTS LEFT IN THE PACKING MATERIAL.
- \* PLEASE READ THE INSTRUCTIONS CAREFULLY, AND VERIFY ALL PARTS ARE INCLUDED.
- \* ALL BOLTS AND SCREWS NEED TO BE TIGHTENED FROM TIME TO TIME TO AVOID DAMAGE.



### LIST OF WOODEN PARTS

NO.	DESCRIPTION	Q'TY
A1	Right side frame	1 Pc
A2	Left side frame	1 Pc
B	Back support	1 Pc
C	Seat	1 Pc
D1	Front apron (round edge)	1 Pc
D2	Back apron	1 Pc


### LIST OF HARDWARE PARTS

- |          |   |                             |
|----------|---|-----------------------------|
| <b>E</b> |  | 3 1/2" Bolt ..... 2 Pcs + 1 |
| <b>F</b> |  | 2" Bolt ..... 4 Pcs + 1     |
| <b>G</b> |  | 1" Screw ..... 4 Pcs + 1    |
| <b>H</b> |  | Wooden cap ..... 6 Pcs + 1  |

### TOOLS REQUIRED

For proper assembly use these tools (not included)


- 8" Phillips screwdriver  
- for tightening all bolts.
- Rubber mallet  
- for tapping in the wooden caps.

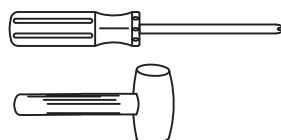

### CUSHION :

- \* To clean, hand wash with mild detergent, wipe with damp cloth, or use sponge.
- \* It is very important to air dry cushions when wet as mildew may growth on dirt and other substances that are not removed from fabric.
- \* To extend life of your cushions, keep them in storage during rainy seasons or use furniture cover.
- \* Please be notified that cushions with mildew problem are not under warranty.


## STEP 1

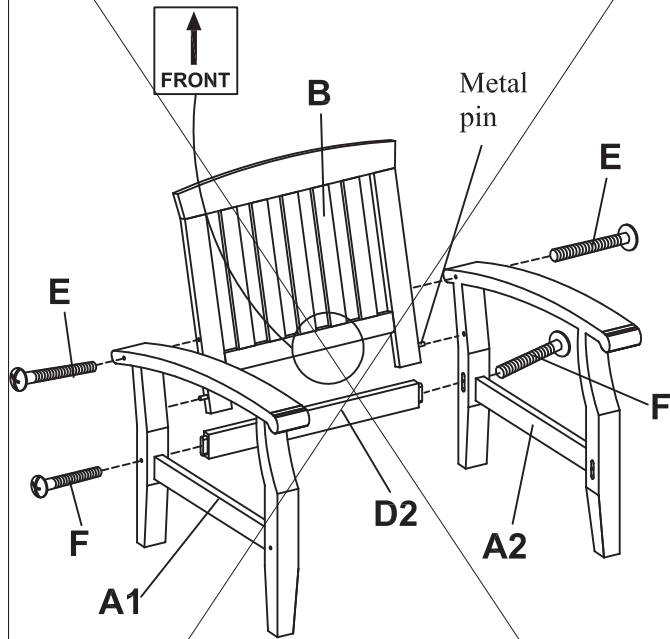

Attach right and left side frames (A1 & A2) into back support (B) and back apron (D2). Secure using 3 1/2" bolts (E) into back support and 2" bolts (F) into back apron as shown.


**\*\* DO NOT TIGHTEN BOLTS YET.**

## STEP 2

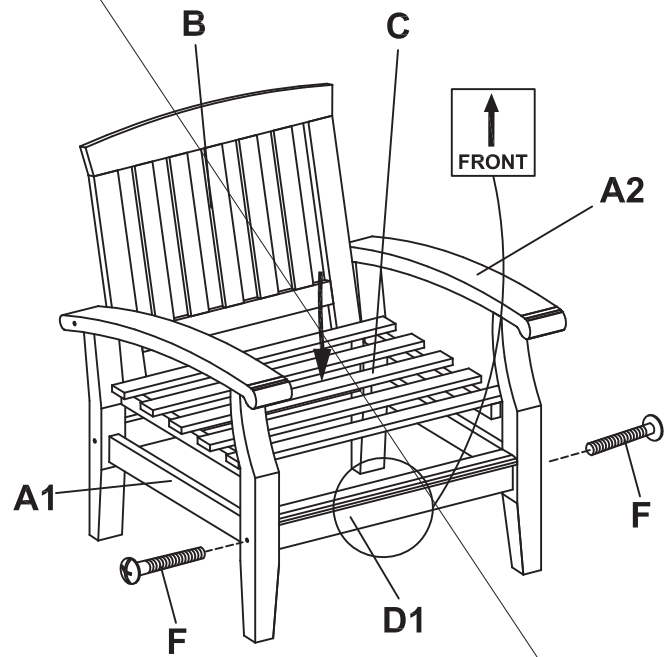


- Attach front apron (D1) into side frames and secure using 2" bolts (F). ( Apron with round edge must attached in front )
- Next, put the seat (C) into side frames.

## STEP 3

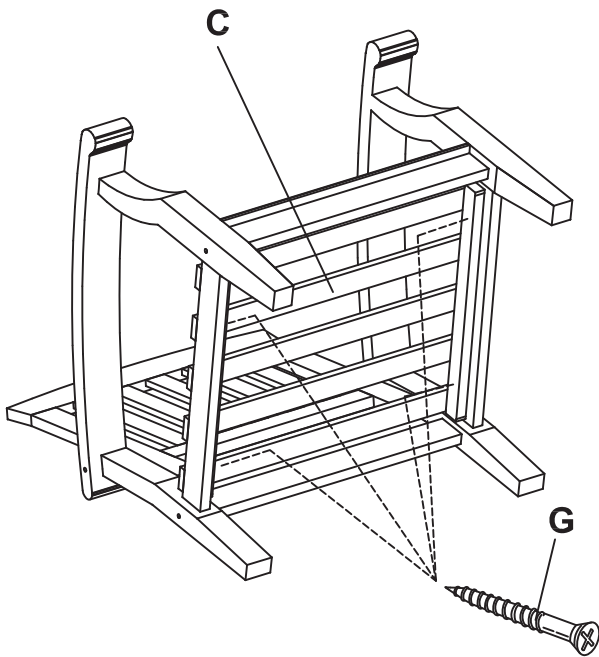

- Lay down the chair and secure the seat using 1" screws (G) as shown. Tighten using screwdriver.
- Upright the chair.


## STEP 4

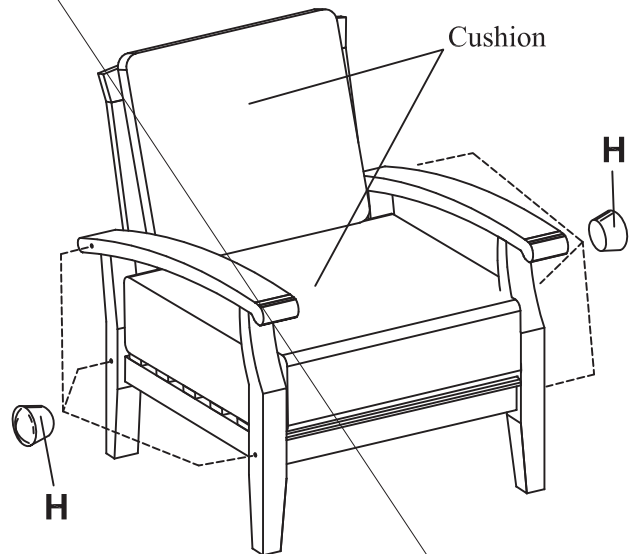

- Make sure all parts are correctly connected and tighten all bolts and screws completely using screwdriver.
- Tapping in the wooden caps (H) to cover bolts head using rubber mallet.
- Install the cushions.


**THE CHAIR IS NOW READY FOR USE.**

- \* ASSEMBLE YOUR UNIT IN AN AREA FREE FROM ANY OBJECTS THAT MIGHT SCRATCH THE SURFACE OF YOUR UNIT.
- \* EXAMINE ALL PACKING MATERIAL BEFORE DISCARDING, SHORTAGES MAY OCCUR FROM PARTS LEFT IN THE PACKING MATERIAL.
- \* PLEASE READ THE INSTRUCTIONS CAREFULLY, AND VERIFY ALL PARTS ARE INCLUDED.
- \* ALL BOLTS AND SCREWS NEED TO BE TIGHTENED FROM TIME TO TIME TO AVOID DAMAGE.

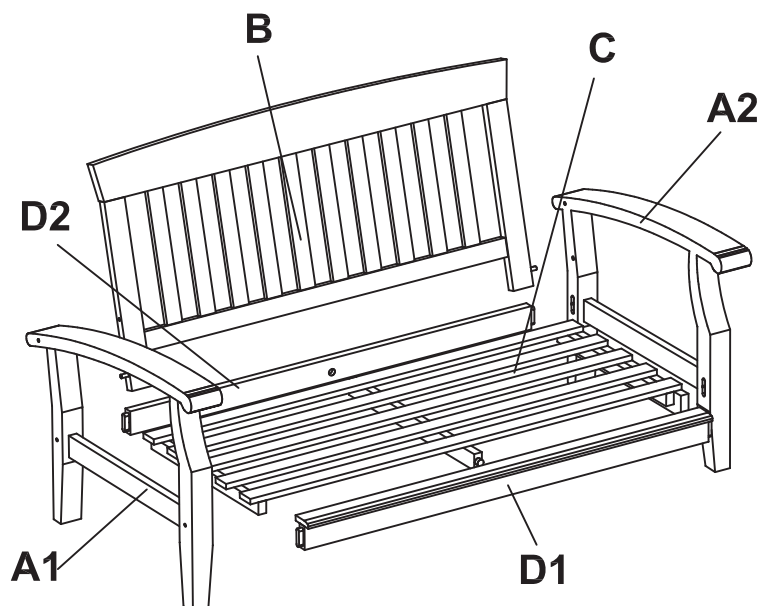


LIST OF WOODEN PARTS		
NO.	DESCRIPTION	Q'TY
A1	Right side frame	1 Pc
A2	Left side frame	1 Pc
B	Back support	1 Pc
C	Seat	1 Pc
D1	Front apron (round edge)	1 Pc
D2	Back apron	1 Pc

### LIST OF HARDWARE PARTS



3 1/2" Bolt ..... 2 Pcs + 1



2" Bolt ..... 4 Pcs + 1



1 1/2" Screw ..... 1 Pc + 1



1" Screw ..... 5 Pcs + 1




Wooden cap ..... 6 Pcs + 1

### TOOLS REQUIRED

For proper assembly use these tools (not included)


- 8" Phillips screwdriver  
- for tightening bolts and screws.
- Rubber mallet  
- for tapping in the wooden caps.

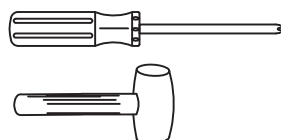


### CUSHION :

- \* To clean, hand wash with mild detergent, wipe with damp cloth, or use sponge.
- \* It is very important to air dry cushions when wet as mildew may growth on dirt and other substances that are not removed from fabric.
- \* To extend life of your cushions, keep them in storage during rainy seasons or use furniture cover.
- \* Please be notified that cushions with mildew problem are not under warranty.


## STEP 1

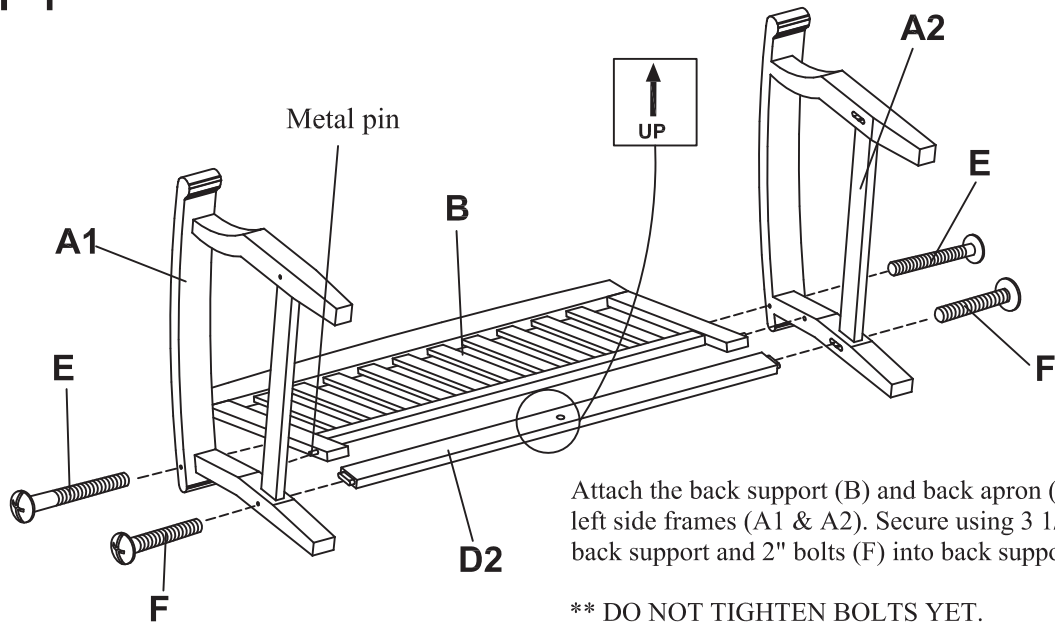


## STEP 2

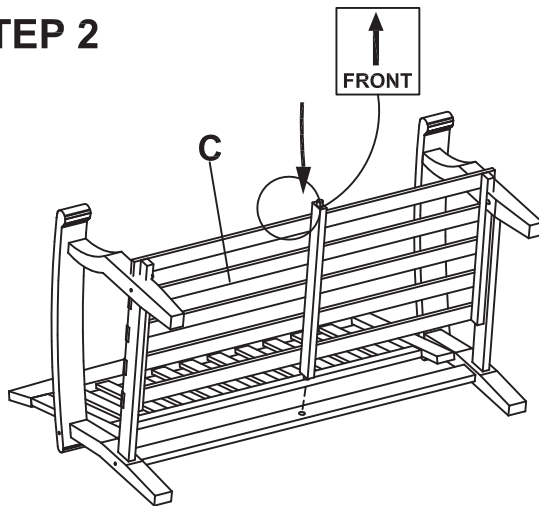


## STEP 3

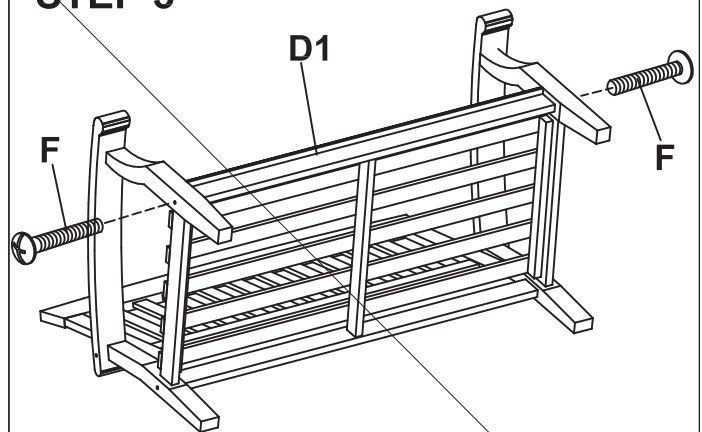

## STEP 4

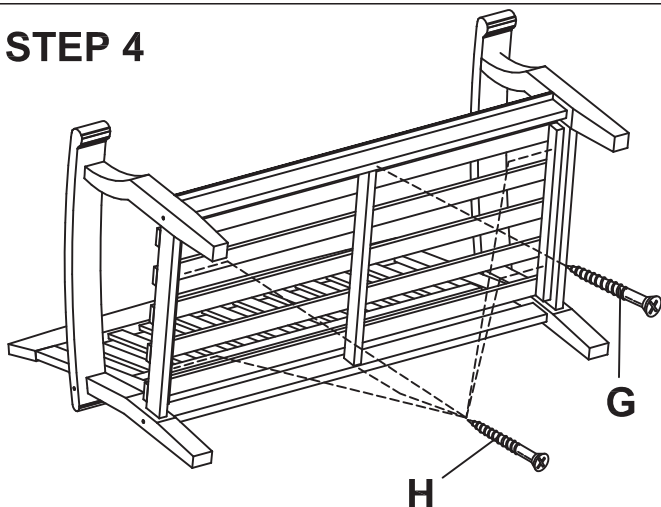


## STEP 5

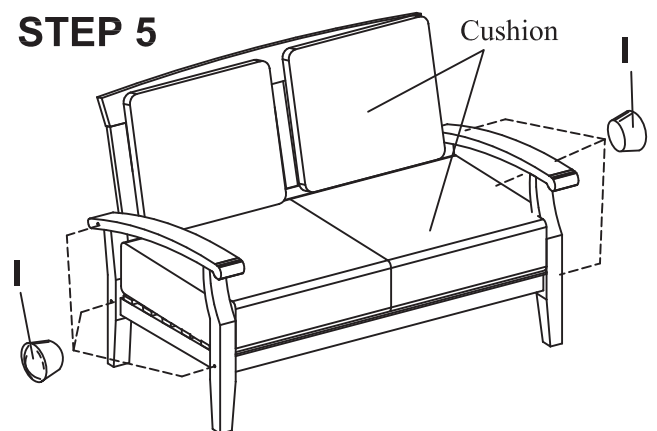

**THE BENCH IS NOW READY FOR USE.**



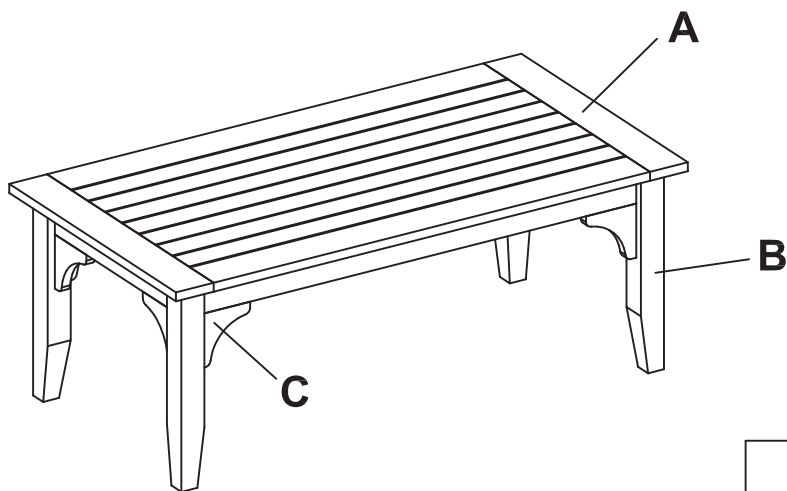

### **IMPORTANT !**

- \* **ASSEMBLE YOUR UNIT IN AN AREA FREE FROM ANY OBJECTS THAT MIGHT SCRATCH THE SURFACE OF YOUR UNIT.**
- \* **EXAMINE ALL PACKING MATERIAL BEFORE DISCARDING, SHORTAGES MAY OCCUR FROM PARTS LEFT IN THE PACKING MATERIAL.**
- \* **PLEASE READ THE INSTRUCTIONS CAREFULLY, AND VERIFY ALL PARTS ARE INCLUDED.**
- \* **ALL NUTS AND SCREWS NEED TO BE TIGHTENED FROM TIME TO TIME TO AVOID DAMAGE.**



LIST OF WOODEN PARTS		
NO.	DESCRIPTION	Q'TY
A	Table top	1 Pc
B	Leg frame	4 Pcs
C	Table support	8 Pcs

### **LIST OF HARDWARE PARTS**

- |          |   |                               |
|----------|---|-------------------------------|
| <b>D</b> |  | Washer ..... 4 Pcs + 1        |
| <b>E</b> |  | Spring washer ..... 4 Pcs + 1 |
| <b>F</b> |  | Nut ..... 4 Pcs + 1           |
| <b>G</b> |  | 1 1/4" Screw ..... 16 Pcs + 1 |


### **TOOLS REQUIRED**

For proper assembly use these tools.


1. 8" Phillips screwdriver (not included)
  - for tightening screws.



2. Wrench (included)
  - for tightening all nuts.




## STEP 1

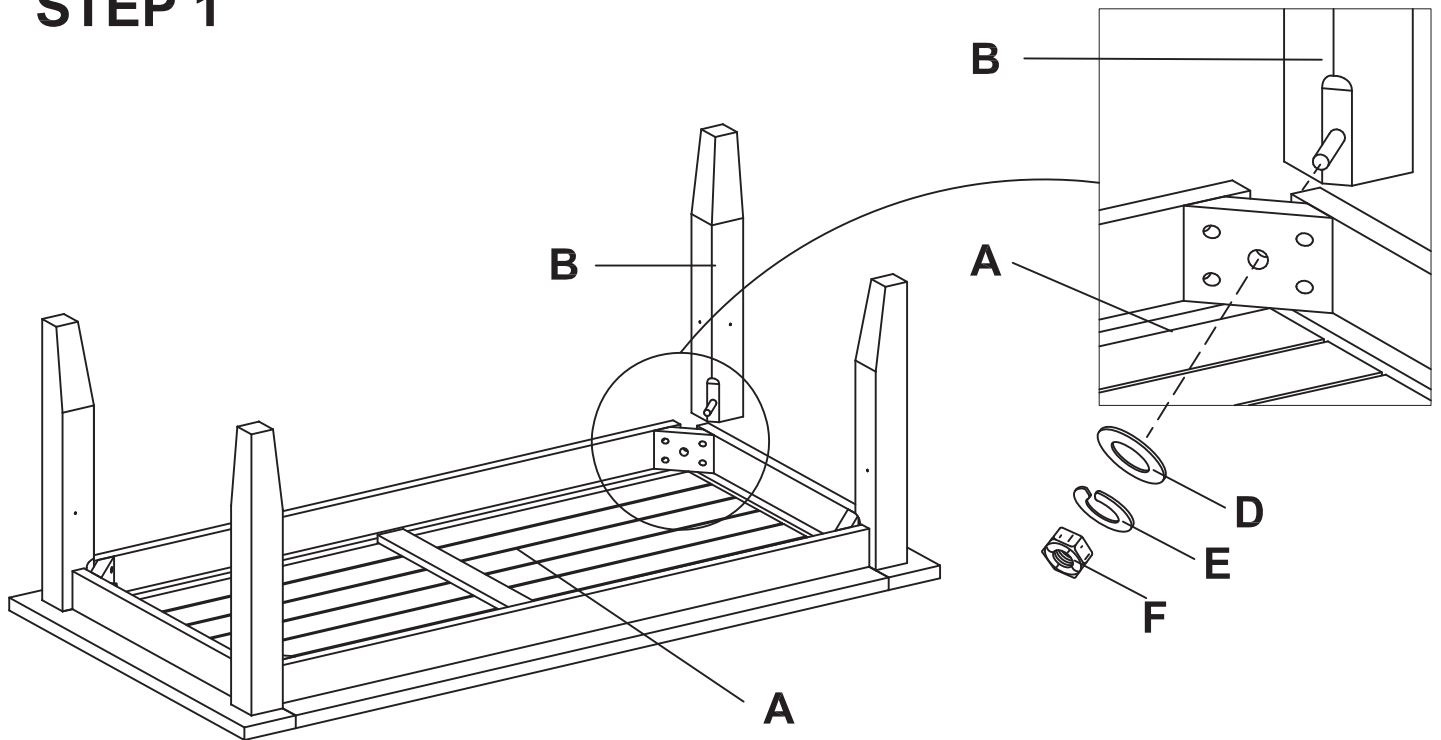

- Attach the leg frames (B) into each corner of table top (A).
- Assemble the washers (D), Spring washers (E) and nuts (F) to leg frames (B). Tighten the nut using wrench.

## STEP 2

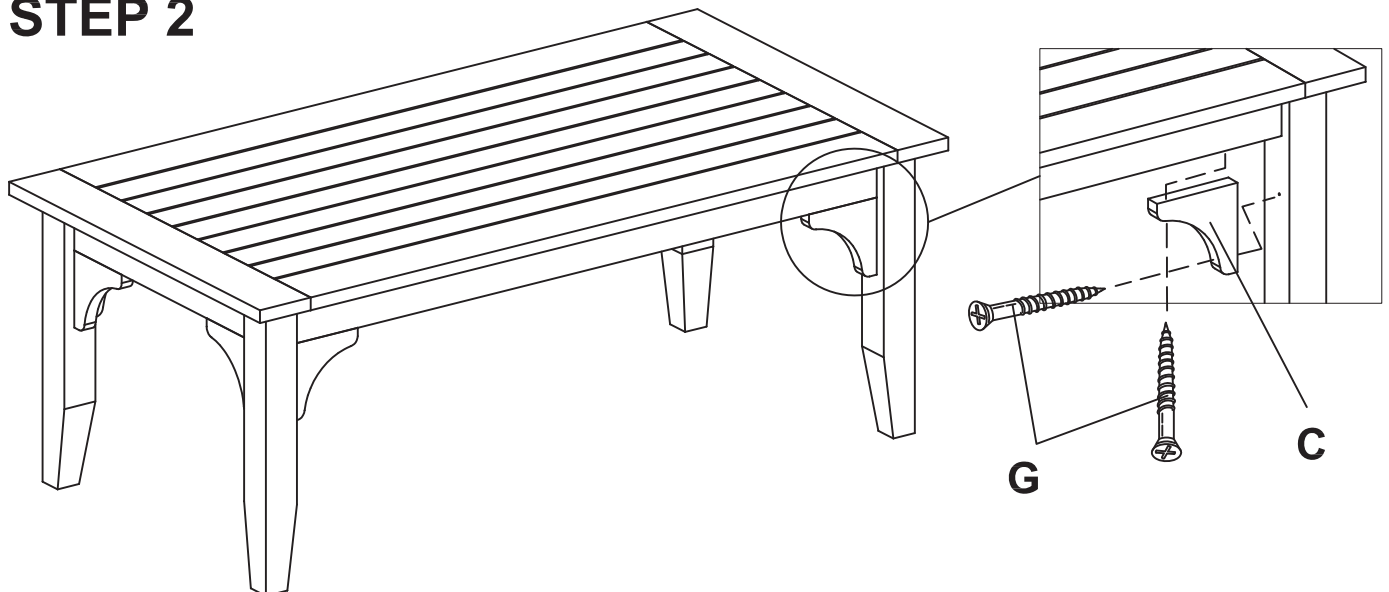


- Next, attach the table support (C) into each corner of leg frames and secure using 1 1/4" screws (G) as diagram shown.
- Make sure all parts are correctly connected and tighten all screws using screwdriver.

**THE COFFEE TABLE IS NOW READY FOR USE.**





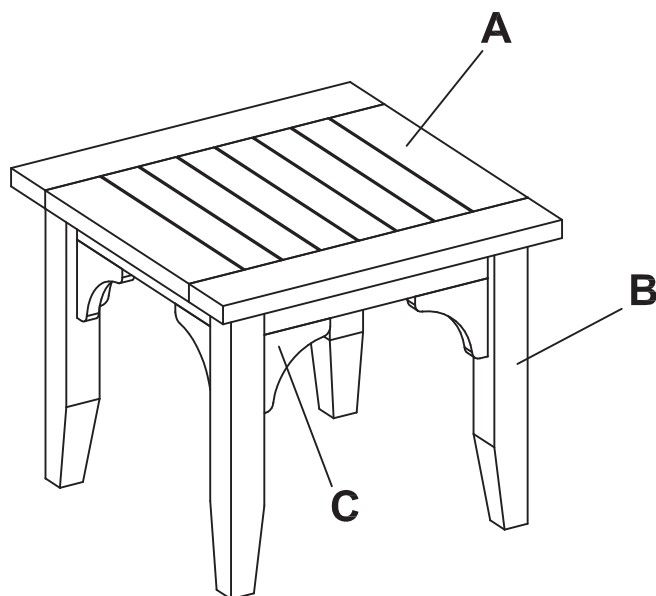

### **IMPORTANT !**

- \* **ASSEMBLE YOUR UNIT IN AN AREA FREE FROM ANY OBJECTS THAT MIGHT SCRATCH THE SURFACE OF YOUR UNIT.**
- \* **EXAMINE ALL PACKING MATERIAL BEFORE DISCARDING, SHORTAGES MAY OCCUR FROM PARTS LEFT IN THE PACKING MATERIAL.**
- \* **PLEASE READ THE INSTRUCTIONS CAREFULLY, AND VERIFY ALL PARTS ARE INCLUDED.**
- \* **ALL NUTS AND SCREWS NEED TO BE TIGHTENED FROM TIME TO TIME TO AVOID DAMAGE.**



LIST OF WOODEN PARTS		
NO.	DESCRIPTION	Q'TY
A	Table top	1 Pc
B	Leg frame	4 Pcs
C	Table support	8 Pcs

### **LIST OF HARDWARE PARTS**

- D**  Washer ..... 4 Pcs + 1
- E**  Spring washer ..... 4 Pcs + 1
- F**  Nut ..... 4 Pcs + 1
- G**  1 1/4" Screw ..... 16 Pcs + 1


### **TOOLS REQUIRED**

For proper assembly use these tools.

1. 8" Phillips screwdriver (not included)
  - for tightening screws.




2. Wrench (included)
  - for tightening all nuts.






## STEP 1

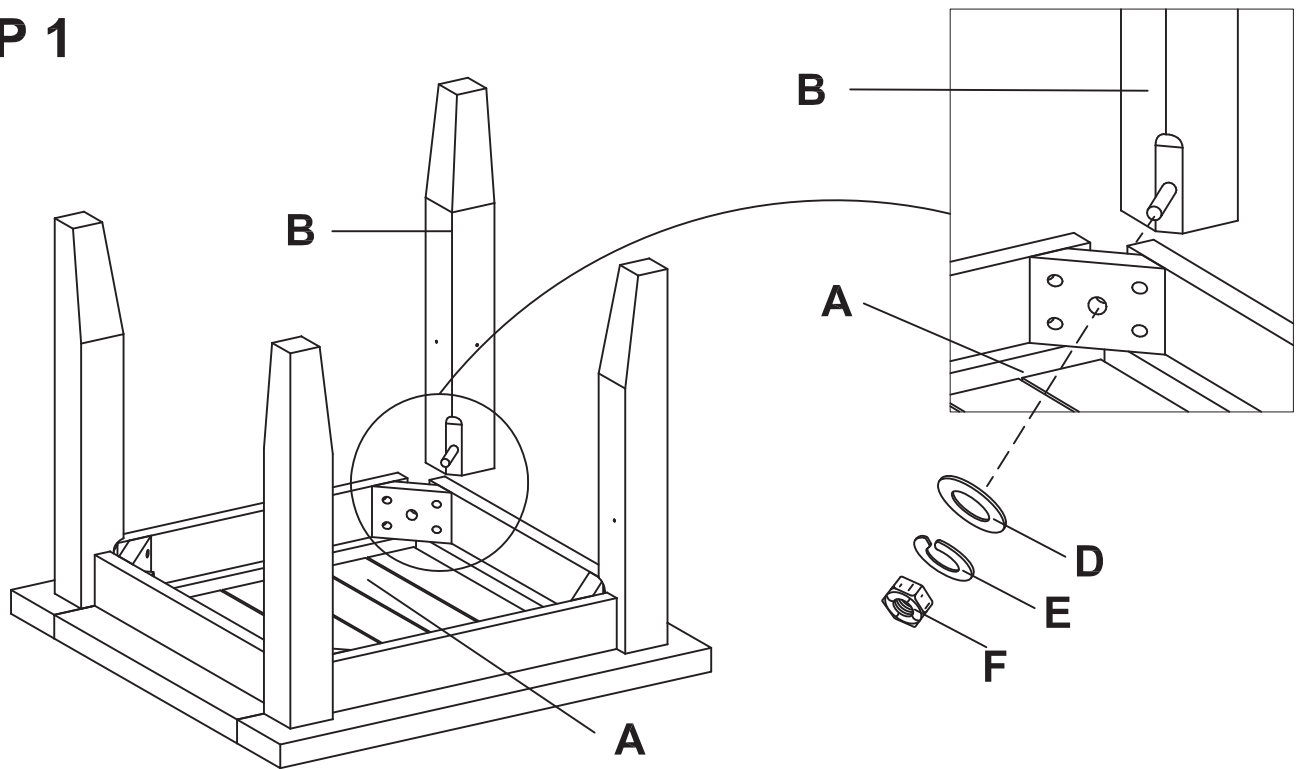

- Attach the leg frames (B) into each corner of table top (A).
- Assemble the washers (D), Spring washers (E) and nuts (F) to leg frames (B). Tighten the nuts using wrench.


## STEP 2

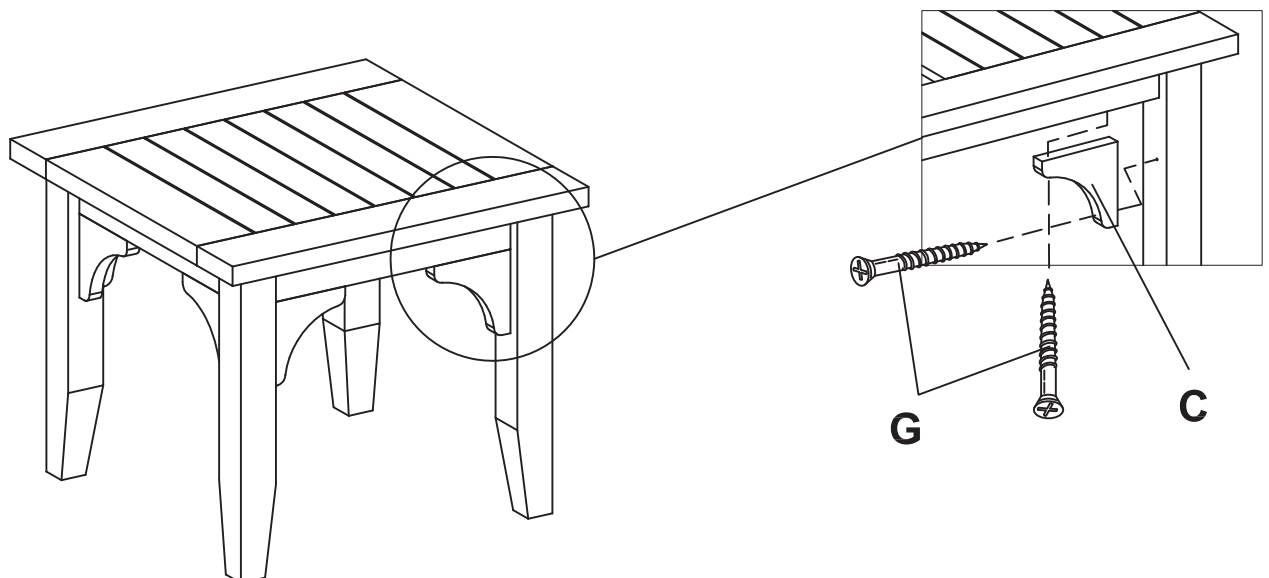

- Next, attach the table support (C) into each corner of leg frames and secure using 1 1/4" screws (G) as diagram shown.
- Make sure all parts are correctly connected and tighten all screws using screwdriver.


**THE END TABLE IS NOW READY FOR USE.**

- \* ASSEMBLE YOUR UNIT IN AN AREA FREE FROM ANY OBJECTS THAT MIGHT SCRATCH THE SURFACE OF YOUR UNIT.
- \* EXAMINE ALL PACKING MATERIAL BEFORE DISCARDING, SHORTAGES MAY OCCUR FROM PARTS LEFT IN THE PACKING MATERIAL.
- \* PLEASE READ THE INSTRUCTIONS CAREFULLY, AND VERIFY ALL PARTS ARE INCLUDED.
- \* ALL BOLTS AND SCREWS NEED TO BE TIGHTENED FROM TIME TO TIME TO AVOID DAMAGE.

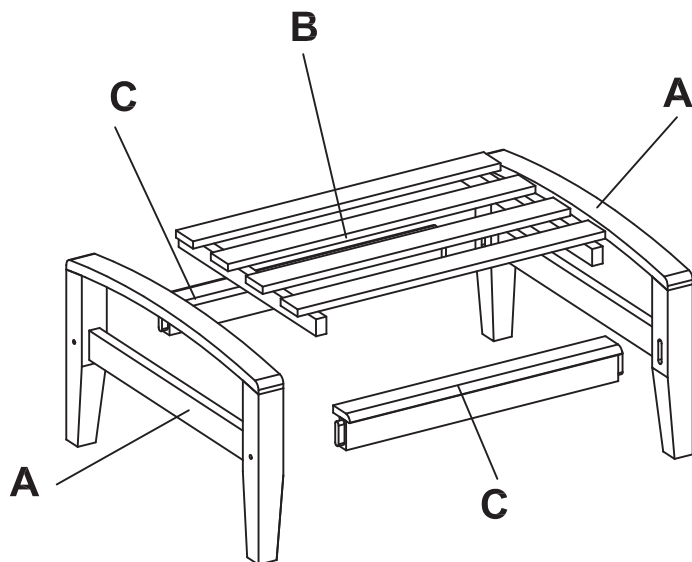

LIST OF WOODEN PARTS		
NO.	DESCRIPTION	Q'TY
A	Leg frame	2 Pcs
B	Stool	1 Pc
C	Apron	2 Pcs

## LIST OF HARDWARE PARTS



2" Bolt ..... 4 Pcs + 1



1" Screw ..... 4 Pcs + 1




Wooden cap ..... 4 Pcs + 1

## TOOLS REQUIRED

For proper assembly use these tools (not included)


1. 8" Phillips screwdriver
  - for tightening all bolts.
2. Rubber mallet
  - for tapping in the wooden caps.

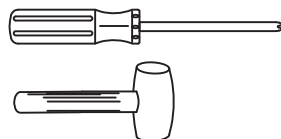

## CUSHION :


- \* To clean, hand wash with mild detergent, wipe with damp cloth, or use sponge.
- \* It is very important to air dry cushions when wet as mildew may growth on dirt and other substances that are not removed from fabric.
- \* To extend life of your cushions, keep them in storage during rainy seasons or use furniture cover.
- \* Please be notified that cushions with mildew problem are not under warranty.

## STEP 1

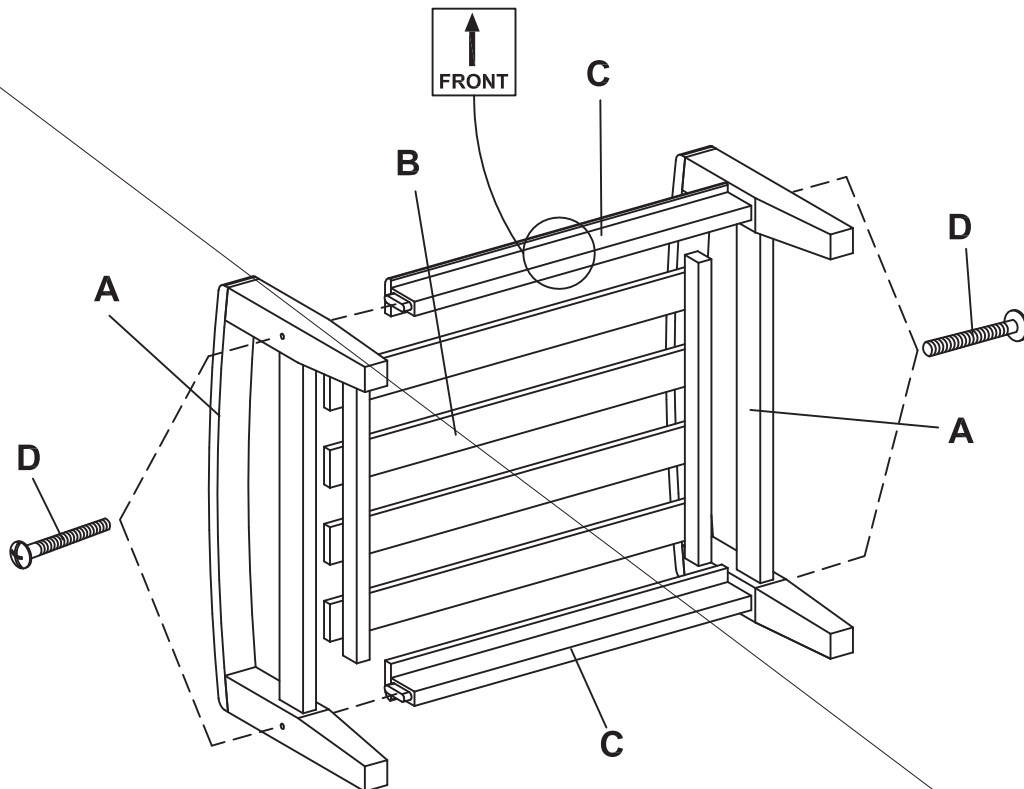


Attach the aprons (C) and stool (B) into leg frames (A) and secure using 2" bolts (D).  
( Apron with round edge must attached in front )  
Tighten the bolts using screwdriver.

## STEP 2

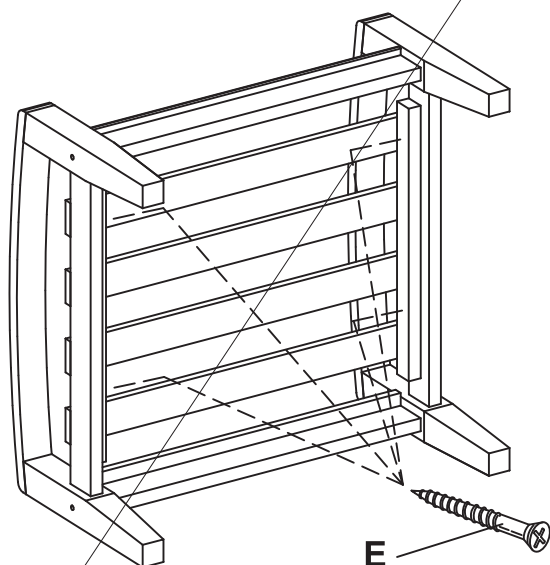

- Secure the seat using 1" screws (E) as shown.  
Tighten screws using screwdriver.
- Upright the stool.

## STEP 3

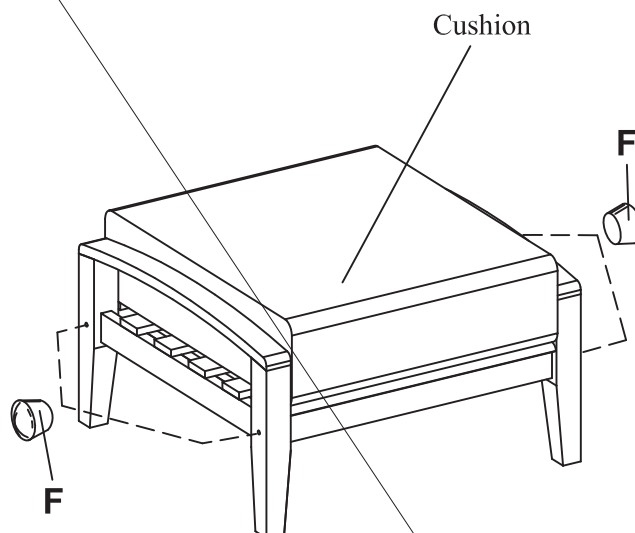

- Make sure all parts are correctly connected and tighten all bolts and screws completely using screwdriver.
- Tapping in the wooden caps (F) to cover bolts head using rubber mallet.
- Install the cushion.

**THE STOOL IS NOW READY FOR USE.**