

Thank you for choosing a **PALACE IMPORTS** product.
Your total satisfaction is our #1 priority.

Customer Service and Warranty Information




- Should you have a problem or need more information concerning the warranty, **do not contact the place of purchase. Please email our customer service department for immediate assistance at info@palaceimportsinc.com or go to www.palaceimportsinc.com**
- PALACE IMPORTS products are warranted to the original purchaser against defects in material or workmanship in the furniture. Defects as mentioned in this warranty refer to any imperfections which may impair the use of the product. Our warranty is expressly limited to the replacement of furniture parts and components for one year following the date of purchase.
- PALACE IMPORTS will replace any part that is defective. This warranty applies under conditions of normal use. Our furniture products are not intended for outdoor use. The warranty does not cover defects caused by improper assembly or disassembly, defects occurring after purchase due to product modifications, intentional damage, accident, misuse, exposure to the elements and labor or assembly costs.
- PALACE IMPORTS reserves the right to request proof of purchase to document a warranty claim. In no event shall PALACE IMPORTS be liable for incidental or consequent damages resulting from the misuse of the product.




ASSEMBLY GUIDE

FLEXIBLE 2-DOOR WARDROBE

SKU 5643 - Mocha
SKU 5646 - Java

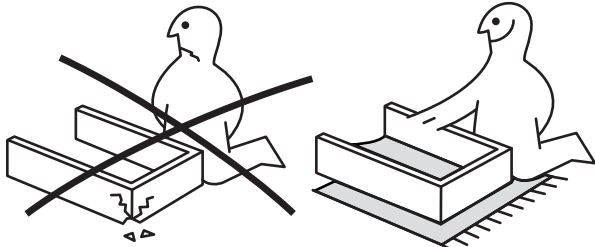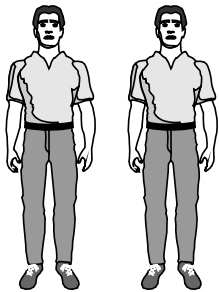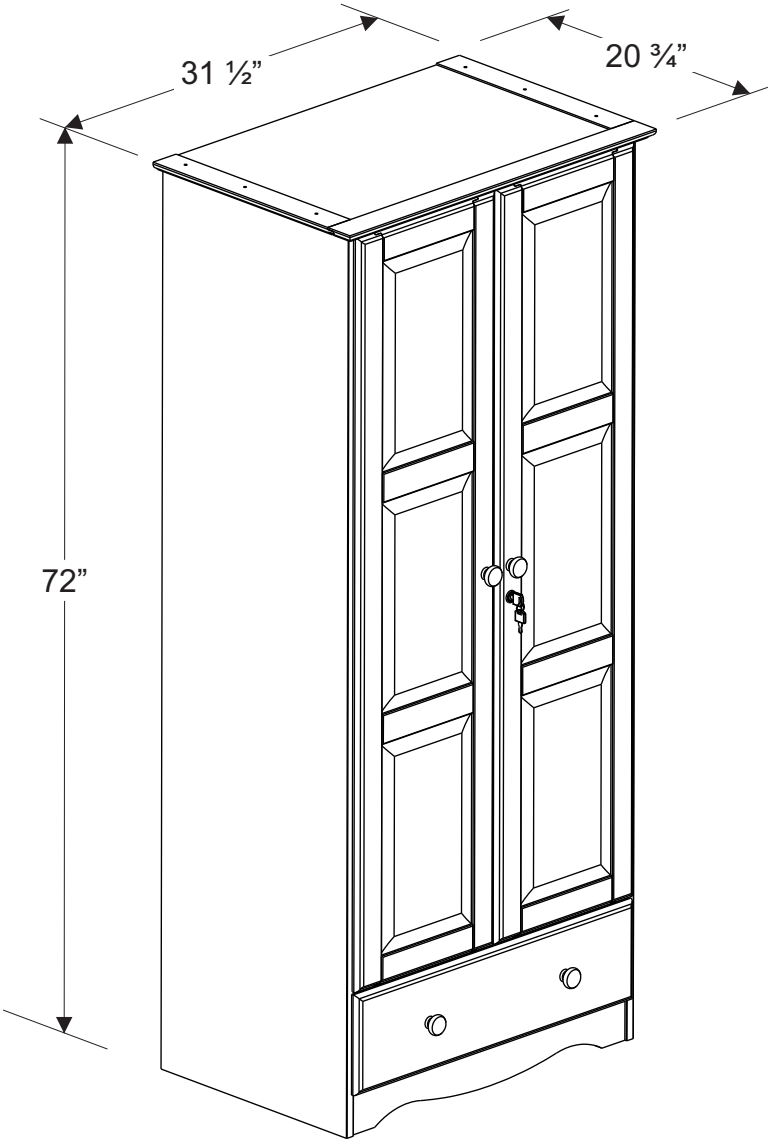

REV - 03/2023

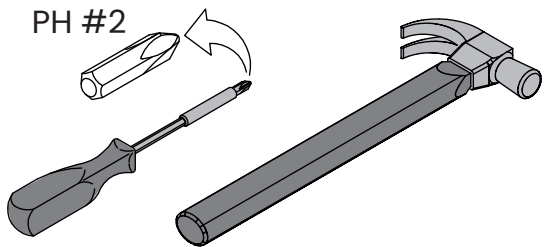


page 2/18
















PRE-ASSEMBLY PREPARATION


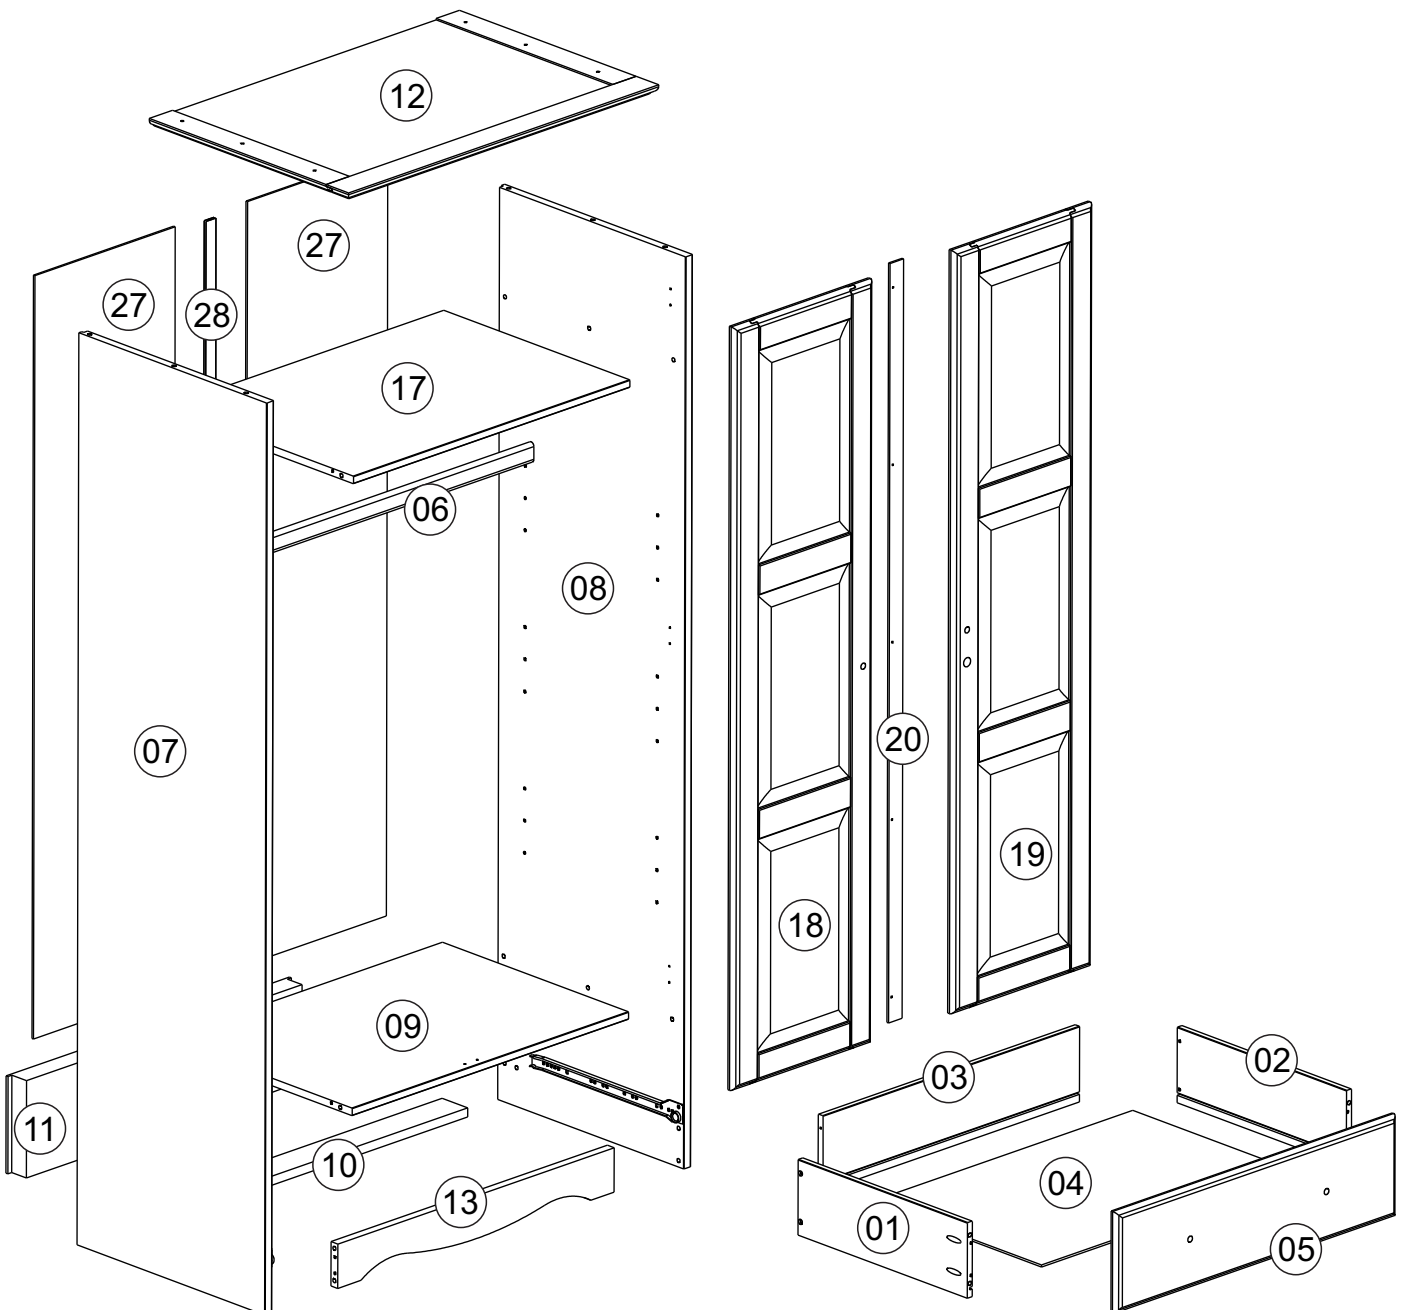
- Please check the contents before assembling. A full checklist of parts is provided below.
- If any parts are missing or damaged, please contact us at info@palaceimportsinc.com
- Assemble on a flat, smooth surface on top of a blanket
- Use only low-speed power drill setting
- Assemble as near as possible to the point of use
- The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN

PARTS DIAGRAM






SCREWS ARE SHOWN IN ACTUAL SIZE

A1	 4,0x30	26+1
A8	 3,0x20	02+1
A16	 4,0x40	06+1
A41	 4,0x30	04+1
A42	 4,0x14	08+1
A44	 3,5x14	37+1
C2	 8,0x25	30+1
D3		02
D10		02
E17	 450mm - 17 3/4"	01
E18	 450mm - 17 3/4"	01
F1		01
F2		01
F3		02
F10		06

G1	 10x10	56
H1		04

FURNITURE TIPOVER RESTRAINT KIT

A8	 3,0x20	02+1
F8		02
F9		01



WARNING:
CHOKING HAZARD

Small Parts.
Adult Supervision Required.
Not for children under 3 years old.





WARNING:

**FURNITURE TIPOVER CAN RESULT
IN SERIOUS INJURY OR DEATH**


This wardrobe includes tipover-
prevention hardware that
MUST BE ATTACHED TO THE WALL
per the assembly instructions.

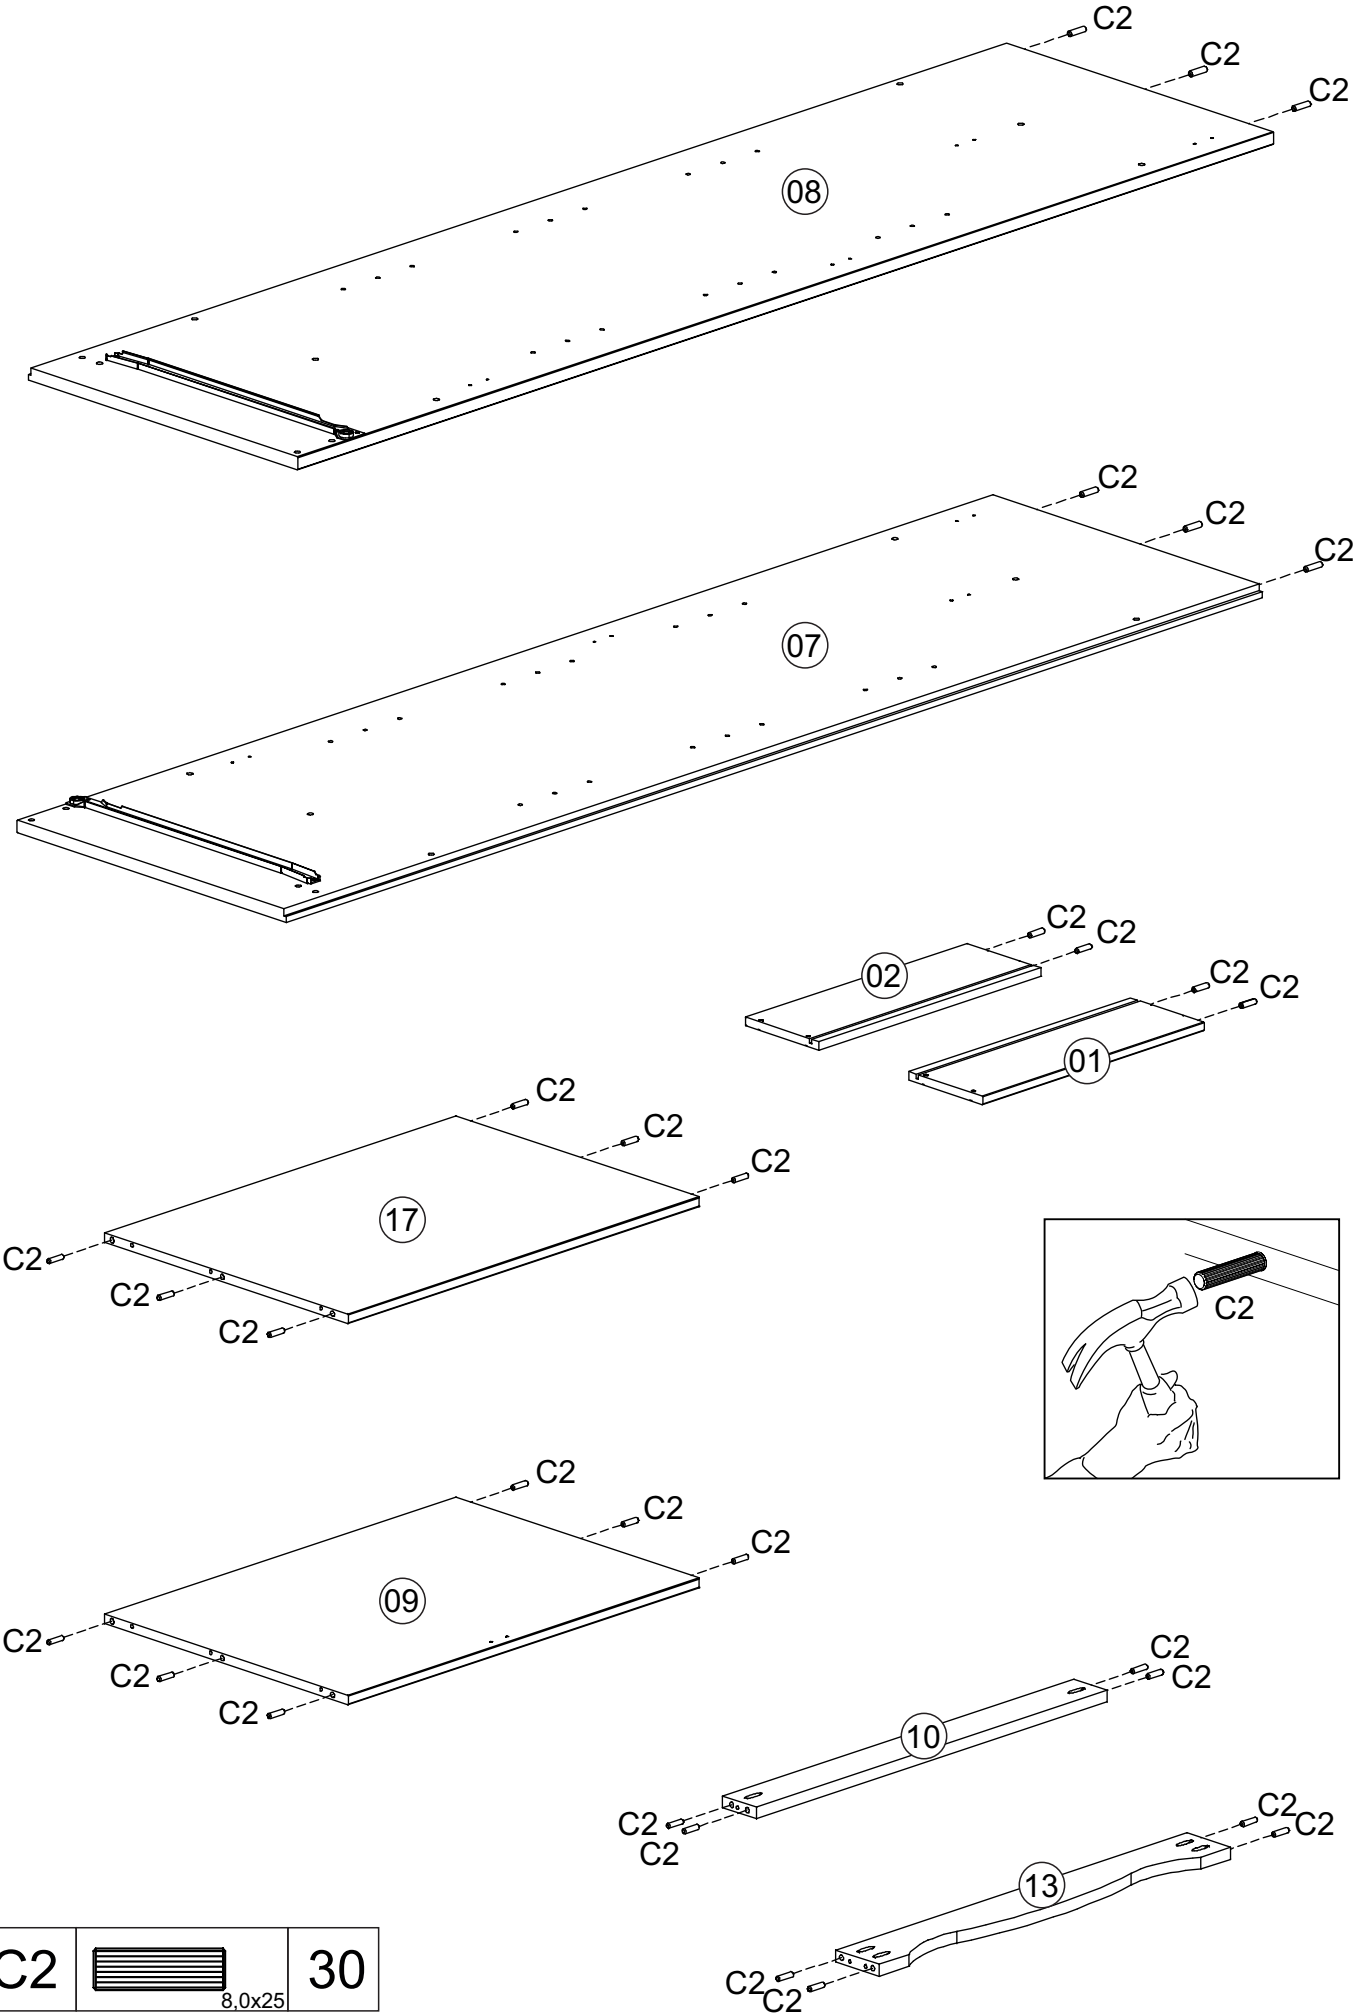



01)





C2		30
8,0x25		

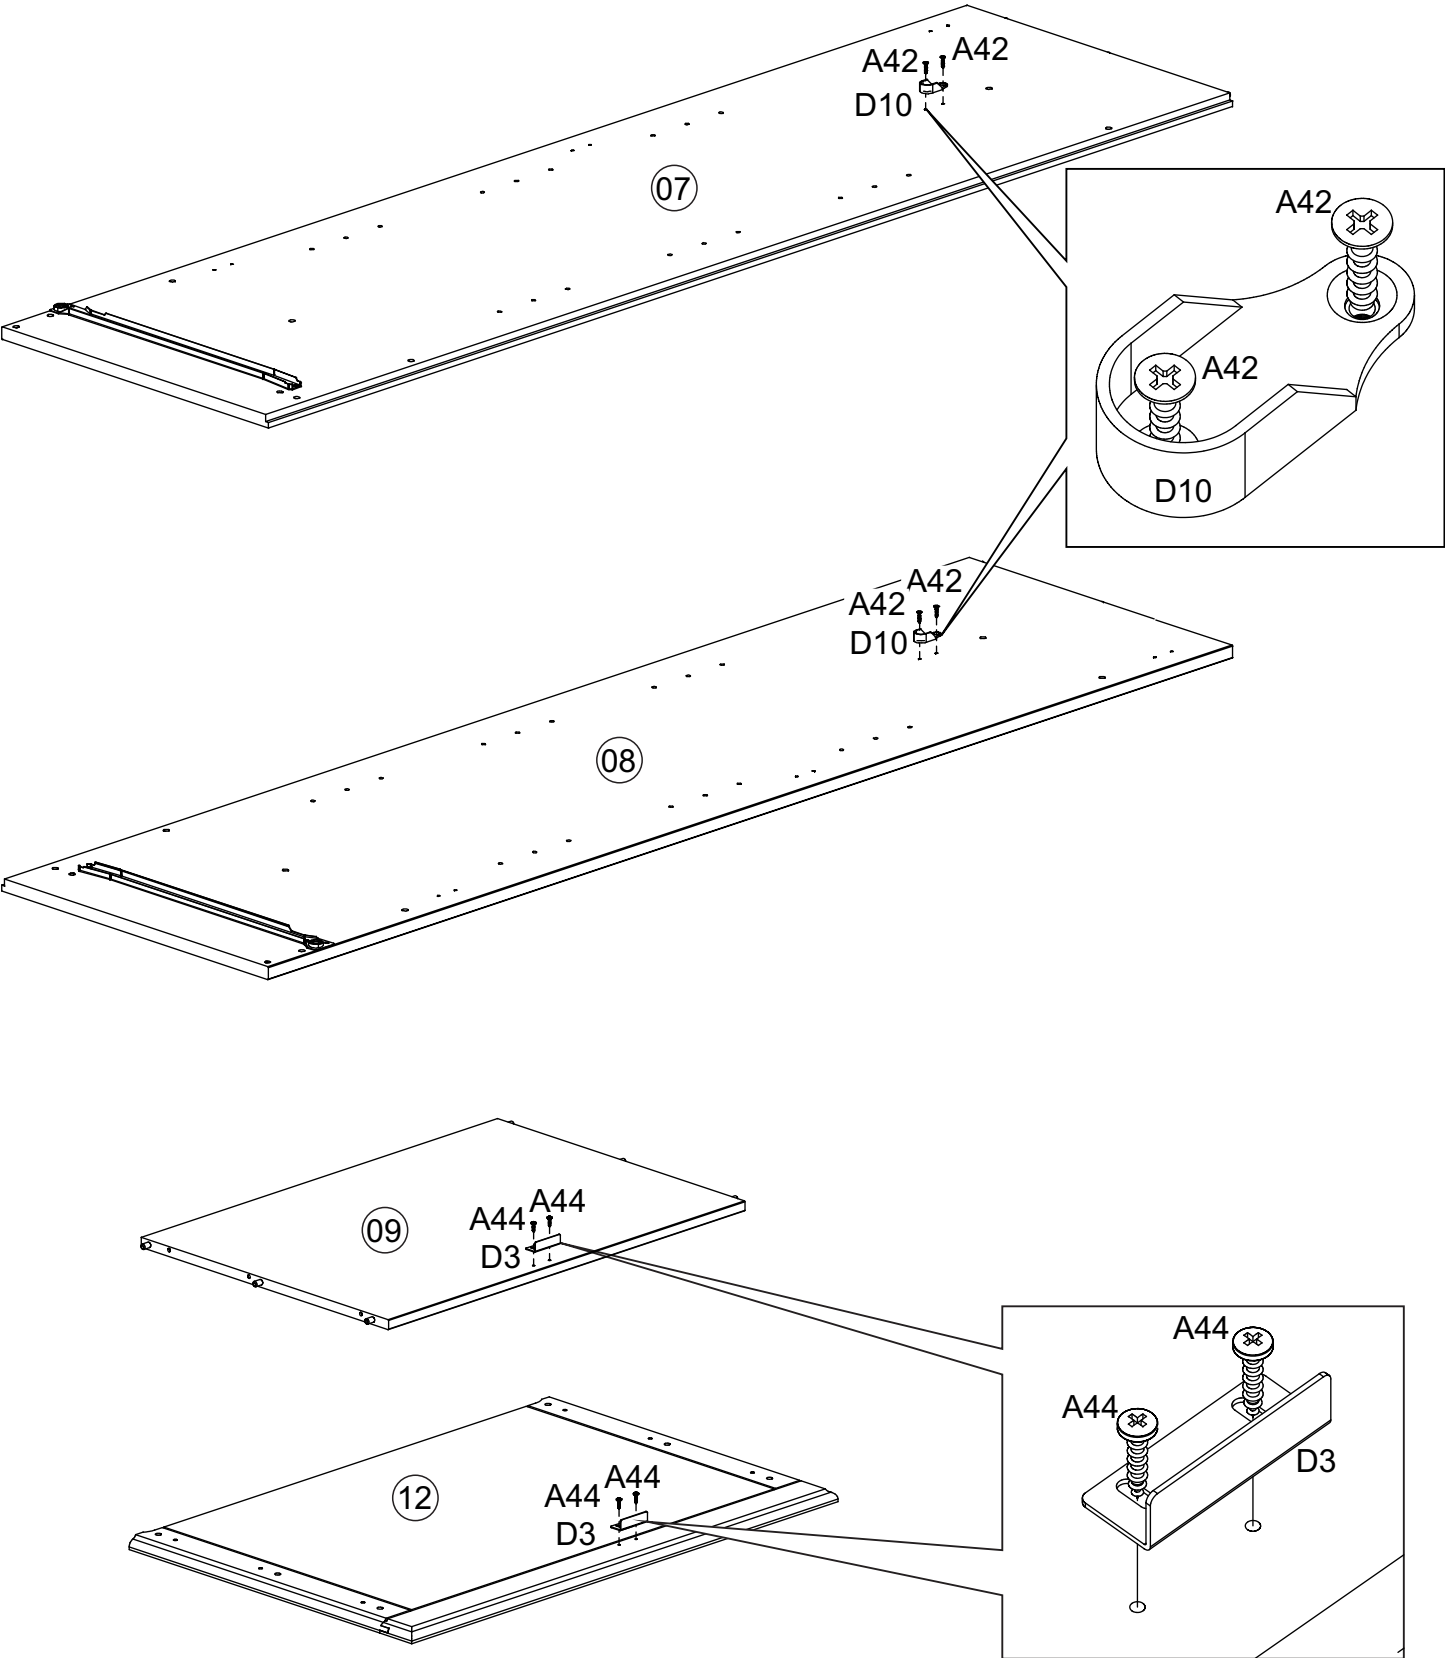02)





A42		04	D3		02
	4,0x14				
A44		04	D10		02
	3,5x14				


03)

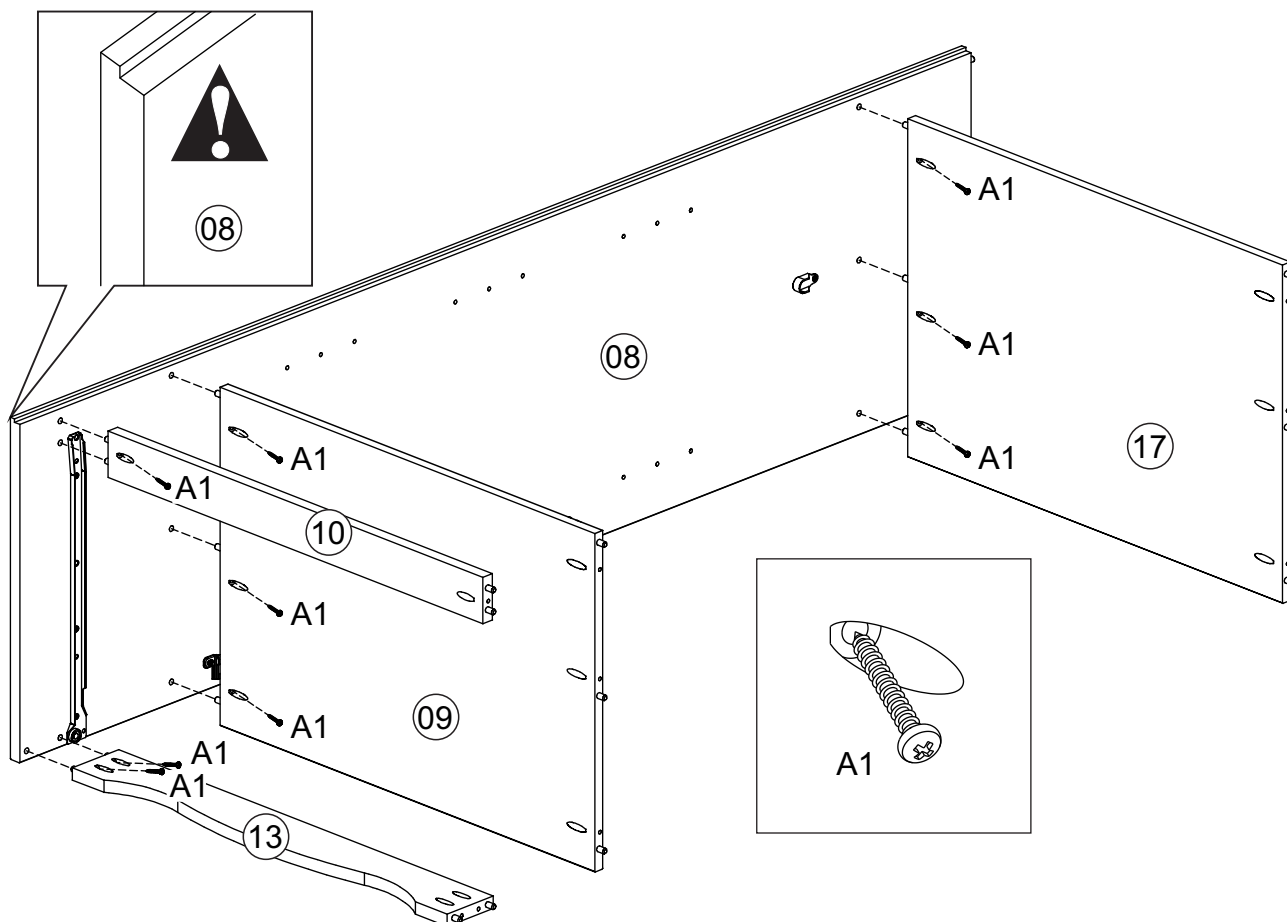


04)




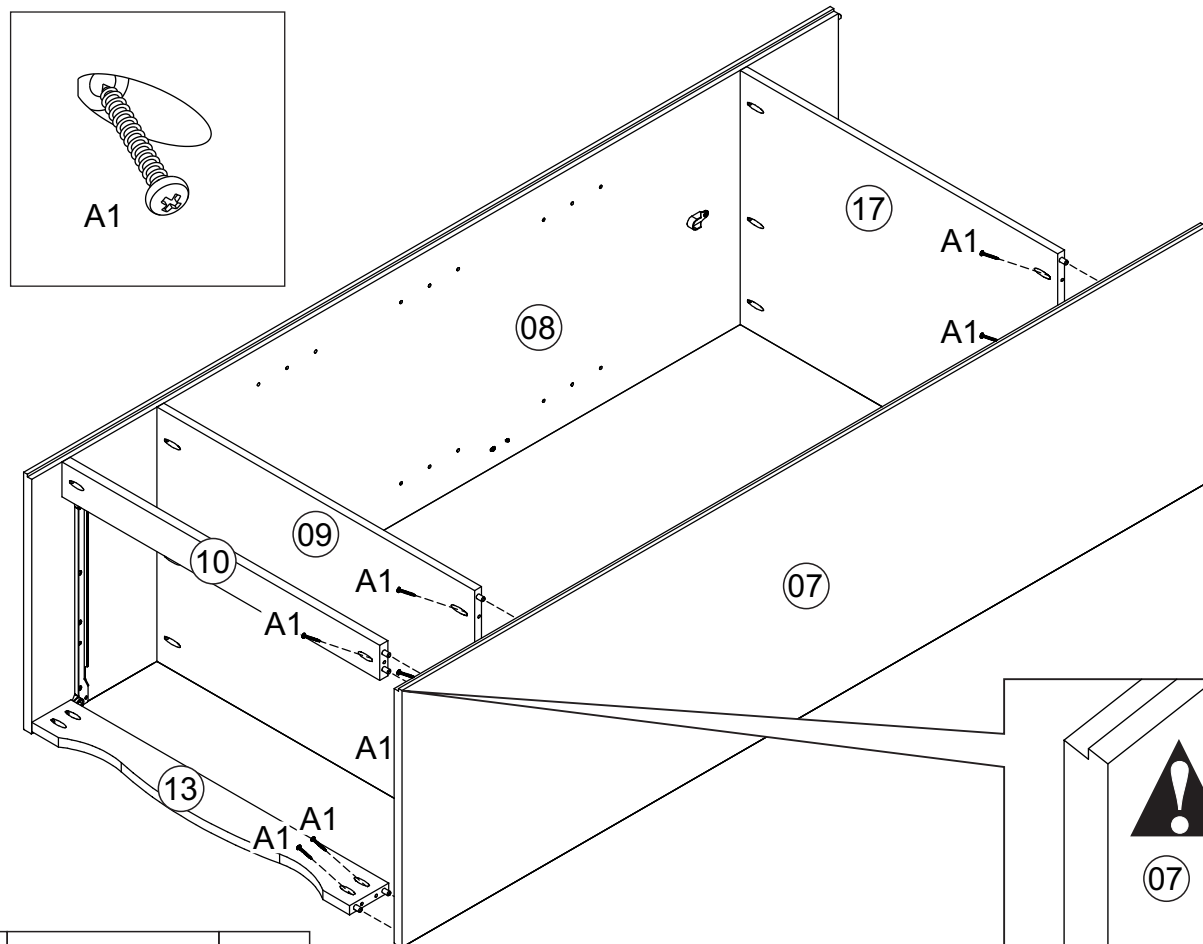



05)

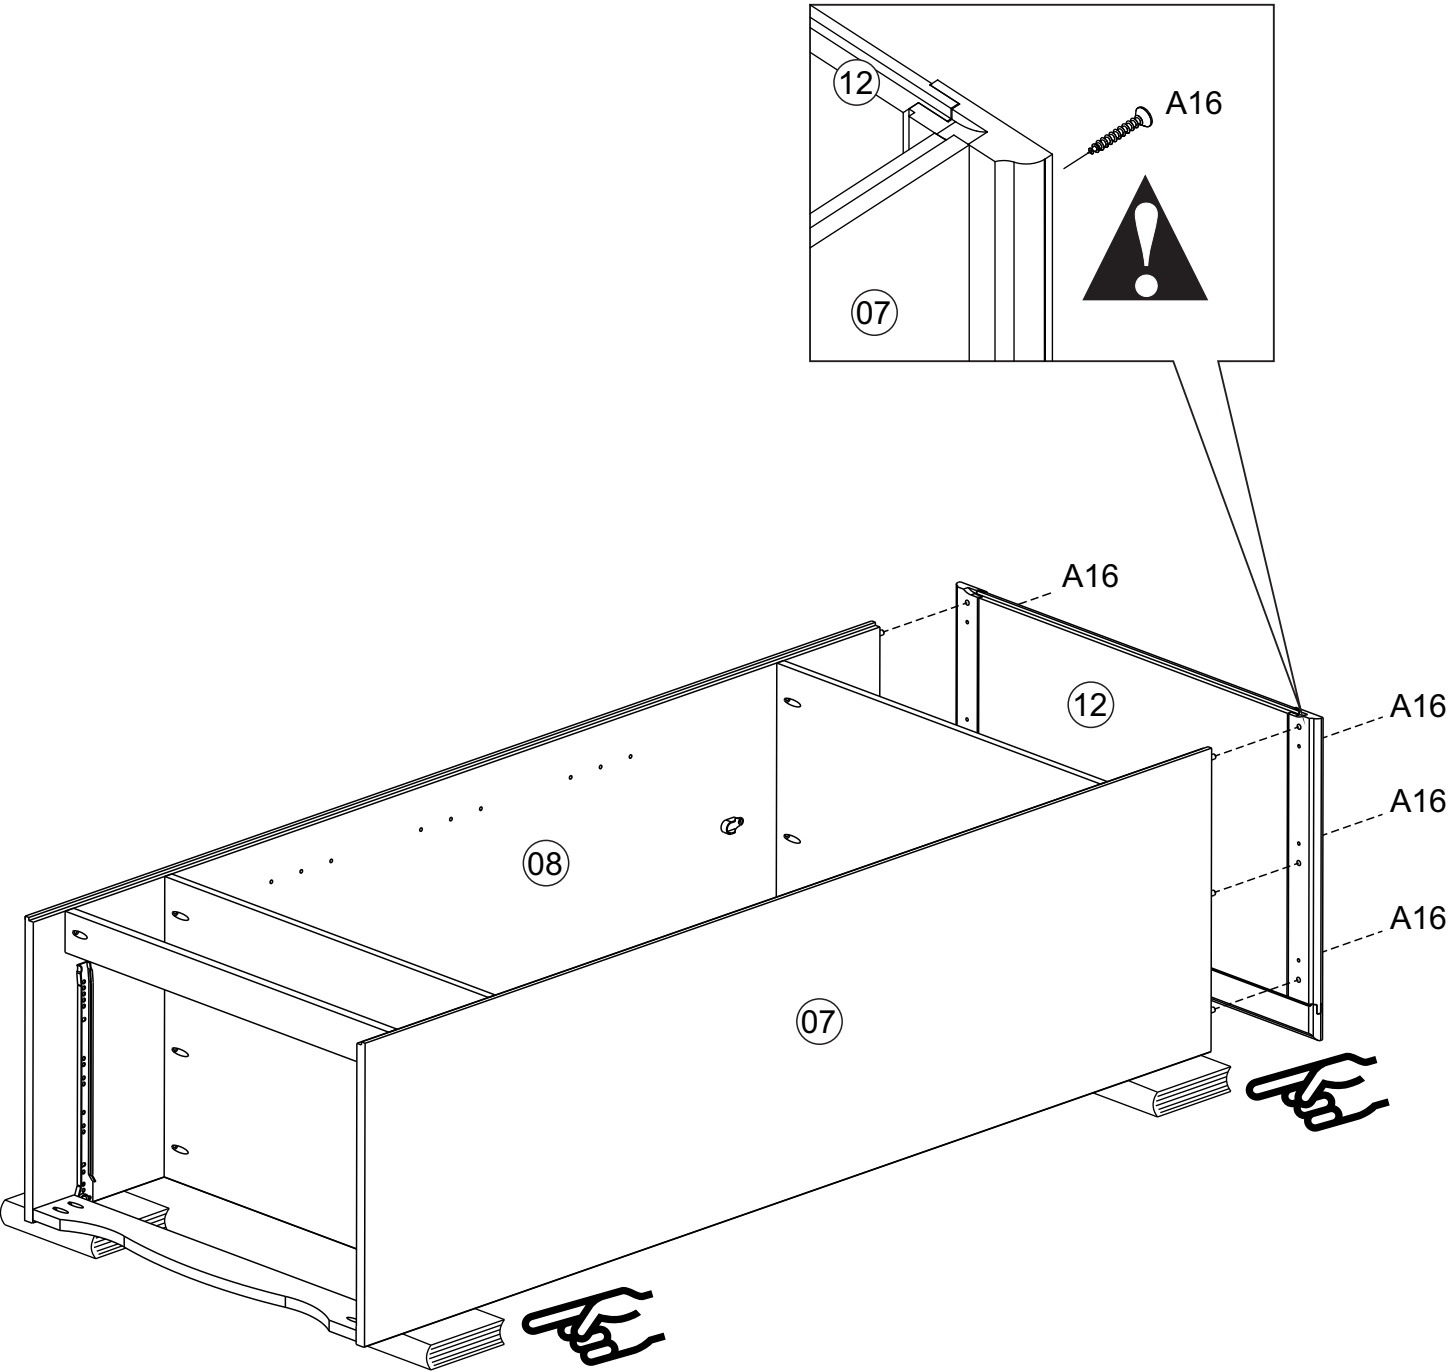


A16		06
4,0x40		

06)

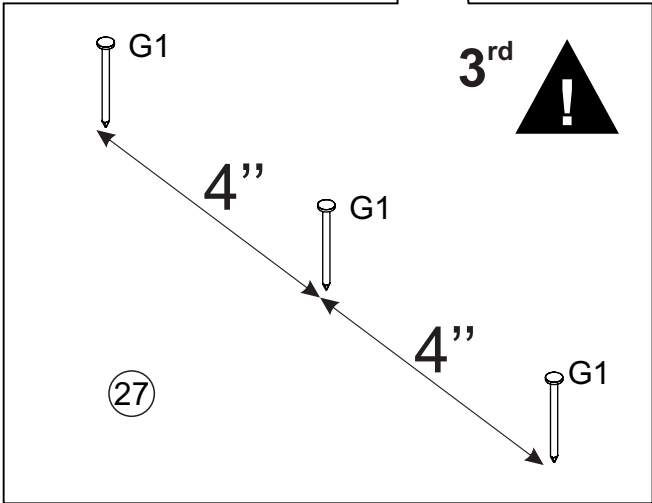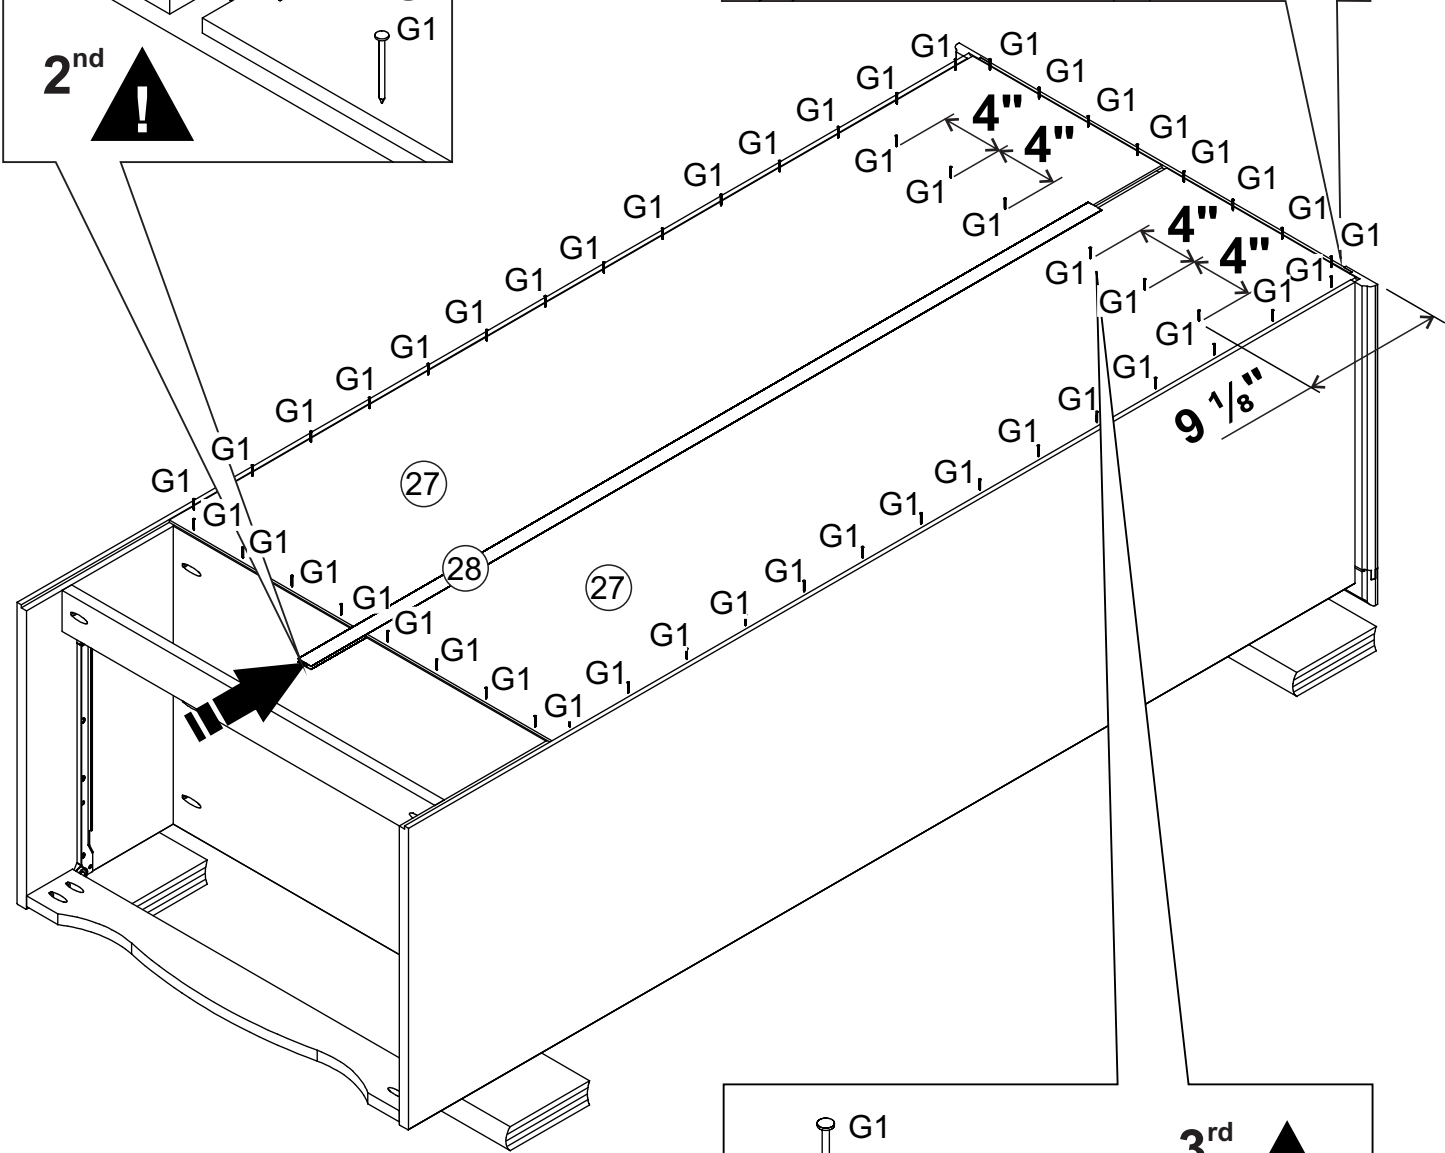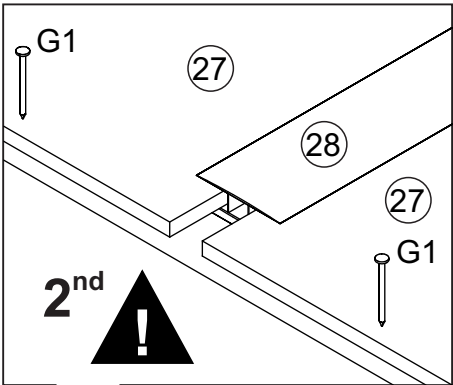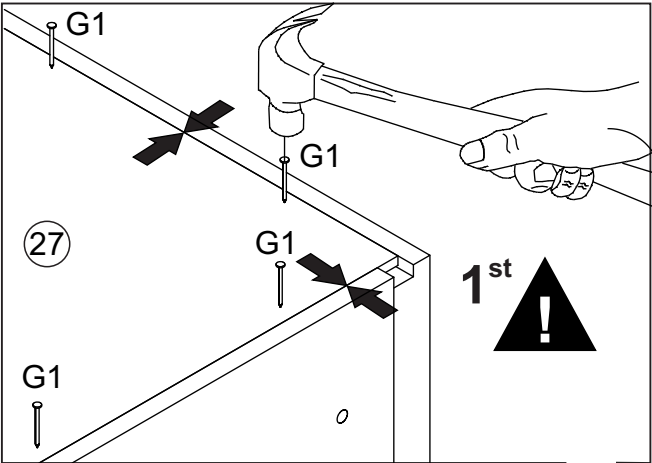


G1		50
10x10		

07)

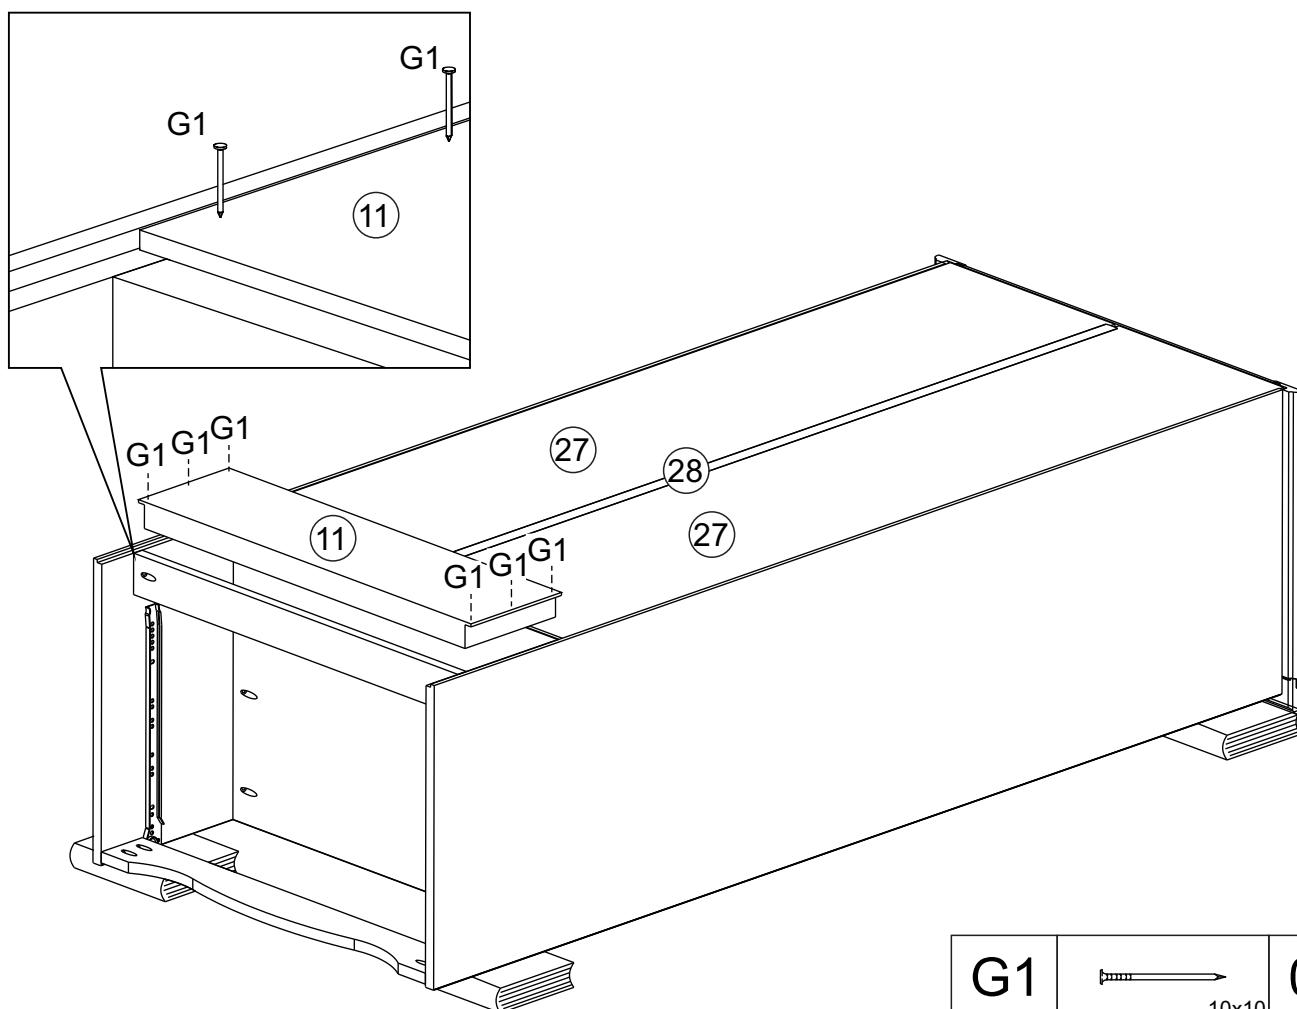


08)


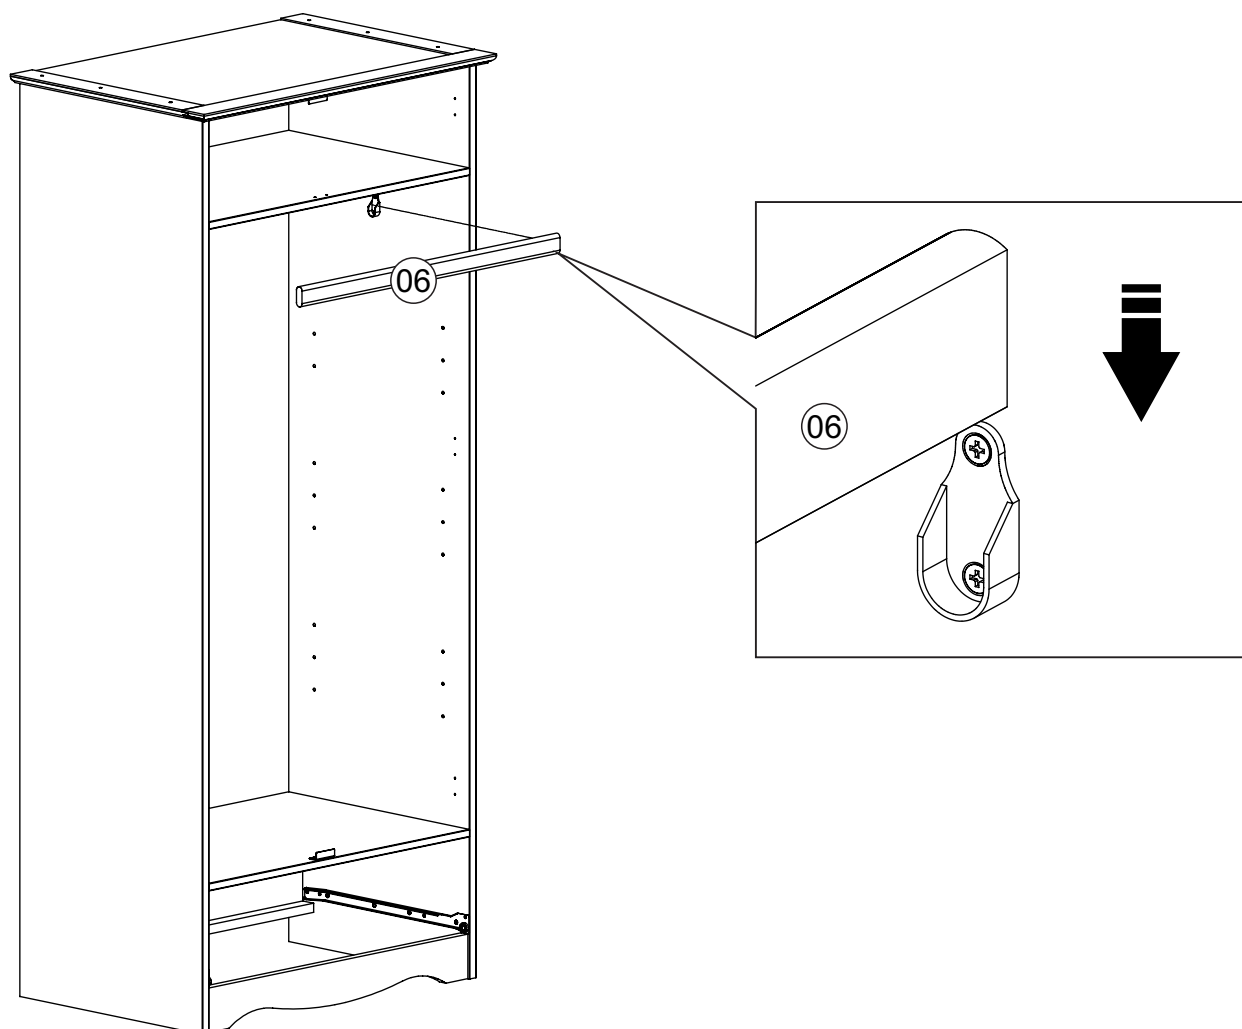




09)

Attach hinge (F10) to hinge plate if it comes separated.
Push hinge against plate until it clicks.




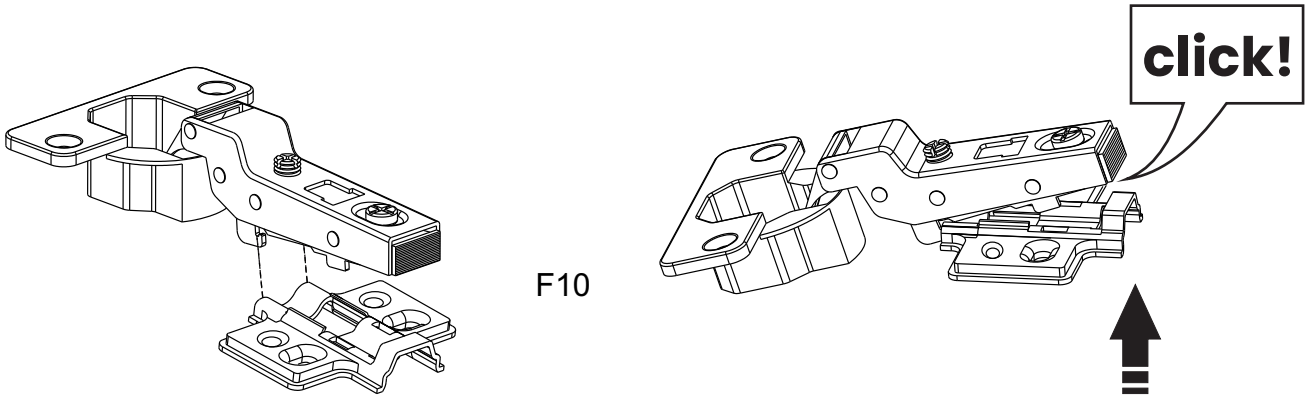


10)

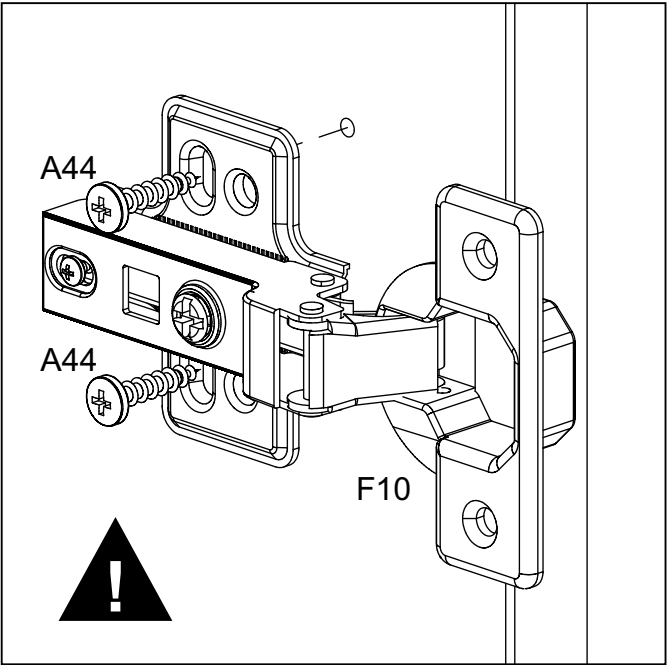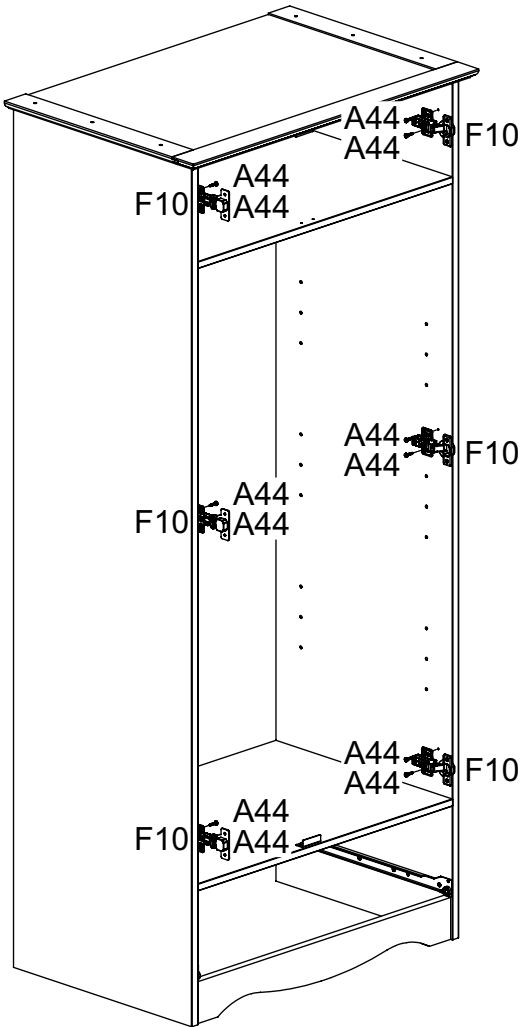






A44		12	F10		06
		3,5x14			

11)

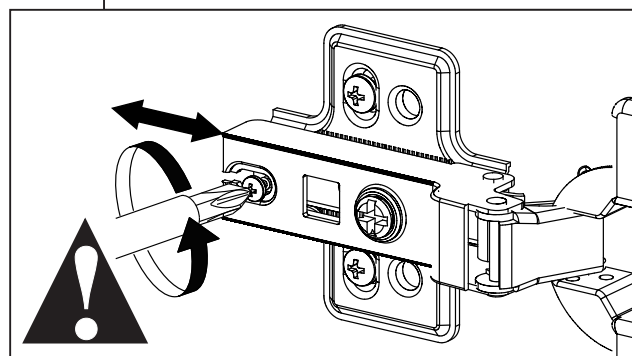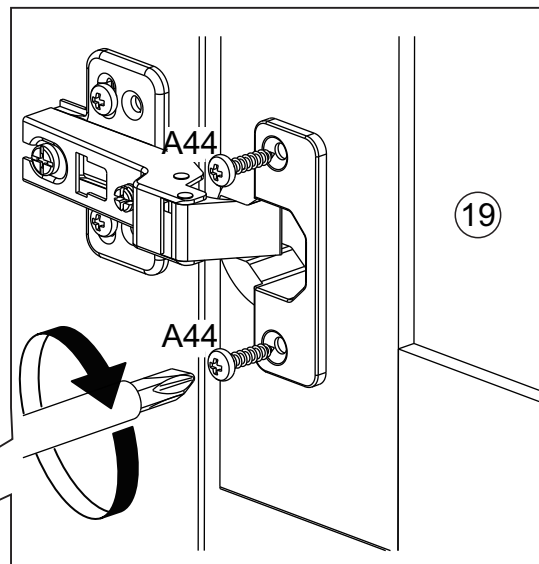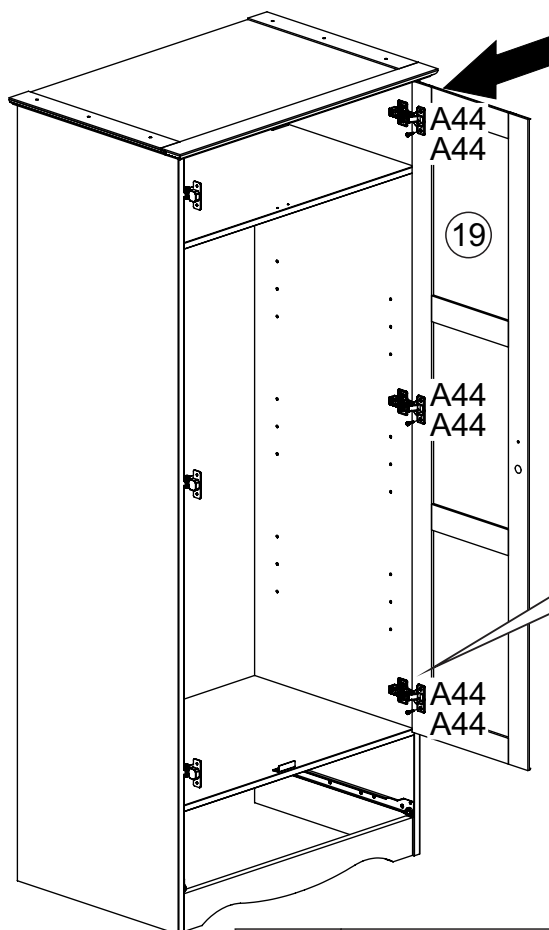



It might be necessary to adjust the hinges (F10) before hanging the doors.

12)

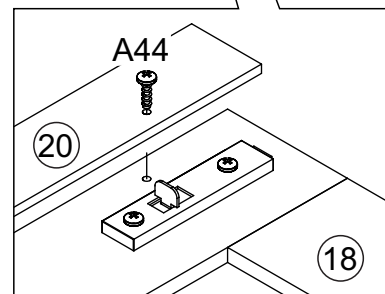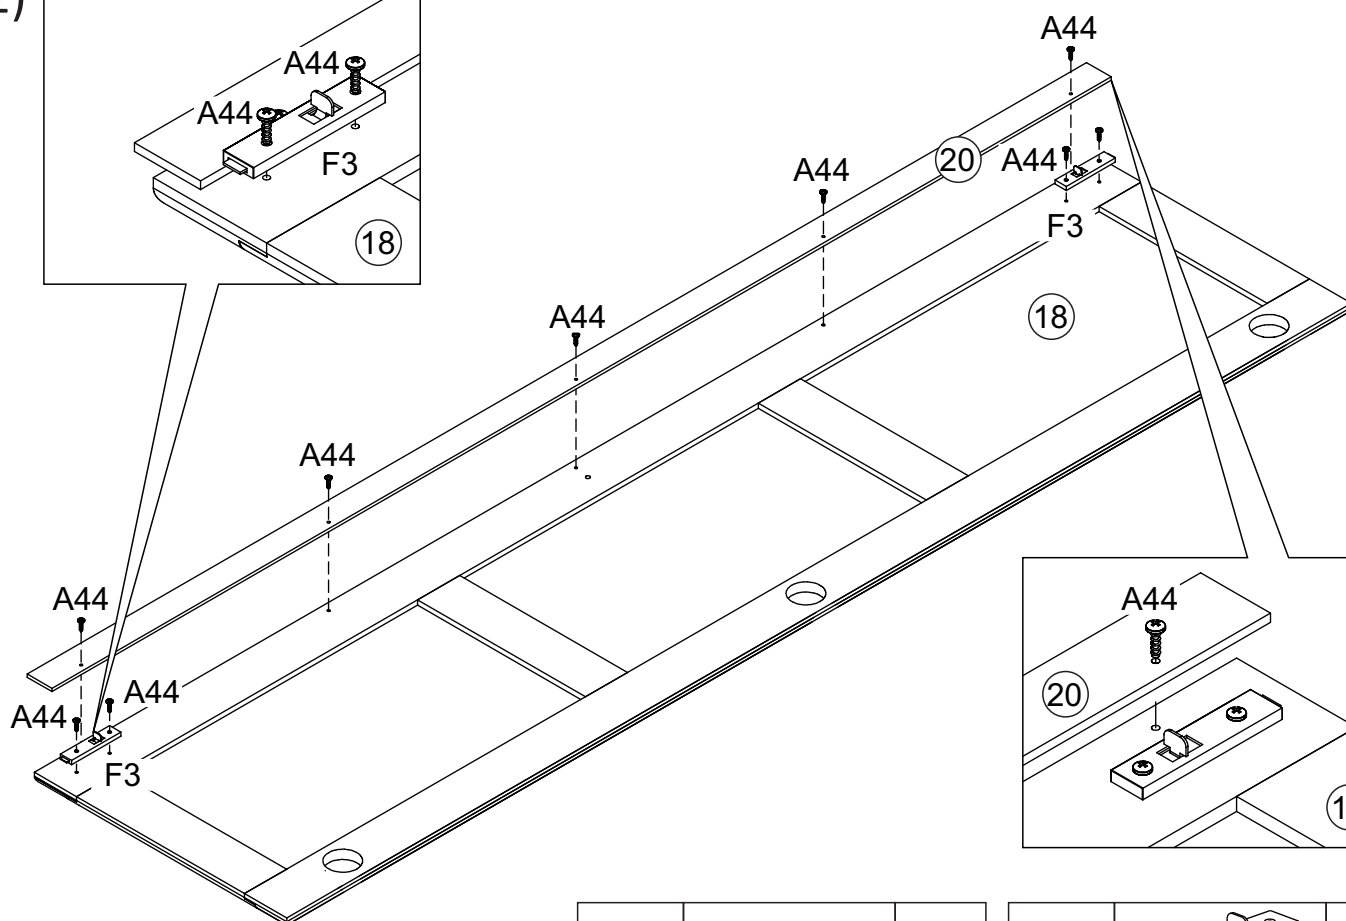
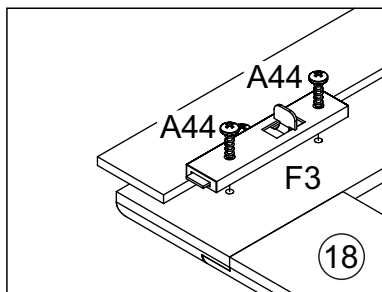




13)

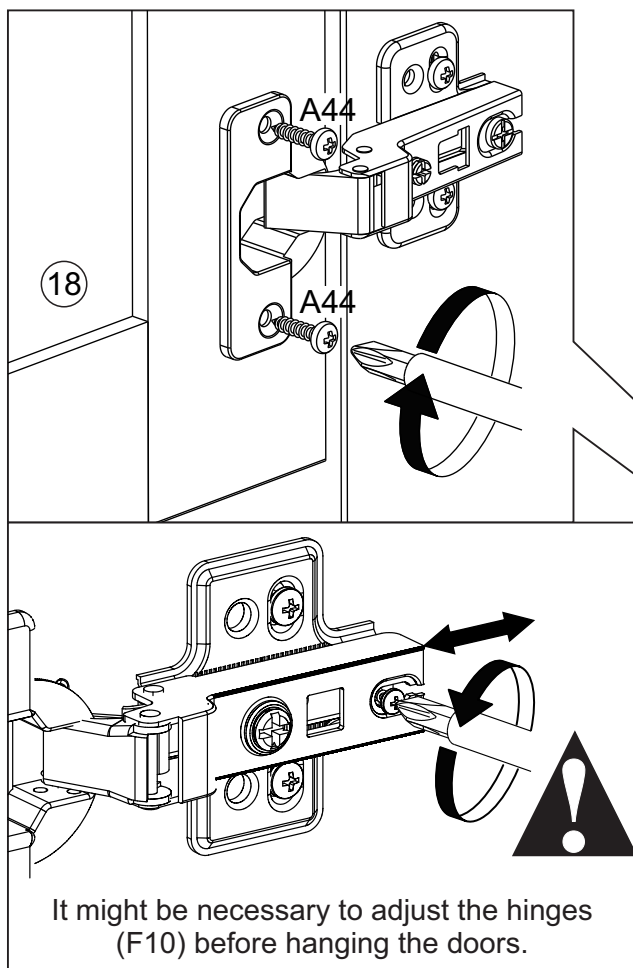




A44		06
3,5x14		










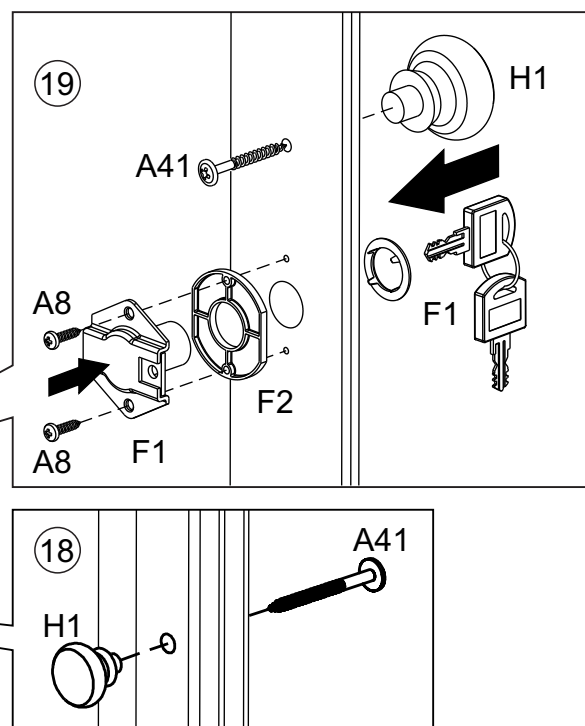
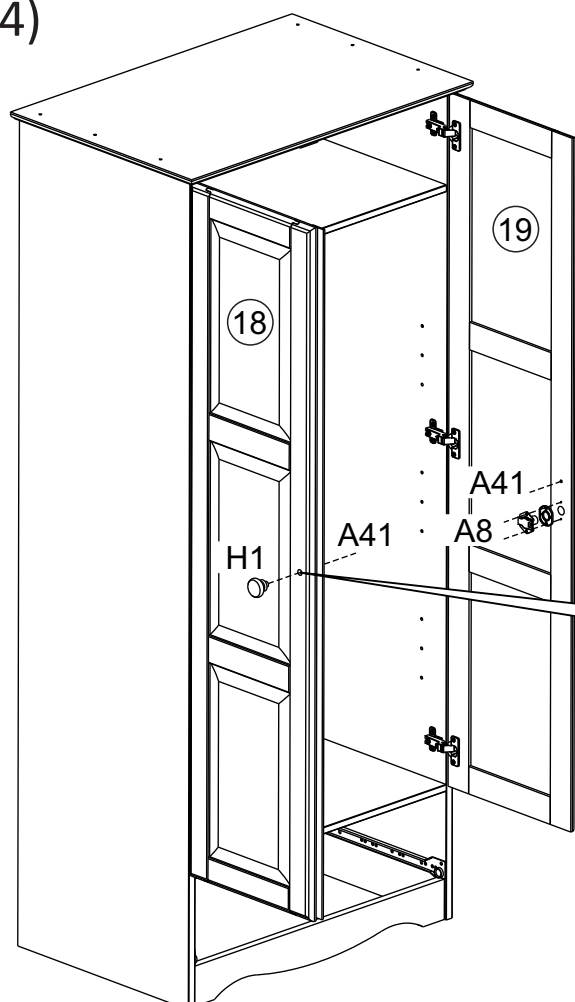
14)








A8		02
3,0x20		
A41		02
4,0x30		




F1		01
F2		01
H1		02

15) HINGE ADJUSTMENT GUIDE

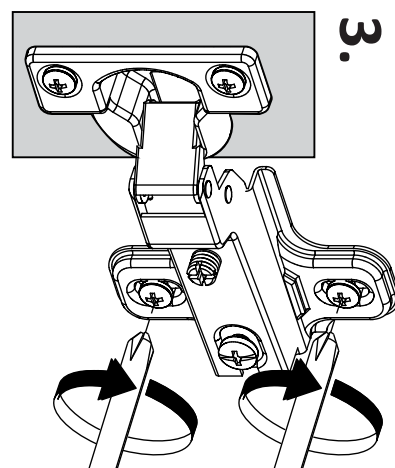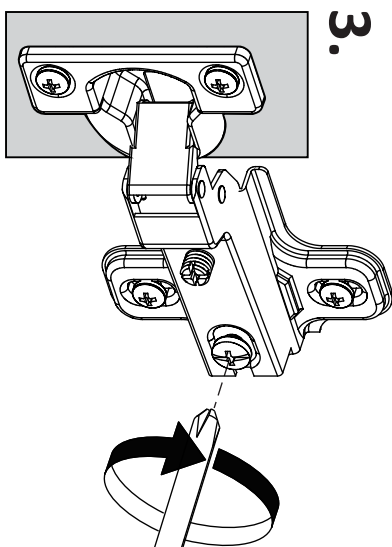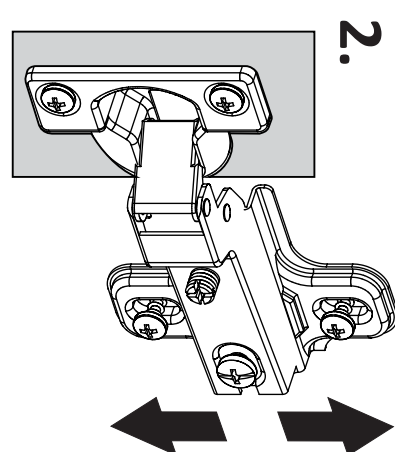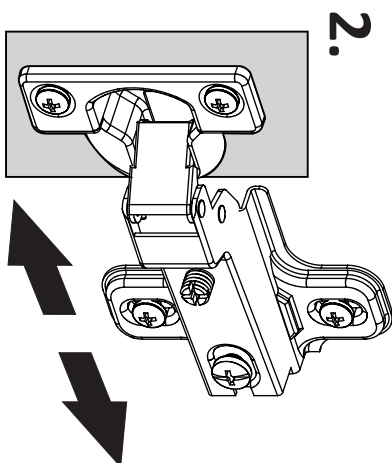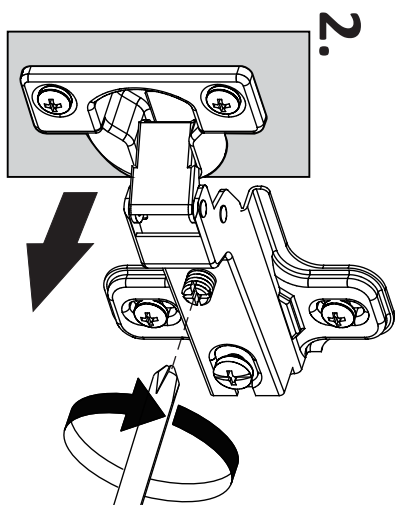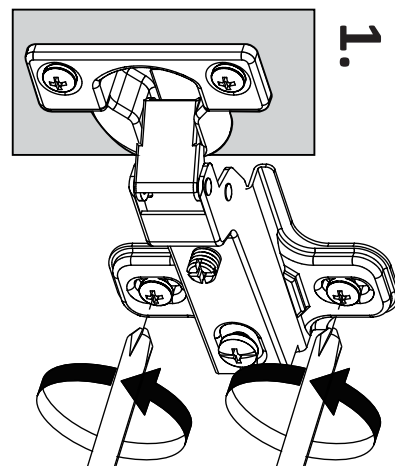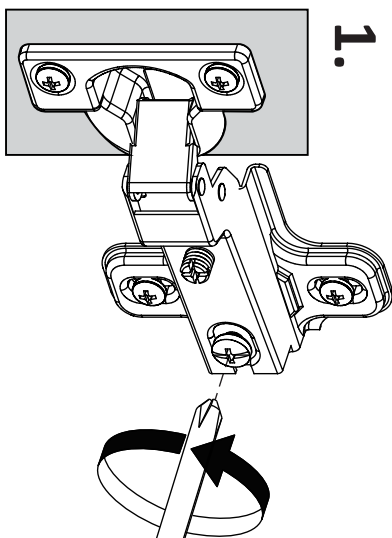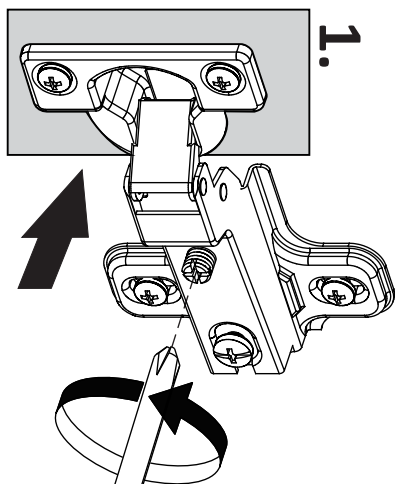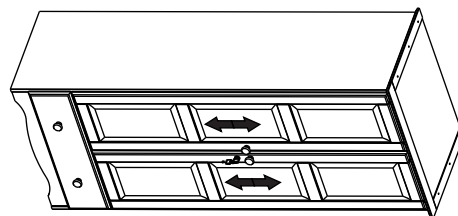
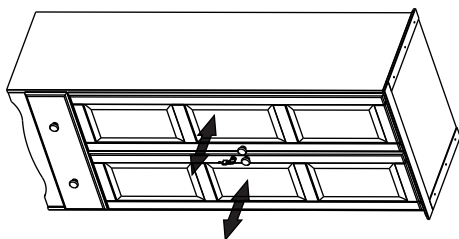
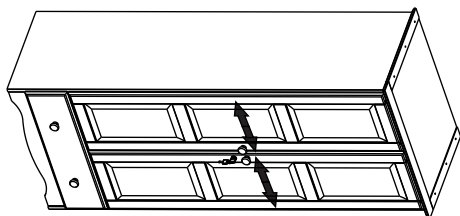



16)

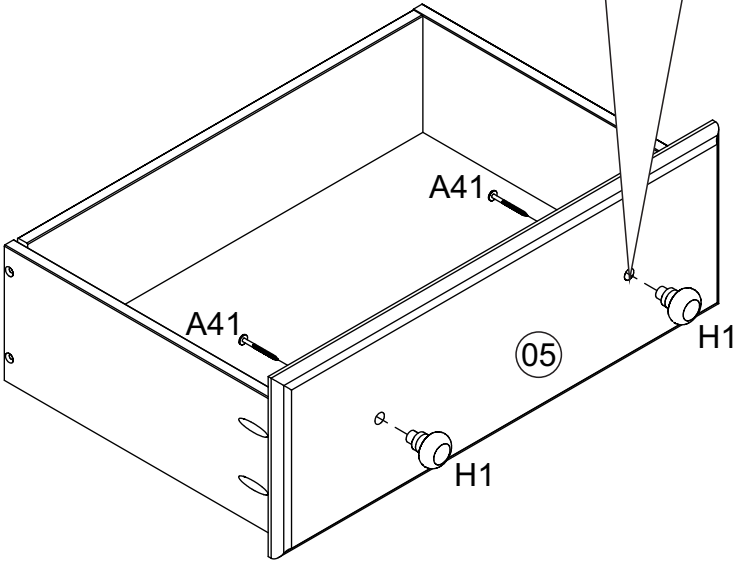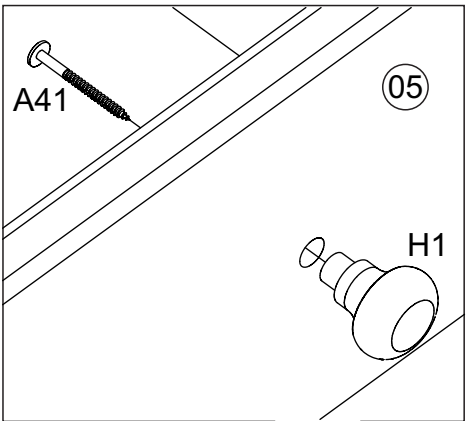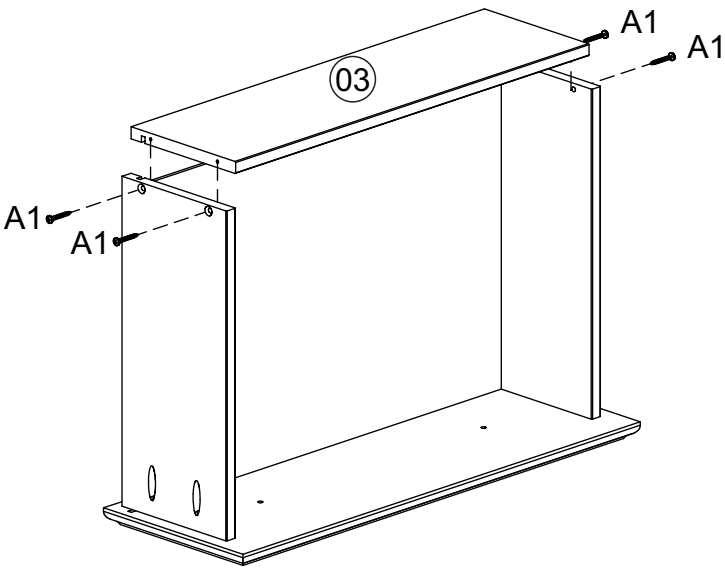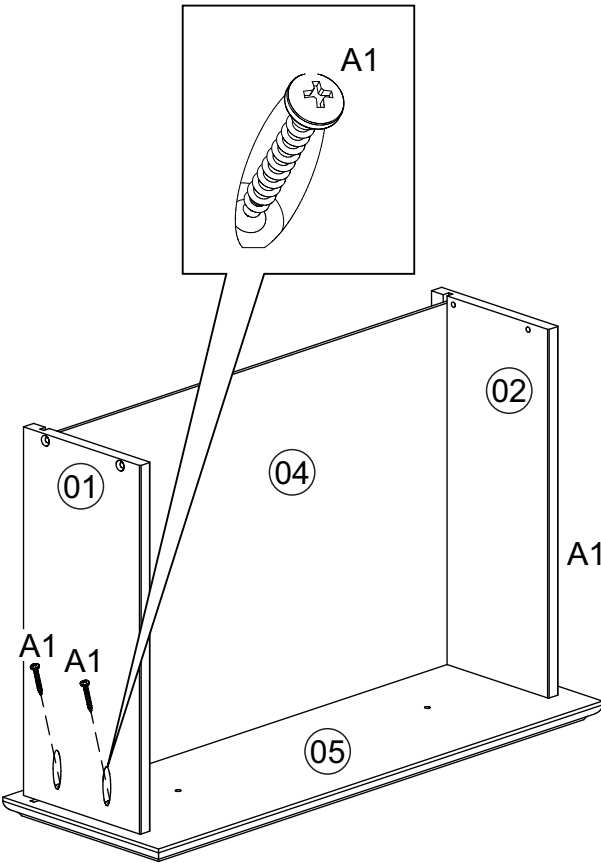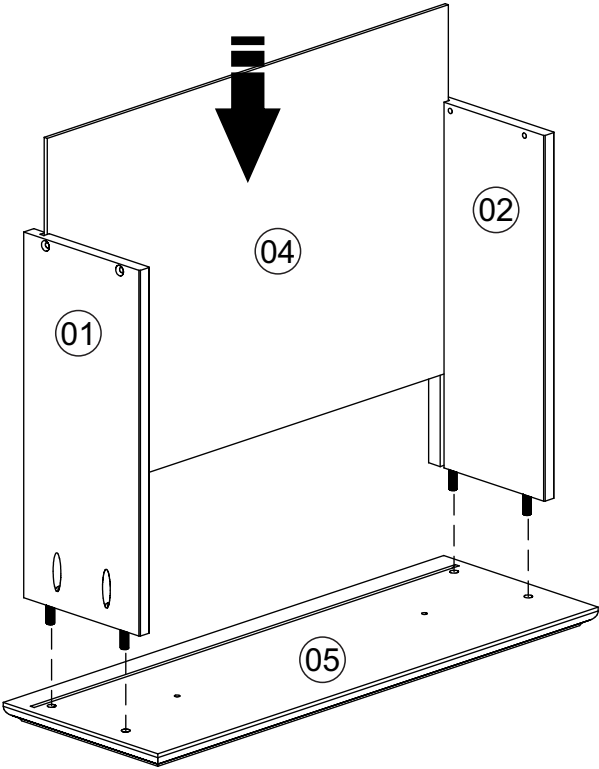


A1	 4,0x30	08
A41	 4,0x30	02
H1		02


17)

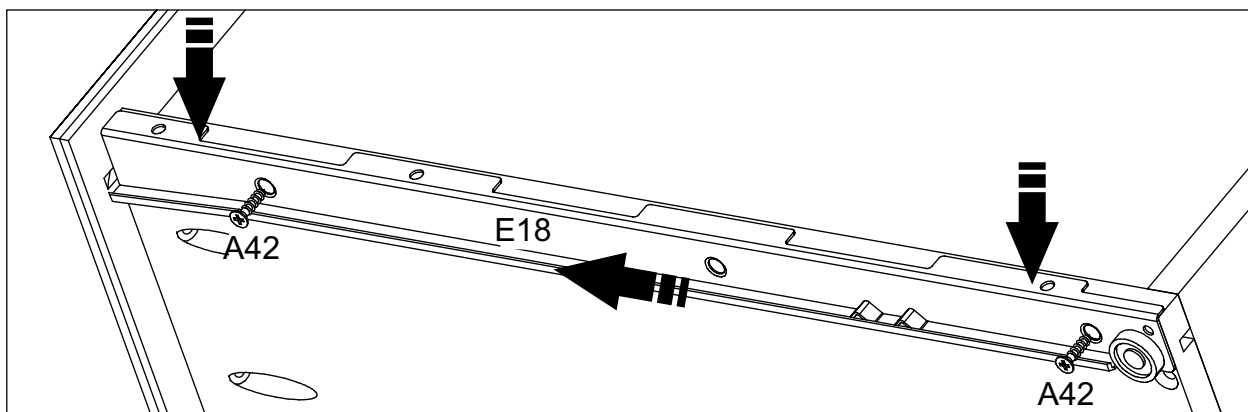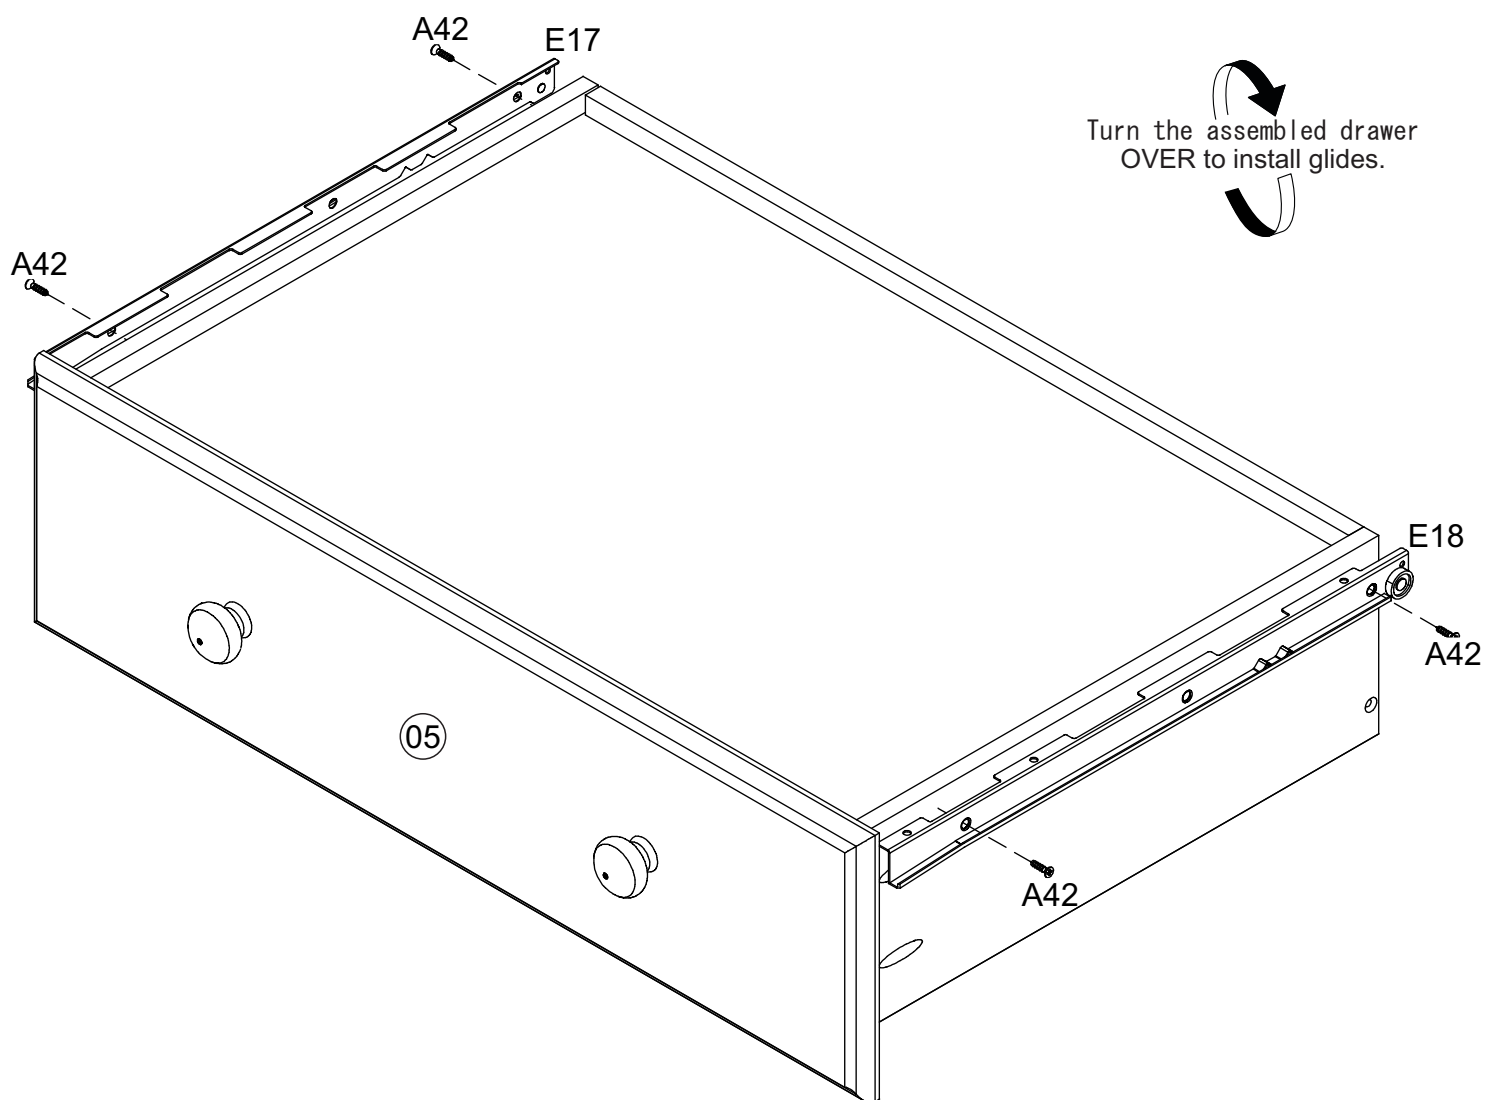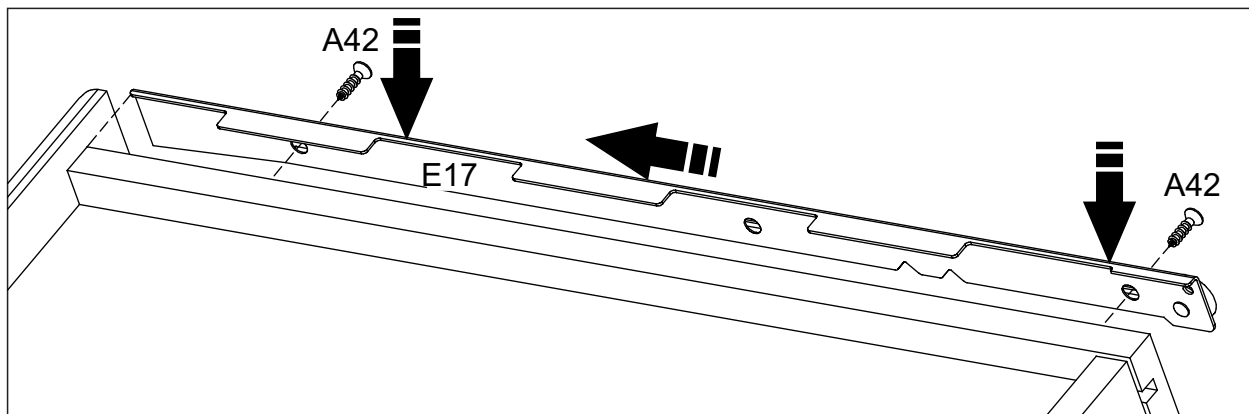

A42		04	E17	Drawer RIGHT 450mm - 17 3/4"	01	E18	Drawer LEFT 450mm - 17 3/4"	01
	4,0x14							

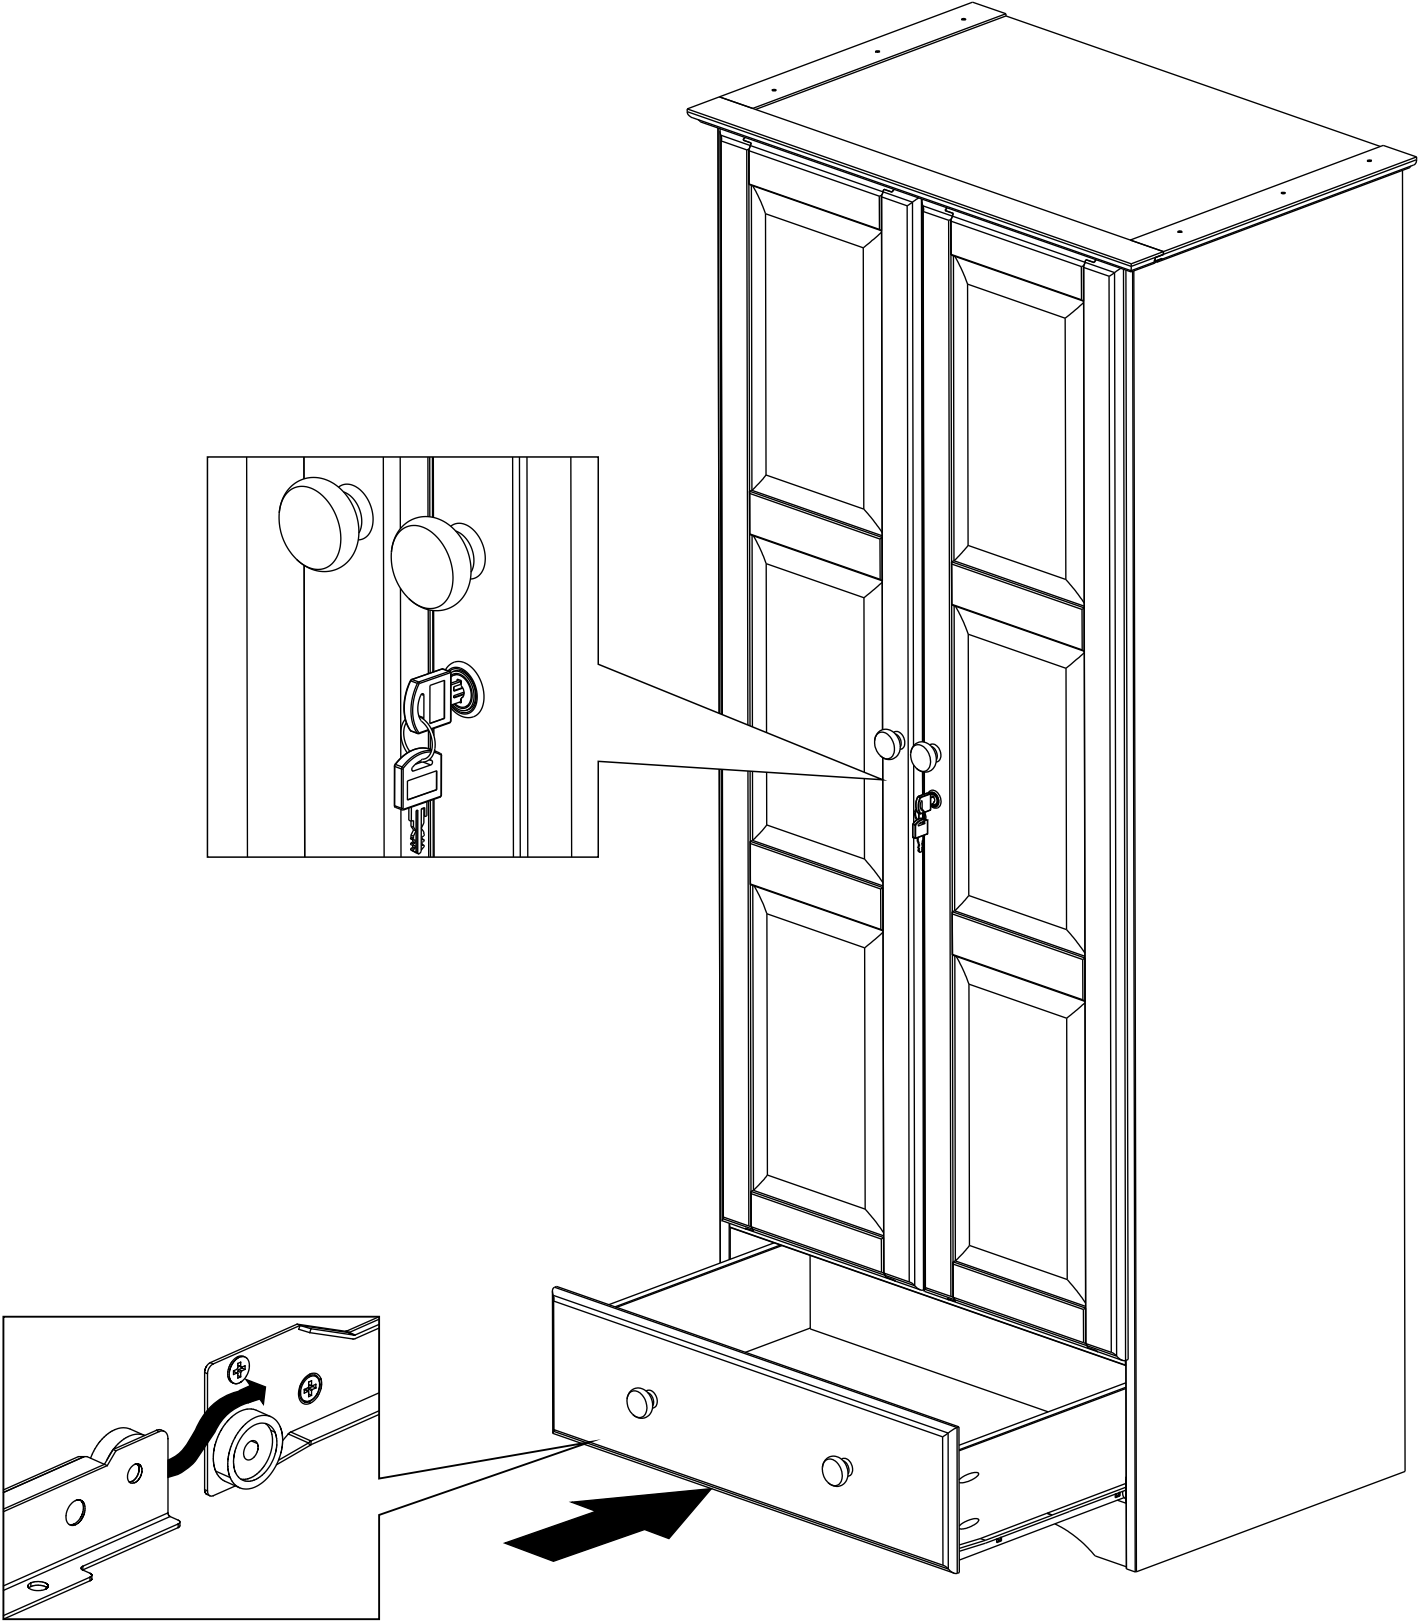

19) FURNITURE TIPOVER PREVENTION KIT INSTALLATION

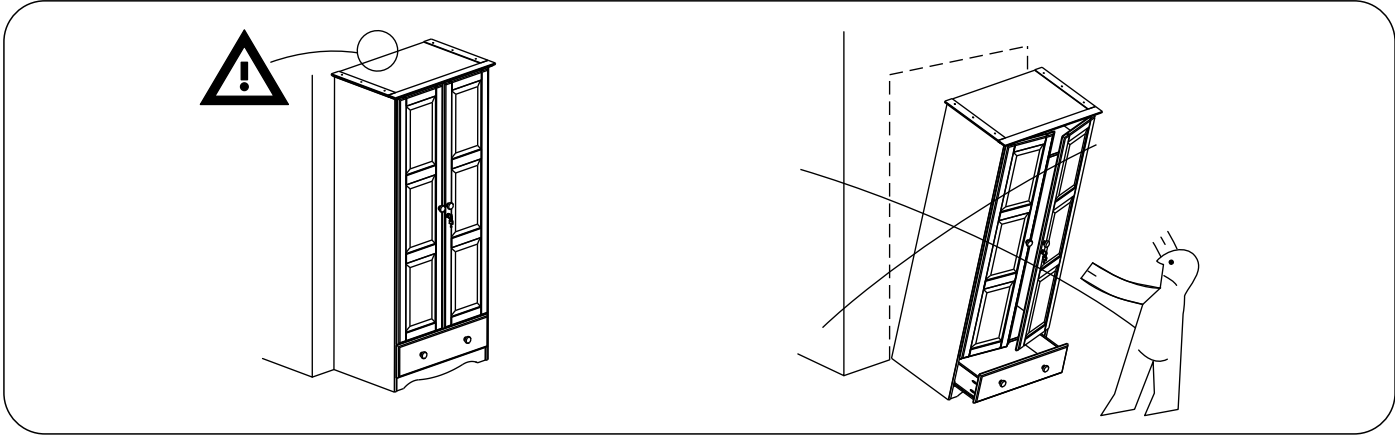

Attach to wardrobe

Screw into drywall

A8

F8

Anchors and screws not included.




F9

F8

DRYWALL

Install both parts F8

Tether and tighten

A8	 3,0x20	02
F8		02
F9		01