










# ASSEMBLY INSTRUCTIONS


DIMENSION : 19"L x 21"W x 40"H

No	LIST OF PART	Q'TY
1	BACK FRAME 	1pc
2	SEAT FRAME 	1pc
3	FRONT LEG(L&R) 	2pcs


No	LIST OF HARDWARE	Q'TY
A	LONG BOLT 	Ø5/16" x 75 mm 4pcs
B	MIDDLE BOLT 	Ø5/16" x 63.5 mm 4pcs
C	SHORT BOLT 	Ø5/16" x 45 mm 1pc
D	LOCK WASHER 	Ø5/16" x 1.1 mm 9pcs
E	FLAT WASHER 	Ø5/16" x 22 x 2 mm 9pcs
F	ALLEN KEY 	4 mm 1pc

## STEP 1

A. Insert (by hand) the center screw **C** with **D** and **E** (lock washer and flat washer), then tighten using **F** (Allen Key).  
B. Once the seat is aligned, insert the right and left side screws in the same manner.

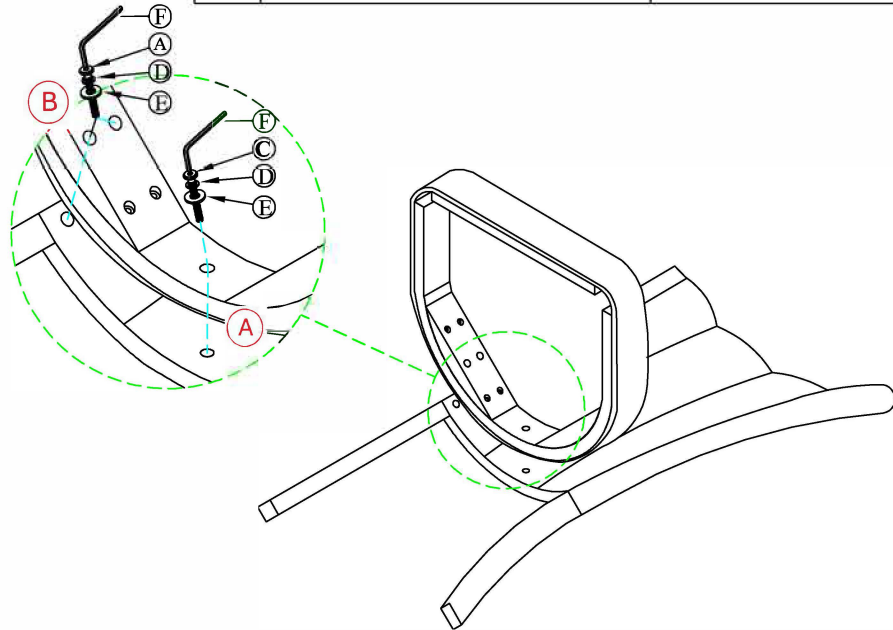

## STEP 2

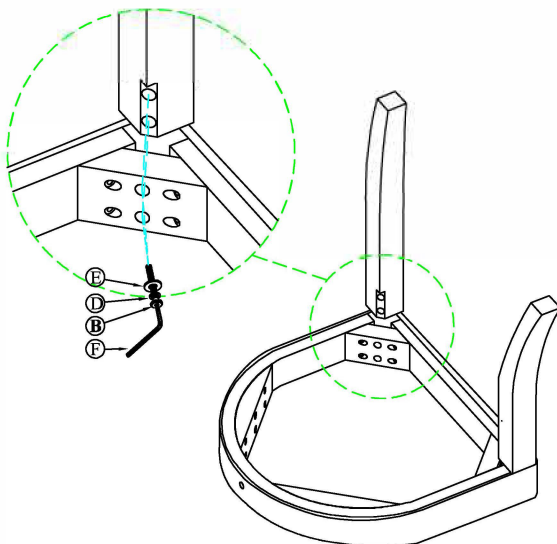

## STEP 3

