



atlanticfurniture.com

SLAT KIT TWIN

ATLANTIC

ASSEMBLY INSTRUCTION (TWIN E-65000)

Before assembling your bed slat kit, please read through these instructions carefully and familiarize yourself with the different parts.


Please note that you will require a Phillips screwdriver.

ATTENTION! If you receive a damaged or defective item, please contact Atlantic Furniture at service@atlanticfurniture.com or 1-800-955-3726




PARTS LIST

01 SLAT KIT 1 SET

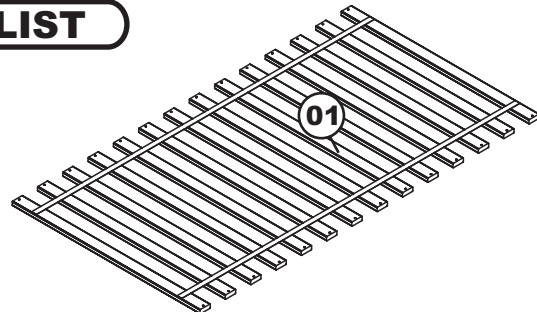

NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE WOOD SCREWS ARE DAMAGED DURING ASSEMBLY.

A



1 1/4" Wood screw - 28 pcs Spare - 2 pcs

HARDWARE


Step 1

Assemble bed frame or bunk bed according to assembly instructions.


Step 2

Lay the slat kit onto the bed.

PLATFORM BED

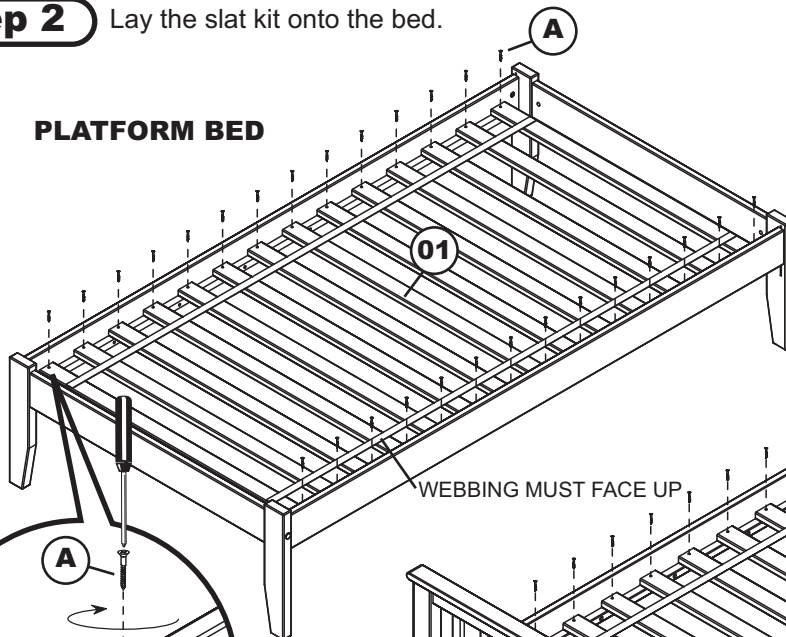

WEBBING MUST FACE UP

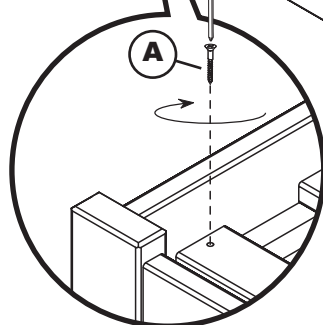

Be sure to align slat kit evenly with both ends of side rail.

Screw slat kit (01) to side rail, using wood screw (A). Tighten with Phillips screwdriver. (Customer supplied)
Be sure the space between slats is even.

NOTE: WEBBING MUST FACE UP




Adult assembly

A



Wood screw

BUNK BED

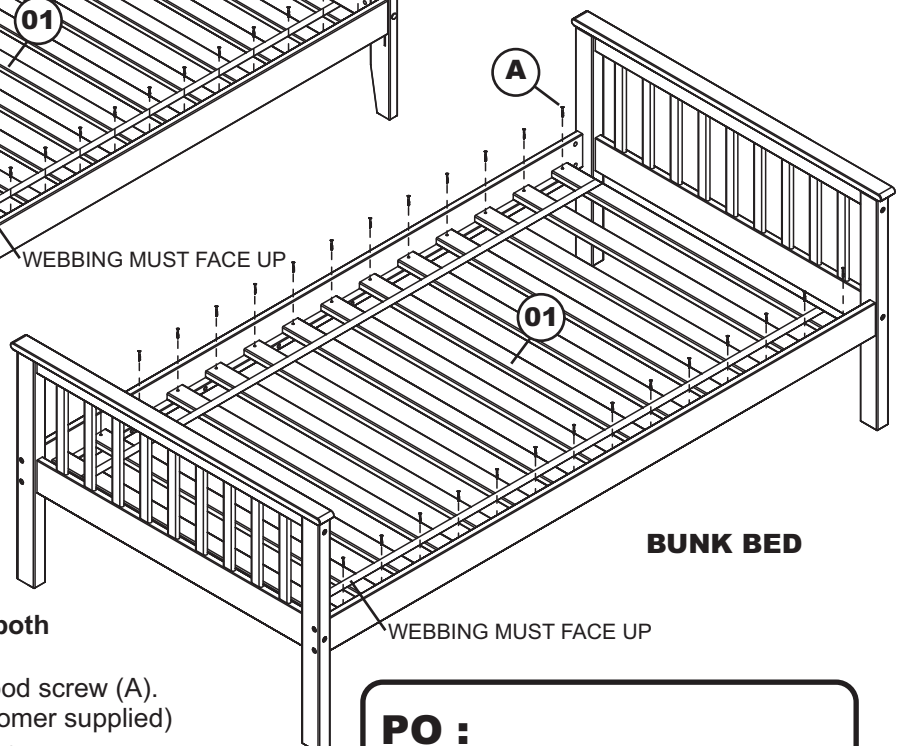

PO :