




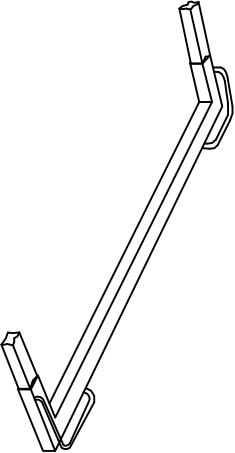


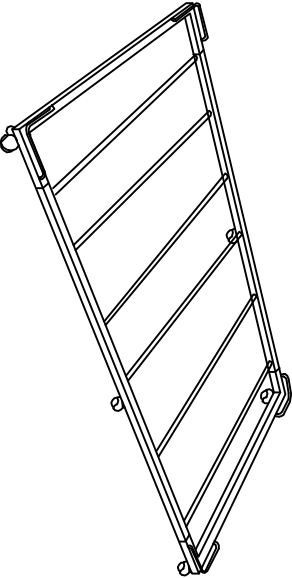


Assembly Instruction			Tools Required	Hardware Provided
<div>Item Must Be Assembled by Two Adults.</div> 			<div> (Provided)</div> <div>Spanner</div> <div> (Provided)</div> <div>Allen key</div>	<div> B1 8SET</div> <div> B2 6PCS</div>
Metal Parts				
<div> A1 2PCS</div> <div> A2 2PCS</div> <div> A3 6PCS</div>				


<h1>Step 1</h1>	
-----------------	--

Insert the metal rails A3 into metal side frames A2.

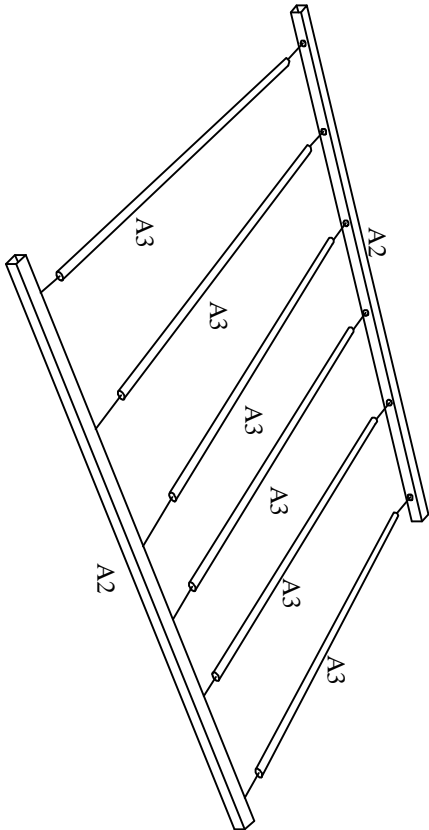

<h1>Step 2</h1>	
-----------------	--


Insert the metal frames A1 into metal side frames A2.

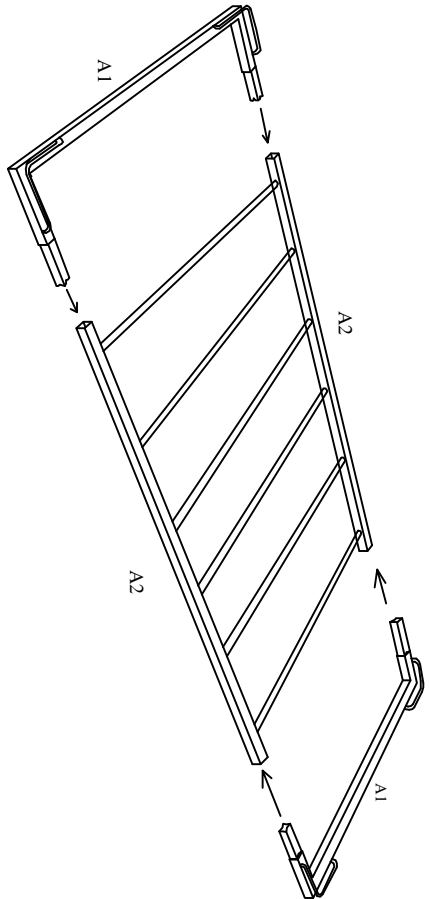

<h1>Step 3</h1>	<h1>Step 4</h1>
-----------------	-----------------

Tighten the metal frames A1 to metal side frames A2 using bolts and washers B1.

Noted: Please DO NOT tighten the bolts B1 untill all bolts were inserted.

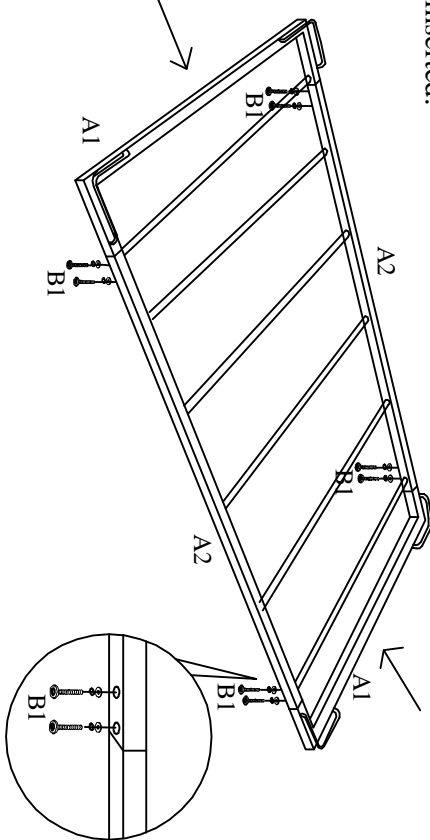

Screw the casters B2 to the trundle using spanner as provided.

