

Cupola Seal Assembly Instructions



*Watch our Assembly Video at
www.gooddirections.com/installationinstructions or scan*






Cupola Seal


Assembly Instructions

Our cupolas are *weathervane ready*. A 3/4" hole on top of the cupola and an internal mounting bracket are standard. If you are not installing a weathervane to your cupola, you may want to install the Cupola Seal.

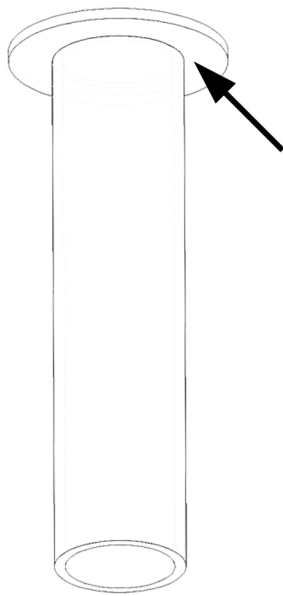

1. Apply a bead of caulk around where the tube meets the disk.

2. Insert Cupola Seal into Cupola hole.

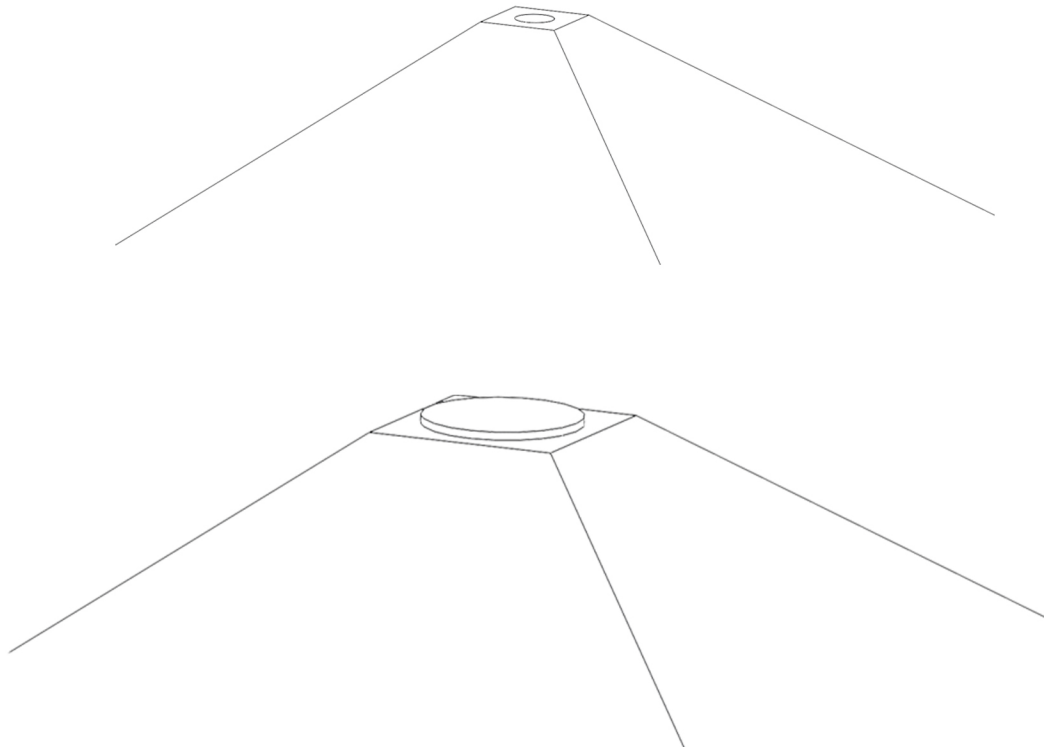

Assembled View