














CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Cushion		1x
B	L/Front Leg		1x
C	R/Front Leg		1x
D	L/Back Leg		1x
E	R/Back Leg		1x
F	Front Stretcher		1x
G	Right Stretcher		1x
H	Left Stretcher		1x
I	Back stretcher		1x
H1	Allen Bolt	 $\phi 5/16"$ *2"	4x
H2	Allen Bolt	 $\phi 5/16"$ *2-1/2"	4x
H3	Allen Key	 5/16"	1x
H4	Screw	 $\phi 8"$ *2"	8x

 **SAFAVIEH**
FURNITURE

Model# BST6304

Product Dimensions: 22-1/2"Wx25"Dx45"H

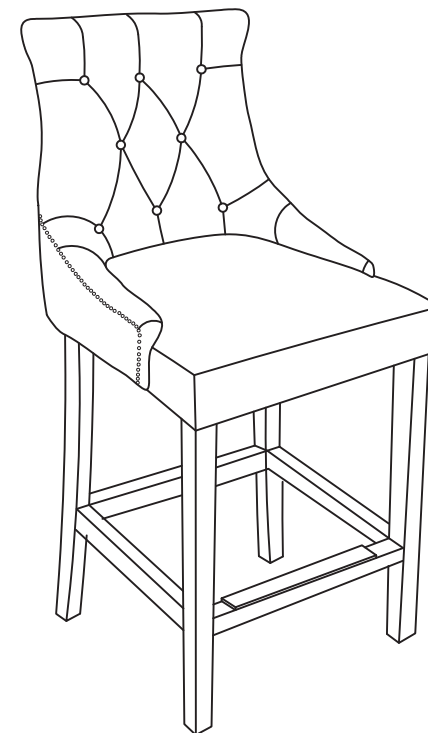


Weight capacity: 275lbs
WARNING: DO NOT STAND ON THE CHAIR

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 15 minutes.

Tools Required for Assembly : Allen Key (included) and Philips head screwdriver (not included)

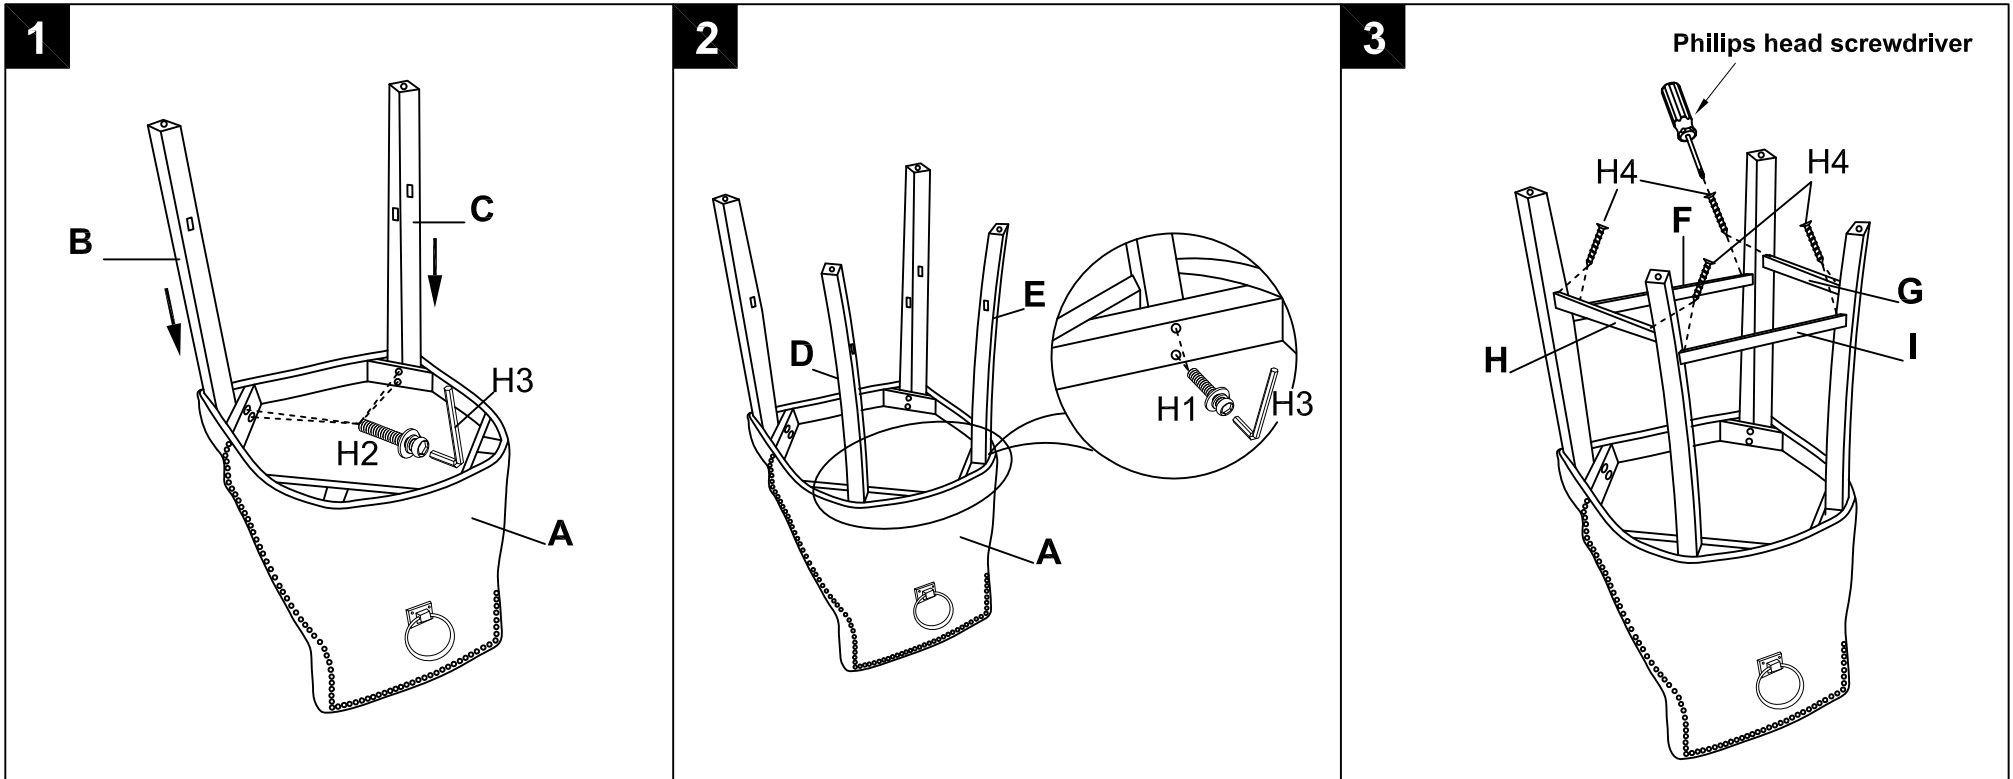

Step 1

Attach L/Front leg (B) and R/Front leg (C) to the underneath of the cushion (A) in the corresponding position, Use Allen Key (H3) to lock 4*Allen bolts (H2), as picture.

Step 2

Attach L/Back leg (D) and R/Back leg (E) to the underneath of the cushion (A) in the corresponding position, Use Allen Key (H3) to lock 4*Allen bolts (H1), as picture.

Step 3

Attach 4 stretchers (F/G/H/I) to 4 legs respectively in the corresponding position, Use Philips head screwdriver (tool is not included) to lock 8*screws (H4) from the both end of each stretchers to each legs, as picture.
Straighten up the assembled chair, Assembly is completed.