







CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat cushion		1x
B	U type metal frame		1x
C	Notched U type bottom frame		1x
HW1	Hex socket bolt	 1/4" - 20 x 5/8"	8x
HW2	Hex Socket Countersunk Head bolt	 1/4" - 20 x 5/8"	1x
HW3	Allen key	 M4	1x

SAFAVIEH FURNITURE

Model# OTT6201

Product Dimensions: $\phi 18$ "x19-1/4"H

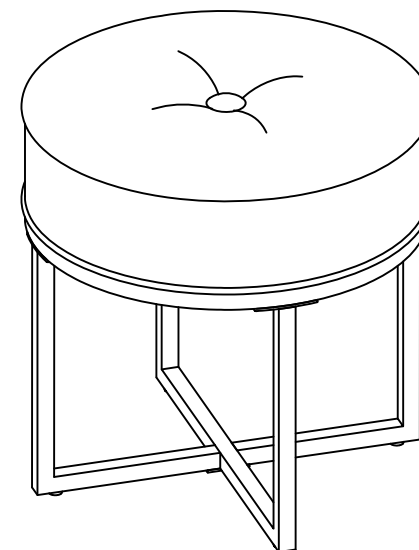


Weight capacity: 275lbs
WARNING: DO NOT STAND ON THE PRODUCT
WARNING: DO NOT OVER TORQUE BOLTS

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 15 minutes.

Tools Required for Assembly (included): Allen Key

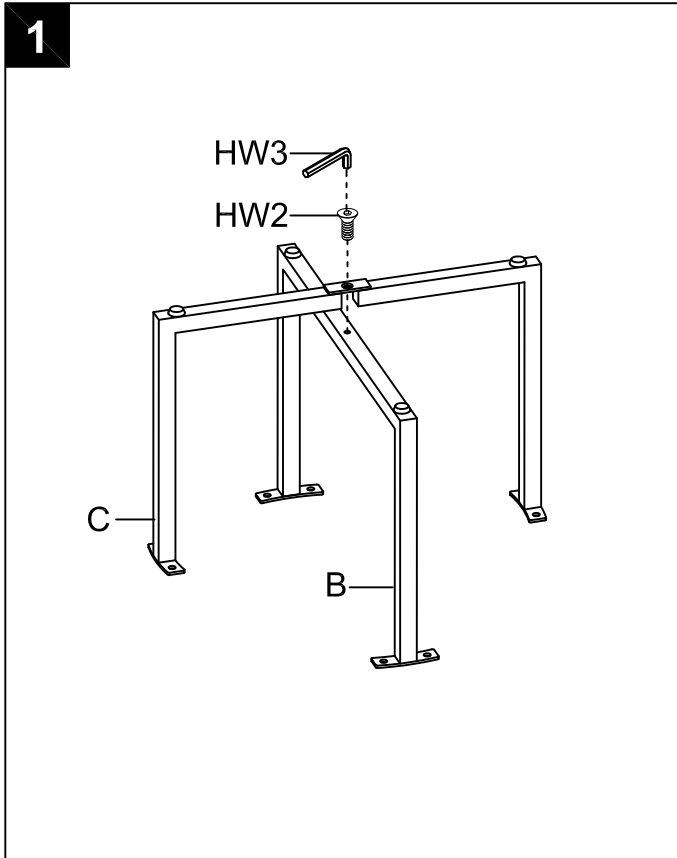


Step 1

Attach the center point of U type metal frame (B) to the Notched U type bottom frame (C), and align screws holes, then use the Allen key (HW3) to lock them together by 1*Hex Socket Countersunk Head bolt (HW2).

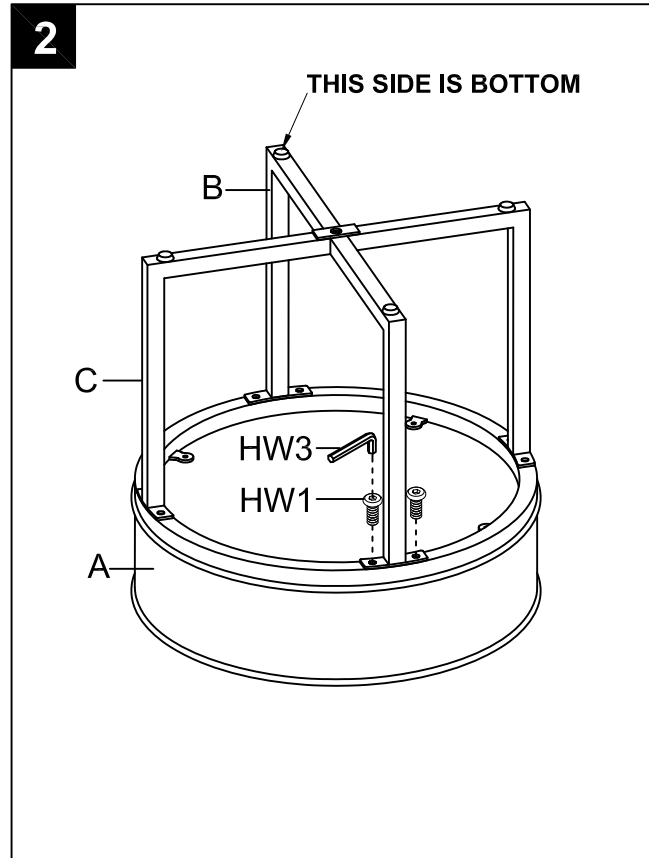

Step 2

Attach the assembled metal base (as step 1) with the bottom side of seat cushion (A) and aligning, Use Allen Key (HW3) to lock with 8*Hex socket bolts (HW1), as picture.

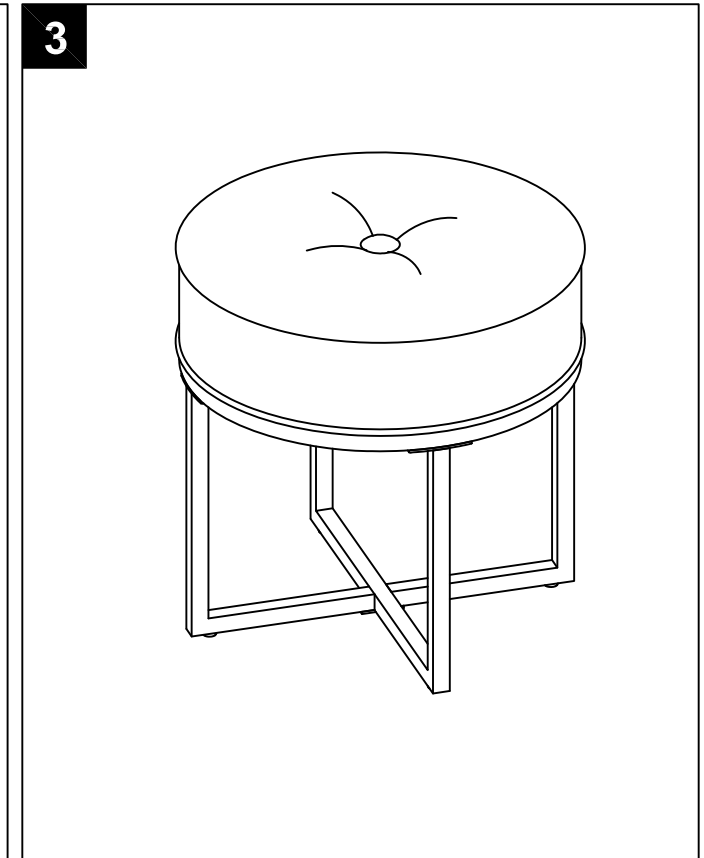

Step 3

Straighten up the assembled product, Assembly is completed.