




PKB4001,2,5,8

Vessel Sink Drain Without Overflow, 17 Gauge

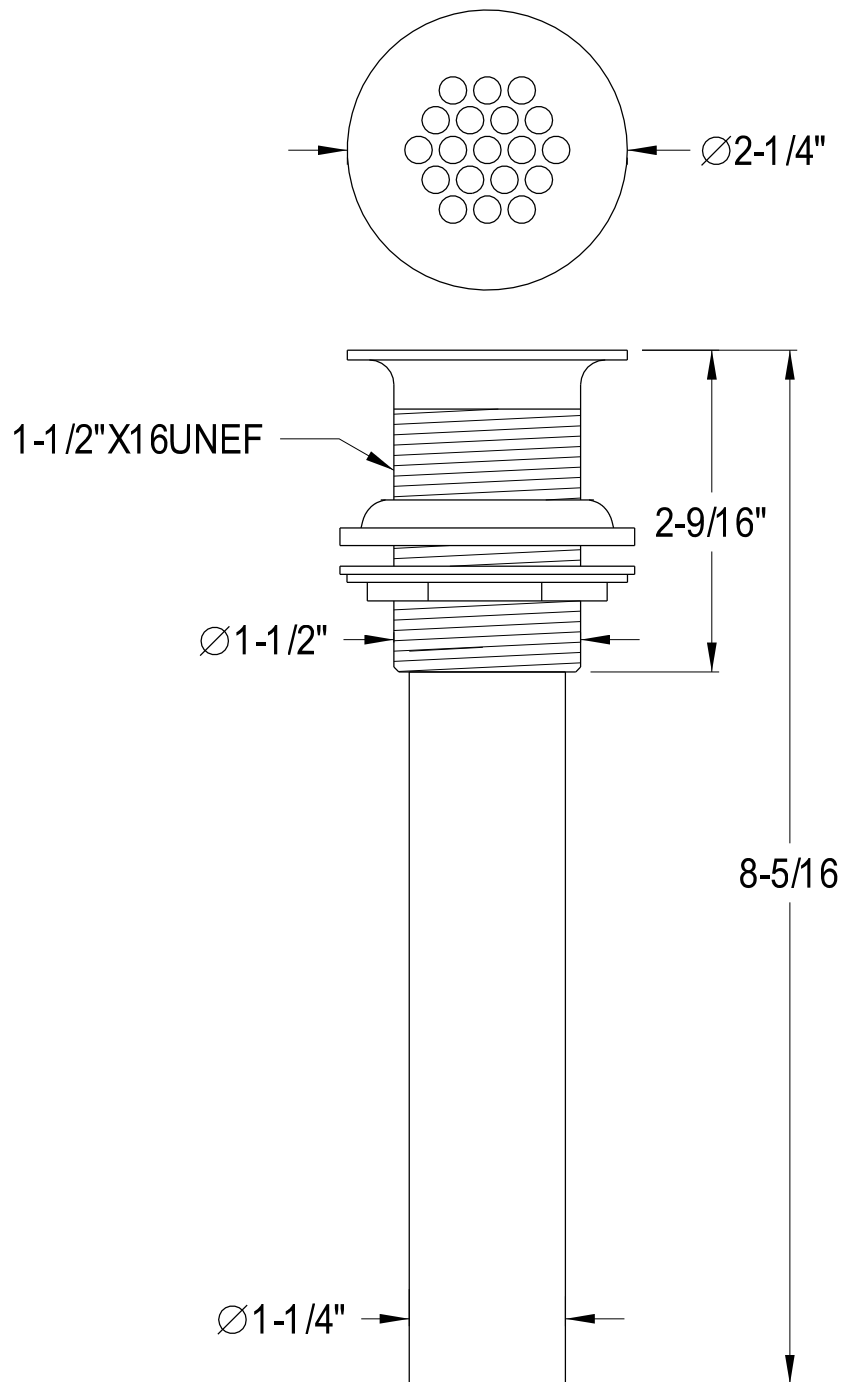

KINGSTON BRASS


THE TRADITION OF FINE BRASS

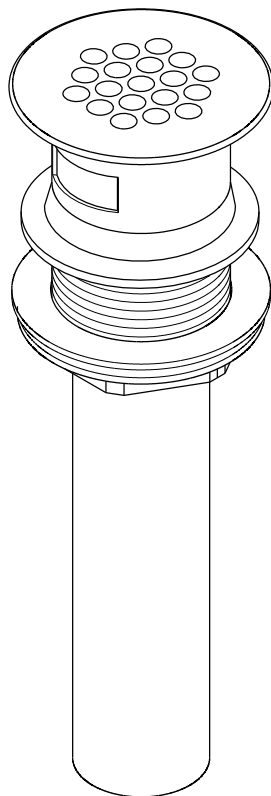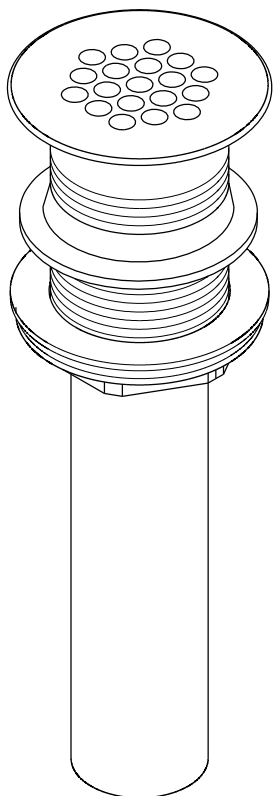

INSTALLATION INSTRUCTIONS

For Use With KB's Sink Drain with or without Overflow

Need Tools:




Basin Wrench



Adjustable Wrench



Teflon Tape



Silicone Sealant



Screwdriver

INSTALLATION:

1. Release drain body(1) from Tailpiece(5) then remove rubber gasket(2), plastic washer(3) and metal nut(4) from drain body.
2. Insert drain body(1) through the drain opening in the sink.
3. Thread rubber gasket(2) and plastic washer(3) into the drain body and then tighten the metal nut(4) on the drain body to push rubber gasket(2) up against the bottom of drain opening. Tighten the nut with slip-joint pliers.
4. Apply Teflon tape on both tailpiece thread connection and drain body.
5. Turn handles on faucet to the full on position and inspect to insure that there is no leaking underneath lavatory.

