

966-03 / 966-W-03
966-06 / 966-W-06

DRESSER / WHITE DRESSER
MIRROR / WHITE MIRROR


966
SERIES

Assembly Instruction

A. Components :

1. Mirror
2. Dresser
3. Frame Support

1 x
1 x
2 x

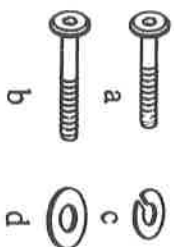


B. Hardware :


- Allen Bolt Short
- Allen Bolt Long
- Lock Washer
- Flat Washer
- Allen Key

4 x
4 x
8 x
8 x
1 x

STEP 1

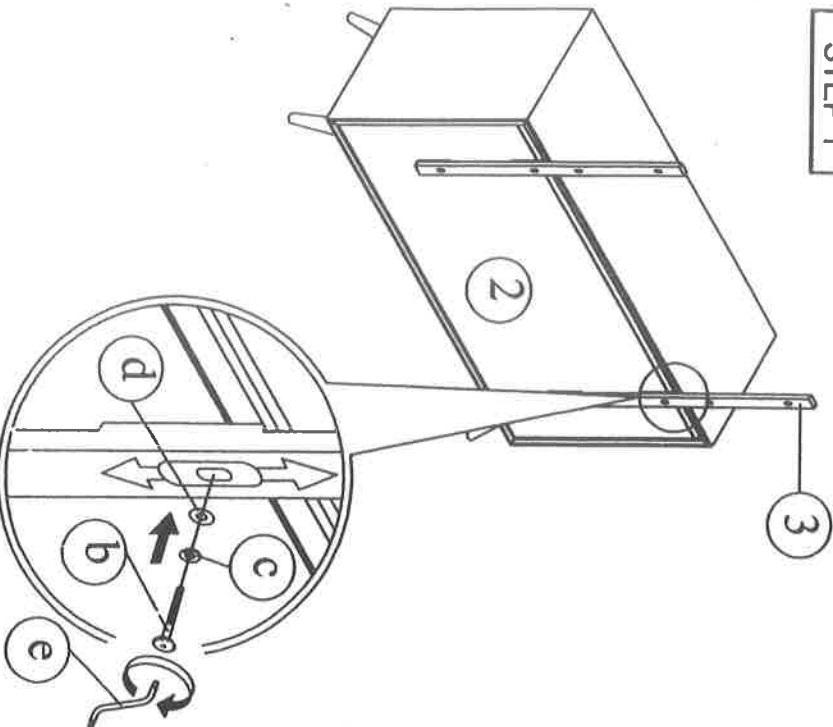

STEP 2

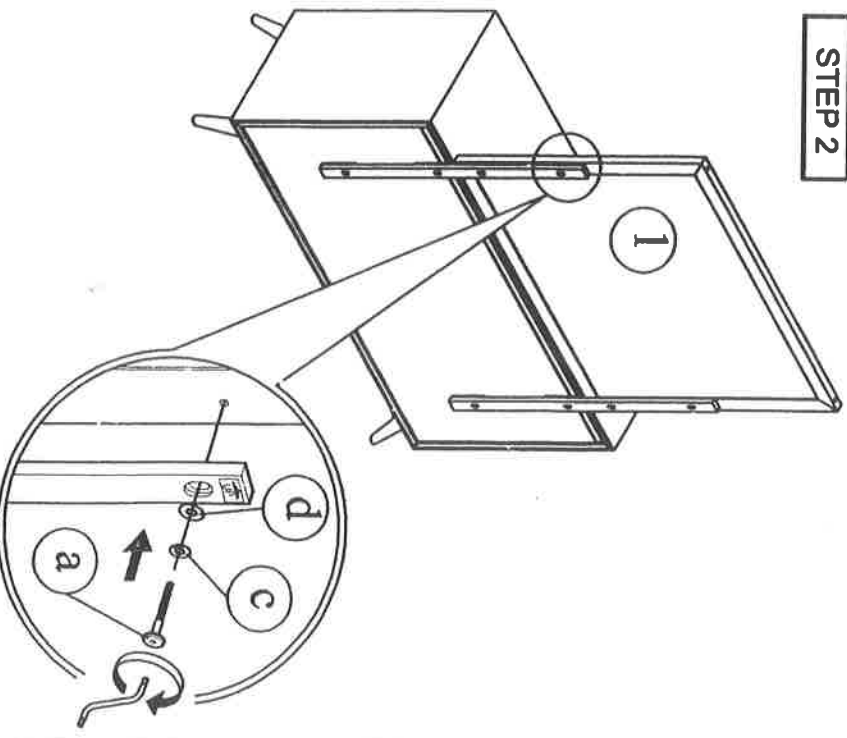

STEP 3

