


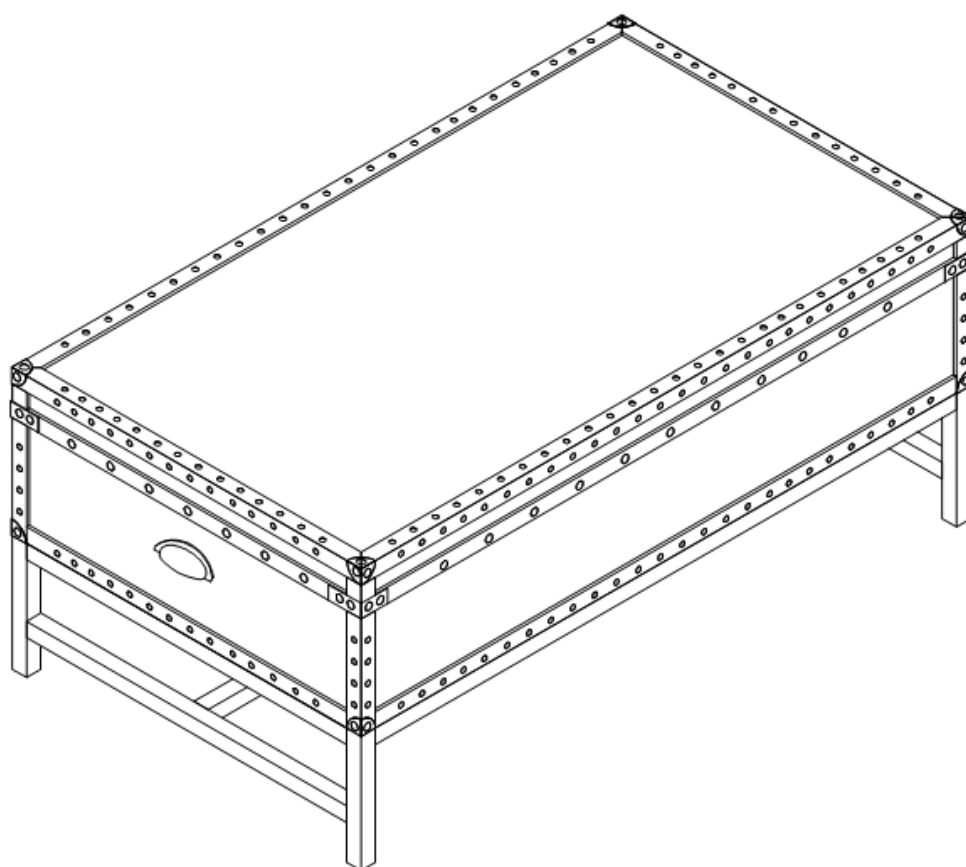























Assembly Instruction

Max top load 60 lb, max inside load 40 lb.




Parts List

Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Screws shown actual size. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra hardware with your unit.

<div>A</div> <div></div> <div>Back Panel</div> <div>Quantity Of 1</div>	<div>B</div> <div></div> <div>Front Panel</div> <div>Quantity Of 1</div>	<div>C</div> <div></div> <div>Left Side Panel</div> <div>Quantity Of 1</div>	
<div>D</div> <div></div> <div>Right Side Panel</div> <div>Quantity Of 1</div>	<div>E</div> <div></div> <div>Bottom Panel</div> <div>Quantity Of 1</div>	<div>F</div> <div></div> <div>Top Panel</div> <div>Quantity Of 1</div>	
<div>G</div> <div></div> <div>Metal Side Frame</div> <div>Quantity Of 2</div>	<div>H</div> <div></div> <div>Top Stretcher</div> <div>Quantity Of 2</div>	<div>I</div> <div></div> <div>Bottom Stretcher</div> <div>Quantity Of 1</div>	
<div>1</div> <div></div> <div>Cam Bolt $\frac{1}{4}$"x1-1/2"</div> <div>Quantity Of 18</div>	<div>2</div> <div></div> <div>Cam Lock $\frac{5}{8}$"x1"</div> <div>Quantity Of 18</div>	<div>3</div> <div></div> <div>Left Support</div> <div>Quantity Of 1</div>	<div>4</div> <div></div> <div>Right Support</div> <div>Quantity Of 1</div>
<div>5</div> <div></div> <div>Screw $\frac{1}{8}$"x1/2"</div> <div>Quantity Of 8</div>	<div>6</div> <div></div> <div>Hinge</div> <div>Quantity Of 2</div>	<div>7</div> <div></div> <div>Screw $\frac{1}{8}$"x5/8"</div> <div>Quantity Of 16</div>	<div>8</div> <div></div> <div>Handle</div> <div>Quantity Of 2</div>
<div>9</div> <div></div> <div>Bolt $\frac{5}{32}$" x1/2"</div> <div>Quantity Of 4</div>	<div>10</div> <div></div> <div>Adhesive Pad</div> <div>Quantity Of 10</div>	<div>11</div> <div></div> <div>Bolt 1/4"x 2"</div> <div>Quantity Of 10</div>	<div>12</div> <div></div> <div>Flat washer 1/4"x3/4"</div> <div>Quantity Of 10</div>
<div>13</div> <div></div> <div>Wrench</div> <div>Quantity Of 1</div>	<div>14</div> <div></div> <div>Bolt 1/4"x 3/4"</div> <div>Quantity Of 6</div>		
<div>Care and Cleaning Instructions:</div> <div>Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish on wood part. Avoid rubbing or scratching the surface with rough or abrasive objects.</div>		<div>For replacement parts or questions, please call Customer Service at 1-800-633-5096. Do not return product to store. Please call manufacturer for assistance, questions or parts.</div>	
<div>Assembly Tool Required</div> <div>No.2 Phillips Screw Driver</div>		<div></div>	


Assembly Instruction

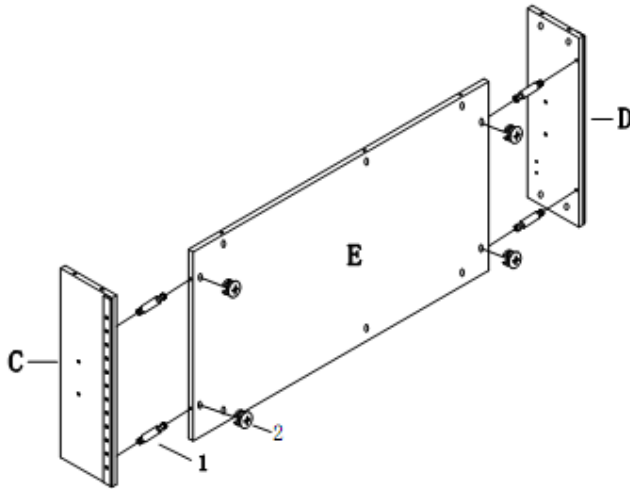

Step 1:


Put all parts on a soft surface to prevent scratches.

Attach left side panel (C) and right side panel (D) to bottom panel (E) by using cam bolt (1) and cam lock (2) as shown.

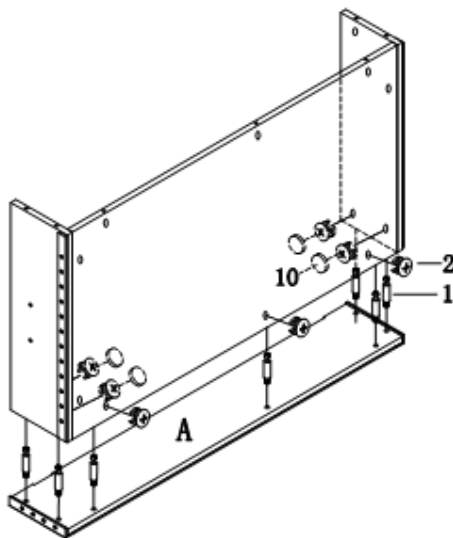


Step 2:

Attach back panel (A) to trunk base by using cam bolt (1), cam lock (2) and adhesive pad (10) as shown.

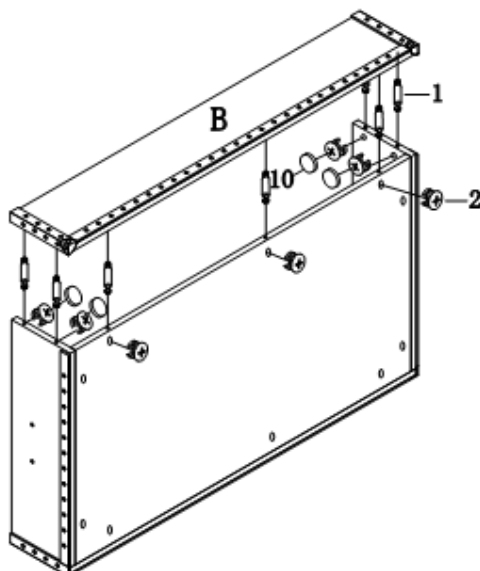


Step 3:

Attach front panel (B) to trunk base by using cam bolt (1), cam lock (2) and adhesive pad (10) as shown.

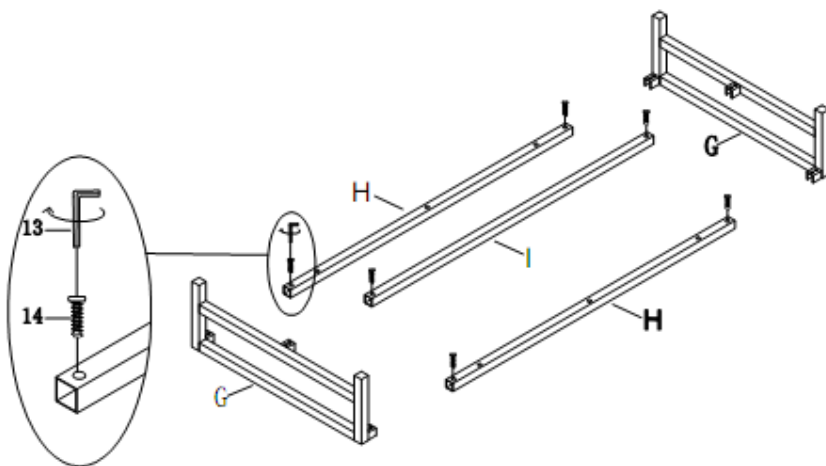


Step 4:

Attach metal side frame (G) to top stretcher (H) and bottom stretcher (I) by using bolt (14) as shown.

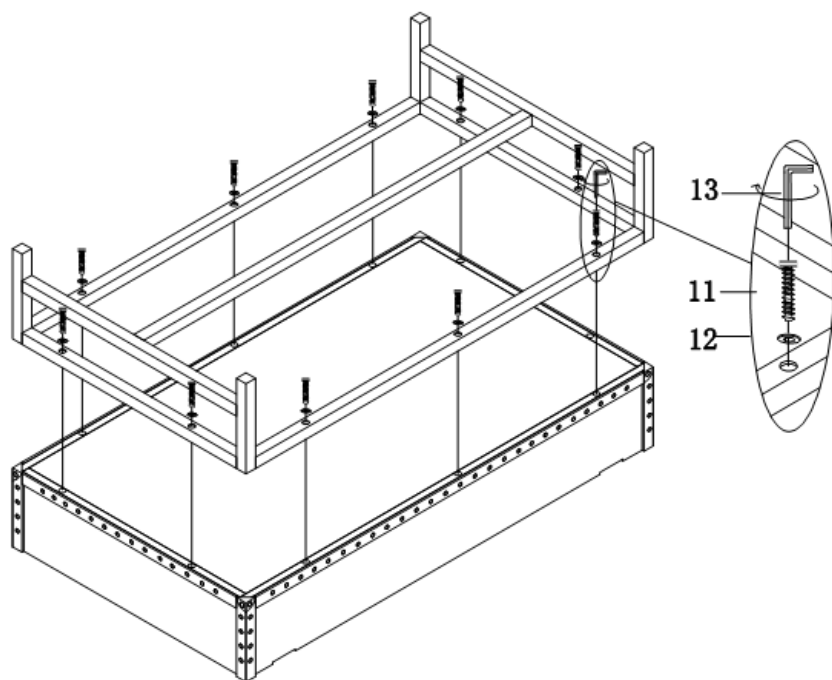


Step 5:

Attach metal frame to trunk base by using bolt (11) and flat washer (12) as shown.

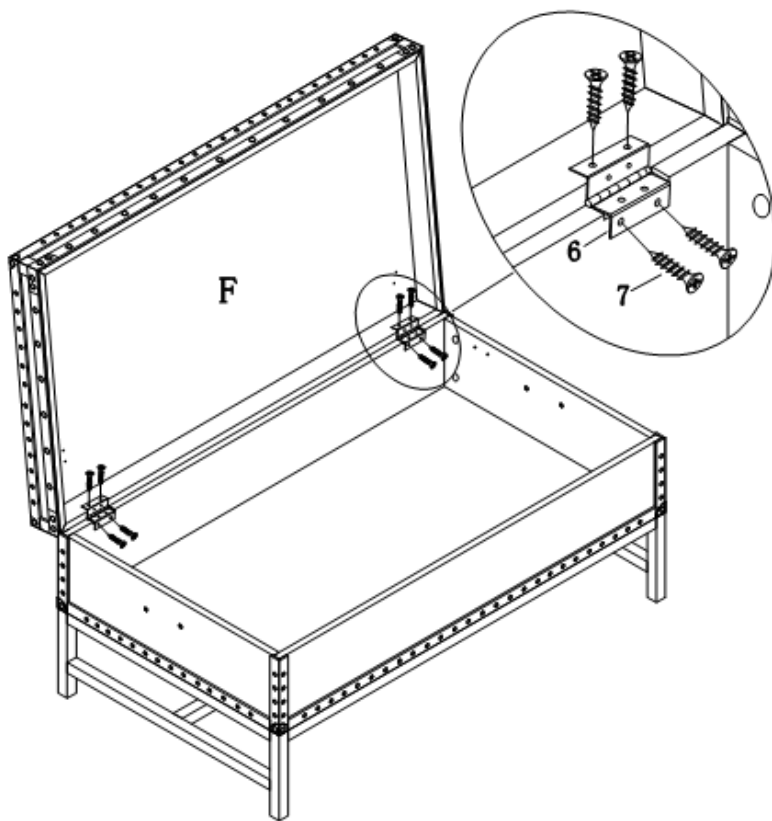

Step 6:

Attach top panel (F) to the trunk base by using screw (7) and hinge (6) as shown. Using Phillips screw driver to tighten them.

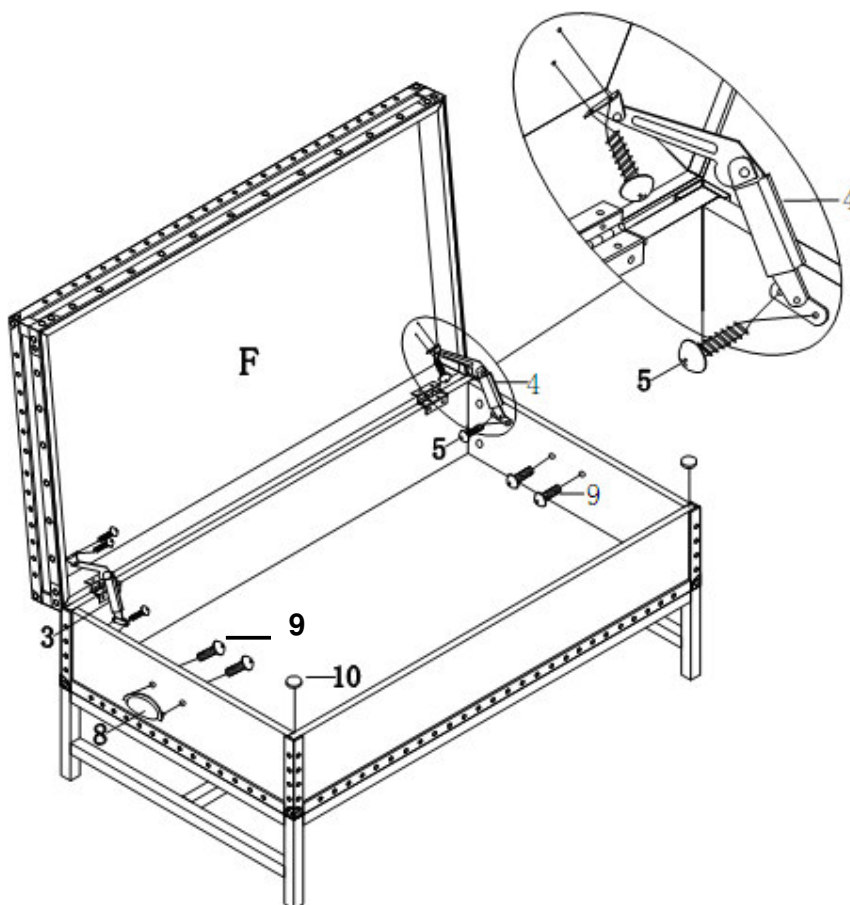

Step 7:

Attach left support (3) and right support (4) to the top panel (F) and trunk base by using screw (5) as shown.

Attach handle (8) to left side panel (C) and right side panel (D) by using bolt (9) as shown.

Then put adhesive pad (10) onto front panel (B) as shown, close the top and leave the top to drop down slowly.

Noted: Please do not open the lid all the way back.