

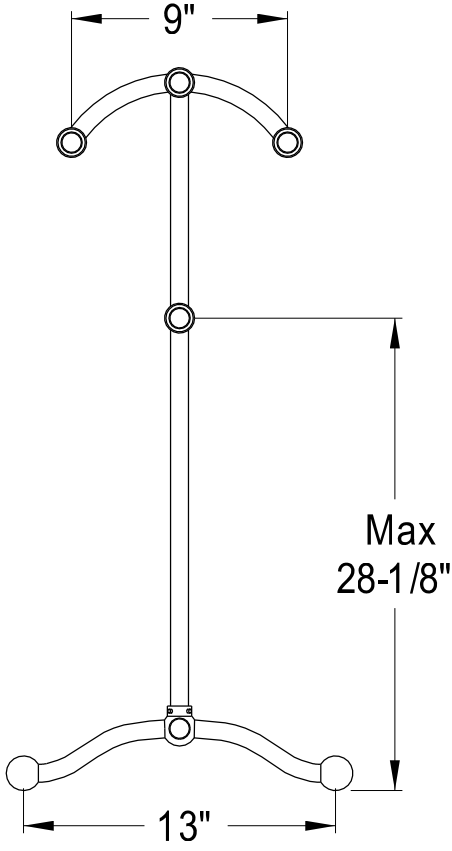
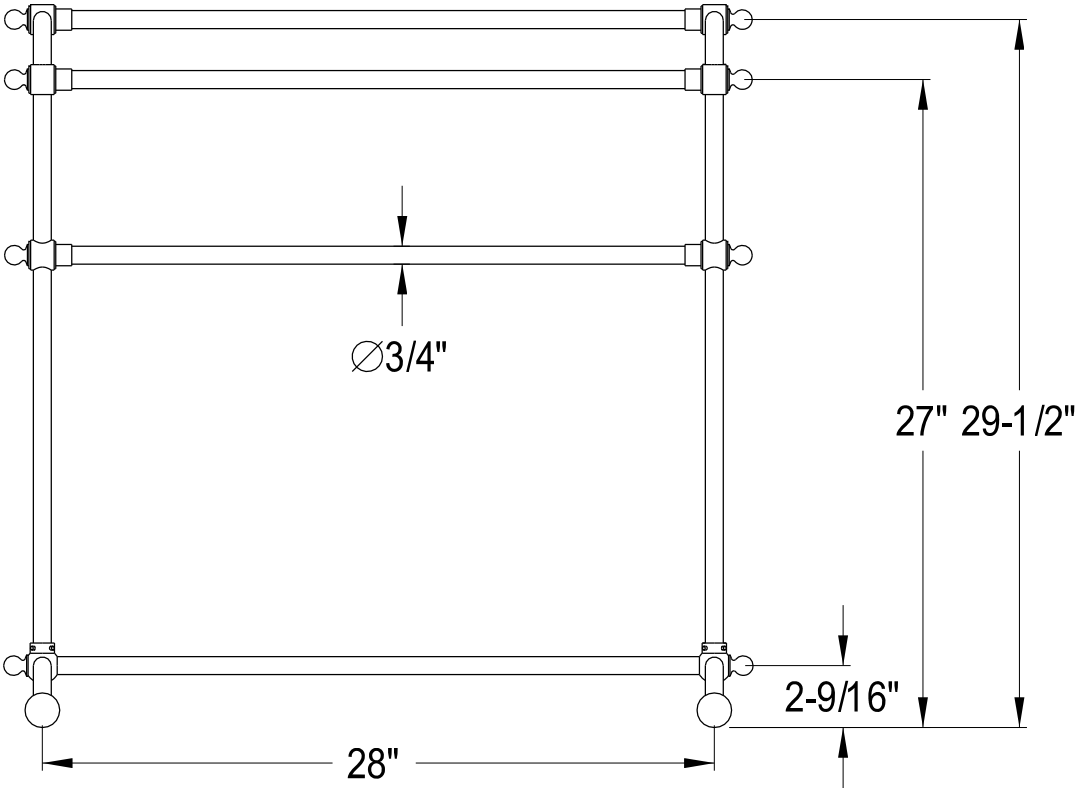


# PCC2291,2,5,8

Pedestal Towel Rack

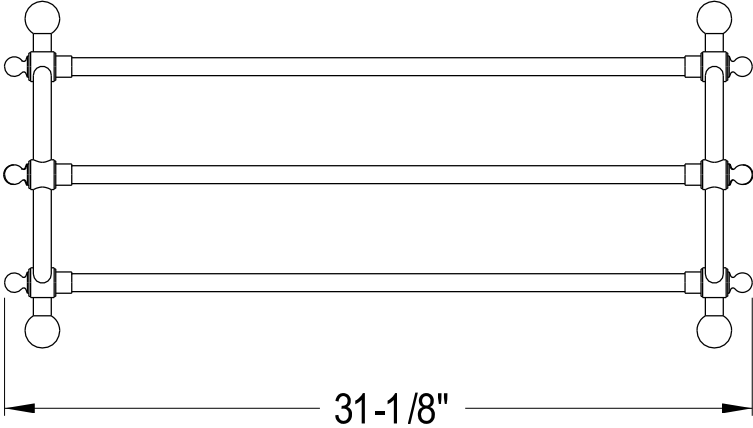


## Towel Rack Installation

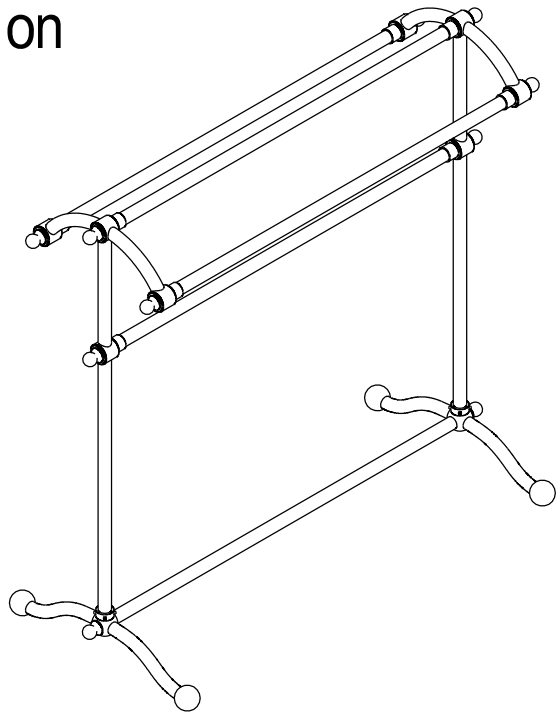


### Parts:

PCC2291 Screw




4 Pcs



2 Pcs


### Installation Steps:

1

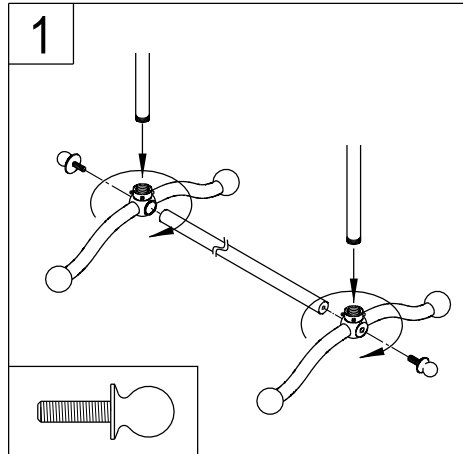


1. Screw in 29" vertical side bars into foot and bolt in bottom bar between assembly.

2

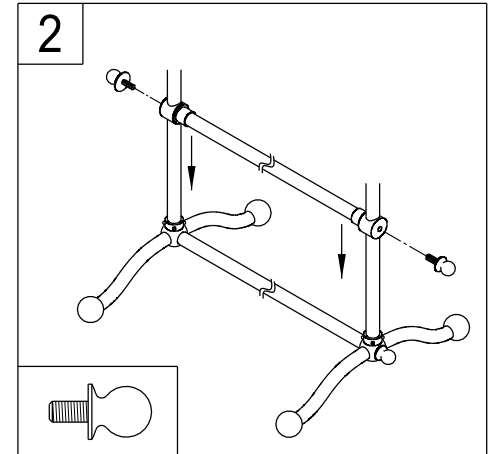


2. Slide middle bar down vertical side bars and tighten bolts at desired level.

3

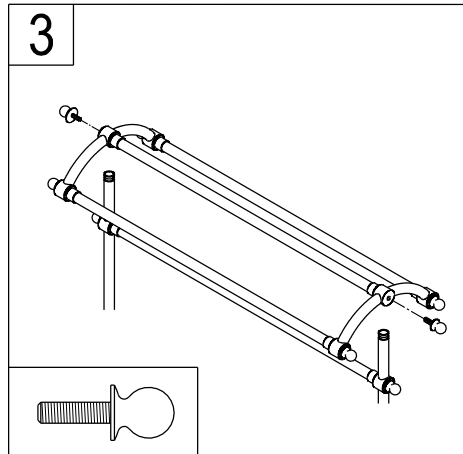

3. Bolt in top rack assembly to bottom assembly.

4

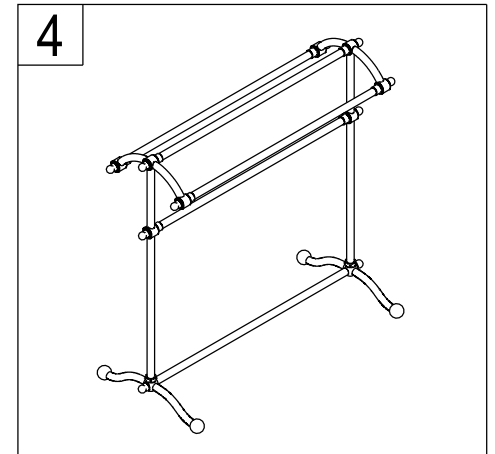

4. Check all bolts are tight and secure on your completed towel rack.