




Item # :OAWS2N
Assembly Instructions

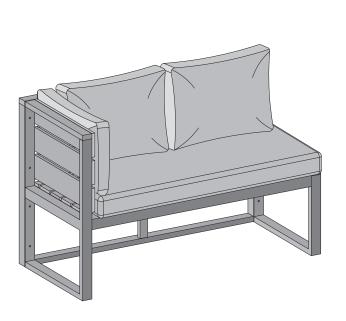

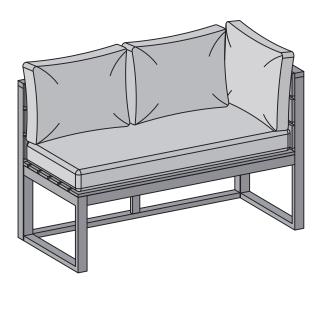

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com


Revised 03/2017

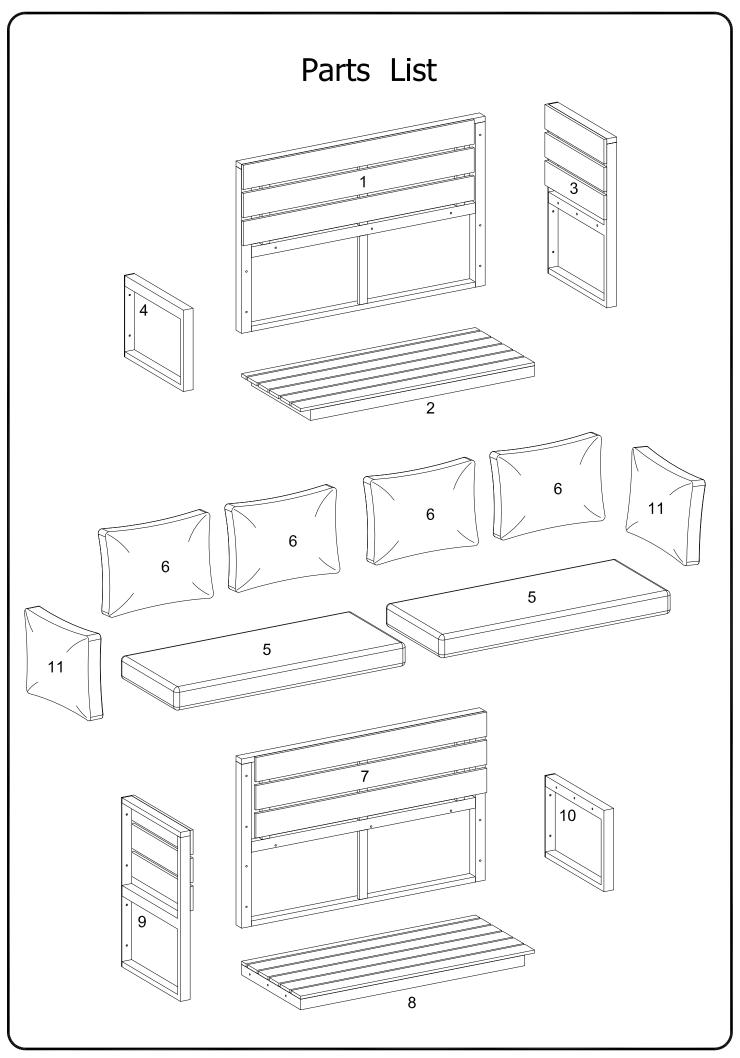


## Hardware List

Α	M6*35mm	Long boot	18 pcs
В	M6*25mm	Short boot	10 pcs
С		Washer	28 pcs
D		Boot cap	28 pcs
E	M4mm	Wrench	1 pc


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

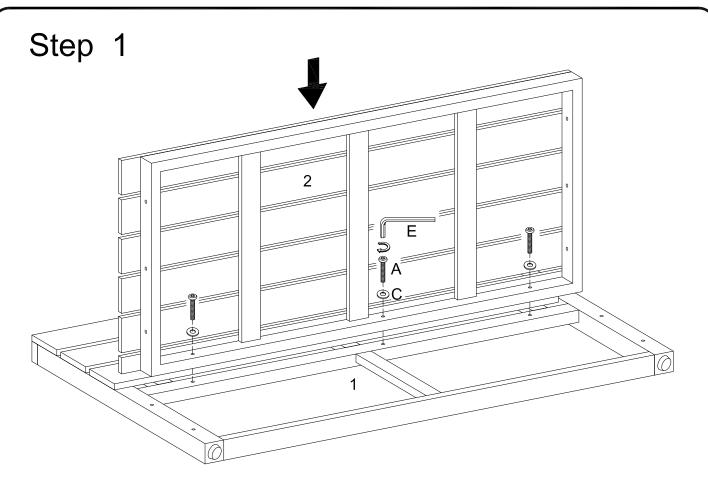

Attach seat frame (2) to back frame (1) using long bolts (A) and washers (C) . Tighten long bolts (A) with wrench (E). Hands tighten all bolts only and not tighten completely.

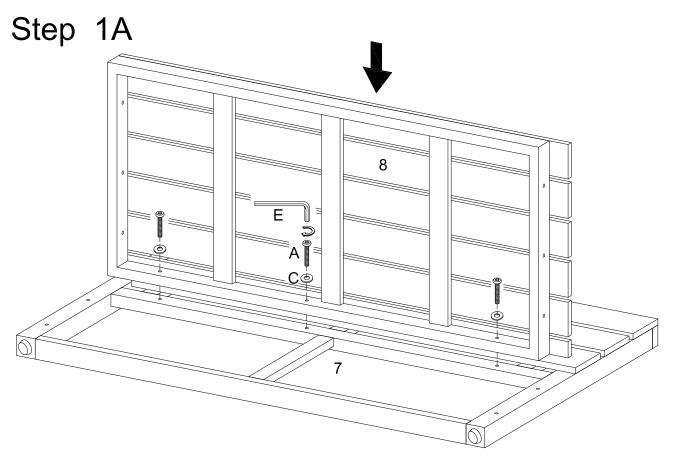


Attach seat frame (8) to back frame (7) using long bolts (A) and washers (C) . Tighten long bolts (A) with wrench (E). Hands tighten all bolts only and not tighten completely.

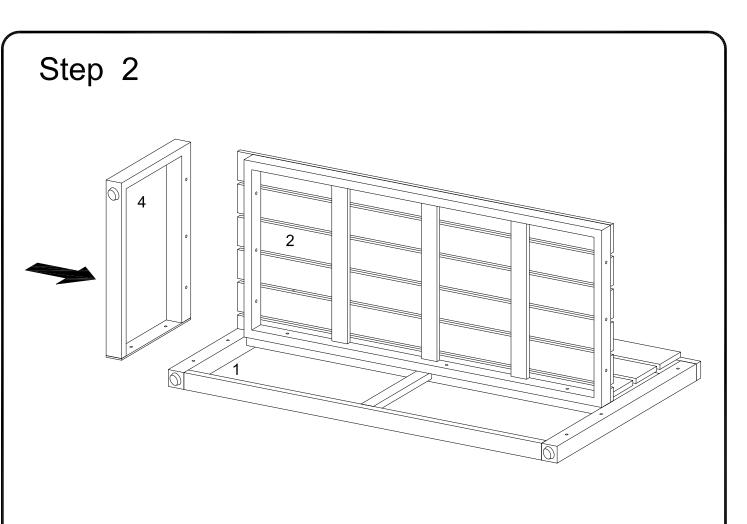


Attach right leg (4) to seat frame (2) using bolts as guides.


Attach left leg (10) to seat frame (8) using bolts as guides.



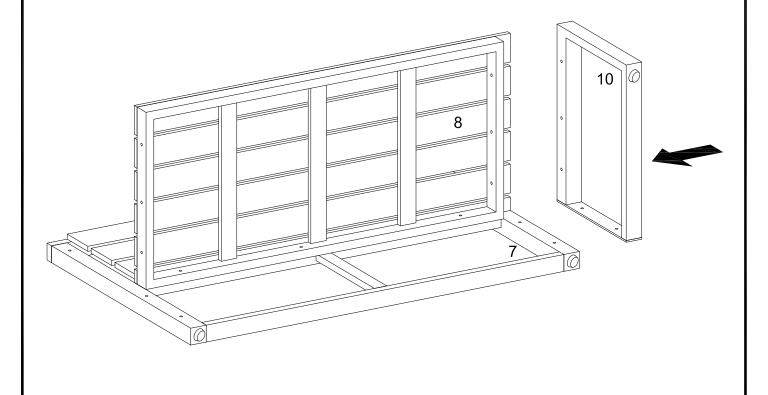


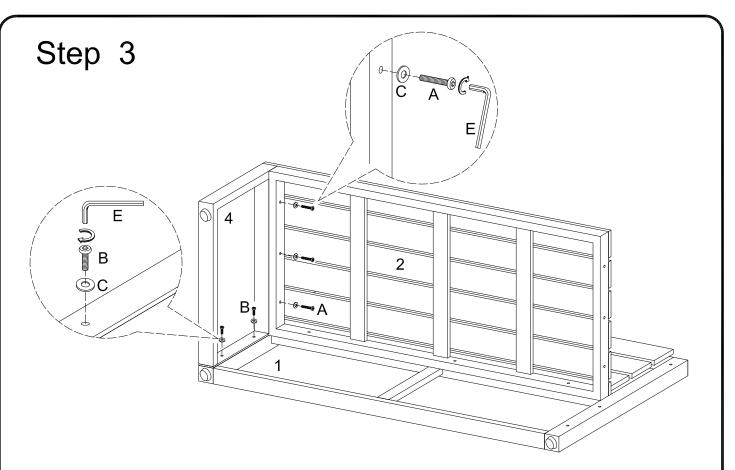


Attach seat frame (2) to right leg (4) using long bolts (A) and washers (C). Attach right leg (4) to back frame (1) using short bolts (B) and washers (C). Tighten all bolts with wrench (E). Hands tighten all bolts only and not tighten completely.

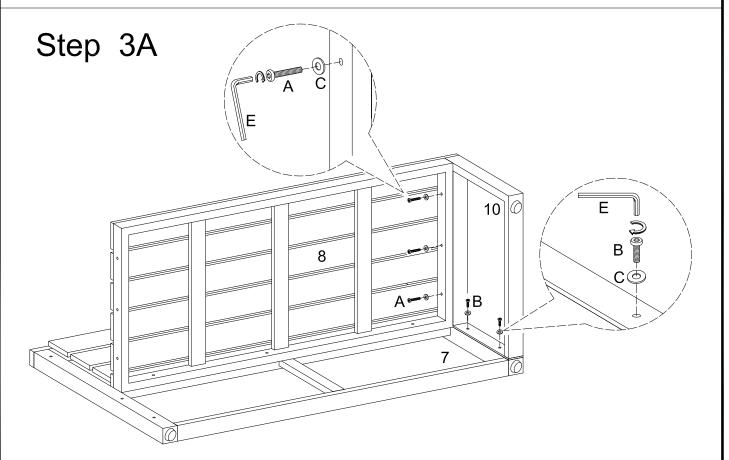


Attach seat frame (8) to left leg (10) using long bolts (A) and washers (C). Attach left leg (10) to back frame (7) using short bolts (B) and washers (C). Tighten all bolts with wrench (E). Hands tighten all bolts only and not tighten completely.

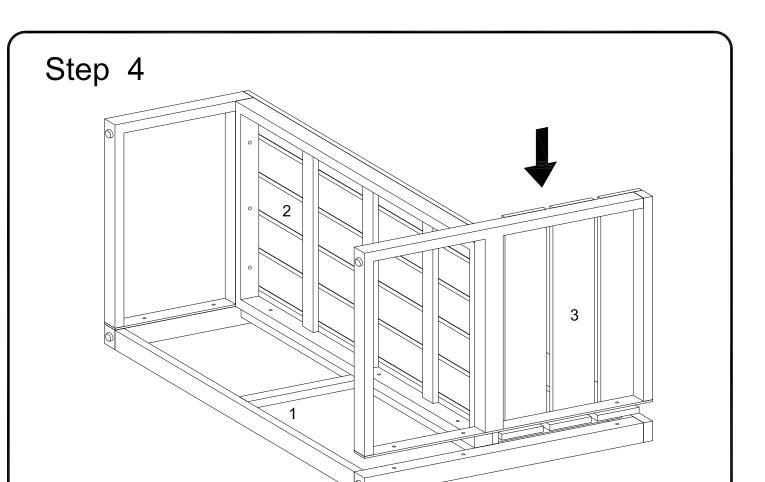


Attach left leg (3) to back frame (1) using bolts as guides.



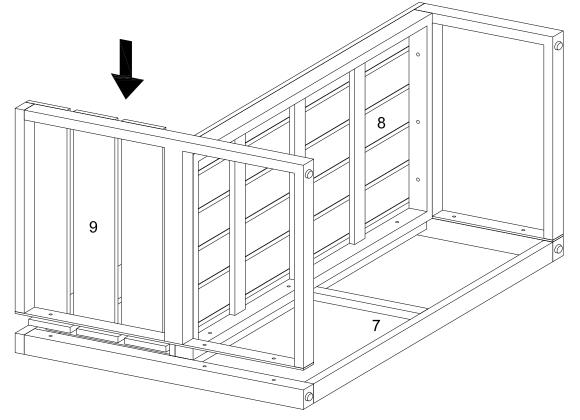


Attach right leg (9) to back frame (7) using bolts as guides.



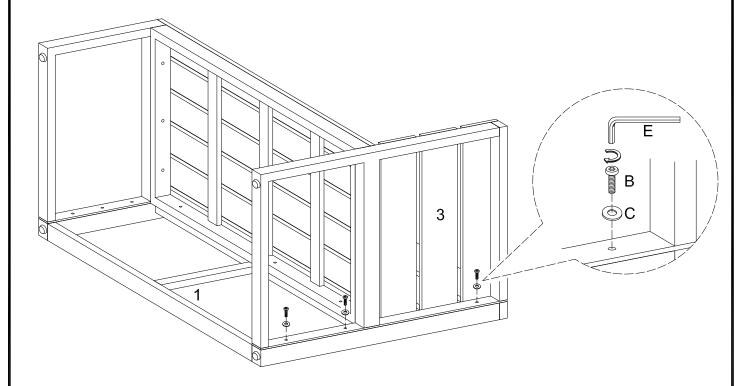


Attach left leg (3) to back frame (1) using short bolts (B) and washers (C) . Tighten short bolts (B) with wrench (E). Hands tighten all bolts only and not tighten completely.


## Step 5A

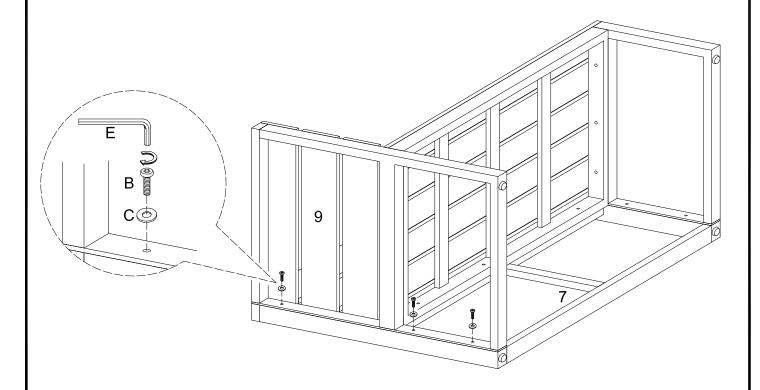


Attach right leg (9) to back frame (7) using short bolts (B) and washers (C) . Tighten short bolts (B) with wrench (E). Hands tighten all bolts only and not tighten completely.

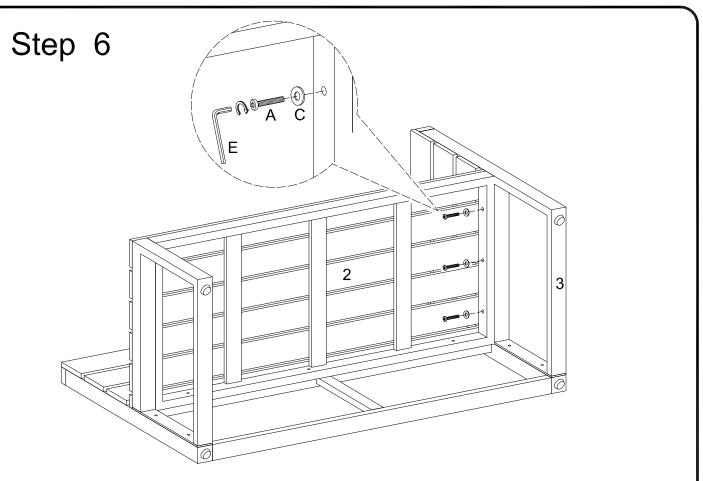


Attach seat frame (2) to left leg (3) using long bolts (A) and washers (C) . Tighten long bolts (A) with wrench (E). Hands tighten all bolts only and not tighten completely.

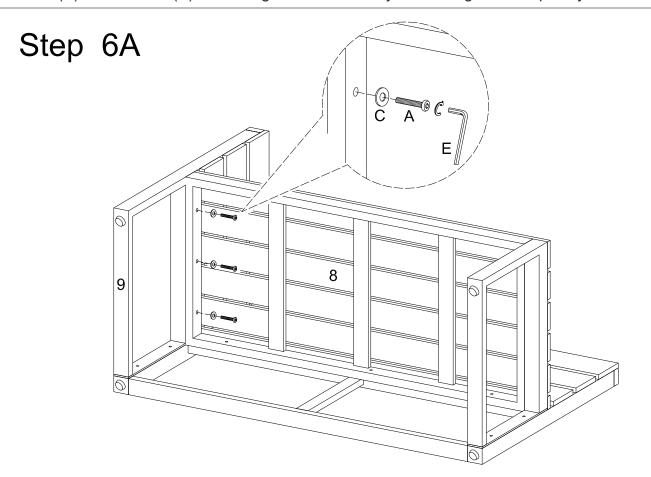

Attach seat frame (8) to right leg (9) using long bolts (A) and washers (C) . Tighten long bolts (A) with wrench (E). Hands tighten all bolts only and not tighten completely.

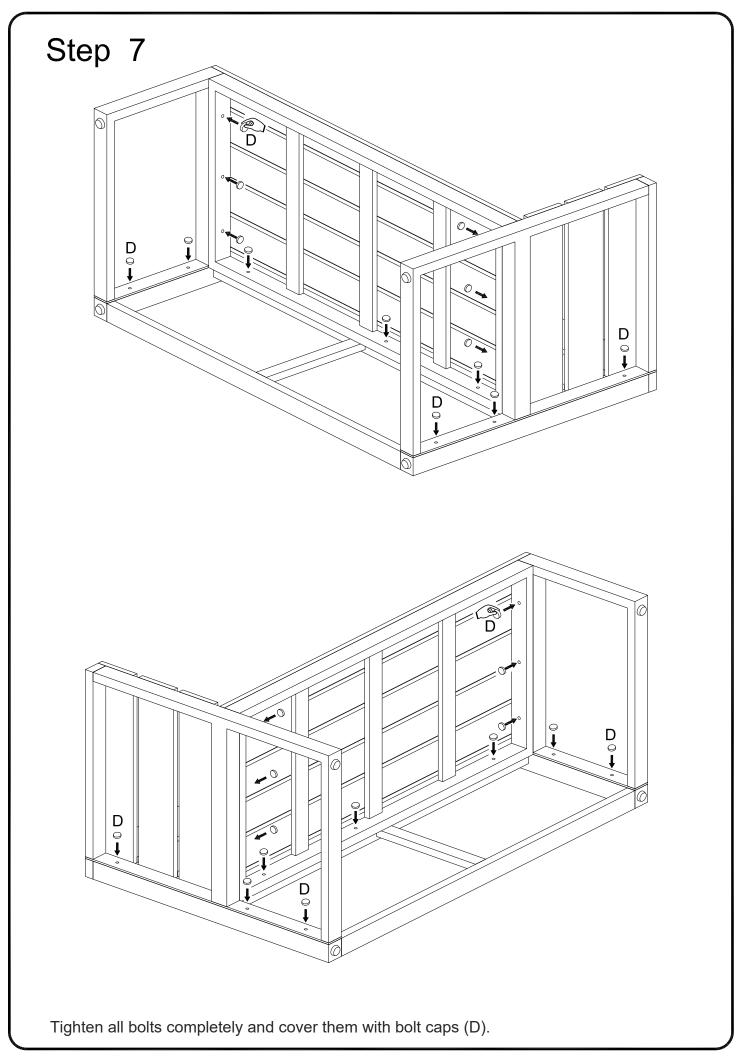

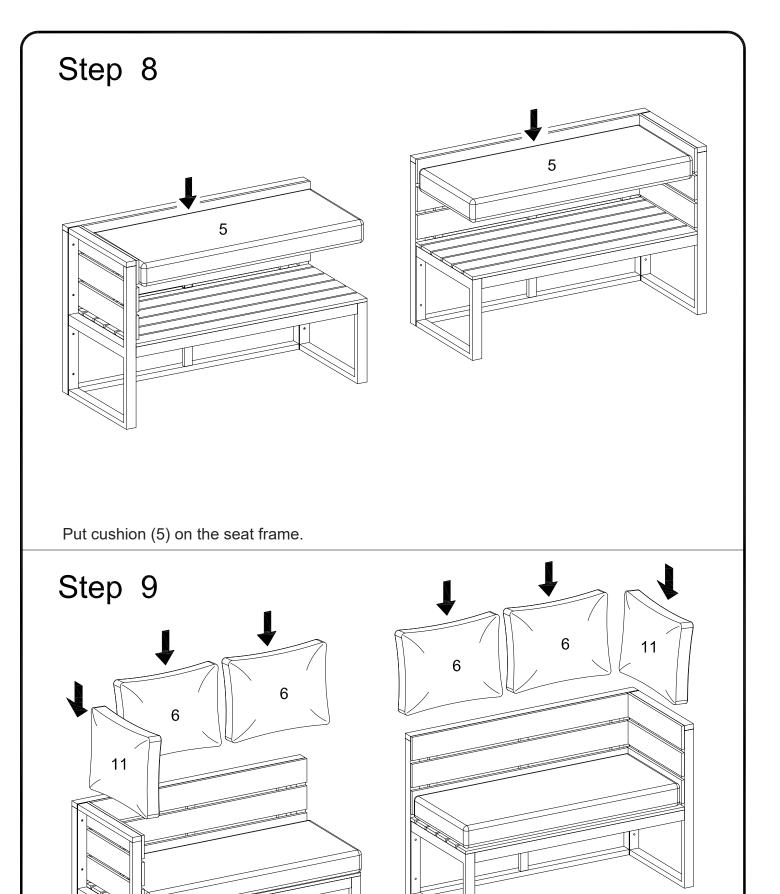

Copyright © 2013, by Walker Edison Furniture Co., LLC. All rights reserved.

## Step 10 **Final Assembly**