

88 5520 942 Aspen Kitchen Island

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

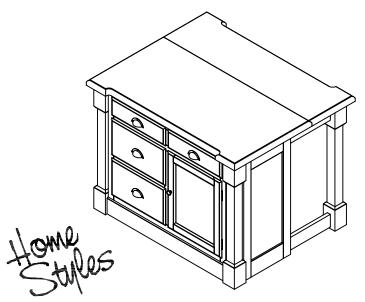

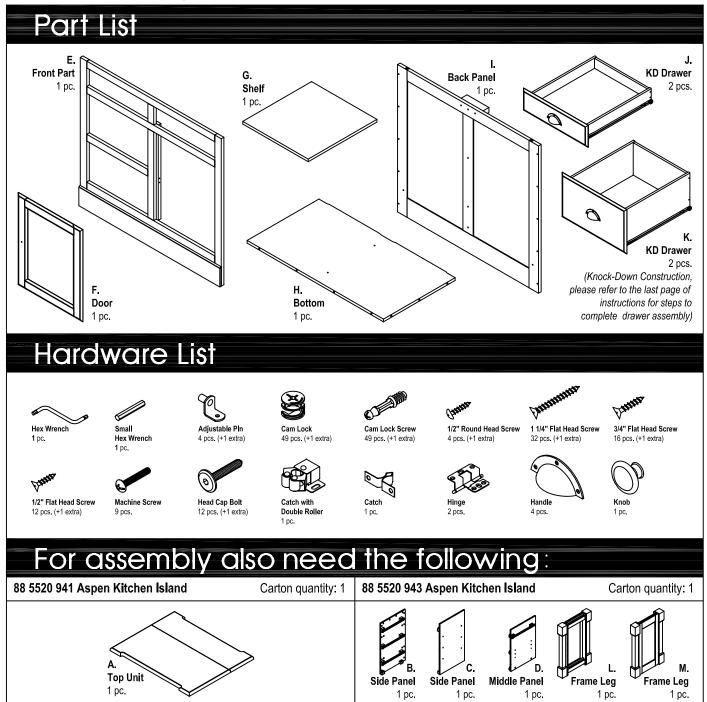

Tools Required For Assembly: Phillips screwdriver


Tools Recommended For Assembly: Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com


Assembly Instructions 2/10

IMPORTANT


- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levellers to level.

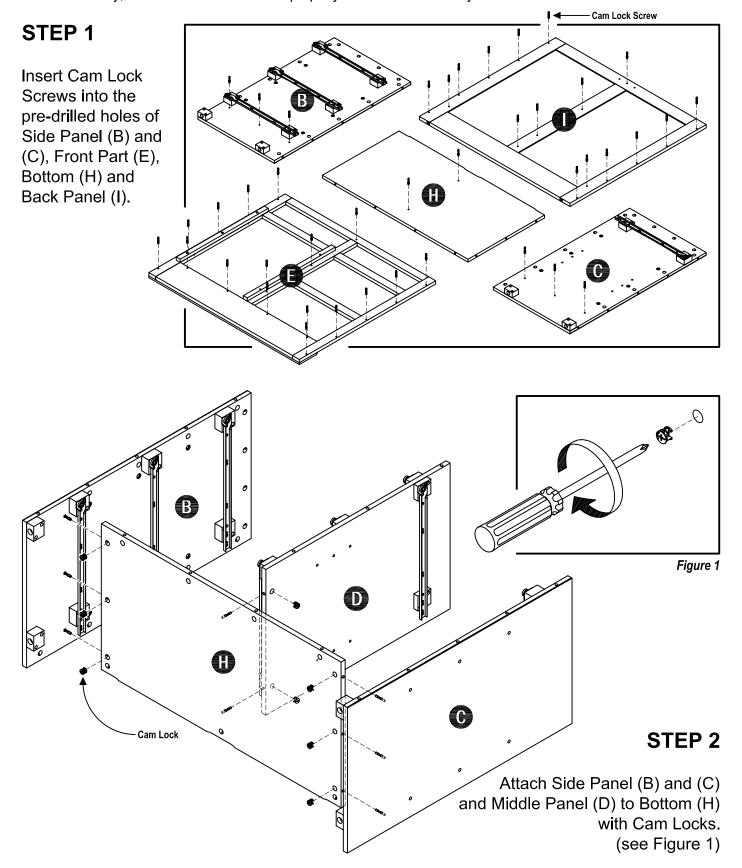

Assembly Instructions 3/10

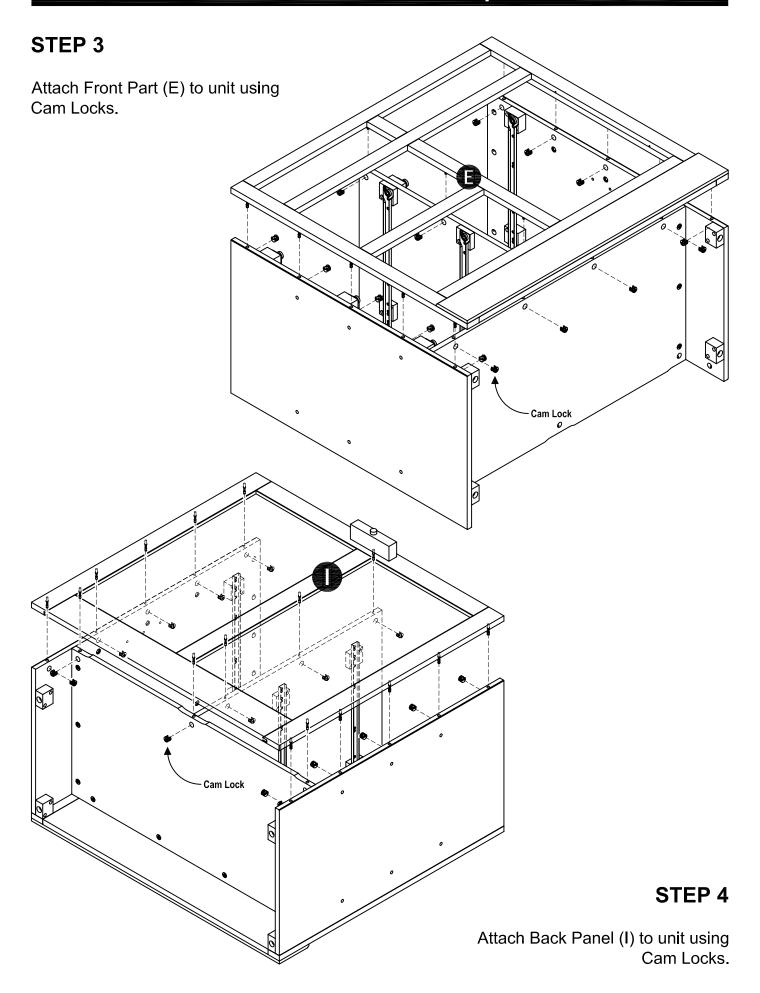

Assembly Instructions 4/10

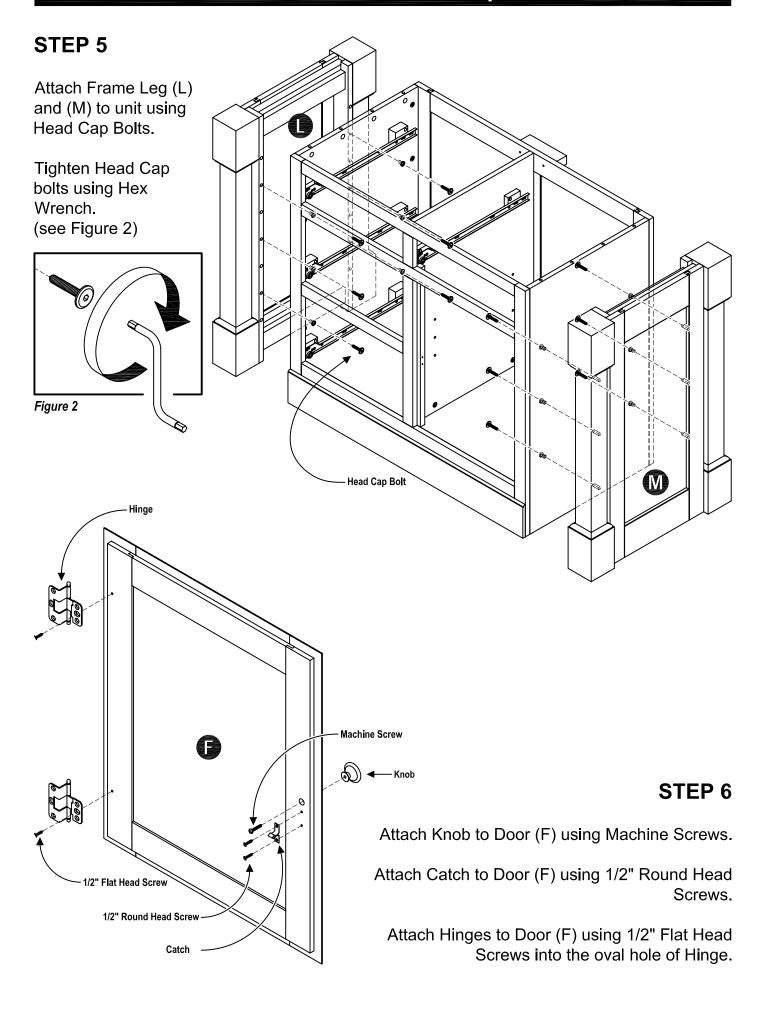

Assembly Instructions 5/10

STEP 7

Attach Catch with Double Roller to unit using 1/2" Round Head Screws.

Attach Door (F) to unit using 1/2" Flat Head Screws into the oval hole of Hinges.

Use the oval hole of Hinges at the Door to adjust the Door left and right.

(see Figure 3)

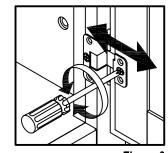


Figure 3

Use the oval hole of Hinges at the unit to adjust the Door up and down. (see Figure 4)

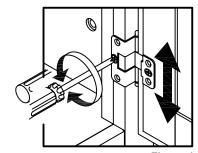


Figure 4

After adjustment, attach door using 1/2" Flat Head Screws though round holes of Hinges. (see Figure 5)



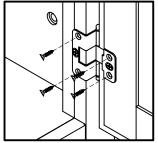


Figure 5

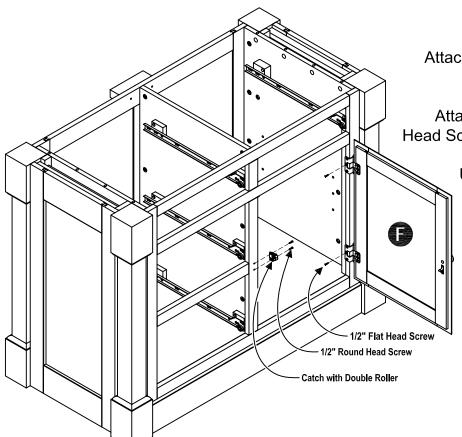


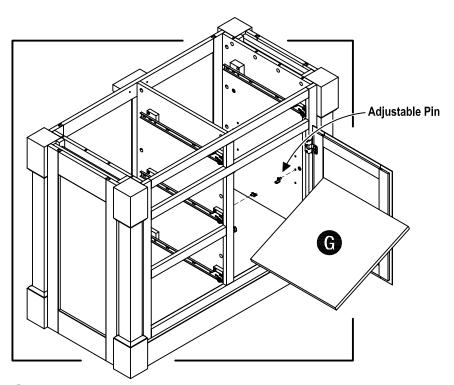


STEP 8

Insert Adjustable Pins into side panels and middle panel at the desired level. Slide Shelf (G) into position.

Assembly Instructions 6/10

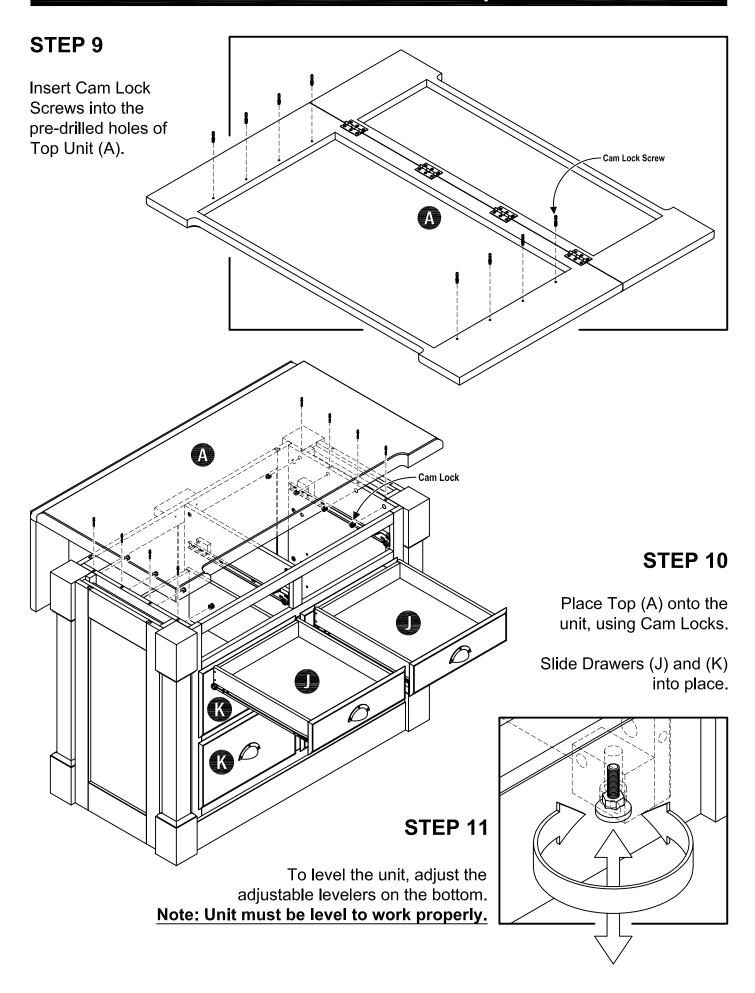



Assembly Instructions 7/10

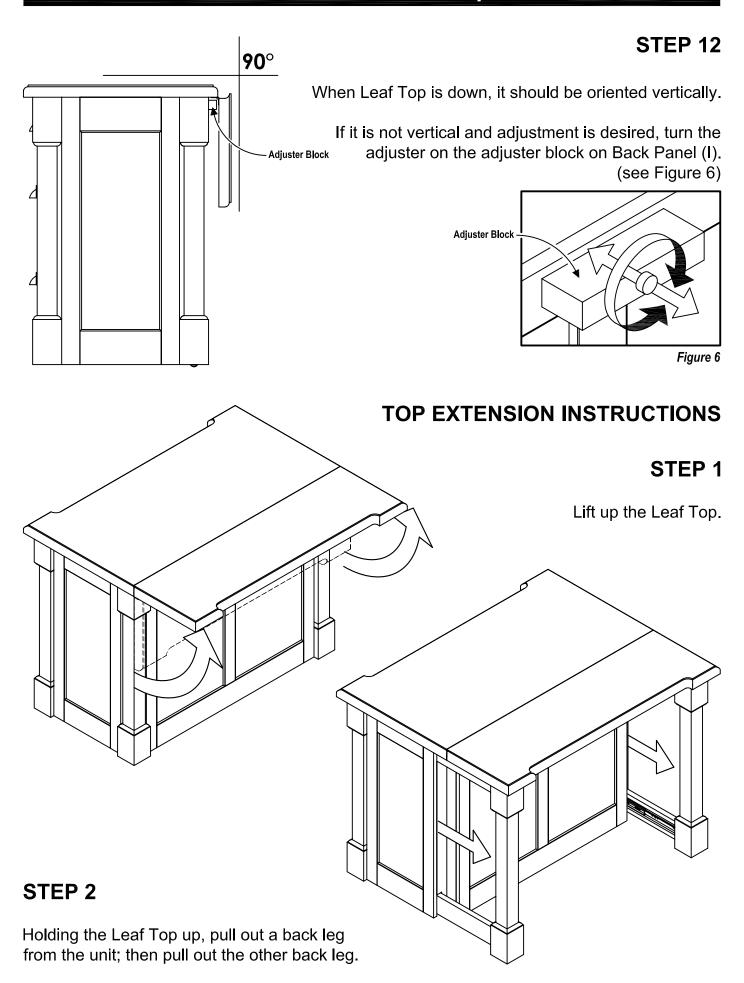

Assembly Instructions 8/10

Drawer (J)

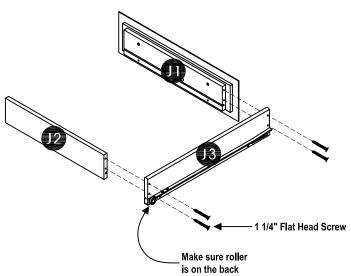

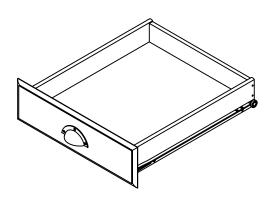


STEP 1

Attach Side Part (J3) to Front Part (J1) and Back Part (J2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

STEP 2


Insert Base Part (J5) into the groove.

Attach Side Part (J4) to Front Part (J1) and Back Part (J2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

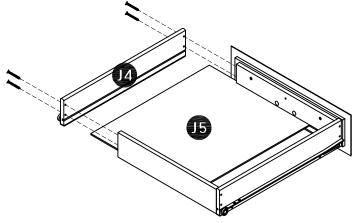


STEP 3

Attach Handles with Machine Screws.

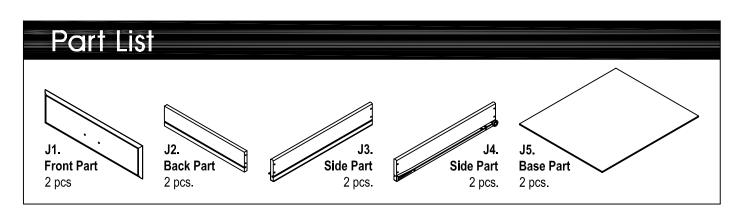

Assembly Instructions 9/10

Drawer (K)

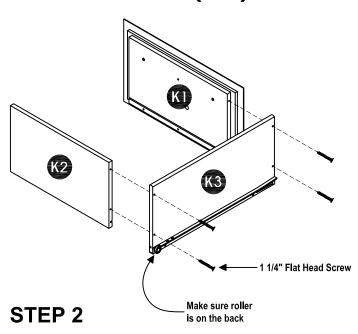



STEP 1

Attach Side Part (K3) to Front Part (K1) and Back Part (K2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

Insert Base Part (J5) into the groove.


Attach Side Part (K4) to Front Part (K1) and Back Part (K2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

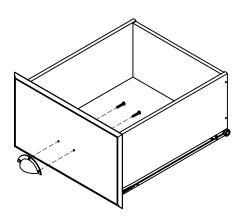

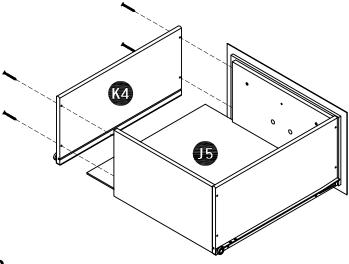


STEP 3

Attach Handles with Machine Screws.

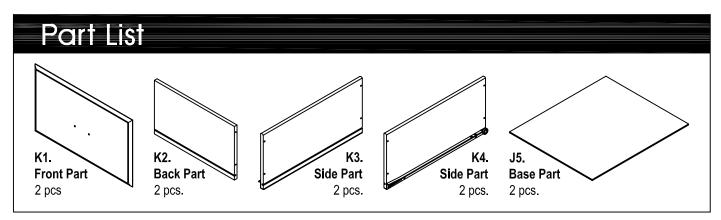


Assembly Instructions 10/10

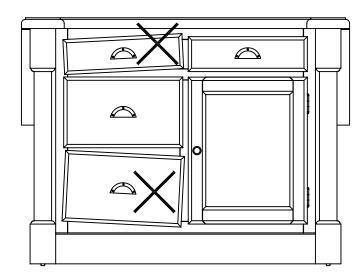

I. IF A DRAWER DOES NOT ALIGN

STEP 1


Loosen slighty the upper screws.

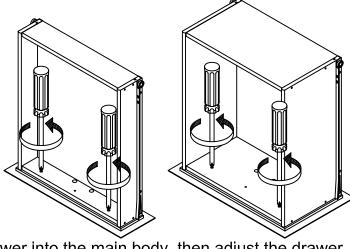


STEP 2

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

II. IF A DRAWER ALREADY ALIGNS

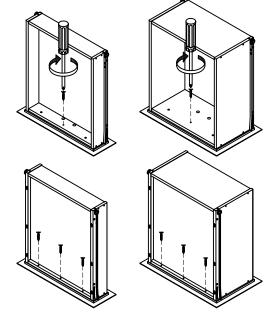

Pull out drawer slowly. Lock the drawer front panel into position with 3/4" Flat Head Screws.

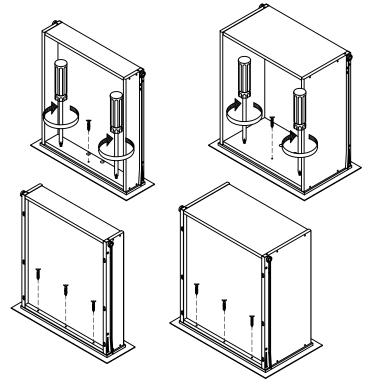

STEP 3

Pull the drawer open slowly and tighten the upper screws. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

VERY IMPORTANT!!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING

DO NOT PLACE HOT OBJECTS ON SURFACE.



PREVENT FINISH DAMAGE

DO NOT
USE
RUBBER (
BASED
PLACE MATS.



PREVENT DISCOLORING

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

