
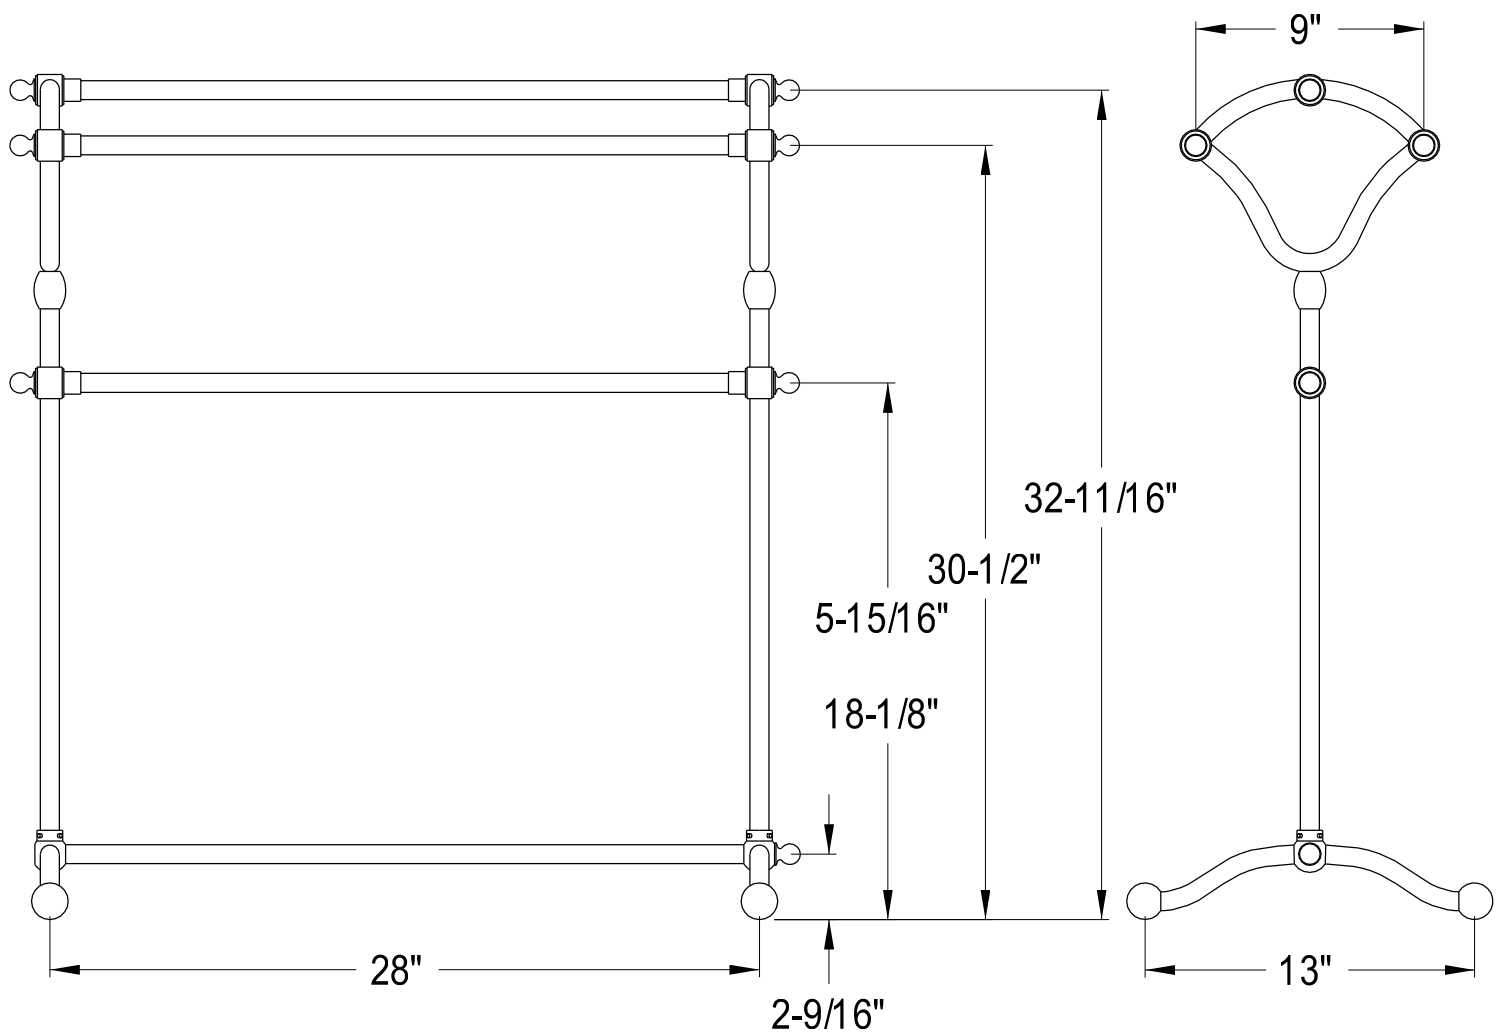
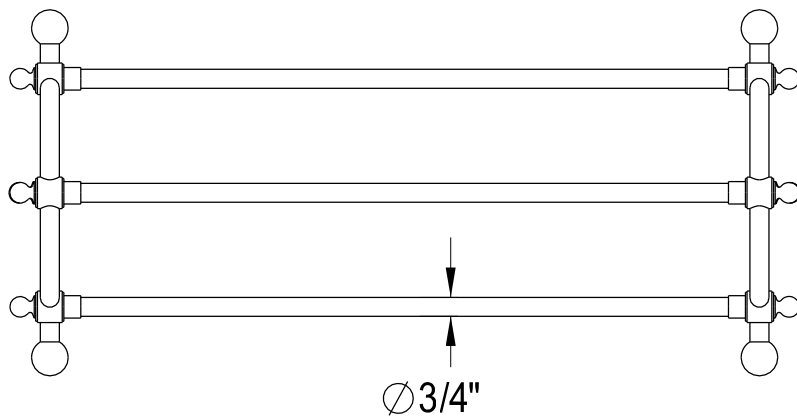


PSCC2281,5,8






Pedestal 3-Tier Y Type Ironwork Towel Rack

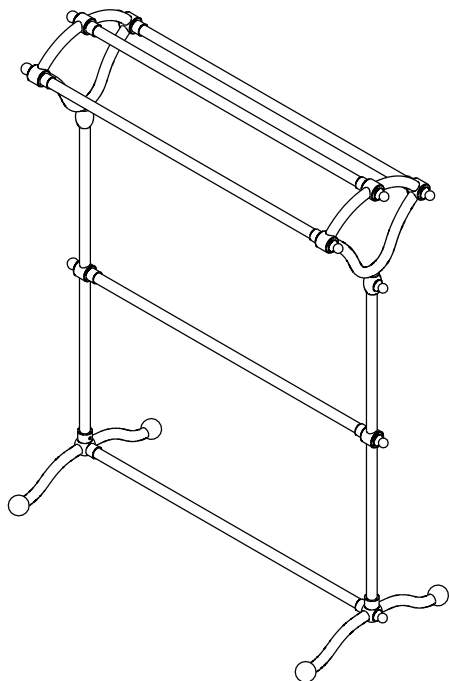


Pedestal 3-Tier Y Type Towel Rack Installation



Parts:

Bolt			Set Screw	Sift Head
1	2	3	4	5
				
8 Pcs	4 Pcs	2 Pcs	2 Pcs	12 Pcs

TOOLS REQUIRED

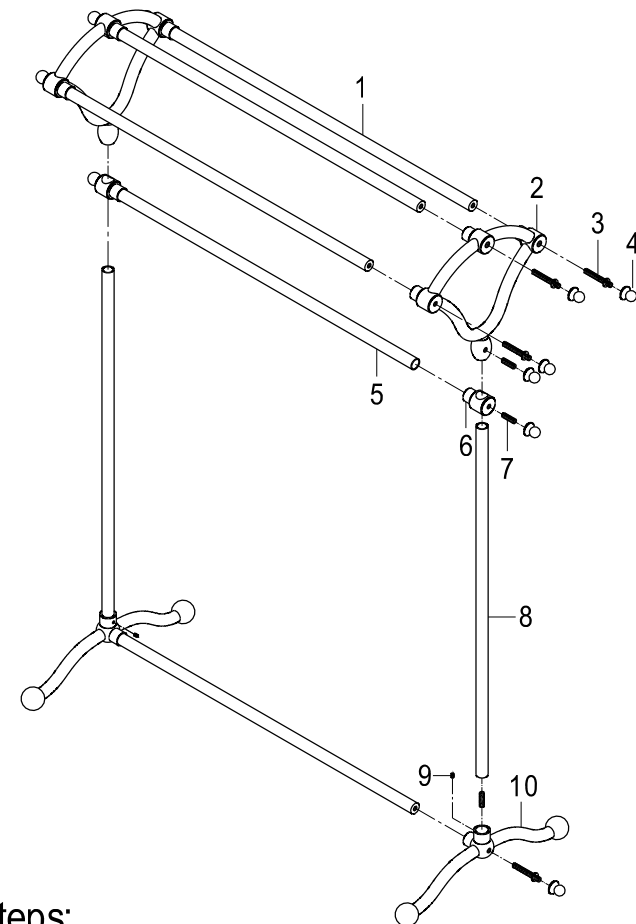

Installation Steps:

- Step 1. Screw in 29" vertical side bars into foot assembly, secure by tightening the set screw, join the 2 feet assemblies by slipping in the horizontal bar, secure by threading in 2 (Long) bolts.
- Step 2. Slide bar down vertical side bar and secure at desired location by tightening side (Short) bolts.
- Step 3. Attach top rack assembly to bottom assembly and secure by tightening side (Short) bolts.
- Step 4. Make sure all bolts are secure.

Cleaning

Clean with a damp cloth only.
Avoid using metal or abrasive polishes.