

HO881200TX

Mirdad Desk-Weathered Oak
And Black

Assembly Instructions



Southern
ENTERPRISES


For assistance with assembly contact:
Southern Enterprises Inc.

Customer Service 1-800-633-5096

service@seidal.com

www.seidal.com













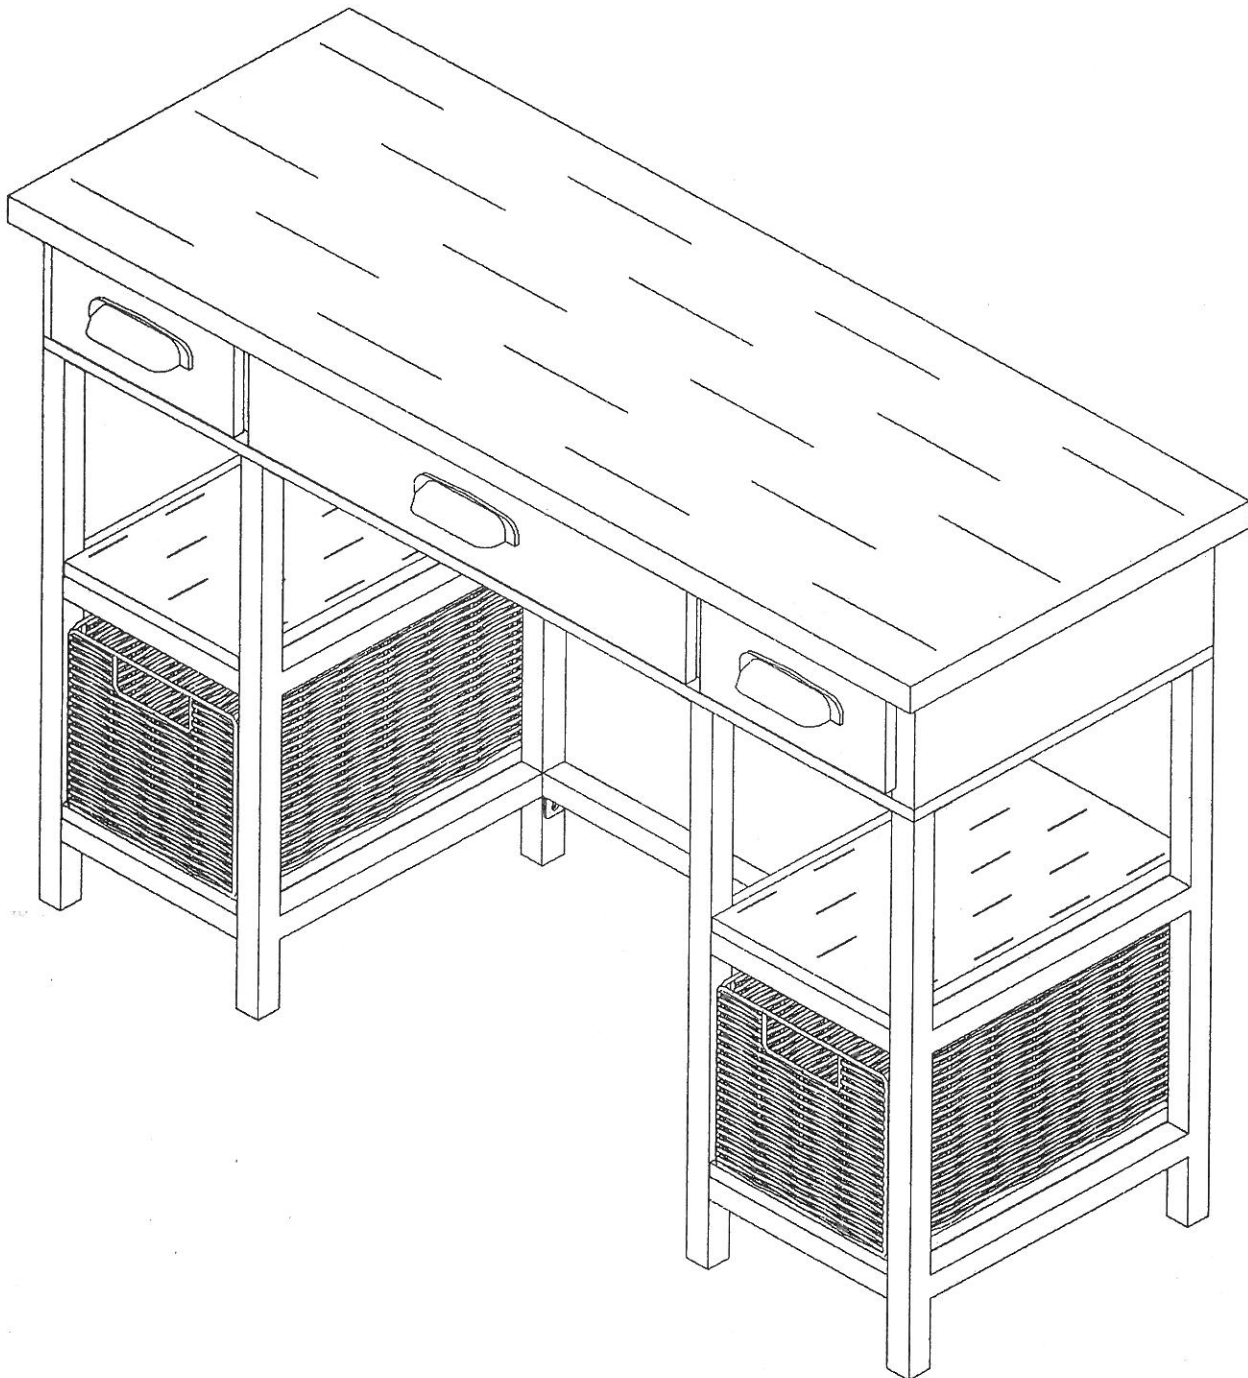





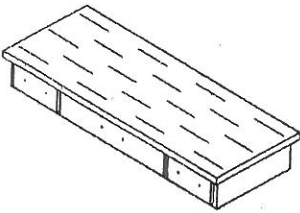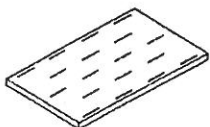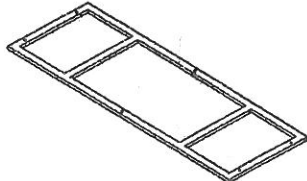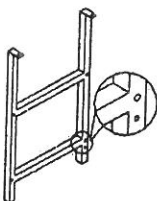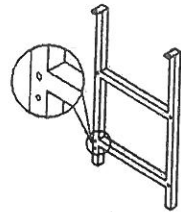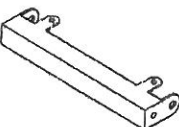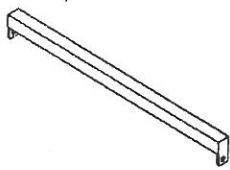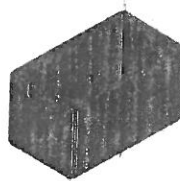

13596



Mirada Desk

Parts List

Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.


A  Wood Box Quantity of 1	B  Wood Panel Quantity of 4	C  Iron Frame Quantity of 1
D  Side Frame Quantity of 2	E  Left Vertical Frame Quantity of 1	F  Right Vertical Frame Quantity of 1
G  Iron Tube Quantity of 8	H  Cross Bar Quantity of 1	J  Wicker Basket Quantity of 2
K  Basket Bottom Panel Quantity of 2		1  Bolt: Quantity of 6 1/4"x1"L
2  Short Bolt: Quantity of 30 1/4"x1/2"L	3  Wood Screw: Quantity of 16 4.0x1/2"L	4  Knob Quantity of 3
5  Small Bolt: Quantity of 6 4.0"x3/4"L	6  Allen Wrench Quantity of 1	7.  Brackets Quantity of 2
8.  Anchors Quantity of 2	9. Plastic Strap  Quantity of 2	10. Screw  Quantity of 2 4.0x1"L

Care and Cleaning Instructions:

Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.

Assembly Tool Required No.2 Phillips Screwdriver (Not included)

Call customer service at 1-800-633-5096 for assistance, questions, or parts.



Mirada Desk

Assembly Instructions

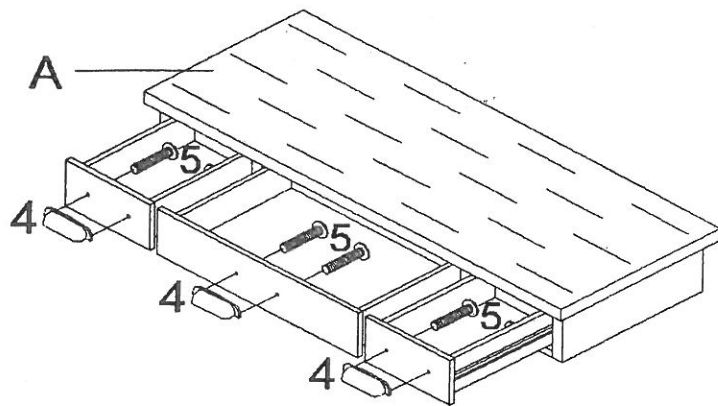


Figure 1

Start screwing bolts with fingers to help with alignment.

Open the drawer and attach Knobs (4) with Small Bolts (5).

Tighten bolts with screwdriver

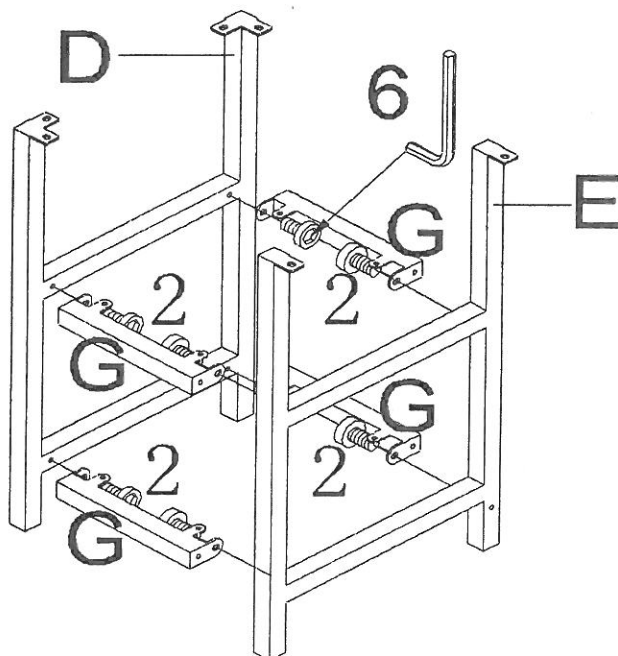


Figure 2

Insert Short Bolts (2) through holes on Iron Tubes (G) and into Side Frame (D) and Left Vertical Frame (E).

Tighten Short Bolts (2) with Allen Wrench (6).

Repeat step to attach Side Frame (D), Iron Tubes (G) and Right Side Frame (F).


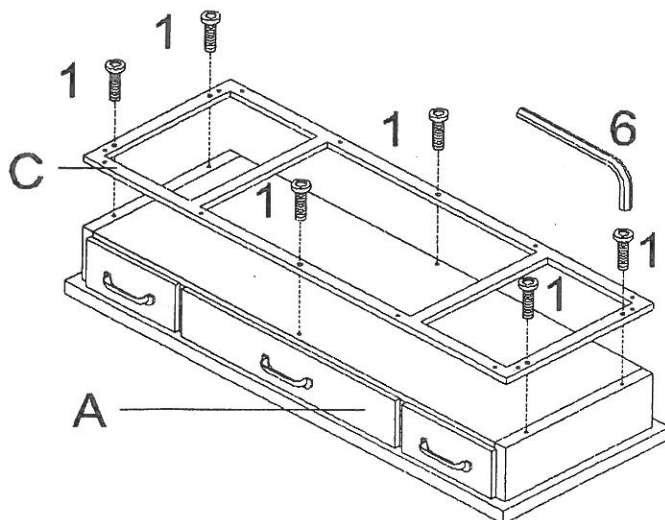


Figure 3

Turn over Wood Box (A) and attach Iron Frame (C) onto the Wood Box (A).

Insert Bolts (1) through holes on Iron Frame (C) and into Wood Box (A).


Tighten Bolts (1) with Allen Wrench (6).

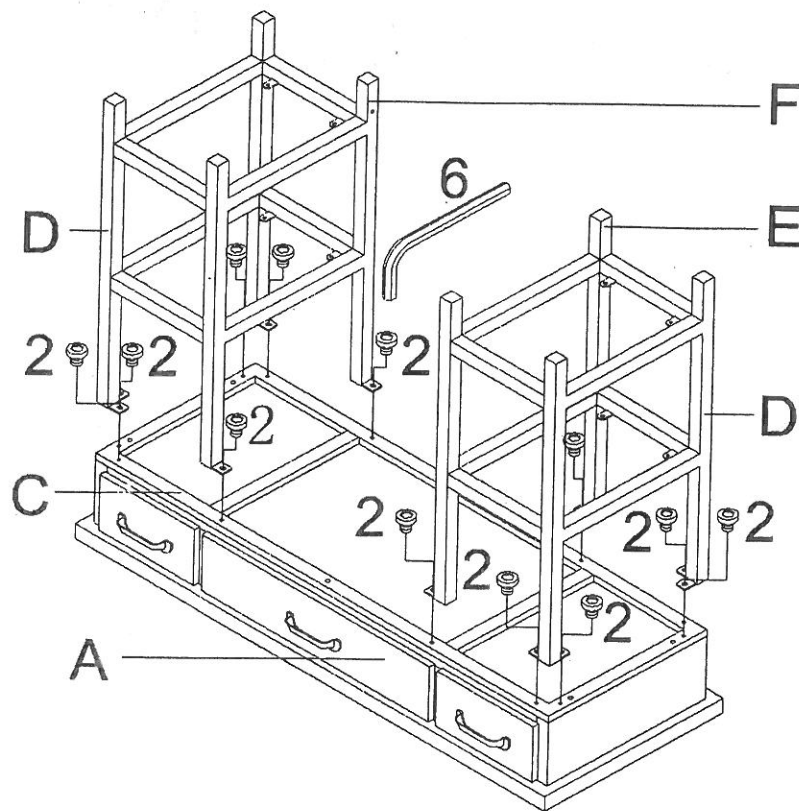

Attach the assembled units from Figure 2 to the Iron Frame (C) with Short Bolts (2)

Tighten Short Bolts (2) with Allen Wrench (6).

Figure 4

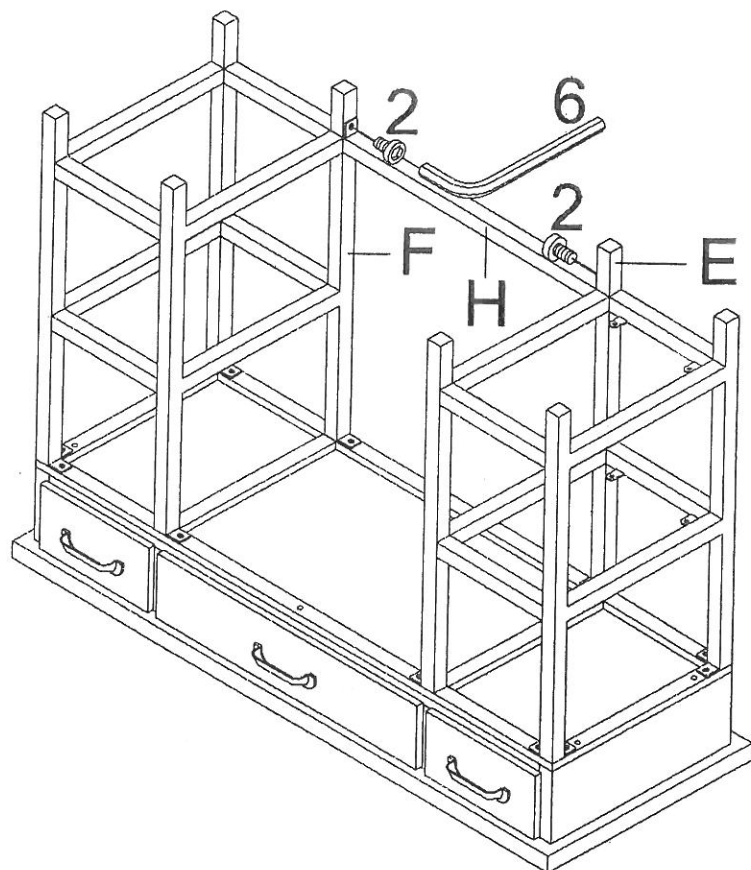

Insert Short Bolts (2) through holes on Cross Bar (H) and into Vertical Panels (E/F).

Tighten Short Bolts (2) with Allen Wrench (6).

Figure 5

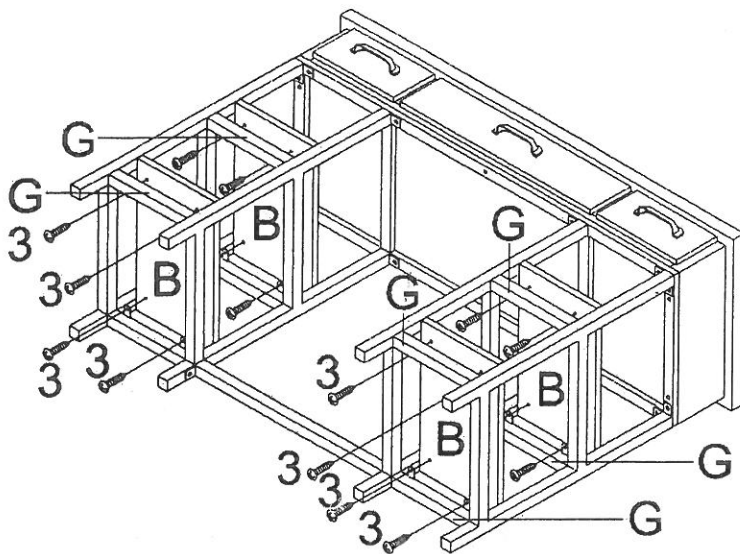


Figure 6

Place Wood Panels (B) onto Iron Tubes (G).

Insert Wood Screws (3) through holes on Iron Tube (G) and into Wood Panels (B) as shown.

Tighten Screw with screwdriver.

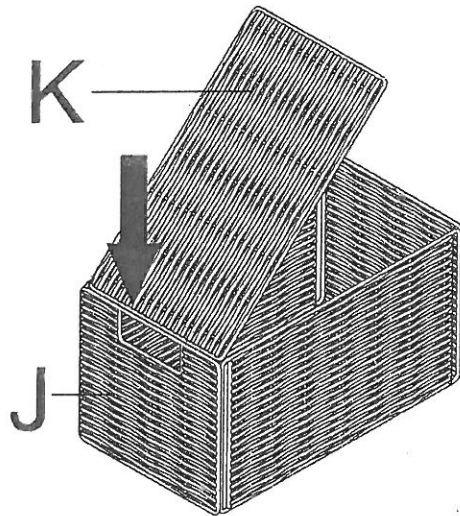


Figure 7

Insert one side of Basket Bottom Panel (K) into bottom of Wicker Basket (J).

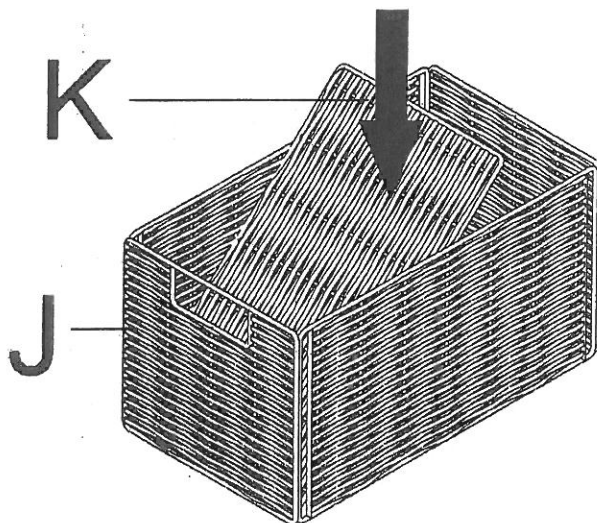


Figure 8

Then, slowly push other side of Basket Bottom Panel (K) into bottom of Wicker Basket (J).

Repeat steps to complete second basket.

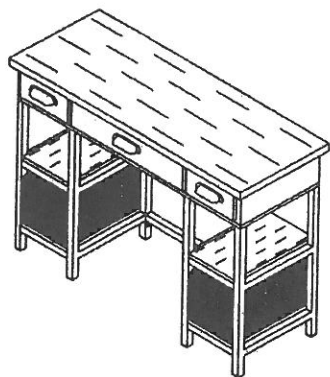


Figure 9

Insert the completed baskets into Bottom Wood Panels (B).

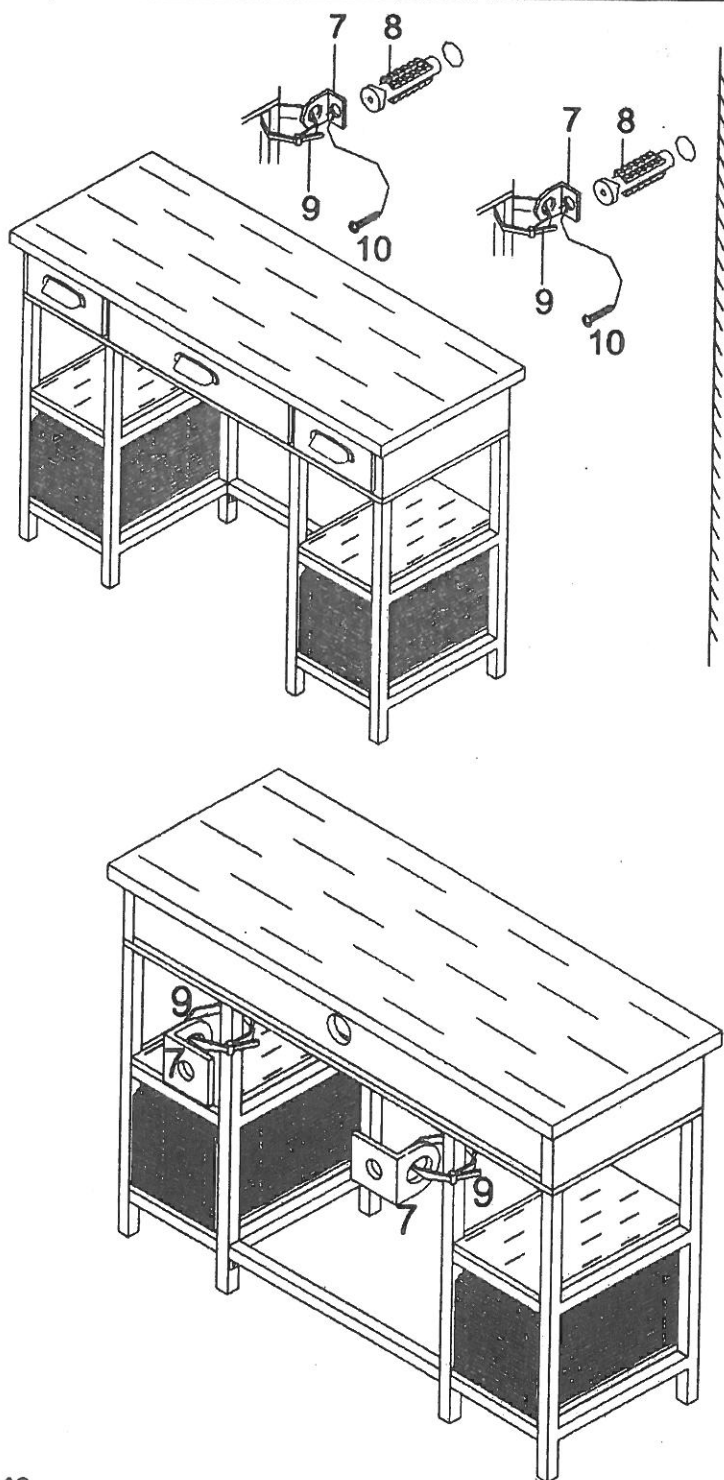


Figure 10

Mark two desired locations on wall in the same distance as Vertical Panels (E/F).


Drill two 3/16" holes on wall. Insert plastic anchors (8) into the 2 holes on wall as shown. (When doing this, you will need a hammer help you).

Then attach the Brackets (7) to wall using Screws (10). Tighten Screws (10) using a Philips screw driver.

Move this item close to the wall Brackets (7) and tie Brackets (7) to Vertical Frames (E/F) with Plastic Chain (9) as shown in diagram.


Anti-tipping hardware must be used for this product to avoid tipping and injury.

Now your Mirada desk is ready to use !

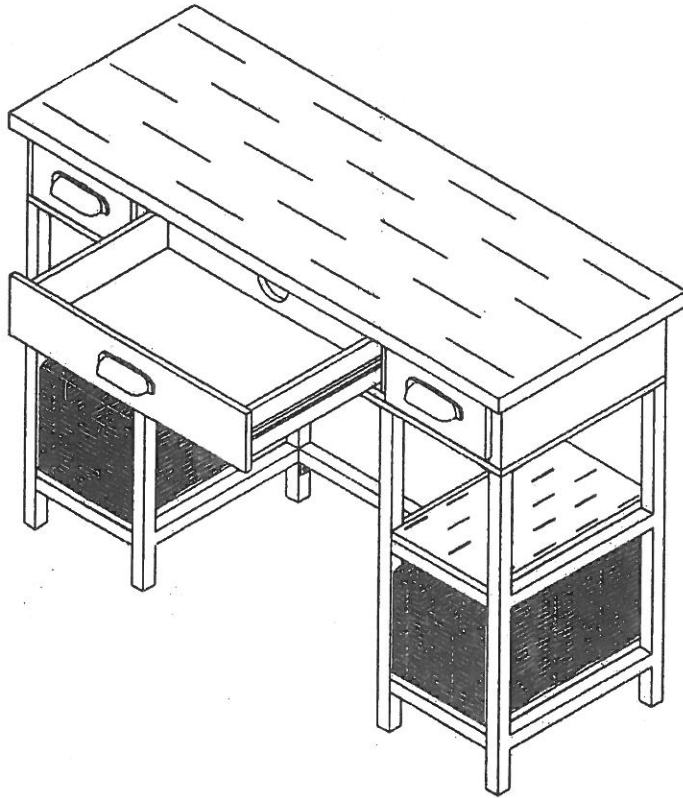

Please open the middle drawer if you want to turn in the middle drawer to the keyboard.

Figure 10

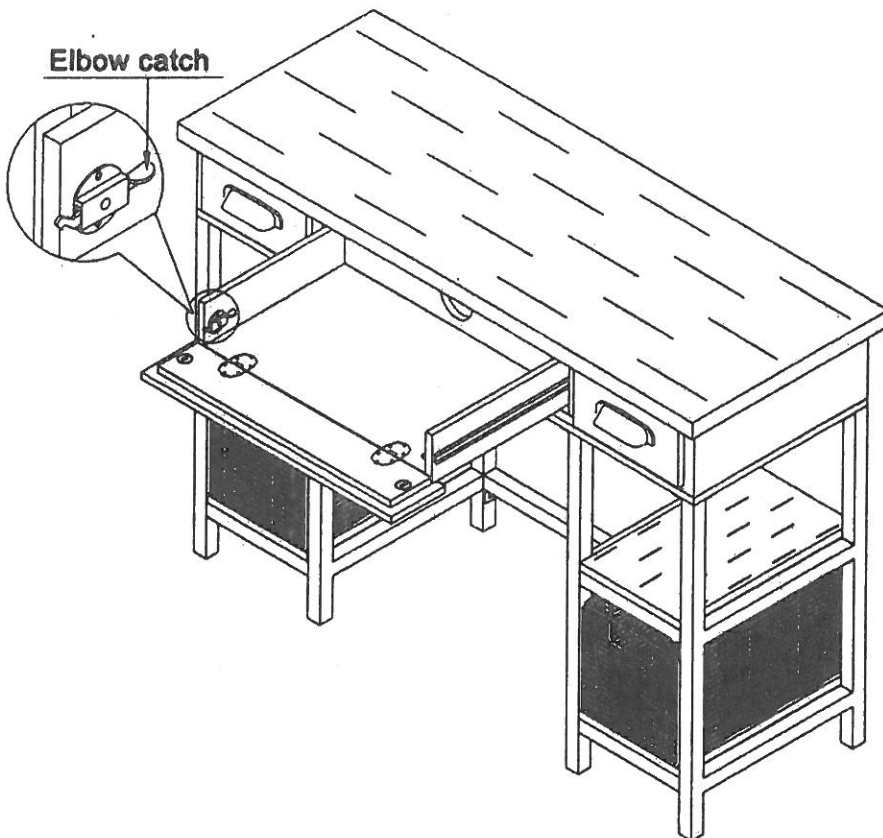

Then, press down on the lock device and push the middle drawer panel out at the same time.

When you don't need the keyboard, you just need to close your drawer panel back into the drawer.

Figure 11