FA927700TX-MAHOGANY "SICILIAN" FIREPLACE ASSEMBLY INSTRUCTION



For assistance with assembly contact:
 Southern Enterprises Inc.
Customer Service 1-800-633-5096
 service@seidal.com
 www.seidal.com




"SICILIAN" FIREPLACE

Parts List

Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Using a screw that is too long will cause damage.

Before beginning assembly, separate each type of screw. Carefully study the


Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra hardware with your unit.

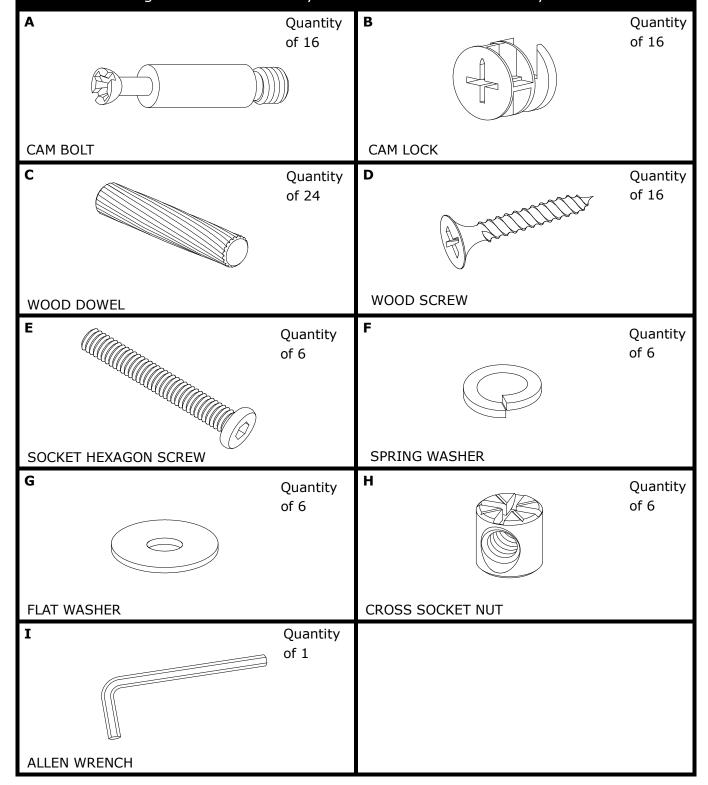


"SICILIAN" FIREPLACE Parts List

Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Do not return to store/retailer. Using a screw that is too long will cause damage.

Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra hardware with your unit.

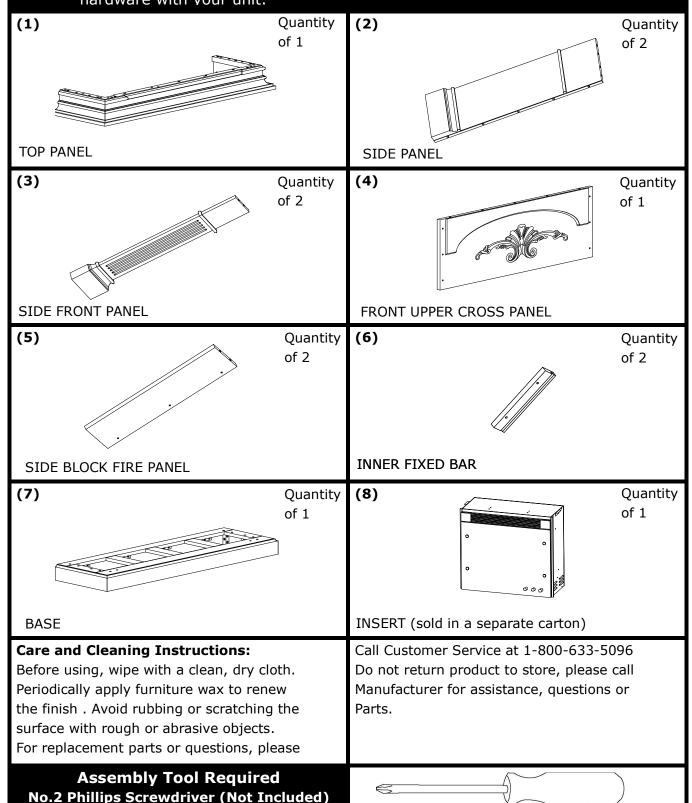


"SICILIAN" FIREPLACE Assembly Instructions

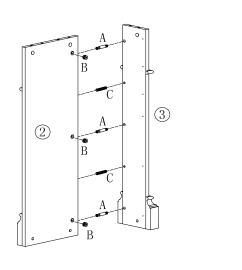


INSERT (A) CAM BOLT & (C) WOOD DOWEL TO THE RELATED HOLES, THEN USE CAM LOCK TO CONNECT (2) SIDE PANEL&(3) SIDE FRONT PANEL.

Figure 1

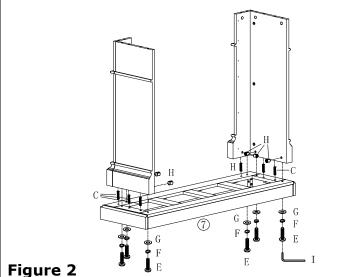


ATFER ASSEMBLED FIGURE 1, INSERT (C) WOOD DOWEL & (H) CROSS SOCKET NUT TO THE RELATED HOLES ,THEN USE (E) SOCKET HEXAGON SCREW THROUGH (F) SPRING WASHER &(G) FLAT WASHER TO CONNECT (7) BASE.

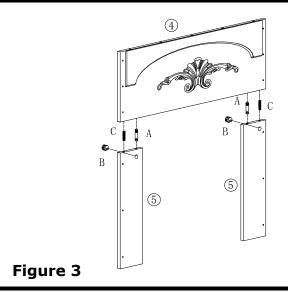


FIRST INSERT (B) CAM LOCK INTO THE RELATED HOLES OF (5) SIDE BLOCK FIRE PANEL, THEN PUSH (A) CAM BOLT & (C) WOOD DOWEL INTO THE RELATED HOLES OF INSERT (A) CAM BOLT & (C) WOOD DOWEL TO THE RELATED HOLES OF (4) FRONT UPPER CROSS PANEL.FINALLY USE SCREWDRIVER TO LOCK TIGHTLY.


"SICILIAN" FIREPLACE Assembly Instructions

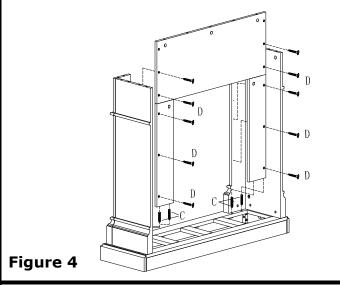

AFTER ASSEMBLED FIGURE 3 ,INSERT (C)WOOD DOWEL TO THE RALATED HOLES OF BASE THEN PUSH THE COMPLETED FIGURE (3) TO THE BACK OF SIDE FRONT PANEL THEN INERT (D)WOOD SCREW TO THE RELATED HOLES TO CONECT (3) SIDE FRONT PANEL.FINALLY USE SCREWDRIVER TO LOCK TIGHTLY.

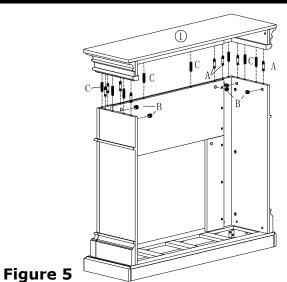

ATFER FINISHED FIGURE 4, INSET (A) CAM BOLT & (C) WOOD DOWEL INTO THE RELATED HOLES, THEN INSERT (B) CAM LOCK TO CONNECT (1) TOP PANEL.

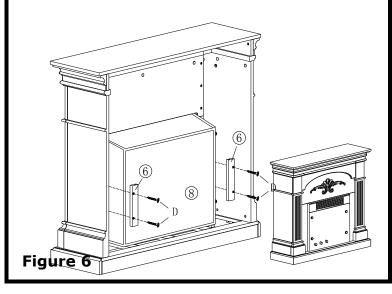

ATFER FINISHED FIGURE 5,THEN INSERT (J) INSERT TO THE RELATED PLACE OF MAIN BODY, THEN INSERT (D) WOOD SCREW TO CONNECT (6) INNER FIXED BAR WITH MAIN BODY. FINALLY USE SCREWDRIWER TO LOCK IT TIGHTLY.



Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc. 600 Freeport Parkway, Suite 200 Coppell, Texas, 75019

FA927700TX - Parts Replacement Form			
Customer Information			
Name			
Address			
City/State/Zip Code			
Phone Number Please indicate where	e you purchased this item	a: Store/Website/Catalog	
Please indicate color/	size/style number:		
Style No	Parts Letter	Parts Description	Quantity Needed

Missing or damaged hardware and/or parts will be replaced free of charge. We do not sell parts. Southern Enterprises Inc. will provide replacement parts for only those items purchased within the last 9 months. If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacement merchandise. Parts will not be available for items arriving fully assembled. Parts will be sent if available from SEI

Please contact Southern Enterprises at 800-633-5096 or in Dallas (972) 869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues with your purchase. Please ask for a customer service representative for issues involving damages or replacement parts. Please ask for a technical assistance representative for any issues with product assembly and product construction.

Please contact the retailer that you purchased from for returns.

We'd love to hear from you! Email us photos of our products in your home at sei@seidal.com and we might feature it on our site or use it to model one of our inspirational photos.