



# PCC3171,5,6,8

Adjustable Hotel Curved Shower Rod

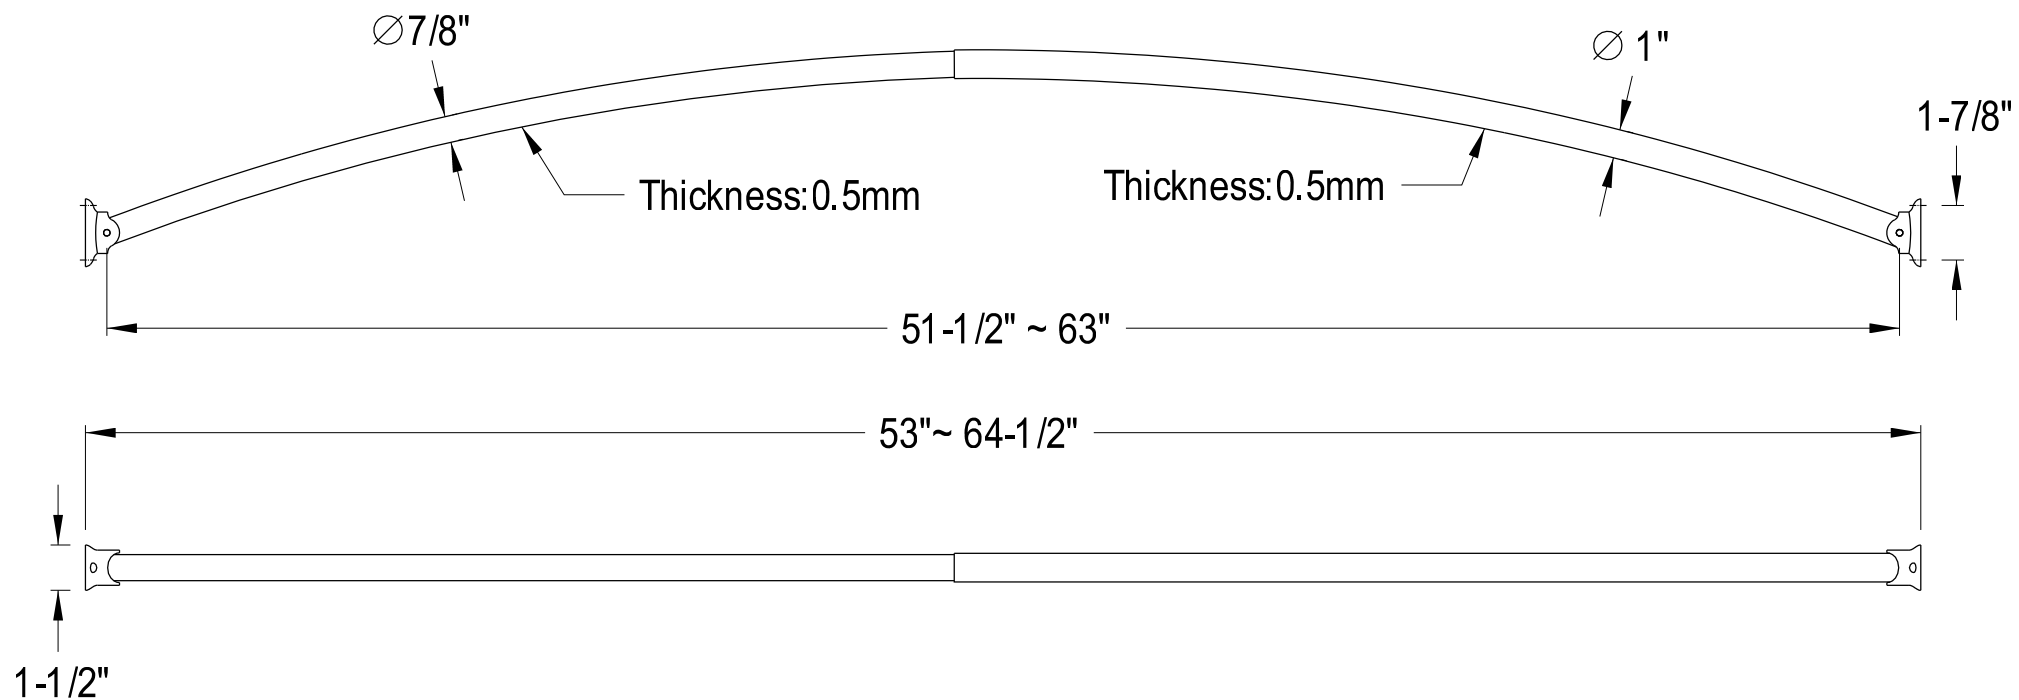


4

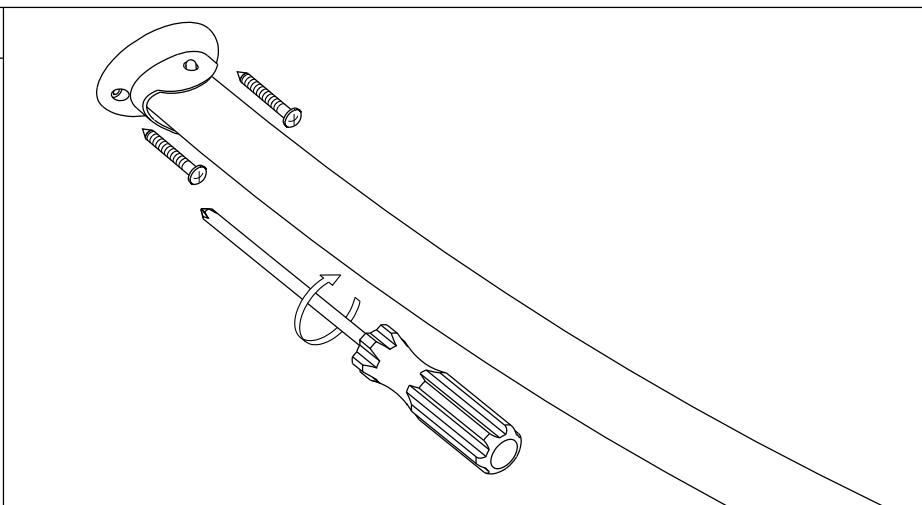


4. Place the shower rod on the mounting location and insert screws through first mounting post into anchors. Tighten screws with screwdriver.

5

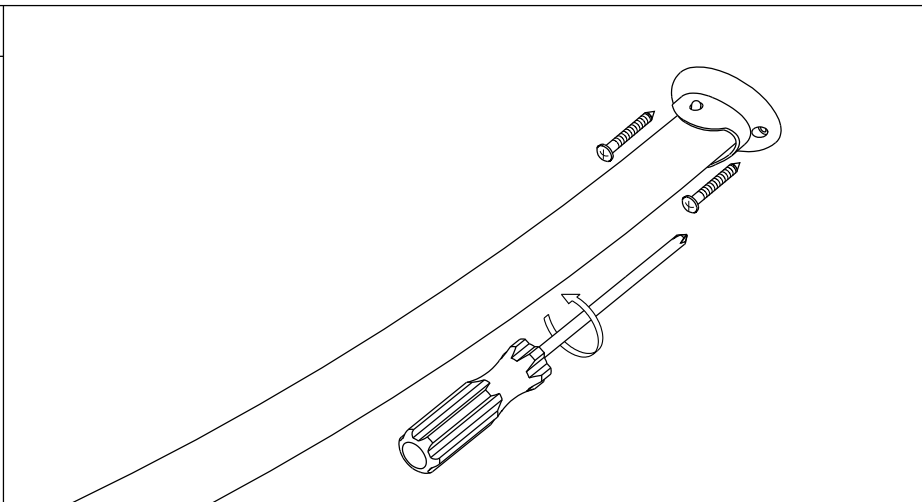




5. Expand the shower rod and install on opposite end. Repeat steps 1 through 4 with the other side.


**KINGSTON BRASS**  
THE TRADITION OF FINE BRASS

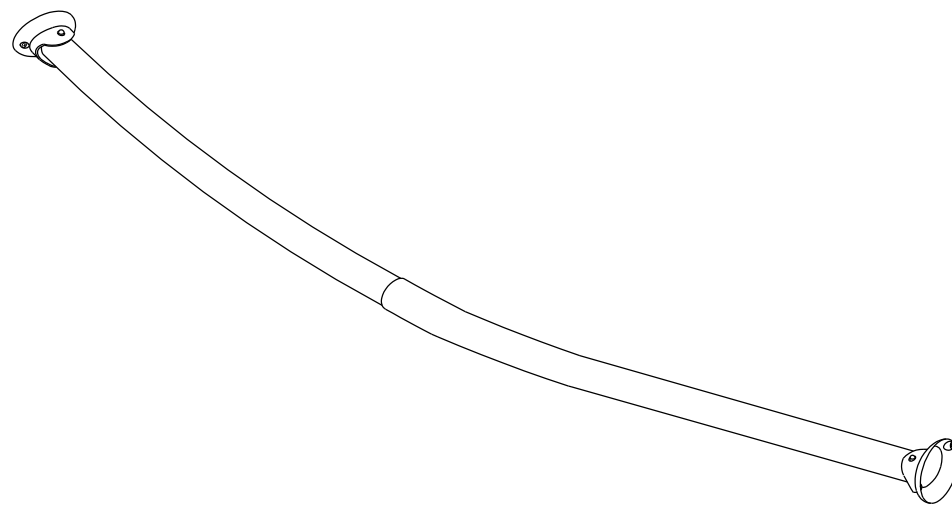

**INSTALLATION INSTRUCTIONS**  
For Use With KB's Adjustable Hotel Curved Shower Rod


**Parts:**

Fixed Bracket		2 Pcs
Screw		4 Pcs
Anchor		4 Pcs

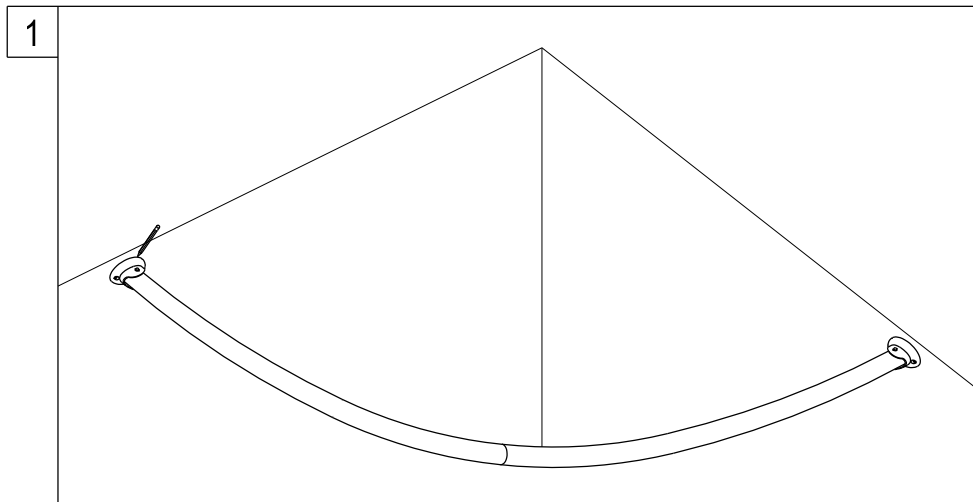

1. Locate where you would like to install the Curved shower rod.  
Place a base onto the wall and trace around it with a pencil.

**Need Tools:**




Basin Wrench



Adjustable Wrench



Teflon Tape




Silicone Sealant




Screwdriver

2

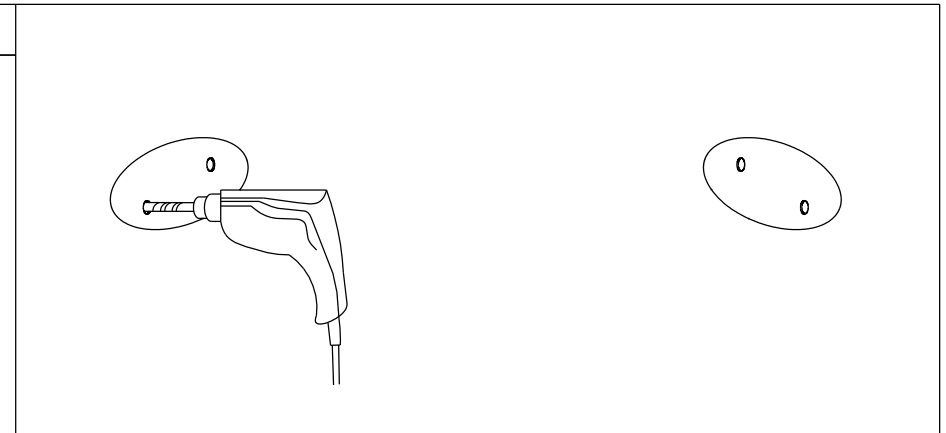

2. Place the mounting plate in the center of the pencil outline you just made and mark the location of the mounting screws.  
Drill holes at the marked locations.

3

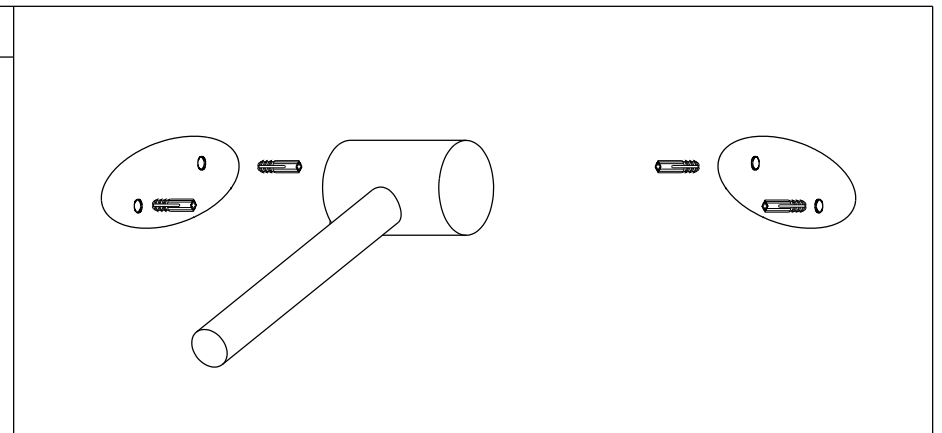

3. Insert anchors into the holes with a hammer until flush with the wall.