


ASSEMBLY INSTRUCTION

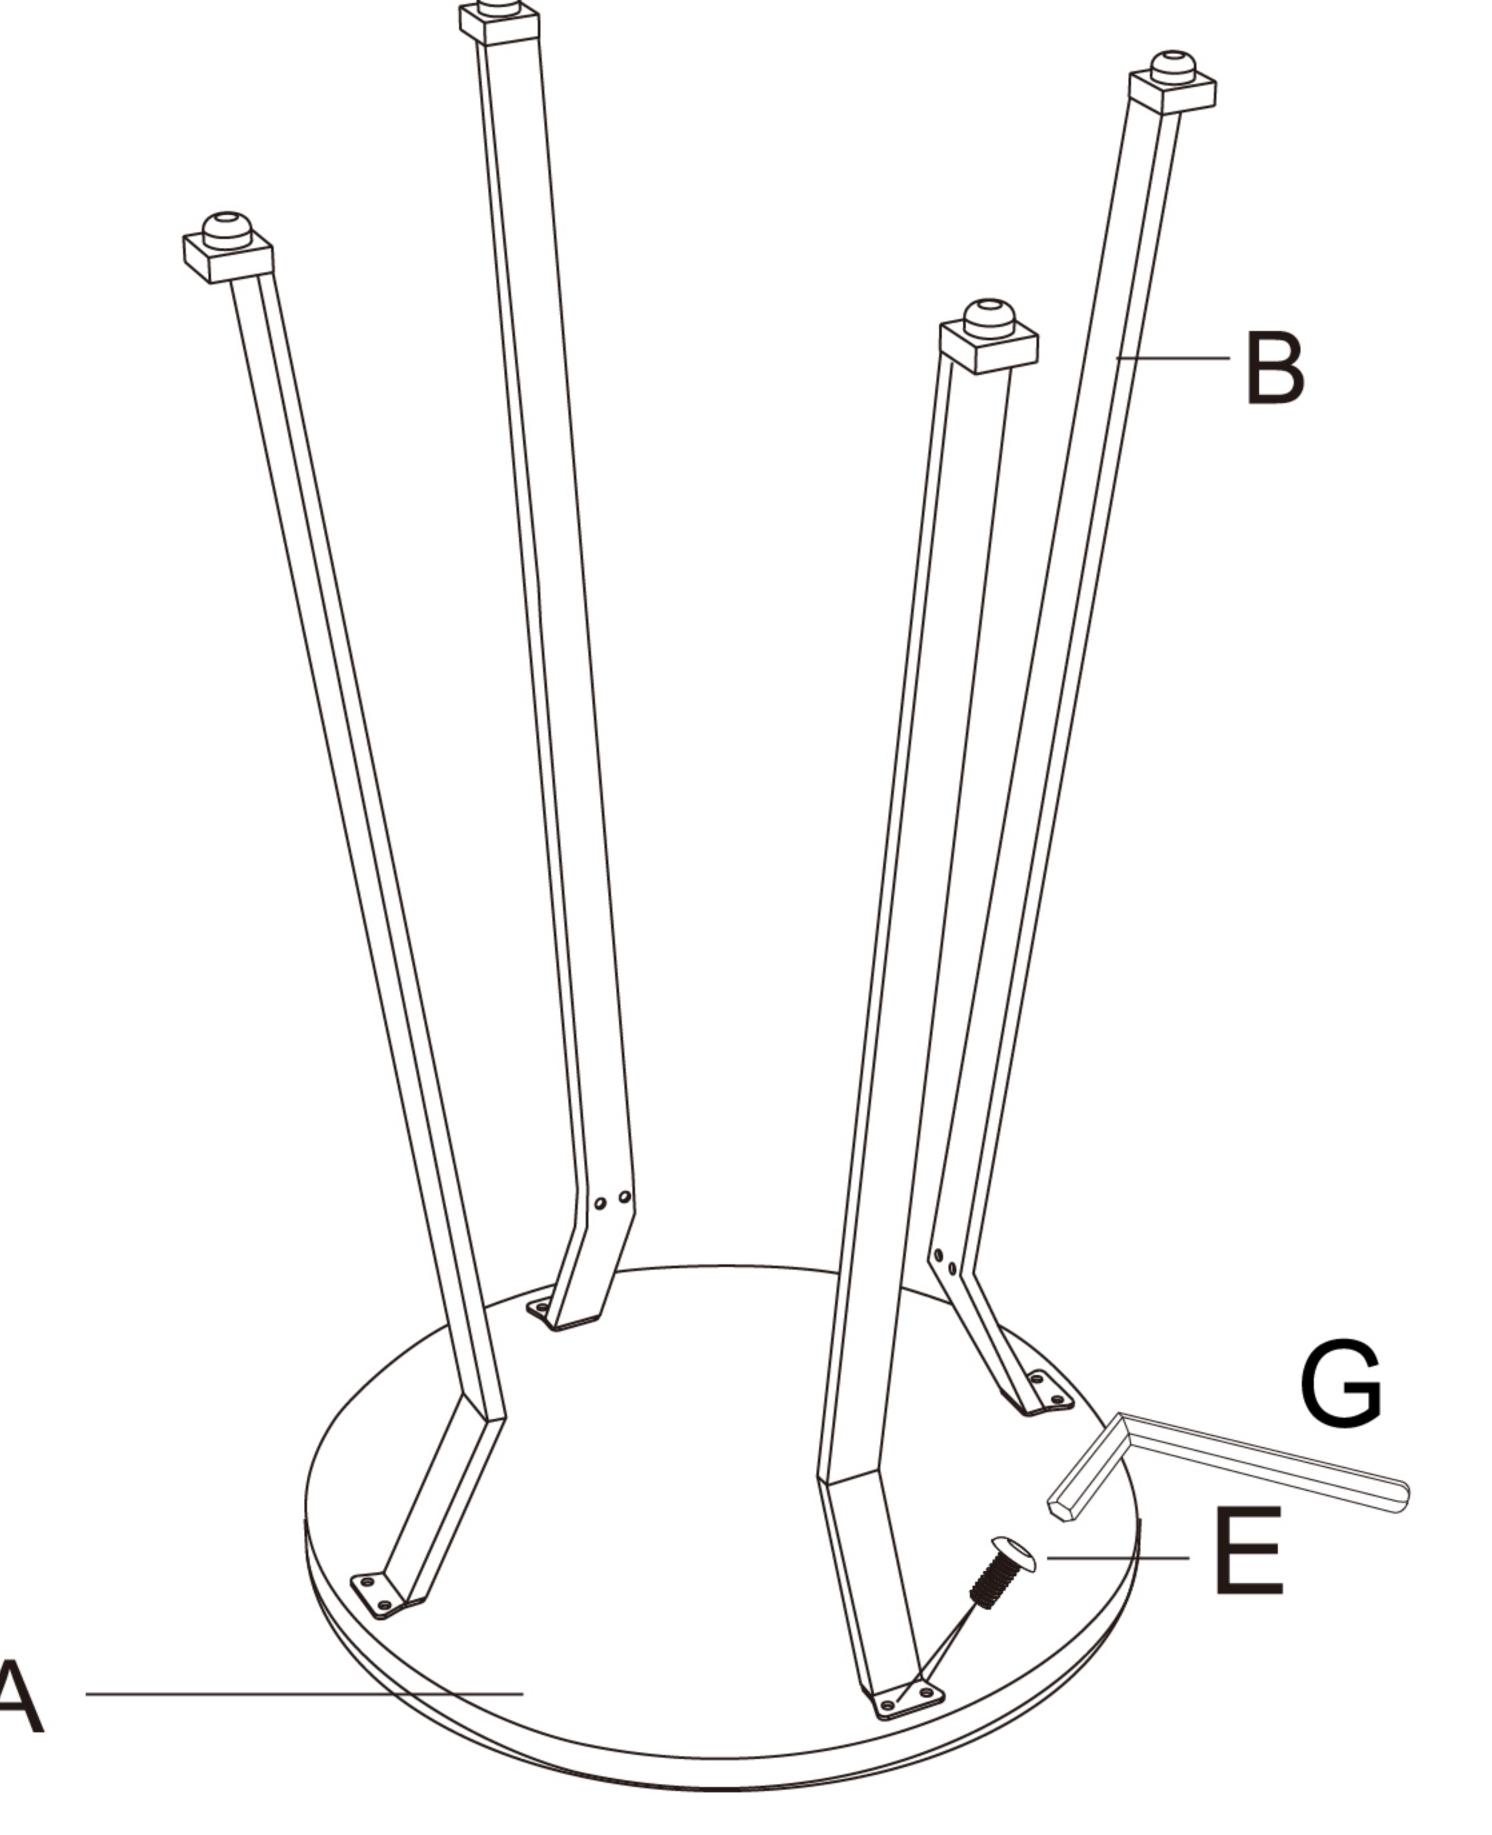


Insert bolts E in the holes, then tighten them to 90%.




Step 2

Insert bolts F in the holes, then tighten them to 90%.

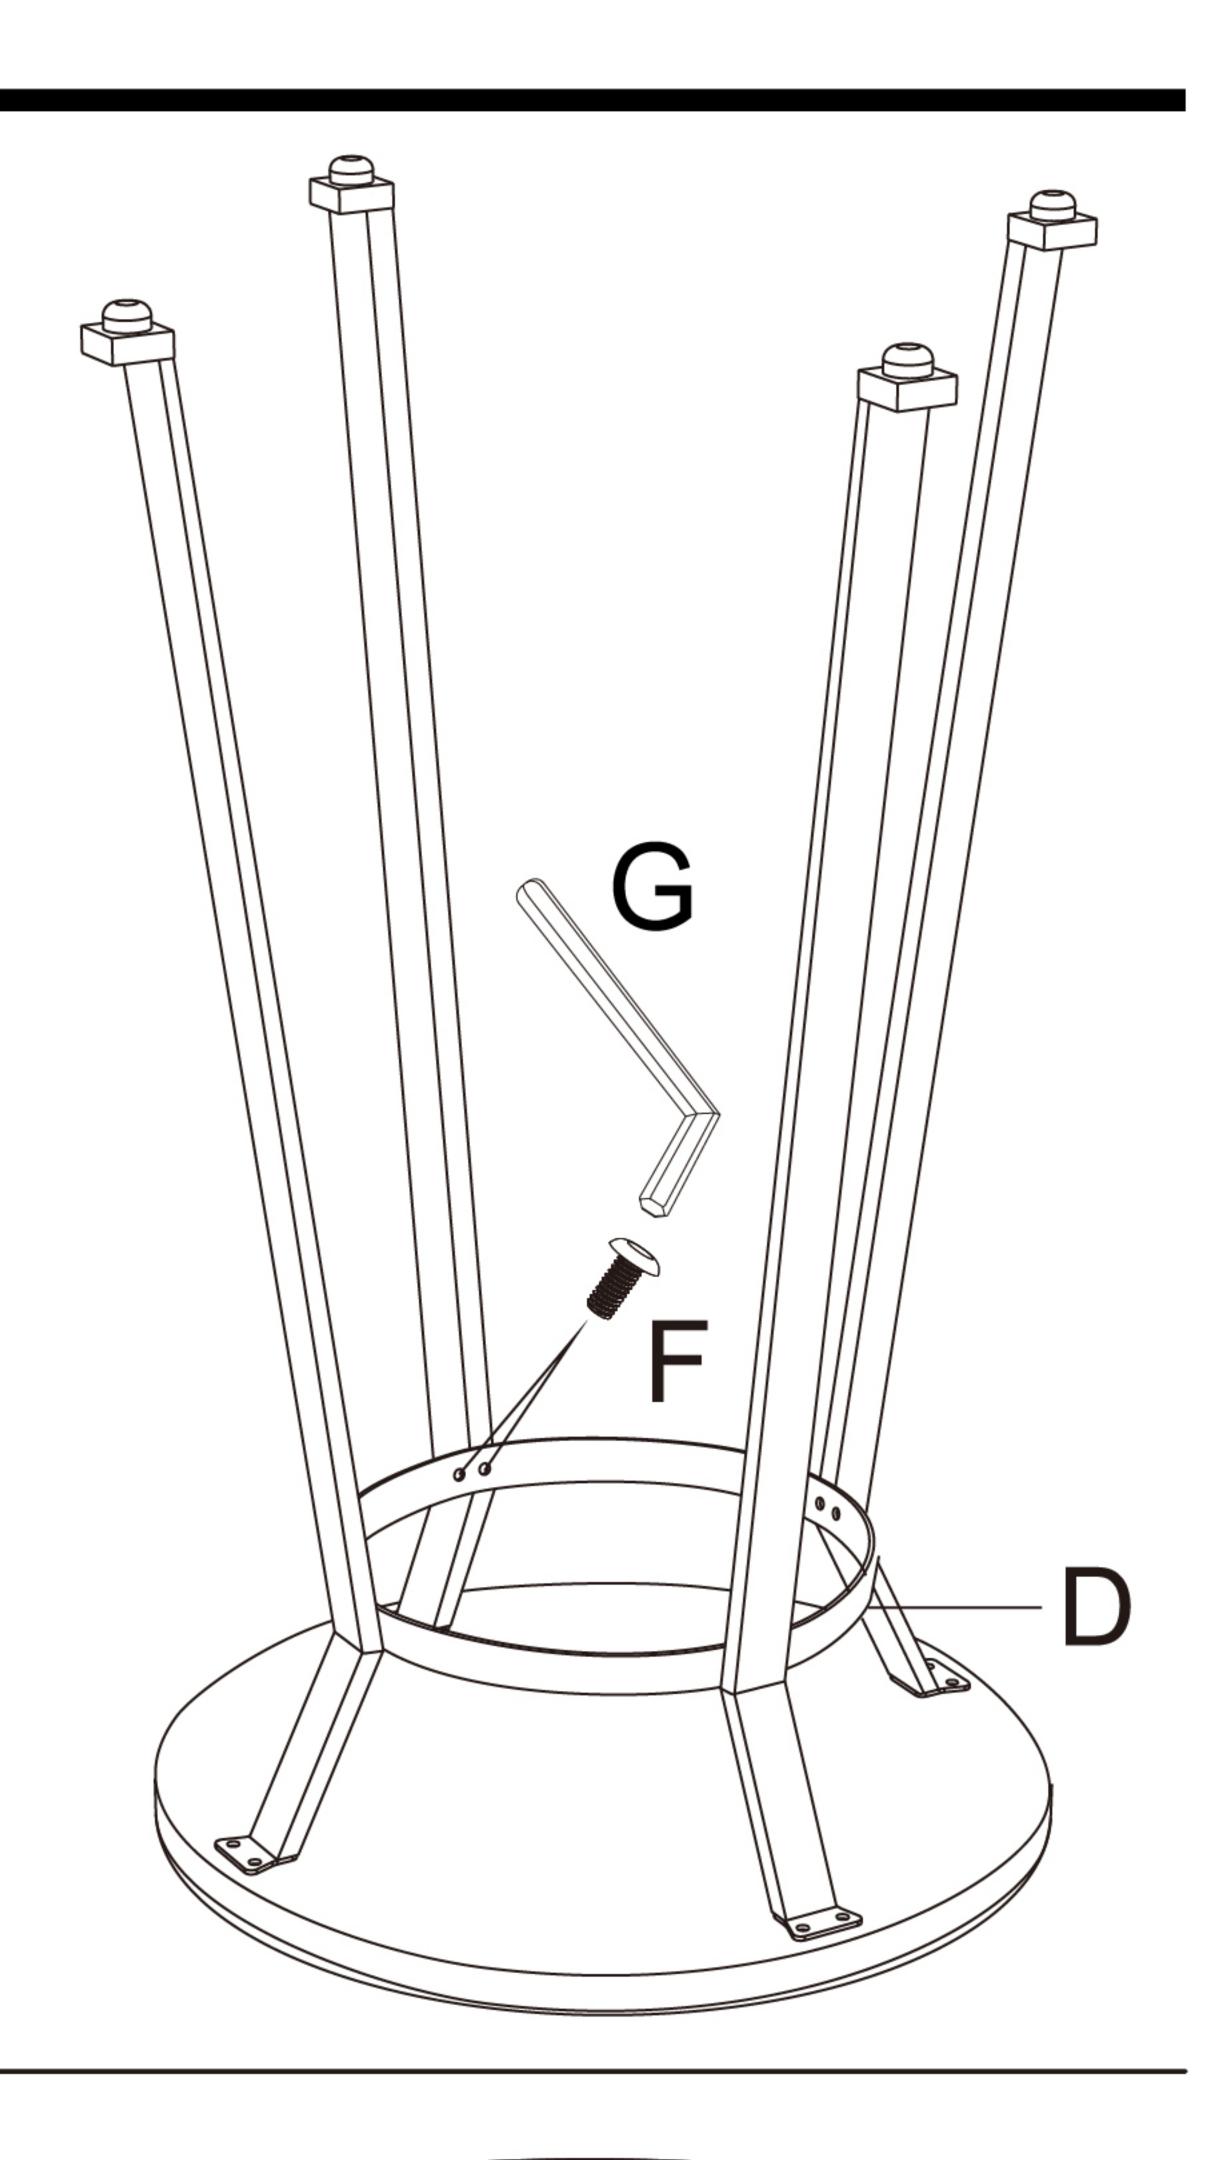

Step 3

Insert bolts F in the holes, then tighten them to 90%.

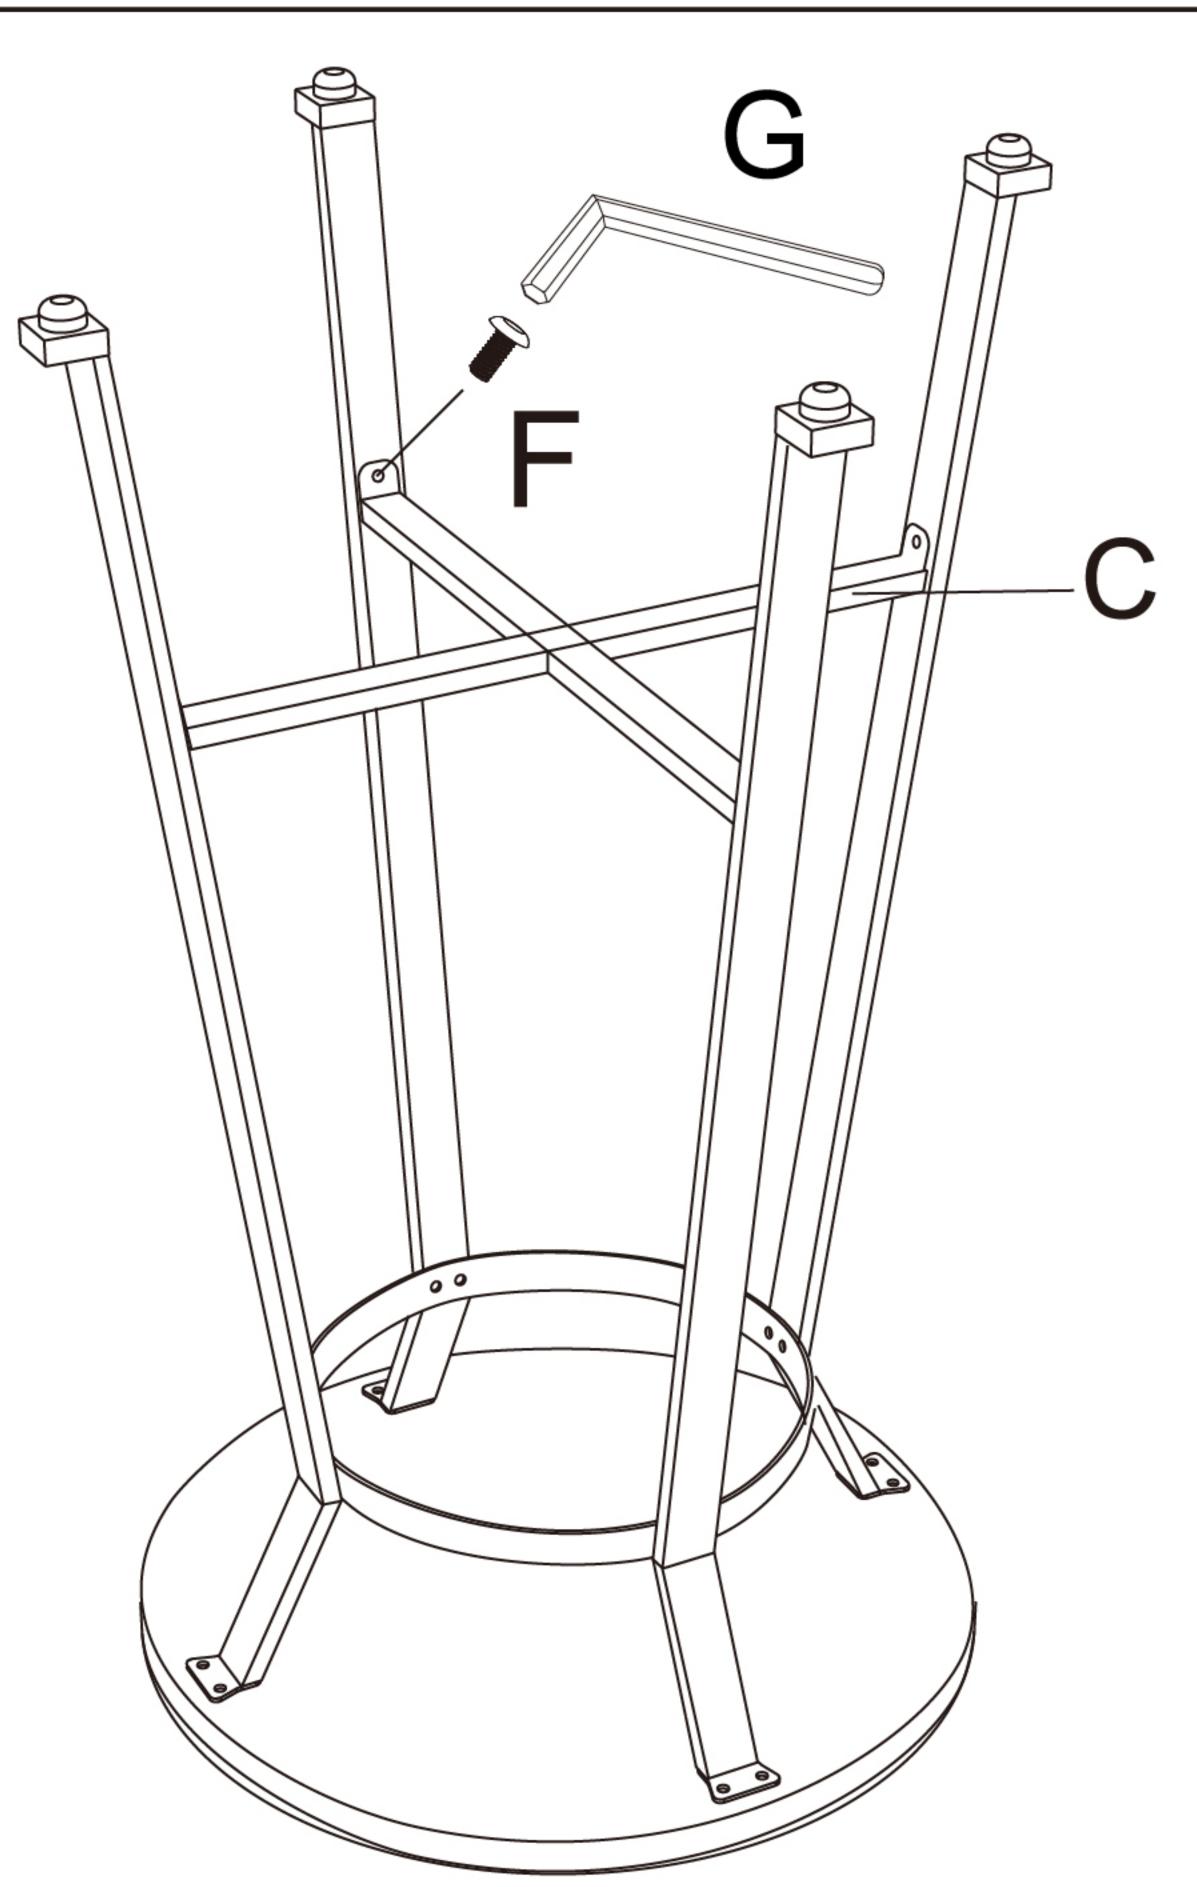


Step 3

Please tighten all bolts E and F to 100%.

A few days after initial assembly, the product may acclimate to its new environment.

Please ensure all bolts are still securely tightened.

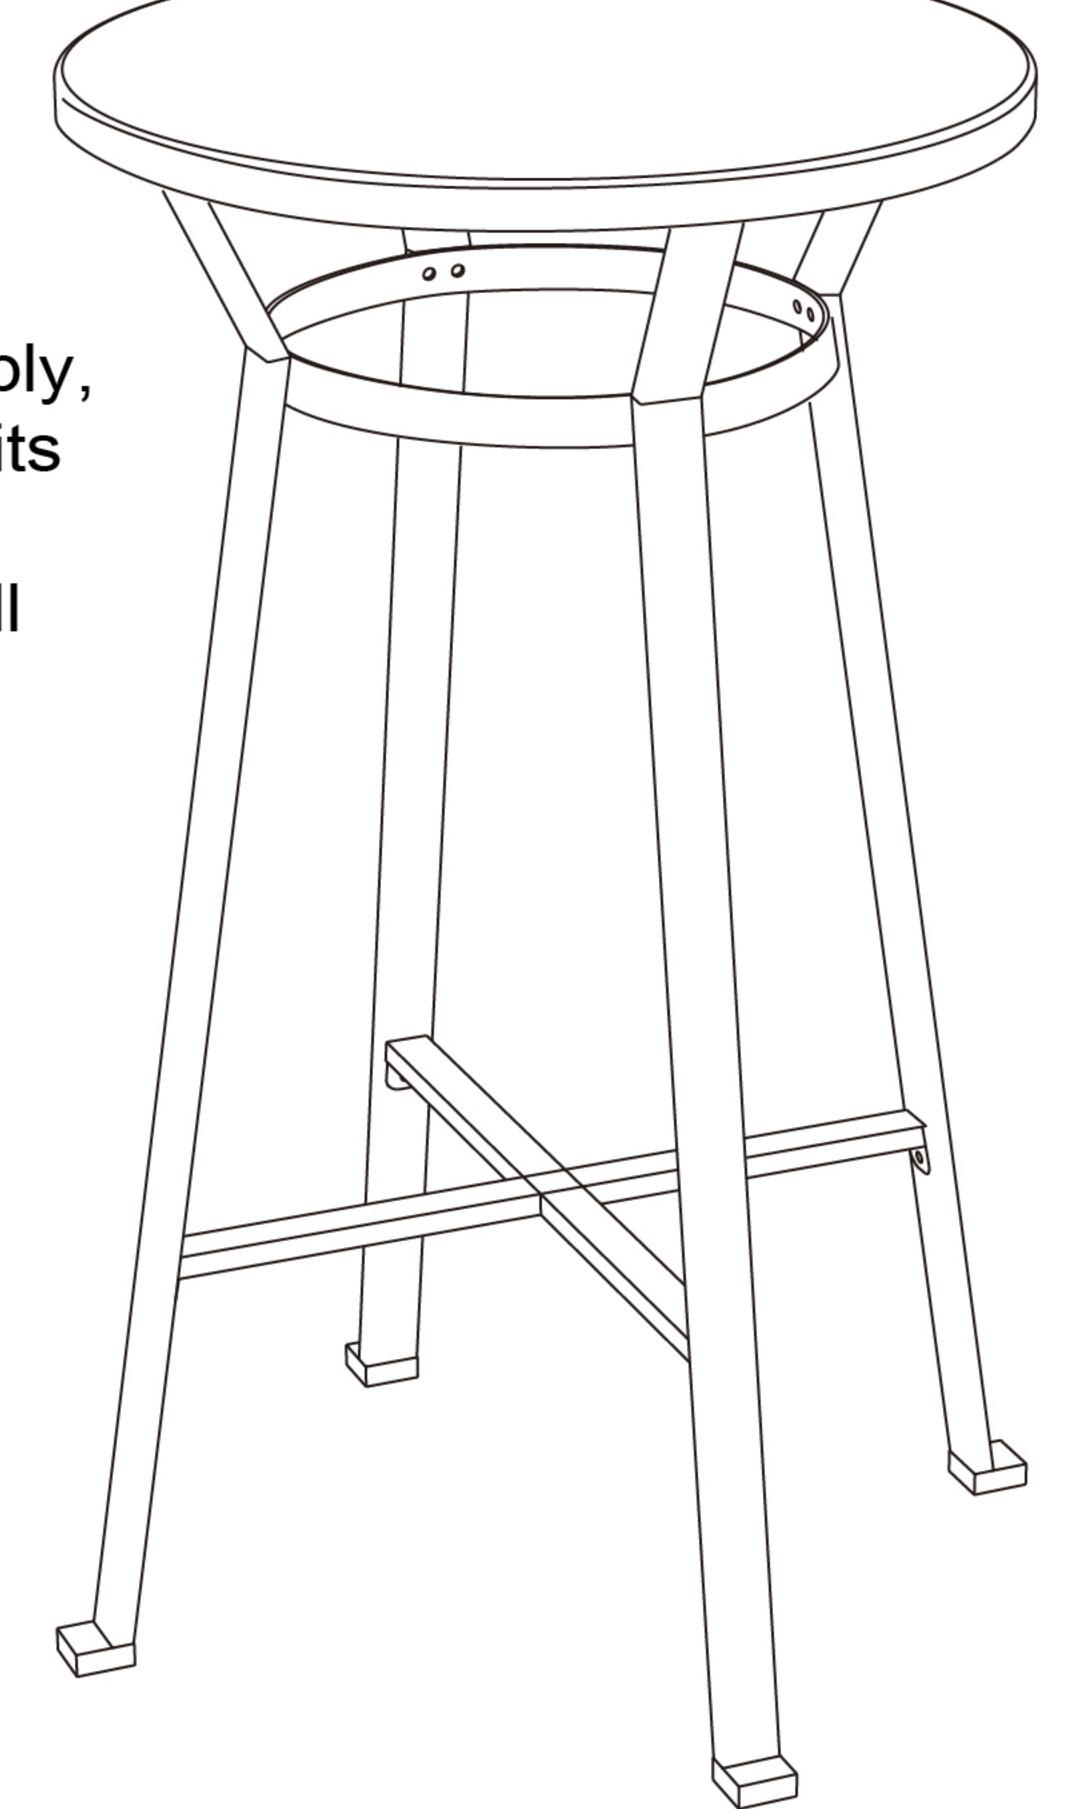

	CODE	PARTS	QTY.	CODE	PARTS	QTY.
HARDWARE LIST	A		1	D		1
	В		4	E	(mmm) M6 X 16MM	8
	C		1	F	() M6 X 14MM	12
				G	ALLEN KEY	1

Get social with us and discover more about our products, tips and exclusive discounts!









