
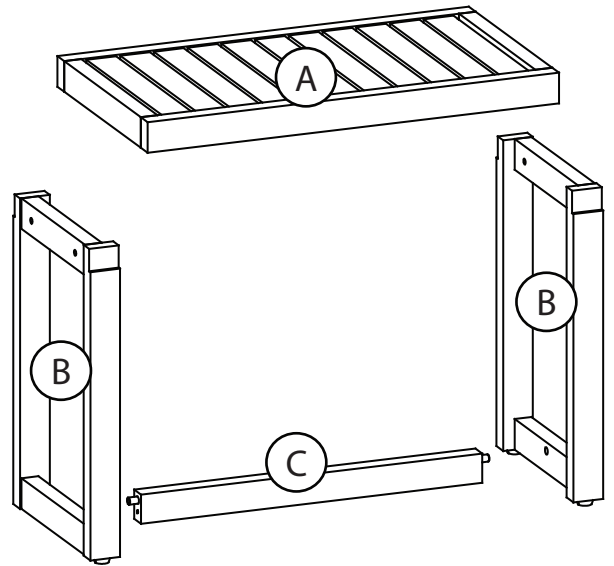



Assembly Instruction
Item# 151-4X
18" White Oak Shower Bench

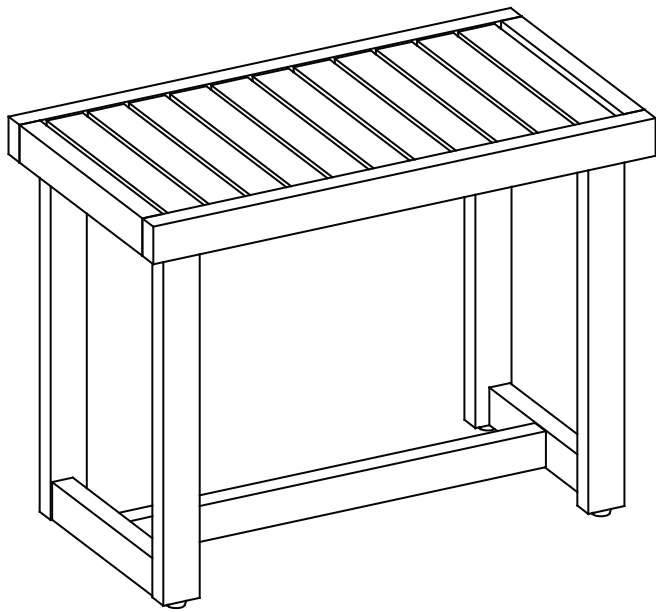


Parts List

(A)	Seat	1 Pc.
(B)	Side Panel	2 Pcs.
(C)	Crossbar	1 Pc.


Hardware




F6 x 1 1/4"



JCB M6 x 30

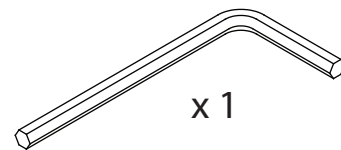

Allen Key

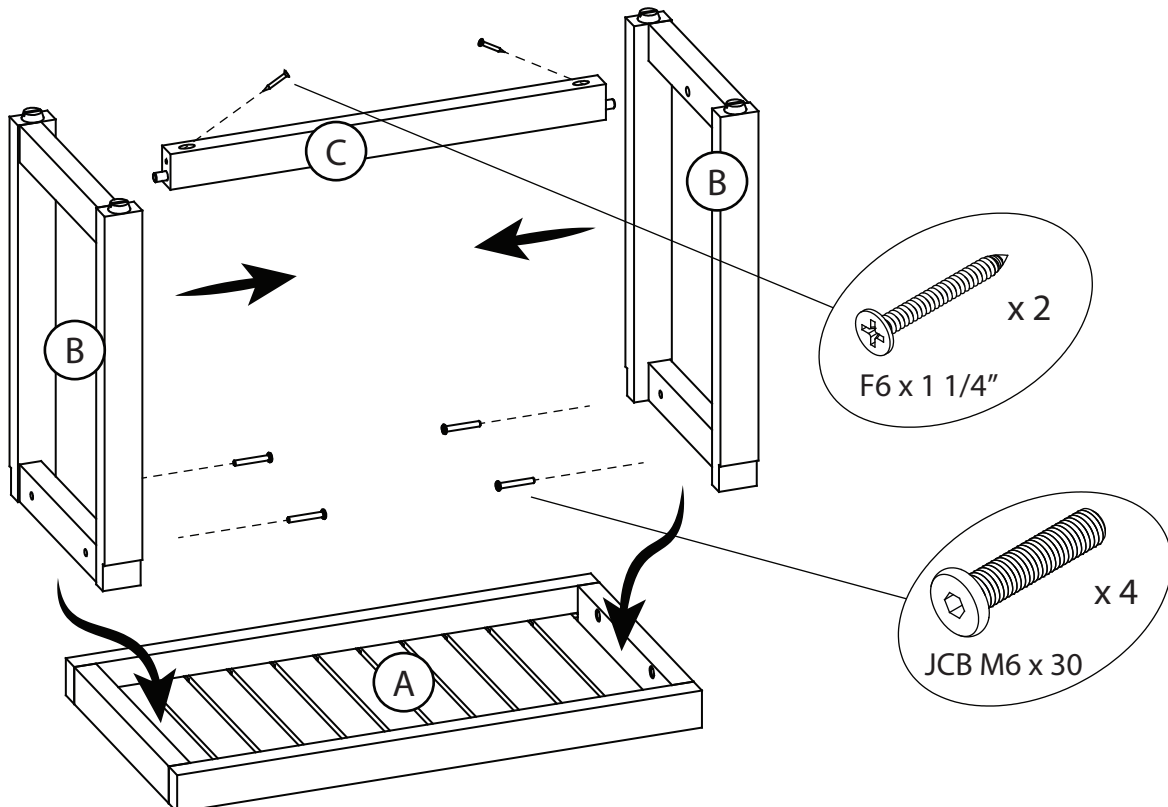

Assembly the unit by attaching the Seat (A), Side Panels (B) and Crossbar (C) together by using Screw JCB M6 x 30 and Screw F6 x 1 1/4" as shown in diagram.