














CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

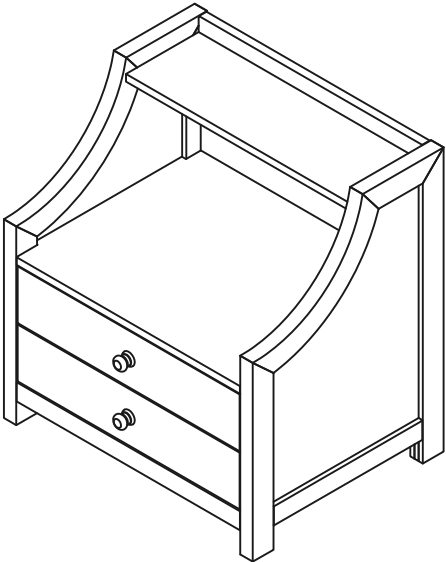
- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.








Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	LEFT ASSEMBLY		1X
C	RIGHT ASSEMBLY		1X
D	FRONT FRAME		1X
E	UPPER BACK FRAME		1X
F	LOWER BACK FRAME		1X
G	SHELF		1X
H	BACK PANEL		1X
I	DRAWER FRONT		2X
J	DRAWER LEFT		2X
K	DRAWER RIGHT		2X
L	DRAWER BACK		2X
M	DRAWER BASE		2X



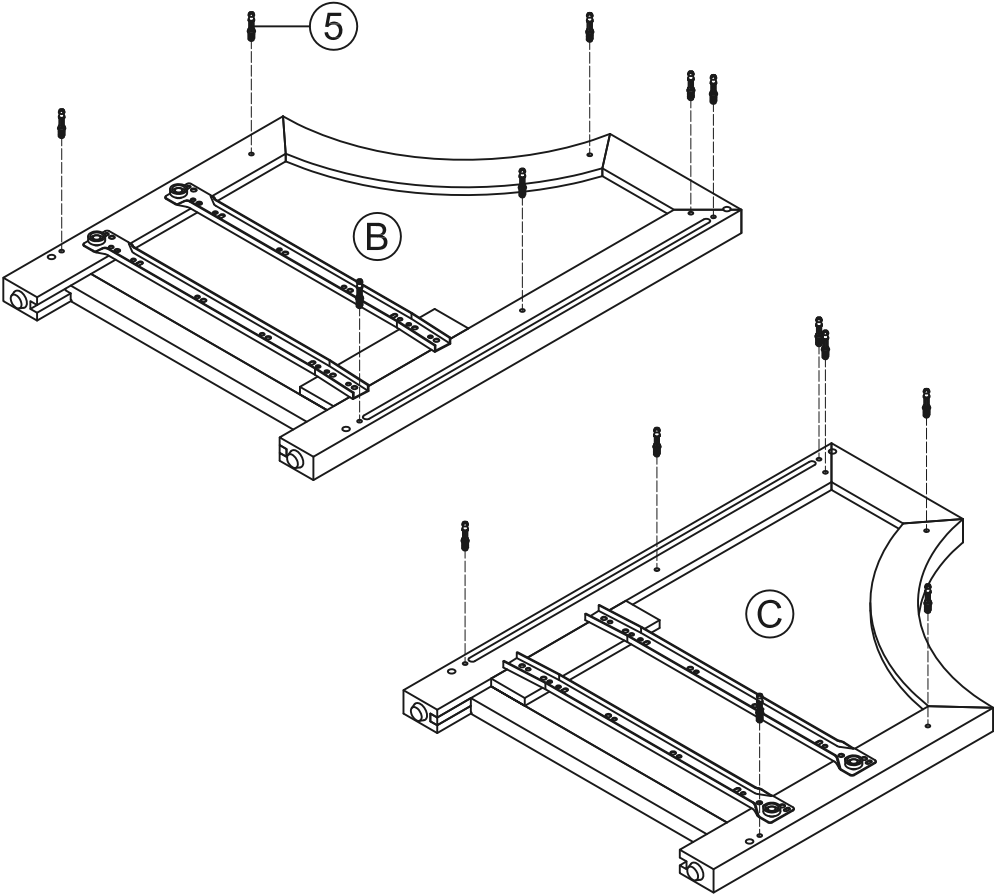
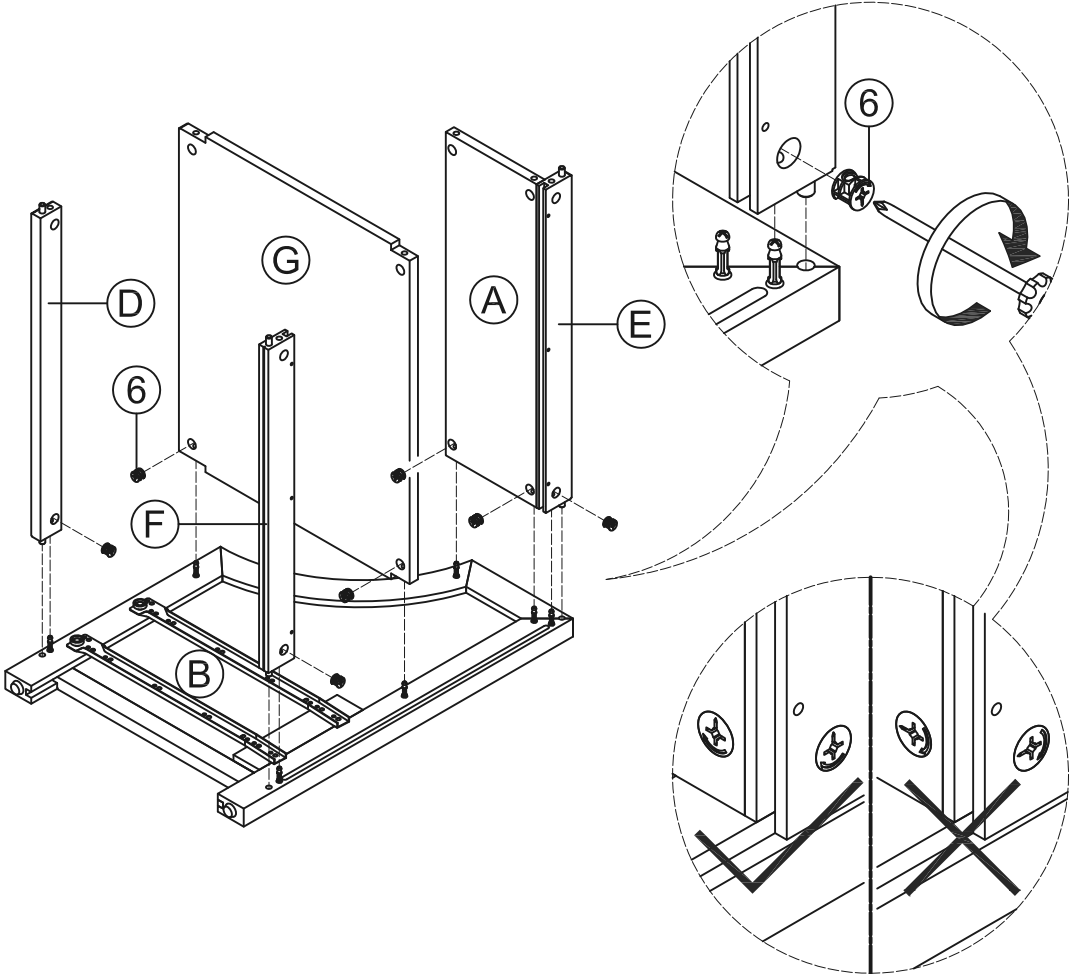
Model# NST5000
Product Dimenions: 23.6"W x 18.1"D x 25"H



PIECE	DESCRIPTION	PICTURE	QUANTITY
1	1" ROUND HEAD SCREW		2X
2	3/4" ROUND HEAD SCREW		8X
3	1 1/4" FLAT HEAD SCREW		8X
4	3/4" FLAT HEAD SCREW		8X
5	CAMBOLT		14X
6	CAMLOCK		14X
7	HANDLE		2X

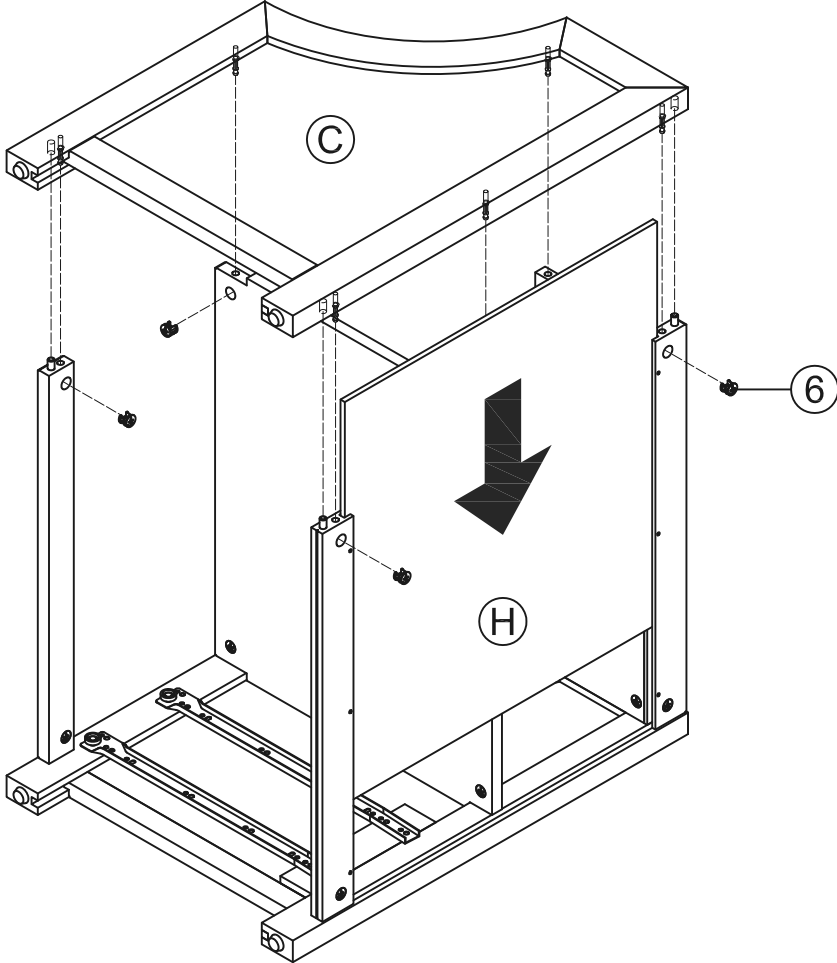
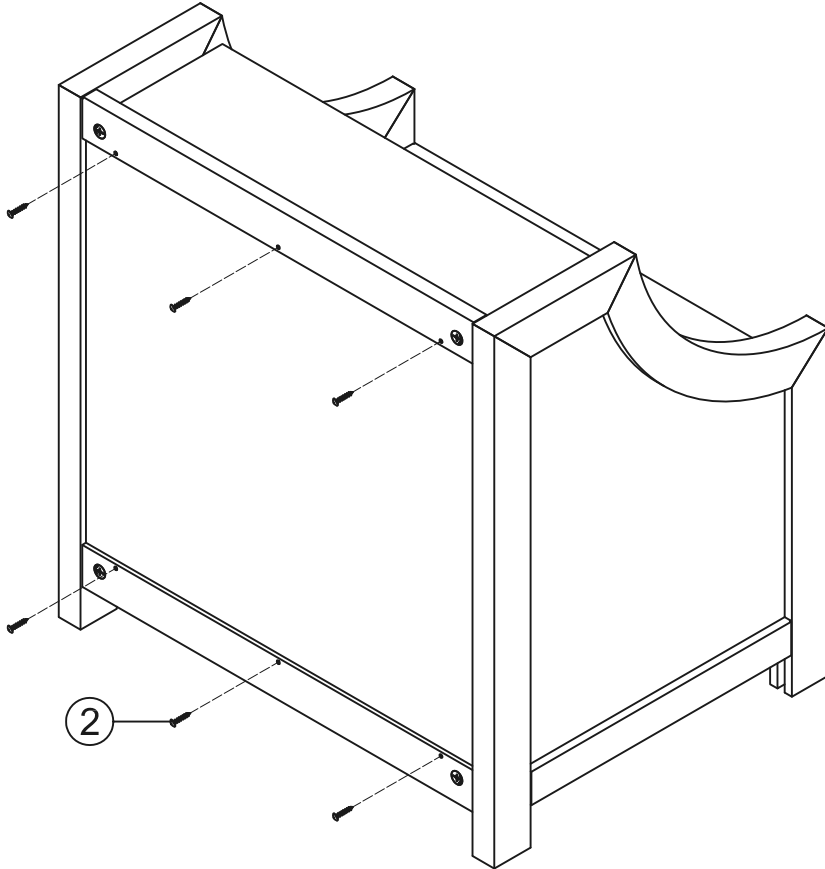
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

	
<p>STEP 1 ATTACH CAMBOLT TO LEFT AND RIGHT ASSEMBLIES.</p>	<p>STEP 2 ATTACH FRONT FRAME, UPPER AND LOWER BACK FRAMES, TOP PANEL AND SHELF TO LEFT ASSEMBLY USING CAMLOCK.</p>

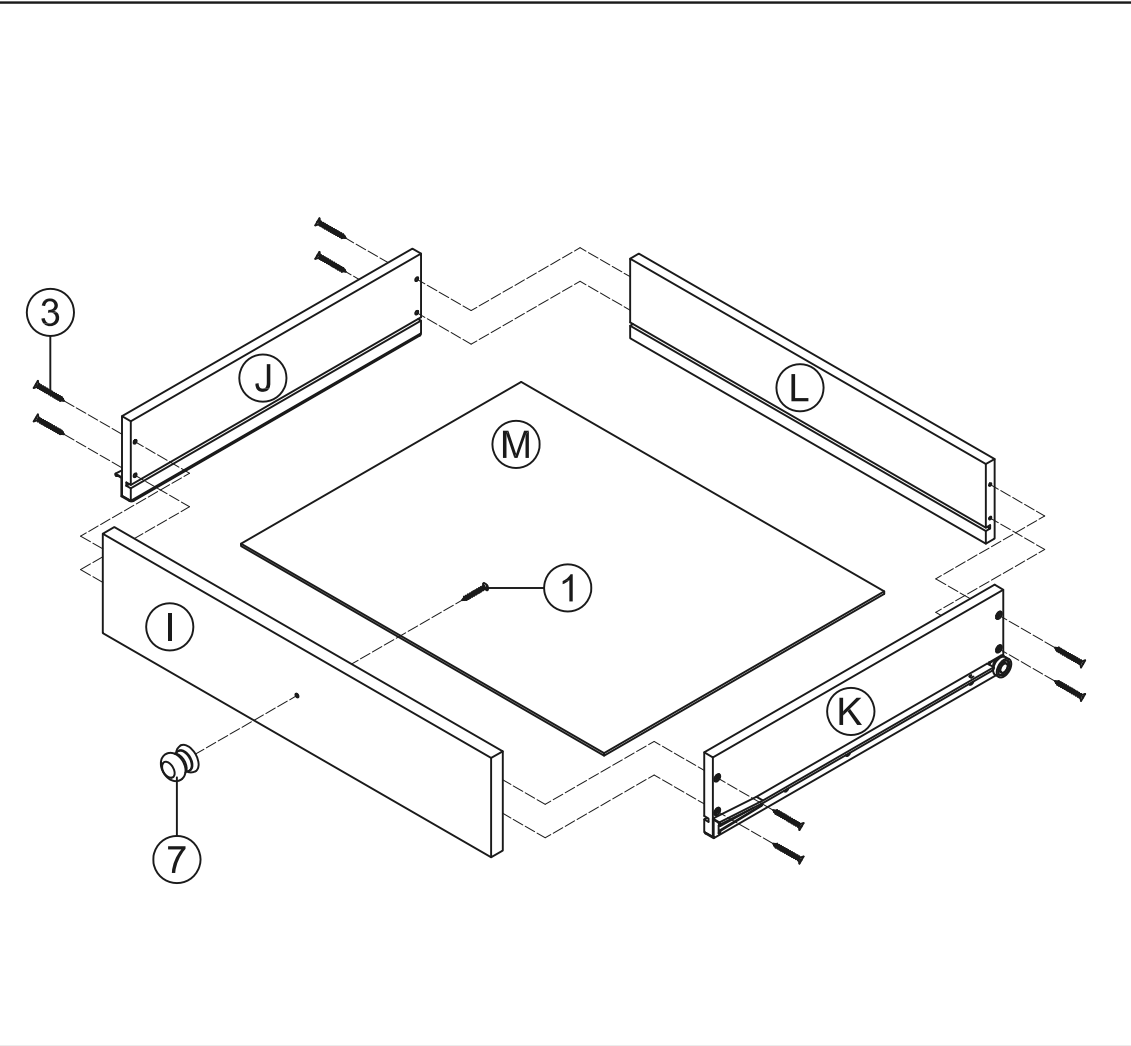
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

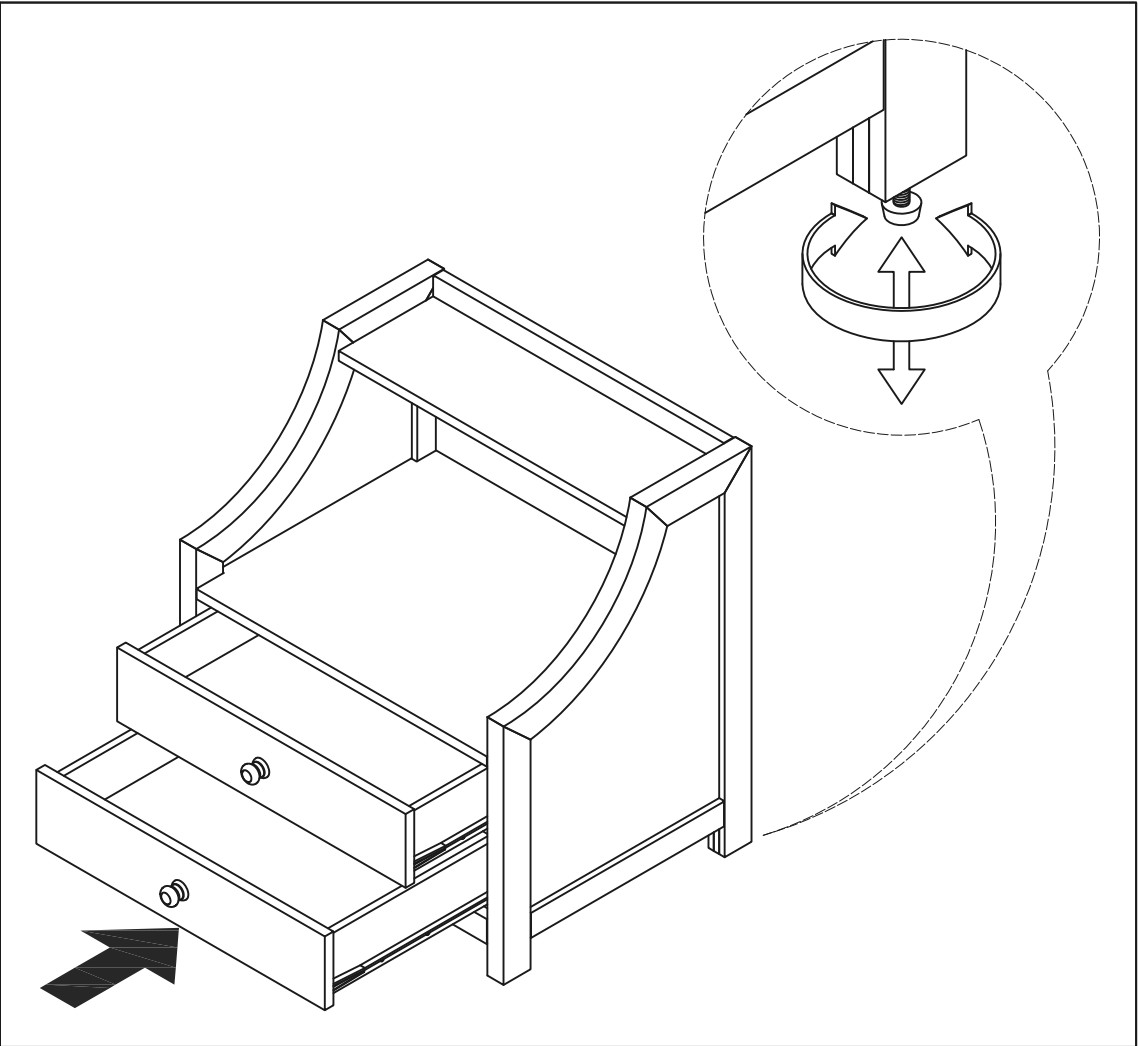
	
<p>STEP 3 ATTACH RIGHT ASSEMBLY TO UNIT USING CAMLOCK.</p>	<p>STEP 4 TURN THE UNIT TO ITS' UPRIGHT POSITION. ATTACH 3/4" ROUND HEAD SCREWS TO UNIT.</p>

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver



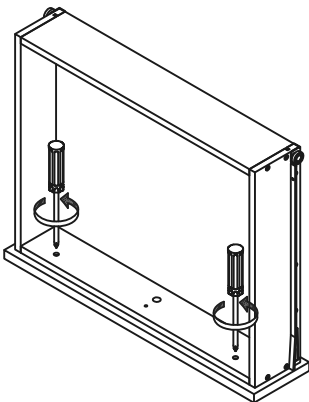
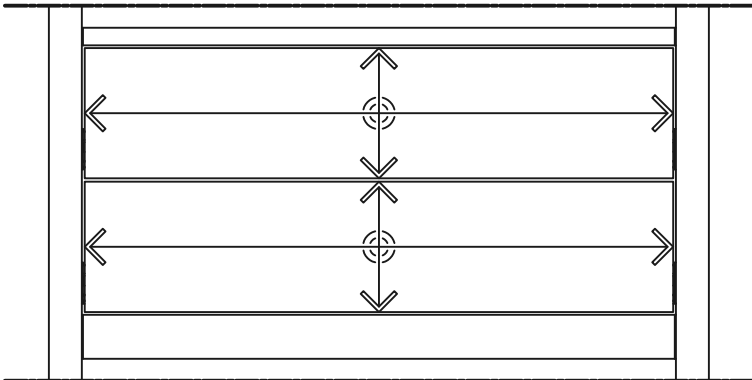
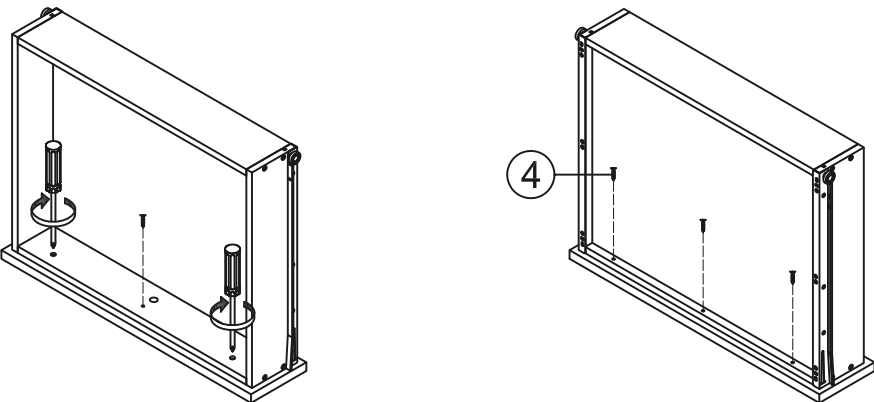
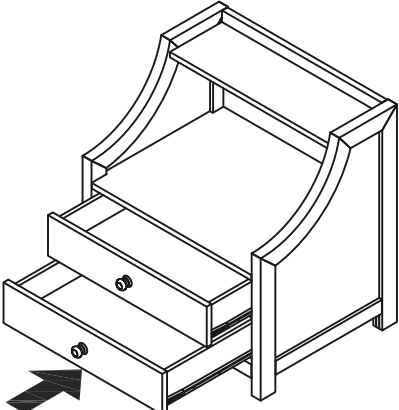
STEP 5 ATTACH HANDLE TO DRAWER FRONT USING 1" ROUND HEAD SCREW. ATTACH DRAWER LEFT AND RIGHT TO DRAWER BACK USING 1 1/4" FLAT HEAD SCREWS. SLIDE DRAWER BASE INTO THE GROOVE. ATTACH DRAWER FRONT TO DRAWER LEFT AND RIGHT USING 1 1/4" FLAT HEAD SCREWS. DO THE SAME STEP TO THE NEXT DRAWER.



STEP 6 SLIDE THE DRAWERS INTO UNIT. ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

	
<p>STEP 7 REMOVE DRAWERS FROM UNIT. LOOSEN SLIGHTLY THE SCREWS PRE-INSTALLED ON THE BACK OF THE DRAWER FRONTS.</p>	<p>STEP 8 INSERT THE DRAWER INTO THE UNIT, THEN ADJUST THE DRAWER FRONT PANEL LEFT OR RIGHT AND UP OR DOWN UNTIL THE DRAWER GAPS LOOK PROPORTIONAL.</p>
	
<p>STEP 9 PULL THE DRAWER OPEN SLOWLY AND RE-TIGHTEN THE SCREWS FROM STEP 7. MAKE SURE THE FRONT PANEL DOES NOT MOVE AND LOCK THE DRAWER FRONT PANEL INTO POSITION WITH 3/4" FLAT HEAD SCREWS.</p>	<p>STEP 10 SLIDE THE DRAWERS INTO UNIT.</p>