## For Style 6603C20C-7 Assembly Instruction Sheet #IS-6603C20C-7


Tools Required: Felfred acrescriver, Philips acrescriver, plans, who culturs, who originars, electrical laps, safety glasses

Jajik Source: (7) 6U18 3BN (Not Include) eardine: Identify and impact all paris before beginning installation. Check package content list and diagrams below to be sure all paris are est. If any paris are missing or damaged, do not allesapt to assemble, install, or operatio the Educe. Content outcomer service for explanament

## 

Turn off electricity at circuit breaker or main tuse box before installation. Consult a ficensed electrician if in doubt. These instructions are provided for your selfety. It is very important you read them completely before installing the fixture. We strongly recommend that a ficensed, professional electrician perform the installation.

Disconnect fluture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

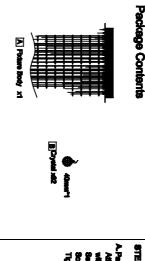

A.Pass the supply wires through the Mounting bracket (EE) STEP 2 - Attach Mounting bracket to Outlet Box with the head of the Green Ground Screw facing you. flach the Mounting bracket (EE) to the Outlet Box are it with Outlet Box

from outlet box

Green Ground Screw on the Croseber



Figure 2


8

Hardware Contents

**CITIVATIO** ť ğ

Electrical Meneto Outlet Box Street

BTEP 8 — Fit Ceiling Canopy to Mounting bracket Assen A. Fit the ceiling canopy to Mounting Screws (DD) and secure ofth Decorative Cape (AA). Note: The ceiling campy should be amug against the ceiling and the Decorative Cape (AA). not, adjust the length of the

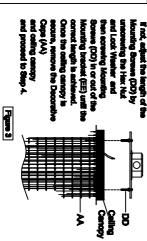

A. Line up a set of holes on the

the ceiling cenopy. bread Mounting Screws (DD) ounding bracket (EE) and Holes


and understanding

ng bracket (EE). Pasa Look

ģ


STEP 1 - Attach Mounting Serews, Lock Washers and Hex Nuts to Mounting bracket.

## A. Use standard wire commenture to make all wire commenture. Twist commenture until when are tightly joined together. When each commentur with approved electrical tape and carefully stuff all the commentur wires into the Outlet Box. from outlet box White wire

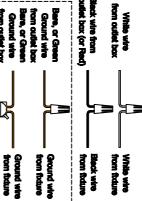


A. Carefully tuck all wires into the outlet box and position the ceiling camppy of the Friture Body (A) over the outlet box. Align the holes STEP 5 — Install Celling Canopy to Celling in the celling canopy with the Mounting Screws (DD). soure with Decorative Cape (AA) and hand tighten until enug.

Figure 4

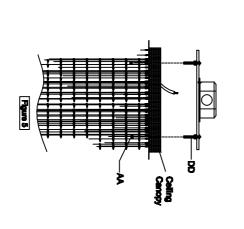

## B. Please put the crystal (B) to the Fixture Body (A). A. Install bulbs onto sockets and push anug into piace. STEP 6 - Install Crystal and Bulbs.

STEP 4 - Wire Connections

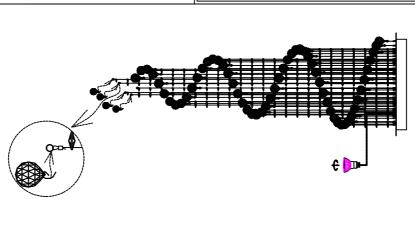

2 of 2