



Assembly Instructions



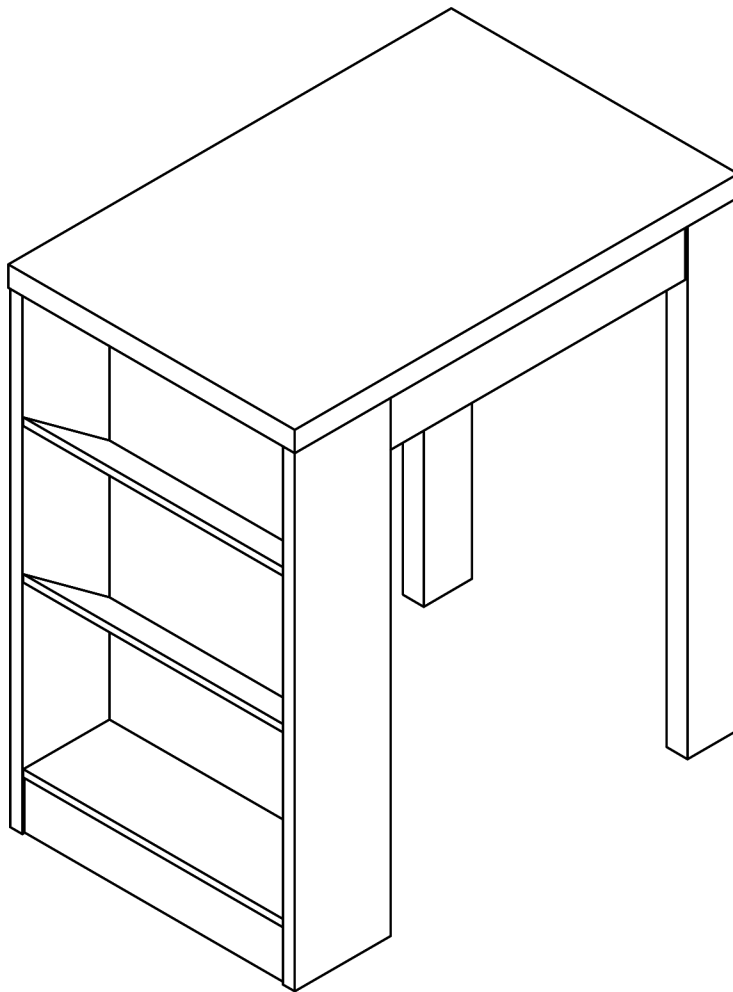


PARTS IDENTIFICATION

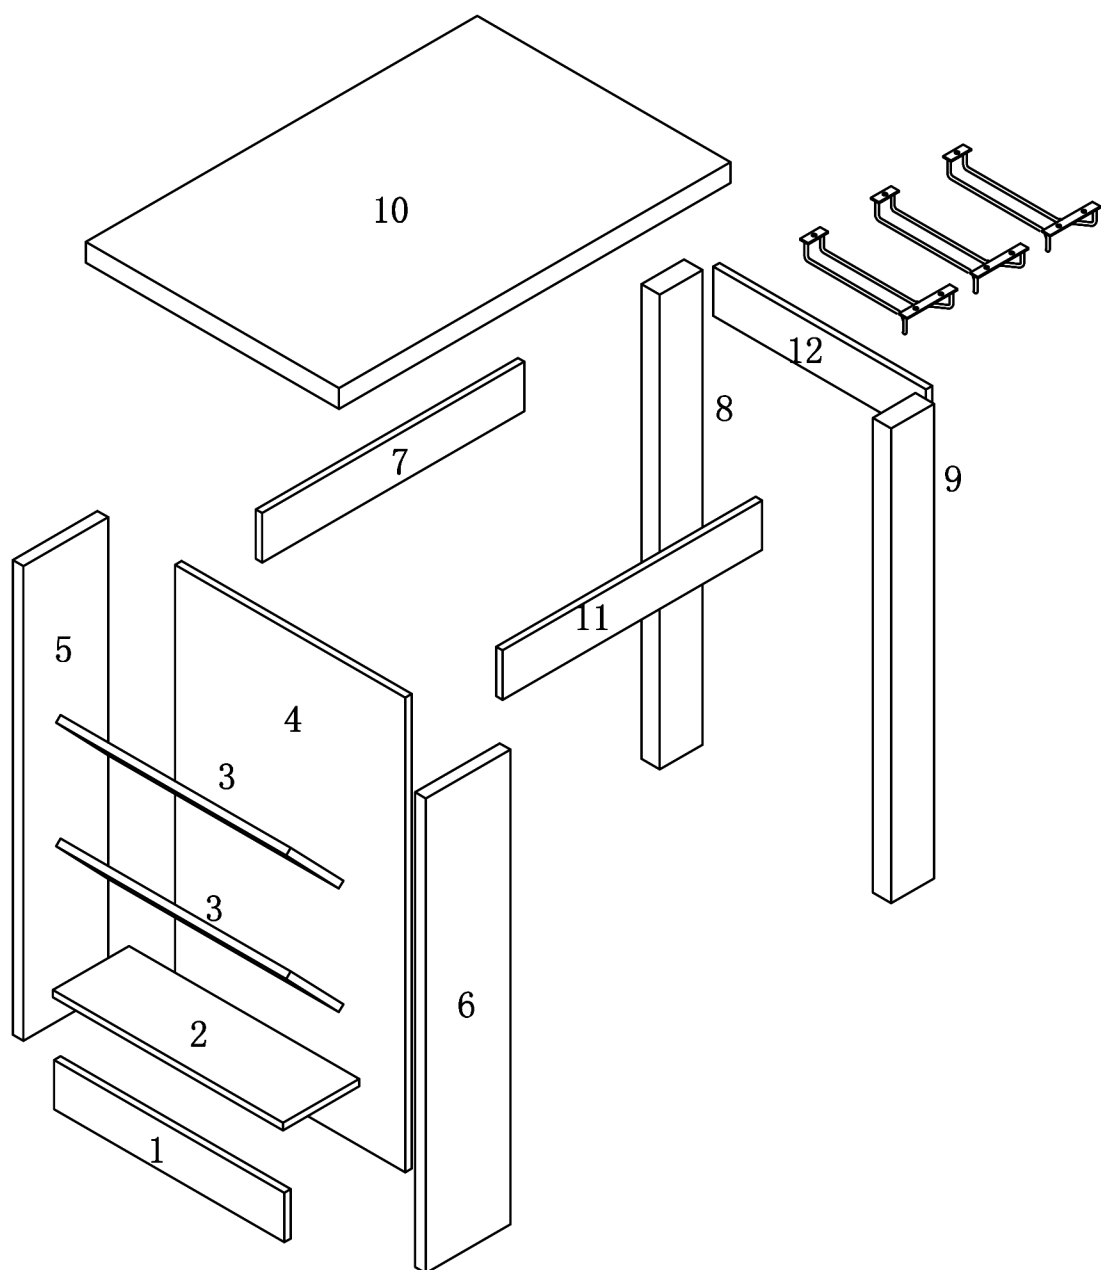


(1)	1pc	(6)	1pc	(11)	1pc
(2)	1pc	(7)	1pc	(12)	1pc
(3)	2pcs	(8)	1pc		
(4)	1pc	(9)	1pc		
(5)	1pc	(10)	1pc		

HARDWARE IDENTIFICATION


A		L29	24pcs	
B		ø15	24pcs	
C		ø8×25	20pcs	
D		ø5	1set	
E		ø4×16	9pcs	
F		ø18	11pcs	
G		M13	1pc	
H		M8×65	2pcs	
I		M8	2sets	
J		ø45	2pcs	
K		ø16	5pcs	
L		L340	3pcs	
M			1pc	
N		ø3×16	2pcs	
O	 BK	ø8×40	10pcs	
P		Glue: For securing please apply to wood dowel first before inserting into panel		1pc

Assembly Instructions


STEP 1

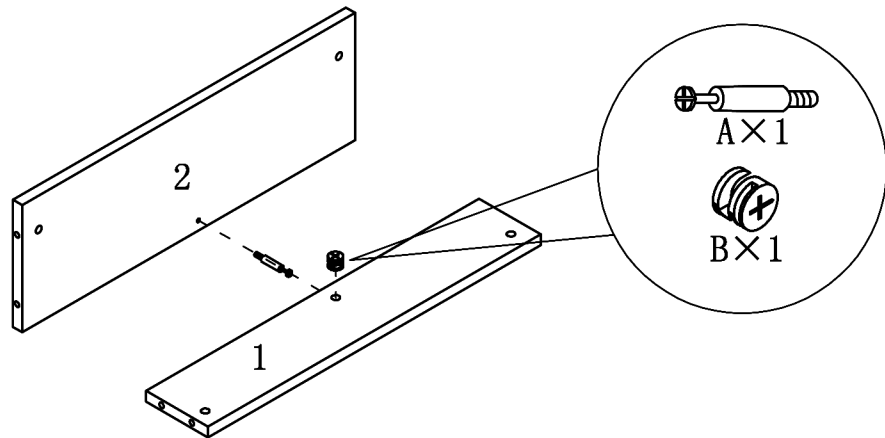


STEP 2

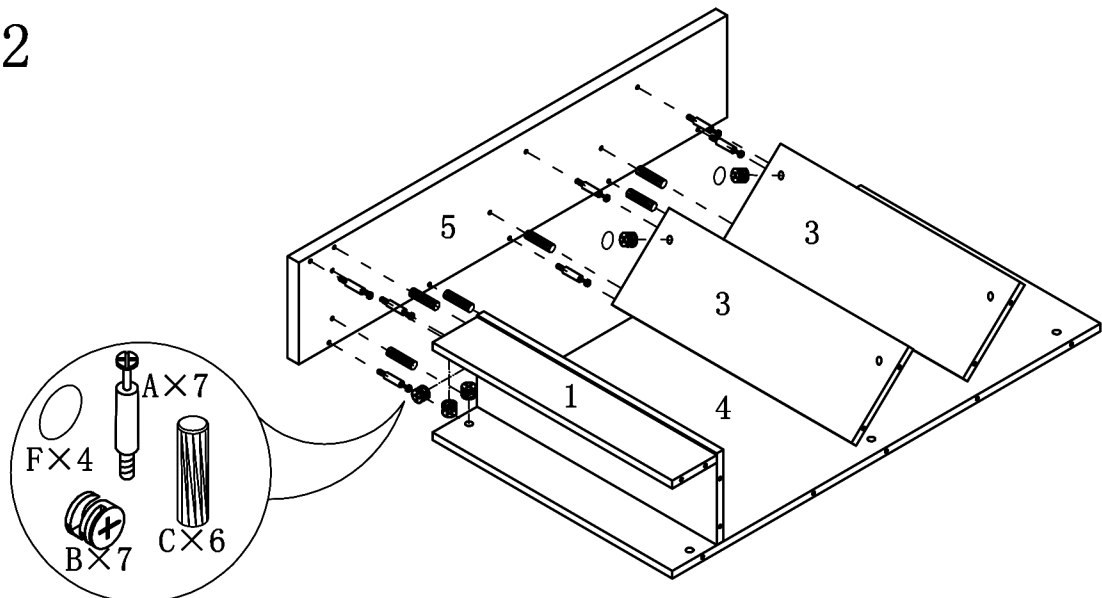

STEP 3

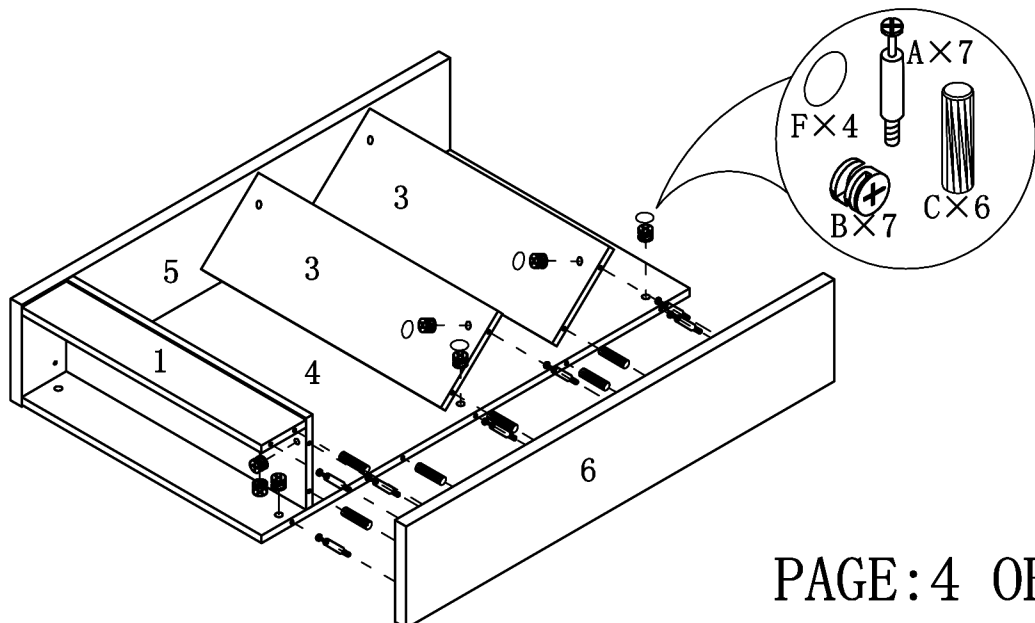


Assembly Instructions

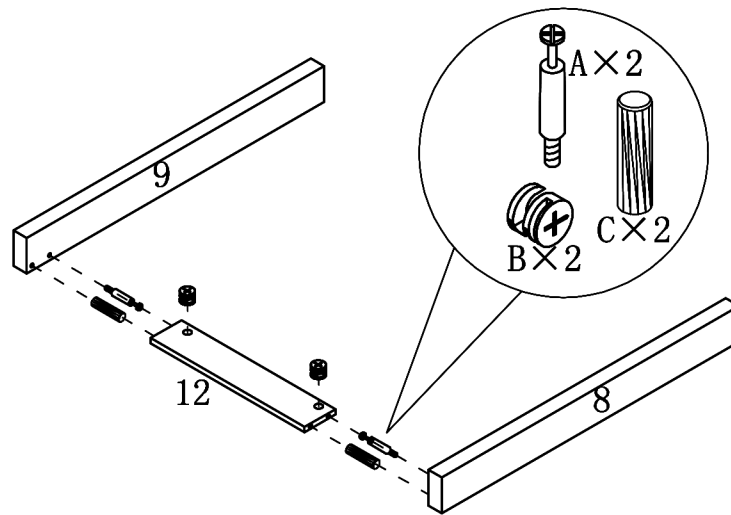


STEP 4

STEP 5

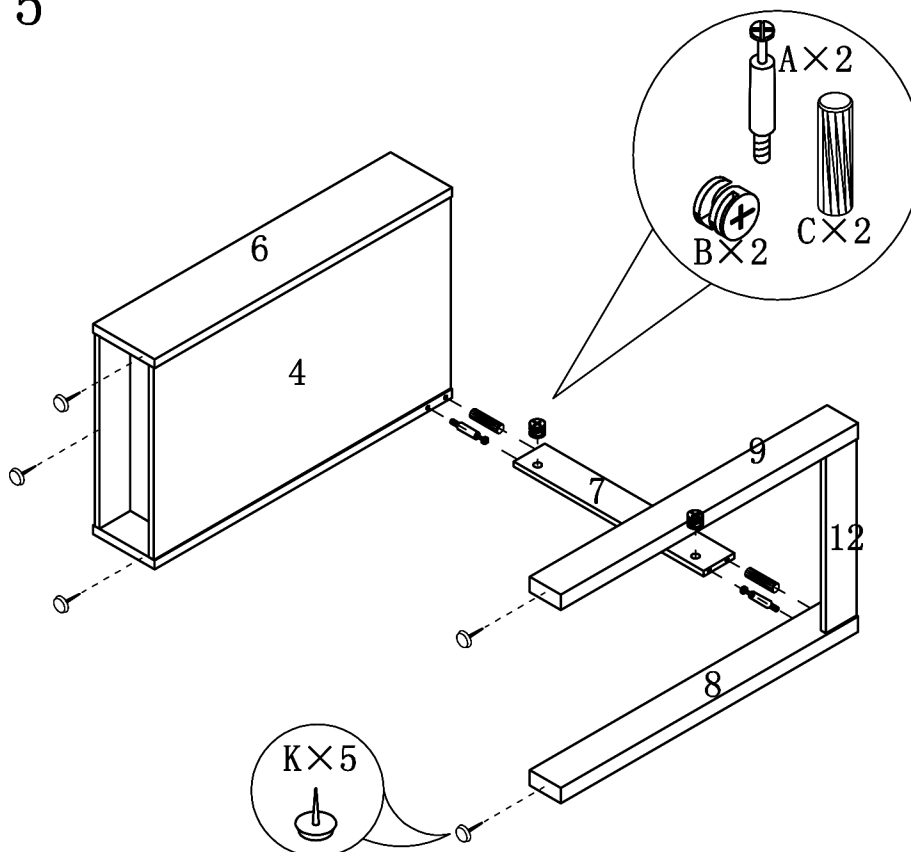


Assembly Instructions

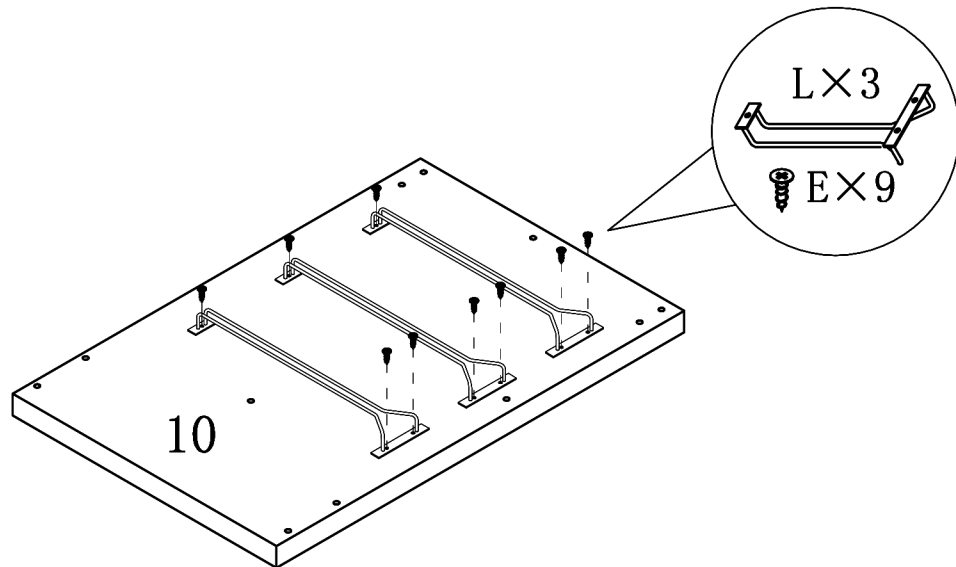


STEP 6

STEP 7

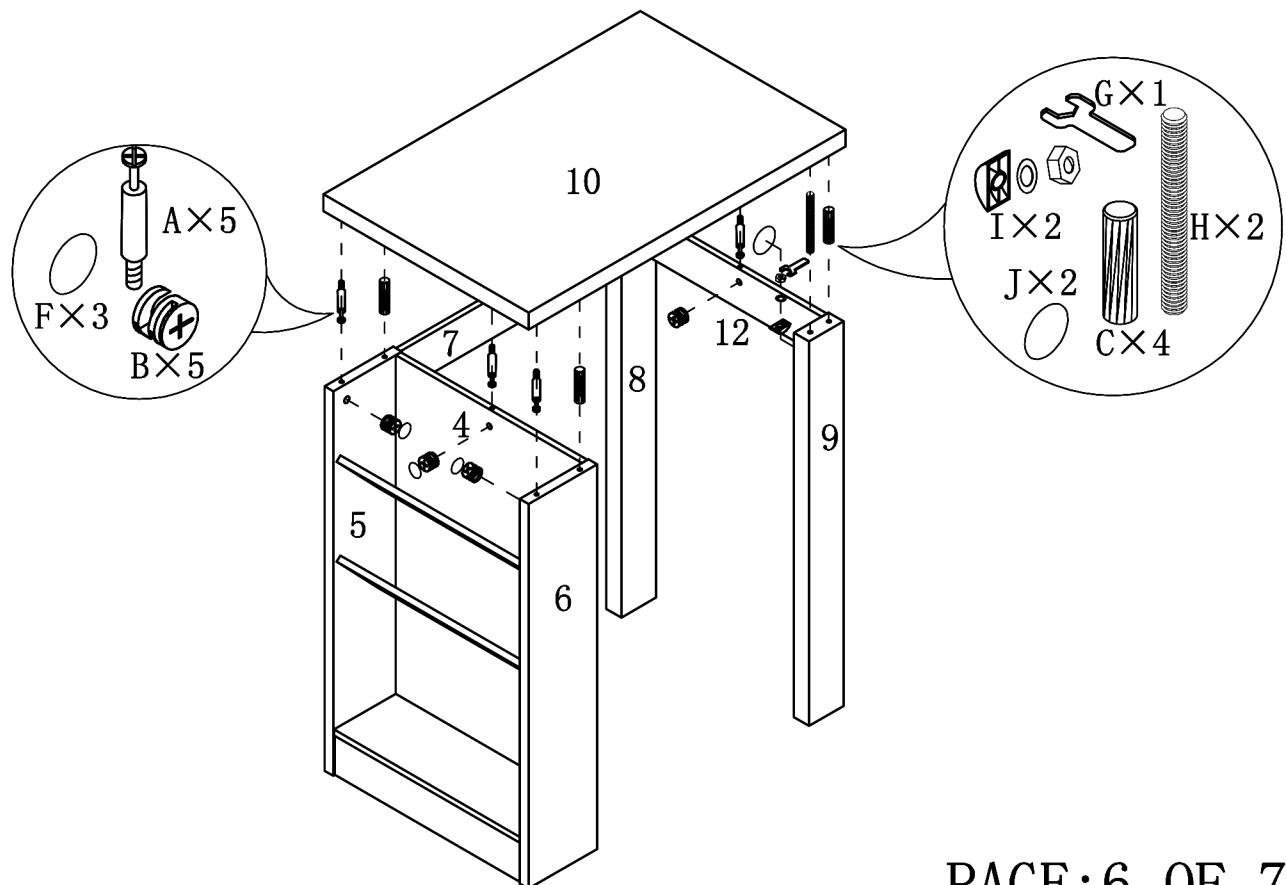

Assembly Instructions

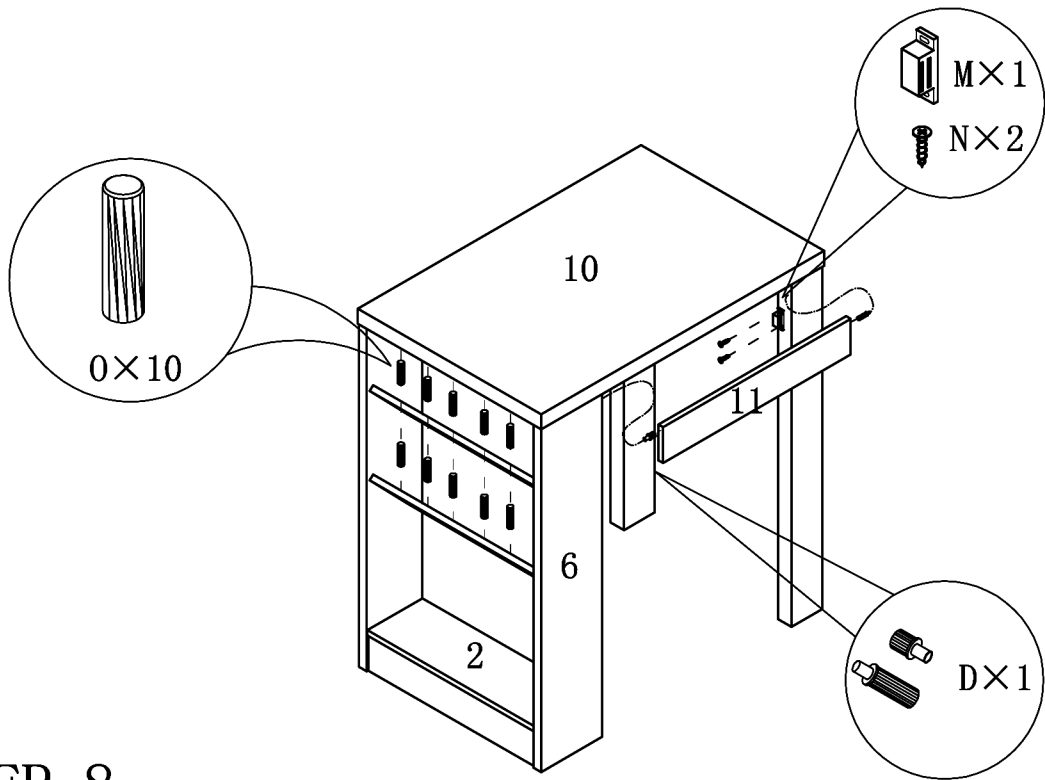

STEP 8

STEP 9

