


# CORDLESS CELLULAR SHADE INSTALLATION INSTRUCTIONS

## 1. PACKAGE CONTENTS

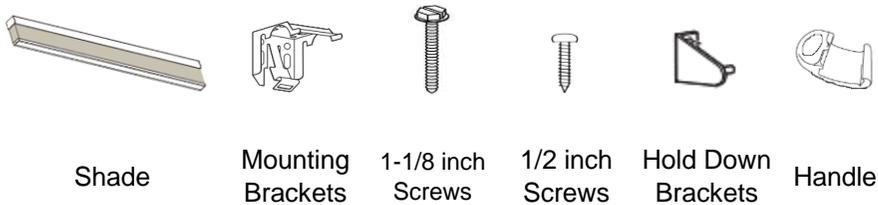

Shade Width	Bracket Quantity	Handle Quantity
Up to 40 inch	2	1
40 inch and up	3	2

## 2. TOOLS YOU MAY NEED


Screwdriver      Measuring Tape  
Pencil      Drill/Drill Bits

## 3. DETERMINE INSIDE/CEILING, FLUSH, WALL OR OUTSIDE MOUNT

### a. Inside/Ceiling or Flush Mount

(A minimum 3/4-inch depth is required or 2-inch depth for flush mounts.)


1. Test the end bracket location 1-to-2-inches from the end of each headrail-side and ensure that the brackets will not interfere with internal components.
2. If your shade comes with a third mounting bracket, test it in the center.
3. Mark the bracket locations upward through the holes with a pencil (ensure the release tab is down).
4. Use the 1-1/8 inch screws in the top bracket holes to attach your brackets.

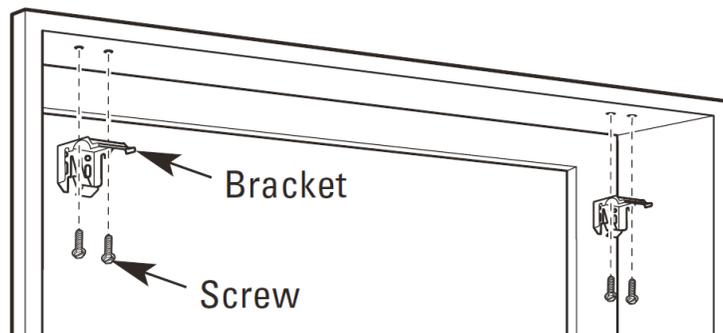

### b. Wall or Outside Mount


(A minimum 7/8-inch flat wall space is necessary.)

1. Test the end bracket location 1-to-2-inches from the end of each headrail-side and ensure that the brackets will not interfere with internal components.
2. If your shade comes with a third mounting bracket, test it in the center.
3. Mark the bracket locations toward the back through the rear holes with a pencil (ensure the release tab is down).
4. Use the 1-1/8 inch screws in the rear bracket holes to attach your brackets.

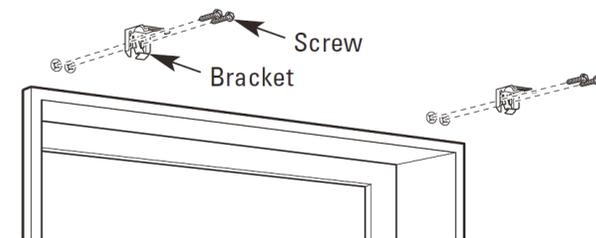

## 4. INSERTING THE HEADRAIL

- a. Lift the headrail into position such that the front edge of the bracket is under the inner front edge of the headrail.
- b. Rotate headrail backward toward window, push the headrail upward until the release tab at the bottom of each bracket snaps onto the back of the headrail until a snapping sound is heard. This will let you know that the shade is engaged into the bracket.
- c. Check carefully to assure that each bracket is properly secured.
- d. Please allow 24 hours for your shade to drop to its actual height when first installed due to the nature of the fabric.

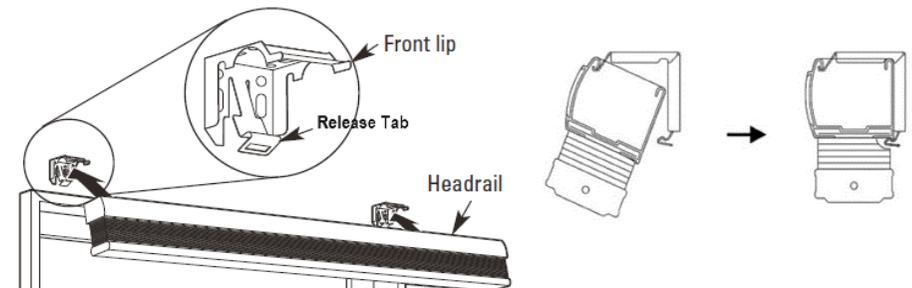

## 5. ATTACH THE HANDLE / HOW TO OPERATE


Clip the handle to the center of the bottom rail. For shades over 40 inch wide, attach two handles, shoulder width apart at center. The handle is designed to minimize contact with the shade fabric. Always raise and lower the shade slowly to assure that the fabric gathers neatly.

To lower the shade: grip the handle and slowly pull straight down.

To raise the shade: put one hand under the handle (palm facing up) and slowly lift until the desired height is reached.


### Important Note:

Always push and pull at the center of the shade to assure that the bottom of the shade remains even (i.e. parallel to the top of the shade). If the shade becomes uneven, slowly pull it all the way down, and then lift to the desired position. If necessary, reach behind the shade and manually pull the cording slowly out of the headrail until the bottom of the shade is level.

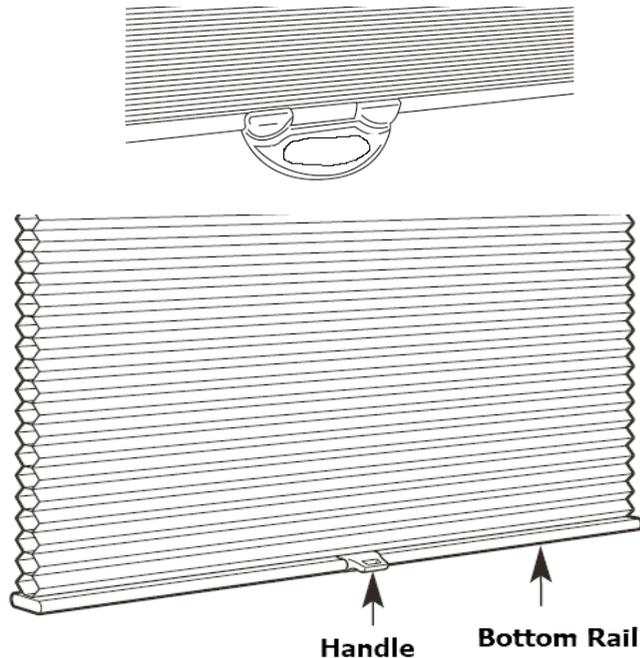


## 6. OPTIONAL HOLD DOWN BRACKETS

- Optional hold down brackets are mounted with the supplied 1/2 inch screws. With the shade at its proper drop, place the pin of each hold down bracket into the hold of each end cap and mark the screw holes.
- Make sure the pins are level and aligned. Raise the shade, then screw the hold down bracket into the mounting surface.

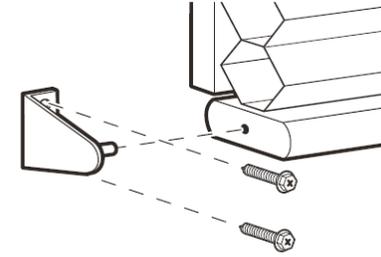

## 7. REMOVE THE HEADRAIL

- To remove a shade, insert a screwdriver between the headrail and the bottom back of the bracket (tab which extends out slightly from each bracket).
- Gently pry the screwdriver to release the bracket from the headrail. Take care not to damage the painted finish of the headrail. As you release the brackets, support the headrail.

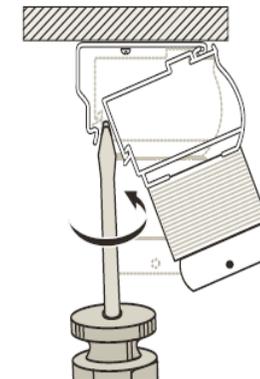

## 8. CLEANING & CARE

To clean the shade fabric, use a feather duster or vacuum lightly using the soft brush attachment.