

INSTRUCTION MANUAL

Model: HLC-1839F-5

support@vipclub.app 833-969-2075 / 1 (770) 298-8947

ASSEMBLY GUIDE

Congratulations, you are now the owner of a brand new ergonomic chair!

To best enjoy comfort of the chair, you have to put it together first! This assembly guide will take you through the assembly process. To make sure the assembly goes well, please follow the instructions, and especially the important safety information. It is possible to assemble the chair on your own, but it is recommended to have a second person to make it easier and safer.

Please check if there are any missing parts from the package before starting. If there is any issue, please don't hesitate to drop us an email and we'll help you out ASAP. If you run into any difficulty when assembling the chair, remember to check out the assembly video to see if you've missed anything. If you're unable to resolve the problem, just send us an email and our support team will assist you.



https://qygjuser.s3.us-east-2.amazonaws.com/HL/17%E3%80%81OFC-1839F-5.mp4



WARNING

To ensure proper assembly, please follow all steps and use all parts. Failure to follow this warning can result in serious injury to yourself or others.

Package List

• Without further ado, we kindly suggest you to list all parts needed for the chair first.


(1)*1	(2)*1	(3)*2
Backrest	Seat Cushion	Armrests
(4)*1	(5)*1	(6)*5
Mechanism	Gas Lift	Casters
(7)*1	(8)*5	(9)*10
Base	Legs	Bolts
(10)*2	(11)*4	(12)*4
Bolts	Bolt	Bolts
(13)*4 Bolts Washer	(14)*1 Foot Ring	(15)*1 Wrench

Assembly Instruction


• Step 1:

Turn the Base (7) upside down, then insert Detachable legs (8) one by one to Base.

Use the Wrench (15) to screw Ten Bolts (9) into the pre-drilled screw holes to fix the Base and the Base Legs.

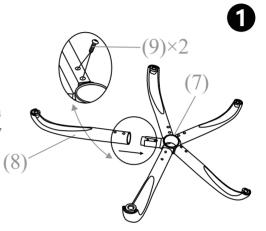

2

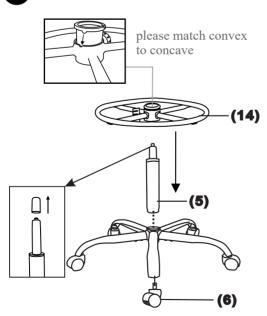

• Step 2:

Press the Casters (6) into the holes at the end of each Base Leg. And then insert the Gas Lift (5) into the center hole of the Five-Star Base.


The Foot Ring (14) should be placed over the Gas Lift and fix the Foot Ring on the Gas Lift. Remove the cover from the top of the Gas Lift.

Note: Please match convex to concave or it can't be installed correctly.

• Step 3:


Turn the Seat Cushion (2) upside down and align the hole position of the Armrest (3) with the pre-drilled hole position under the Seat Cushion.

Insert the bolt washer (13) into the Bolts (12), attach the Armrest (3) to the Seat Cushion (2) with Two Bolts (12), using the Wrench (15).

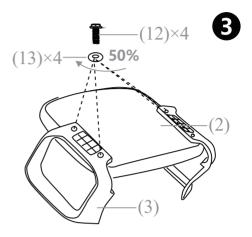

Repeat on the other side of Armrest (3).

All bolts do not need to be tightened, they only need to be fixed in half.

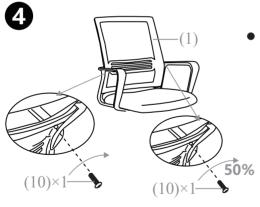

• Step 4:

Attach the back (1) to the Armrest (3), Use the Wrench (15) to screw Two Bolts (10) on the left and right sides of the armrest to fix the back. Repeat on the other side of Armrest.

All bolts do not need to be tightened, they only need to be fixed in a half.

Note 1: The "Front" mark on the Armrests and the "Front" mark on the Seat Cushion should be in the same direction.


Note 2: Armrests are labeled with an "L" (left) or "R" (right) to show which sides they should be placed on.

• Step 5:


100% tighten the Bolts **(12)** * 4 to fix the armrest.

100% tightened the Bolts (10) *

2 to fix the armrest and chair back.

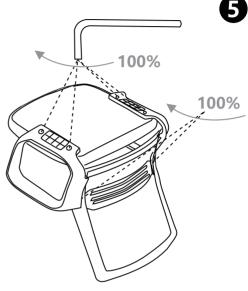

6

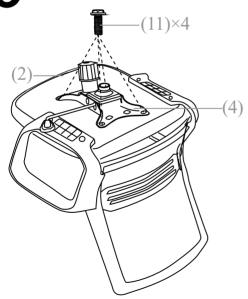

• Step 6:

Attach the Mechanism (4) to the Seat Cushion using Two Bolts (11) at the front and Two Bolts (11) at the back, tighten all the bolts with the Wrench (15).

• Step 7:

Insert the slot on the back of the mechanism behind the cushion into the Gas Lift.

CAUTION:

Make sure all bolts and screws are fully tightened before using the chair.

Lubricate all moving parts and tighten all bolts/screws every 6 months or whenever needed.



Instructions For Use

1. Seat Height: Paddle-shaped lever on the right side



To raise:

While taking your weight off chair, lever uplift to raise the seat height.

To lower:

While seated on the chair, lever uplift to lower the seat height.

* Notice: The role of the foot ring is only for resting your feet when you sit down, it can't be used to step on it then climb up the chair. It can't bear your weight.



2. Tilt Tension: Long stem under the seat with knob



To increase tension:

While seated, turn knob forward (Counter clockwise).



To decrease tension:

While seated, turn knob backward (Clockwise).

* Set the tilt tension to control the resistance you feel when leaning back.

3. Operating the tilt lockout



To let your chair tilt back, pull the control handle out.

To stop your chair from tilting, sit forward, then push the control handle in.

Safety And Maintenance

- Do not stand on the chair, Do not use the chair as a stepladder.
- Use this product for seating one person at a time.
- Do not use the chair unless all bolts and screws are firmly secured.
- Avoid contact with sharp objects to prevent puncturing the fabric.
- Every 6 months, check all bolts and screws to ensure they are tight.
- To clean, spot clean only using a damp towel and mild cleaner, first test on a small, unseen area of fabric.
- Chair weight limit not to exceed 250 lbs.

Safety Information



Sit in the center of the chair, with your back to the backrest



Do not sit at the front edge of the chair



Do not stand on the chair



Do not use the chair with more than one person



Do not push the chair around when a person is sitting in it



Do not push down on the backrest when a person is reclined



Do not place all your weight on only the backrest

Limited Warranty

The producer promises to repair or replace any chair that is found to be defective in material or workmanship within one(1) and year from the date of original purchase so long as you, the original purchaser, still owns it. This is your sole and exclusive remedy. This warranty is subject to the provisions below.

EXCLUSIONS:

This warranty does not apply and no other warranty applies to:

- Normal wear and tear, which are to be expected over the course of ownership.
- Misuse, abuse, or excessive use of the product.
- Modifications or attachments to the product that are not approved by the manufacturer.
- Products that were not installed, used or maintained in accordance with product instructions and warnings.
- Products used for rental or commercial purposes.
- Damage caused by the carrier in-transit is handled under separate terms.

SEATING USAGE:

Normal use for seating is identified as the equivalent of a single shift, forty- (40) hour workweek. To the extent that a seating product is used in a manner exceeding this, the applicable warranty period will be reduced in a pro-rata manner.

Some retailers might have custom models imported directly from the factory and therefore are not supported by our local service team because we don't have the correct parts, please contact your retailer directly for support. If you have any questions about that we will be happy to assist and identify those items.

RETURN POLICY:

We adopt a 30 days return policy which means that all products purchased on this website may be returned to us within the timeframe. You need to contact us within 30 days after the product(s) came into your possession and the product(s) must be returned to us without any undue delays.

Returned products must be returned in the same condition as they were sent and they must be sent in its original packaging.

If the product is not faulty, (i.e. if you changed your mind or if you are unhappy with the product for some other reason), the cost of shipping will all on you. And it is your responsibility that the package arrives safely to us so we recommend that you use a courier service where it is possible to track the shipment.

If the product is faulty when you receive it please contact us and we will help you out (see more information under Manufacturer Warranty).

We reserve the right to give a partial refund in cases when the product(s) is not in an unused condition, is damaged or has missing parts not due to our error.

HOW RETURNS WORK:

Contact us through the contact form on our website and attach the invoice to the message as proof of purchase. And please also write the reason for return.

We will then get back to you as soon as possible with information on where to send the product(s).

As soon as we have received the product(s) and made an inspection we will inform you of our decision.

If a refund is approved we will automatically credit the purchase to your credit card or original method of payment.

If the product(s) is damaged, not in its original condition or missing parts we will inform you if you are eligible for a partial refund. This is decided from case to case depending on the severity of the damages or what parts are missing.

support@vipclub.app 833-969-2075 / 1 (770) 298-8947