

WARNING!!

Furniture Tipping Risk.

Serious risk of severe or fatal crush injuries can occur from furniture tipping over if not secured.

Children like to climb on furniture and Unsecured furniture can pose a serious danger.

Please follow all instructions and install the tip-over restraints provided.

In addition to installing the restraints, to help prevent tip-over:

- 1. Place heaviest items in the lowest drawers,**
- 2. Unless specifically designed to accommodate, do not set TV's or other heavy objects on top of this product,**
- 3. Never allow children to climb or hang on drawers, doors, or shelves,**
- 4. Do not leave drawers open,**
- 5. Never open more than one drawer at a time, and**
- 6. Do not step on the base.**

Assembly Instructions

CAUTION: You must read these Assembly Instructions before you proceed.

Care & Maintenance



- Not for commercial use. For residential use only.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.



- Children should not climb or jump on the furniture.



- Do not write on furniture without a padded barrier to protect the surface.



- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.



- Stains may be removed with mild soap solution and damp cloth.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.


Sets often ship in multiple boxes and may arrive a day or two apart

Assembly Instructions

CAUTION: You must read these Assembly Instructions before you proceed.








Please look into the Hardware Bag for all hardware.

OUTDOOR ACACIA WOOD CABINET

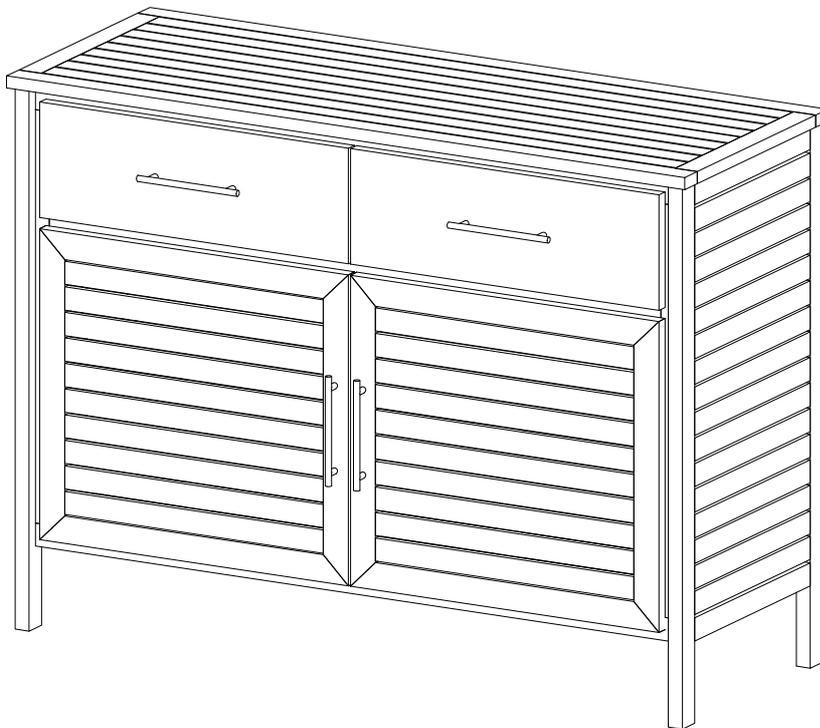

CAUTION: This Outdoor Acacia Wood Cabinet is NOT a TOY. Keep your child / children at bay during the assembly process. Whenever lifting or moving the Cabinet and to prevent damage to the Cabinet, two adult partners may be needed to execute these actions.

Parts List :

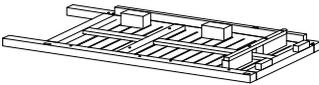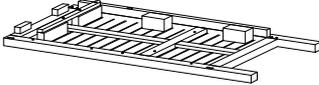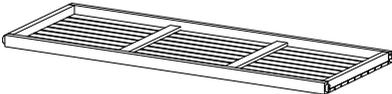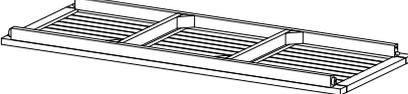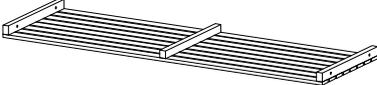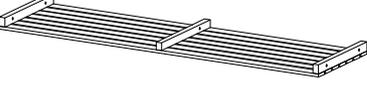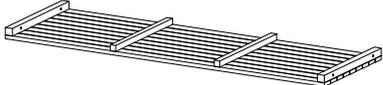Label	Picture	Description	QTY
A		Side right	1
B		Side left	1
C		Lower shelf	1
D		Wood top	1
E		Lower back side	1
F		Upper back side	1
G		Middle shelf	1
H		Right door	1
I		Left door	1
J		Horizontal bar	1
K		Vertical bar	1
L		Drawer front	2
M		Drawer left side panel	2
N		Drawer right side panel	2
O		Back drawer panel	2
P		Drawer bottom	2


Hardware :

Label	Picture	Description	QTY
①		Bolt (M6x80 mm)	9
②		Barrel Nuts (M6x15 mm)	9
③		Screws (M6x35 mm)	13
④		Bolt (M6x35 mm)	2
⑤		Sleeve Nut (M6 x 13mm)	2
⑥		Screws (M4x15 mm)	30
⑦		Hinge	4
⑧		Screws (M4x20 mm)	2
⑨		Screws (M4x30 mm)	18
⑩		Handles	4
⑪		Bolt (M4x30mm)	5
⑫		Bolt (M4x35mm)	5
⑬		Drawer stopper	4
⑭		Allen Wrench(M4)	2

Anti-tip kit - 1 Set



L-Bracket
⑮ x2

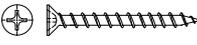

Screws (M4x40 mm)
⑯ x3



Screws (M4x25 mm)
⑰ x7



Plastic wall pug
⑱ x3



Washer
⑲ x3

Assembly Preparation :

Before Beginning Assembly:



A x1



B x1



C x1



D x1



E x1



F x1



G x1



H x1



I x1



J x1




K x1



L x2



M x2

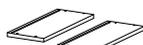

N x2



O x2



P x2



① x9



② x9



③ x13



④ x2



⑤ x2



⑥ x30



⑦ x4



⑧ x2



⑨ x18



⑩ x4



⑪ x5



⑫ x5



⑬ x4



⑭ x2



Anti-tip kit
1 Set



- Read instructions, cover to cover.



- Have 2 adults on hand for assembly.



- Do not assemble on flooring or carpet






- Assemble on a clean non-marring surface (packing foam)



- Save all packaging until finished.


Assembly Steps:

Overview

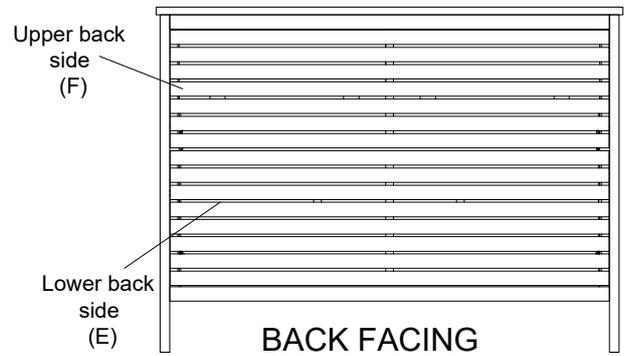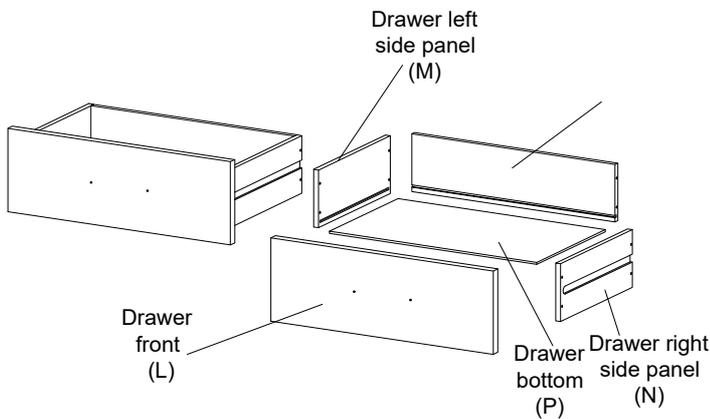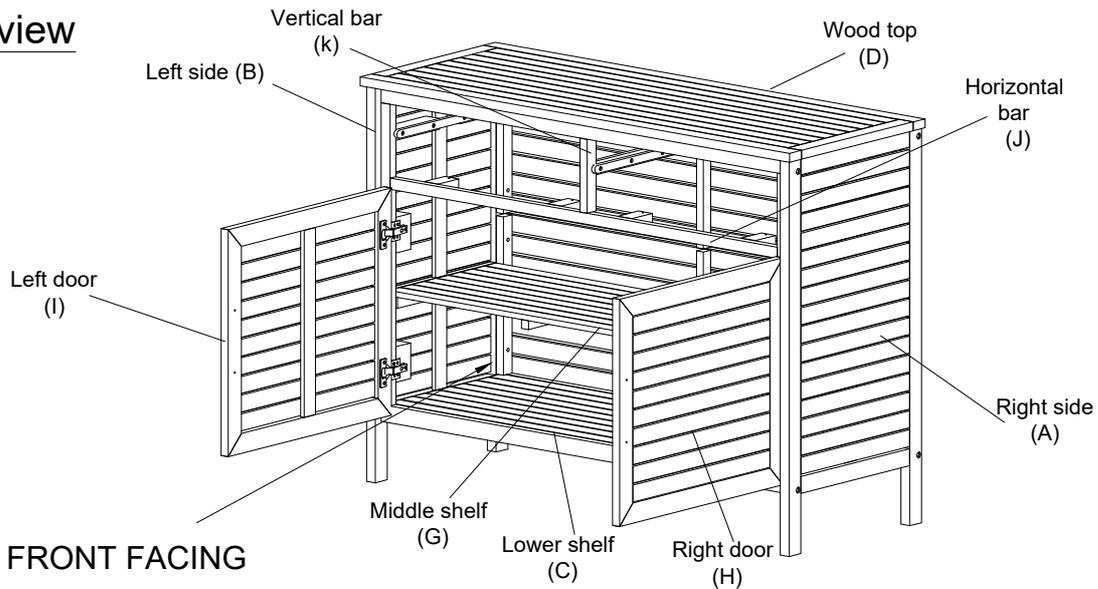


This cabinet has multiple parts and may require up to some 1 hours to assemble. To give you an overview of the cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

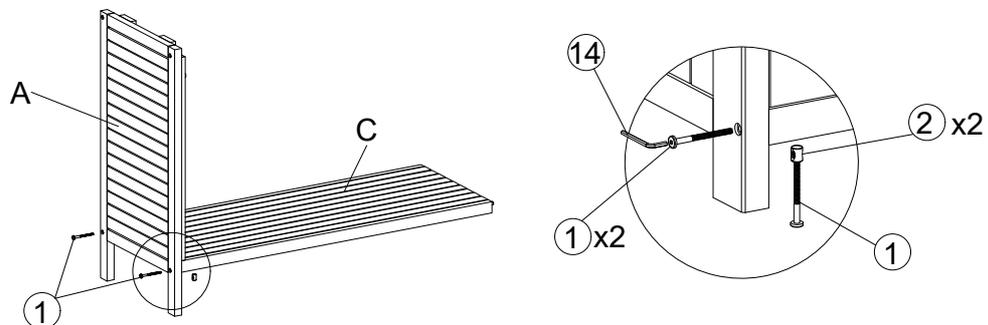


1/ Attach the Right Side (A) to the Lower Shelf (C) using 2 Bolts (M6x80mm) and 2 Barrel Nuts (M6x15mm) with the Allen Wrench (M4).
DO NOT fully tighten the Bolts at this time.

Step 2

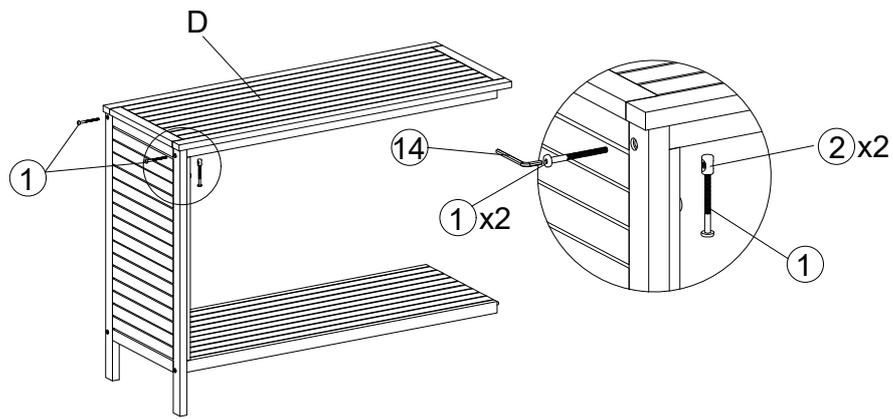


2/ Continue attaching it to the Wood Top (D) using 2 Bolts (M6x80mm) and 2 Barrel Nuts (M6x15mm) with the Allen Wrench (M4).
DO NOT fully tighten the Bolts at this time.

Step 3

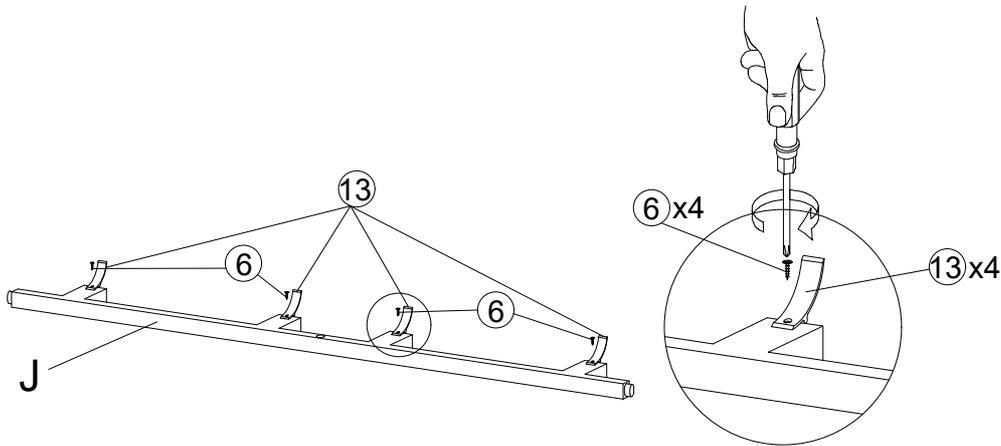


3/ Use a screwdriver to attach 4 Drawer Stoppers to the Horizontal Bar (J) with 4 Screws (M4x15mm). Tighten clockwise.

Step 4

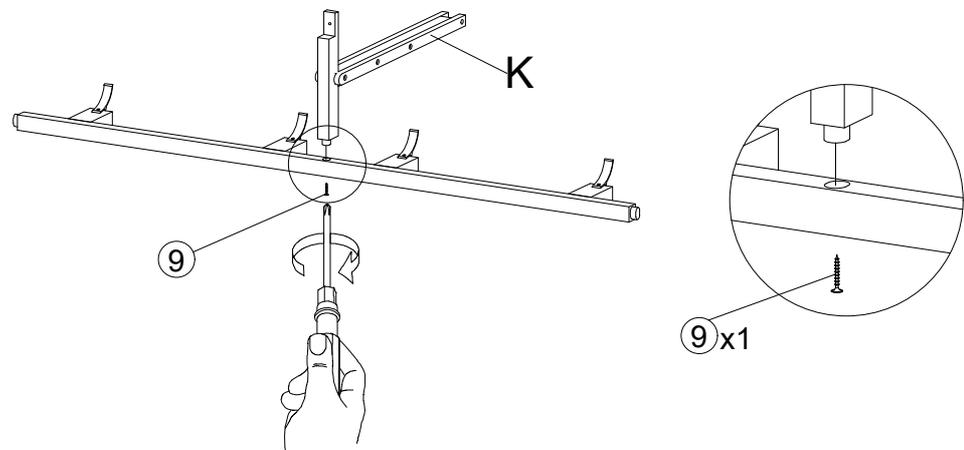


4/ Use a screwdriver to attach the Vertical Bar (K) to the Horizontal Bar (J) with 1 Screw (M4x30mm). Tighten clockwise.

Step 5

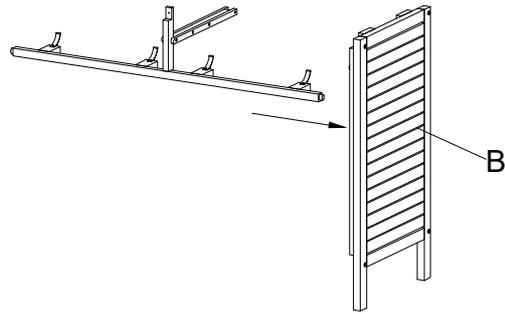


5/ Attach the fully assembled Horizontal Bar (J) to the Left Side (B).

Step 6

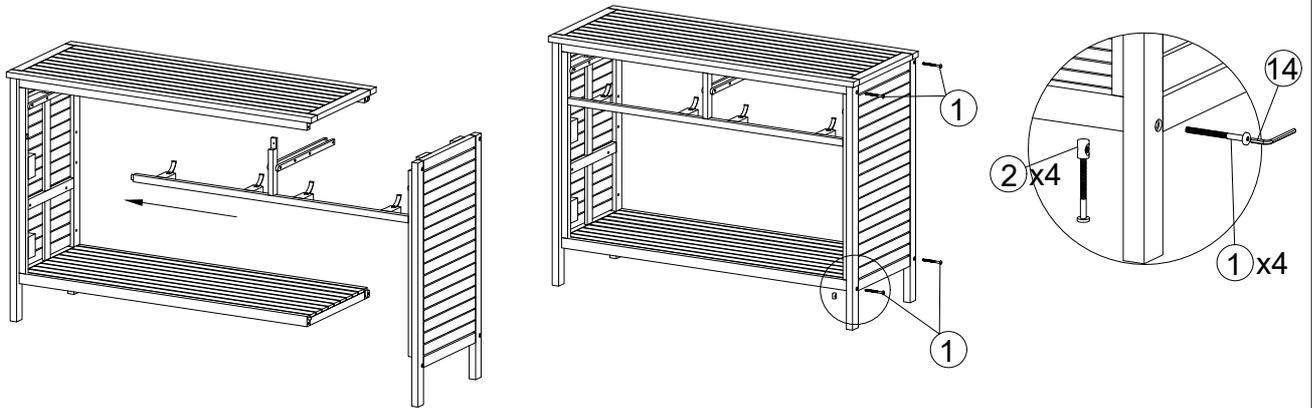


6/ Attach the Left Side (B) to the pre-assembled cabinet section using 4 Bolts (M6x80mm) and 2 Barrel Nuts (M6x15mm) with the Allen Wrench (M4).
DO NOT fully tighten the Bolts at this time.

Step 7

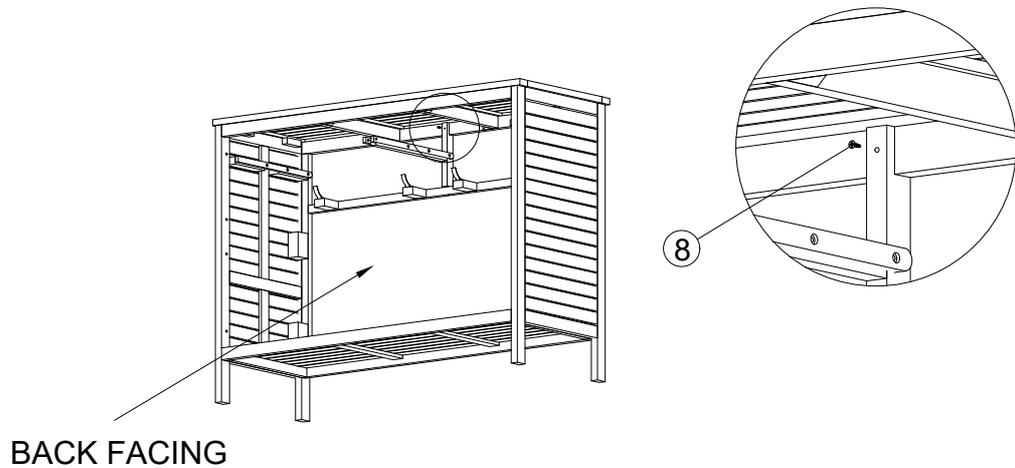


7/ Use a screwdriver to tighten 1 Screw (M4x20mm) on the back side of the cabinet.
DO NOT fully tighten the Bolts at this time.

Step 8

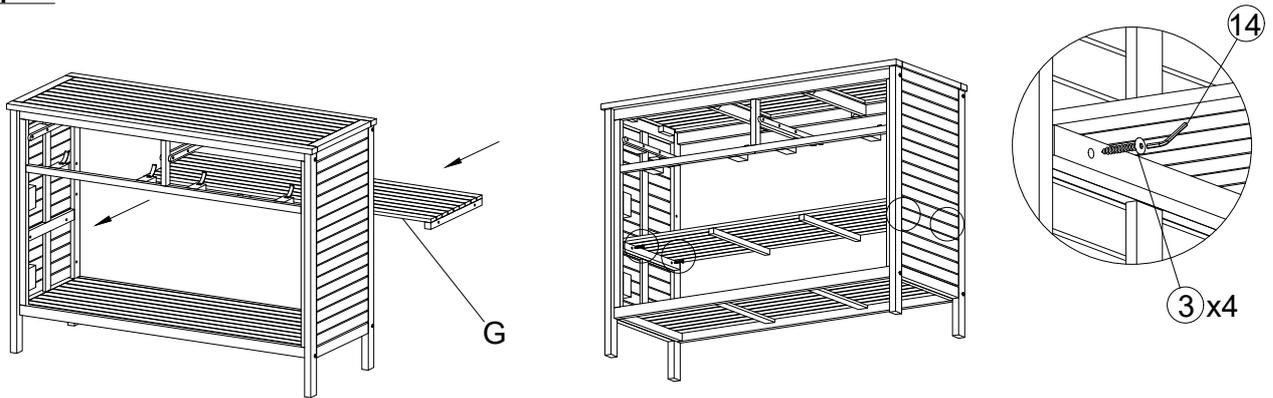


8/ Attach the Middle Shelf to the cabinet body and use the Allen Wrench (M4) to tighten 4 Screws (M6x35mm).
DO NOT fully tighten the Bolts at this time.

Step 9

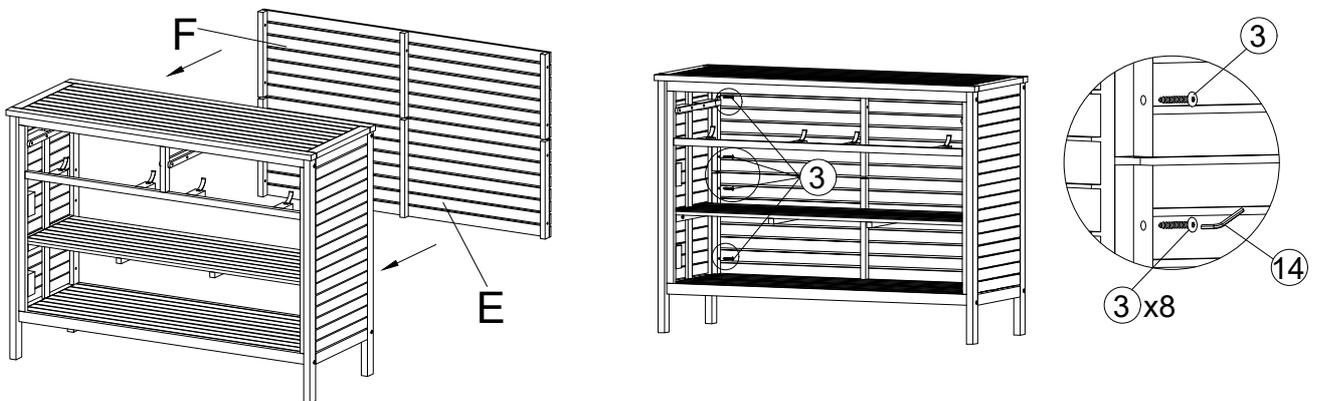


9/ Attach the Lower Back Side (E) and Upper Back Side (F) to the cabinet body and tighten 8 Screws (M6x35mm) using the Allen Wrench (M4).
DO NOT fully tighten the Bolts at this time.

Step 10

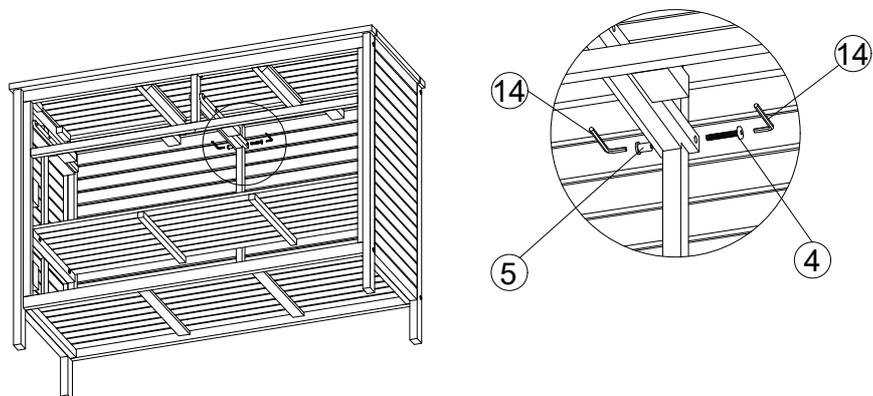


10/ Use the Allen Wrench (M4) to tighten 1 Bolt (M6x35mm) and 1 Sleeve Nut (M6x13mm) after attaching the Vertical Bar (K) to the Upper Back Side (F).
Fully tighten the Bolts/Vis at this time.

Step 11

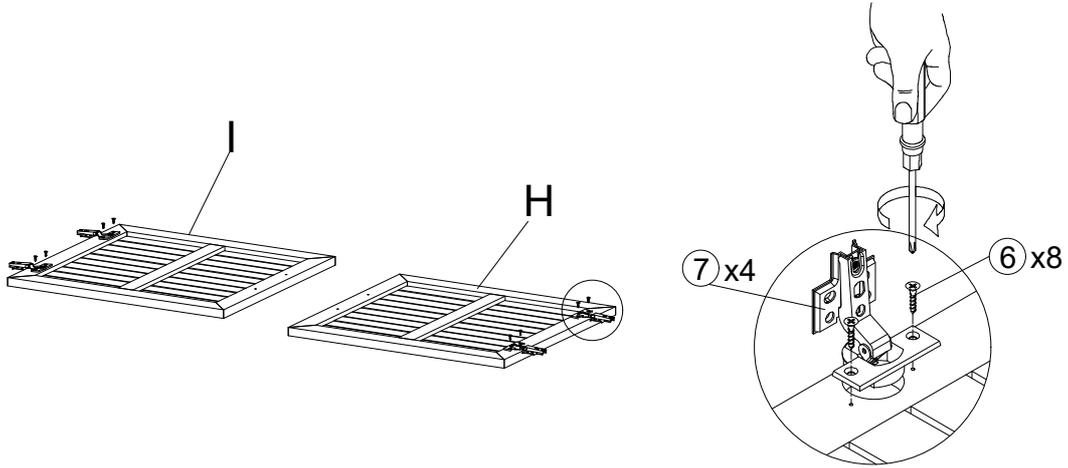


11/ Use a screwdriver to attach 4 Hinges to the Left Door (H) and Right Door (I) using 8 Screws (M4x15mm). Tighten clockwise.

Step 12

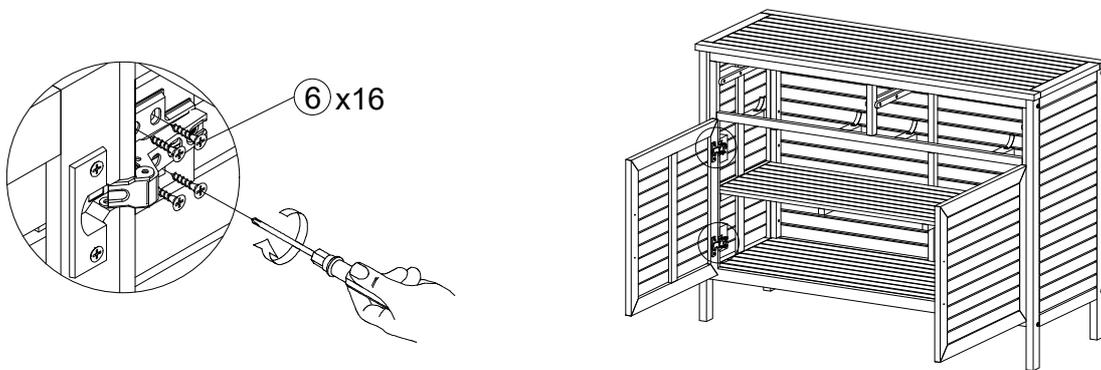


12/ Use a screwdriver to attach the Left Door (H) and Right Door (I) to the cabinet using 16 Screws (M4x15mm). Tighten clockwise.

Step 13

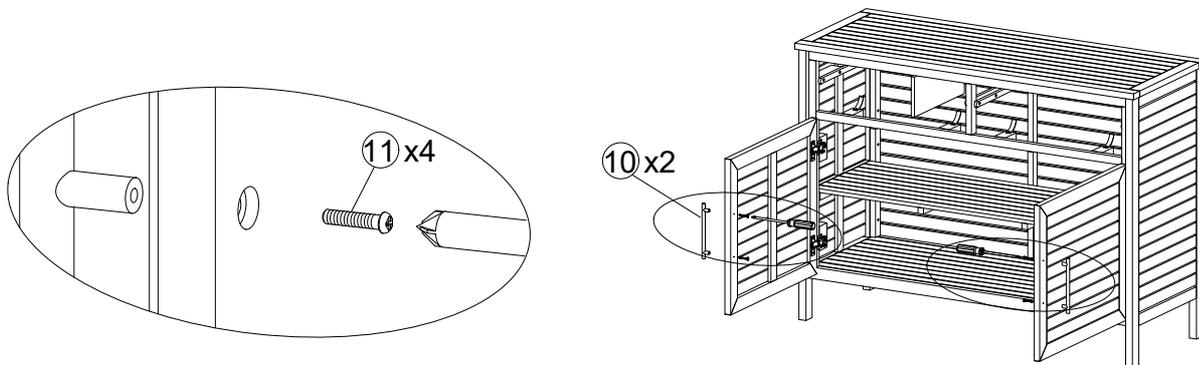


13/ Attach 2 Handles to the Left Door (H) and Right Door (I) and tighten them with 4 Bolts (M4x30mm) using a screwdriver.

Step 14

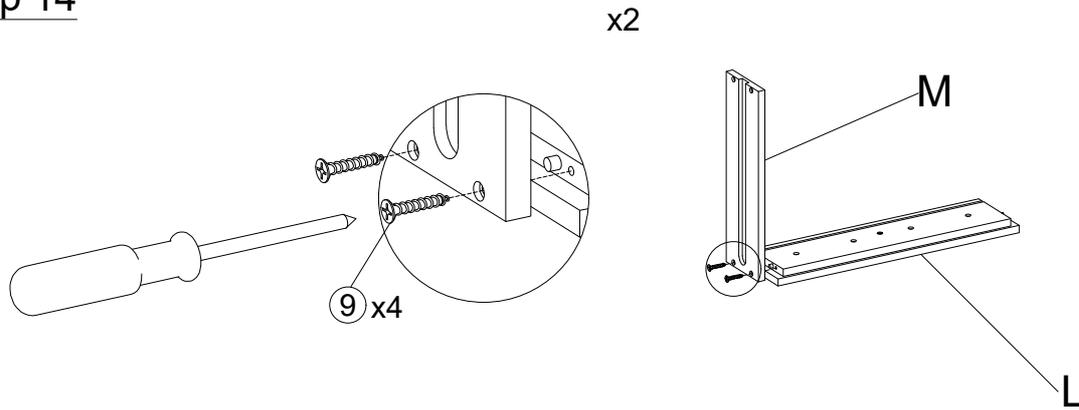


14/ Attach the Drawer Left Side Panel (M) to the Drawer Front (L) using 4 Screws (M4x30mm) and tighten with a screwdriver. Repeat for the remaining identical parts.

Step 15

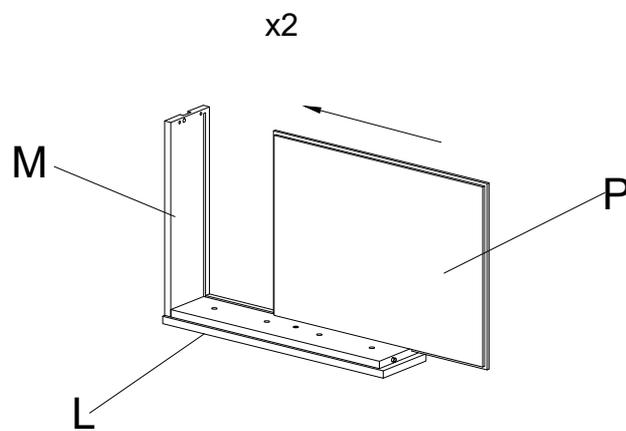


15/ Attach the Drawer Bottom (P) to the assembled drawer section. Repeat for the remaining identical parts.

Step 16

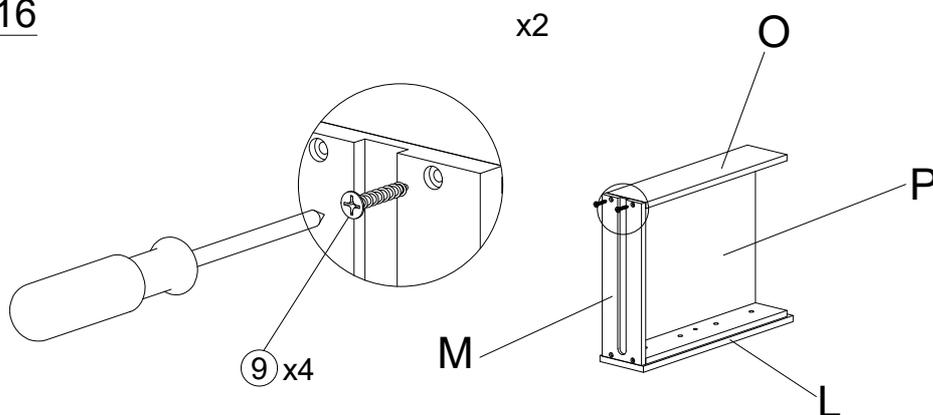


16/ Attach the Back Drawer Panel (O) to the assembled drawer section and tighten 4 Screws (M4x30mm) with a screwdriver. Repeat for the remaining identical parts.

Step 17

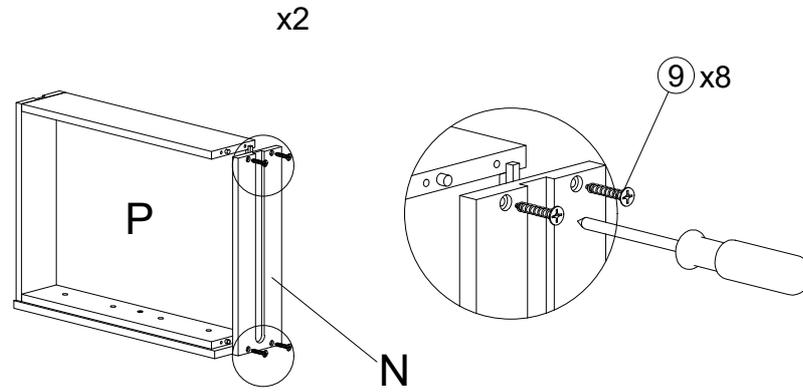


17/ Attach the Drawer Right Side Panel to the previous assembly and tighten 8 Screws (M4x30mm) with a screwdriver. Repeat for the remaining identical parts.

Step 18

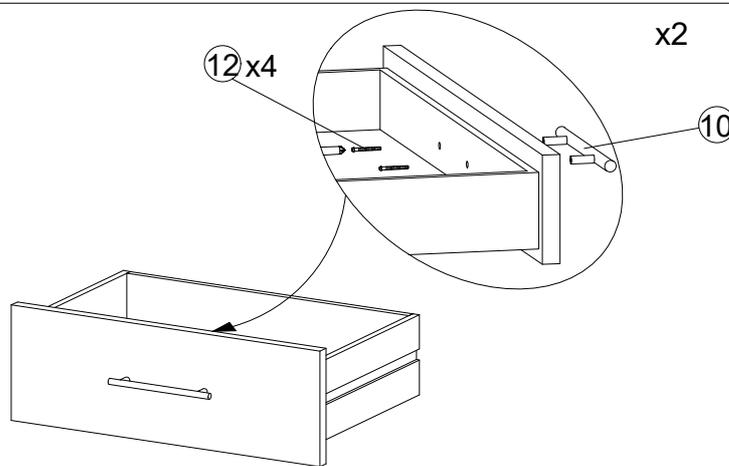

18/ Attach the Handle to the assembled drawer using 4 Bolts (M6x35mm). Repeat for the remaining identical parts.

Step 19

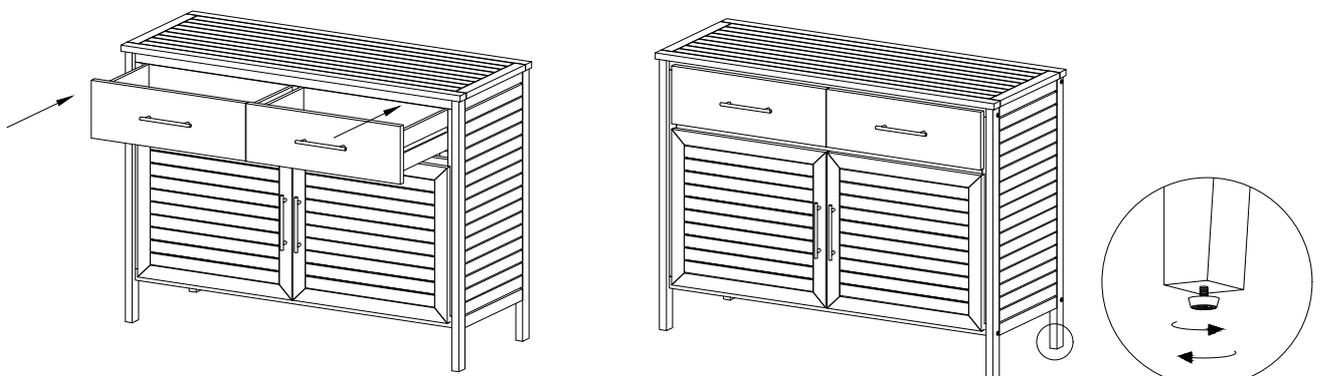

Adjust the leveler to balance the product.

19/ Insert the drawers into the cabinet.

Adjust the Hinges


Make sure that the furniture is level left to right and front to back before attempting to adjust the hinges.

Identify the Hinges - The hinges have adjustment screws that control movement in different directions.

Adjust as Needed - Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

1.Back and Forth Adjustment: To move the cabinet door closer to or farther from the cabinet frame

2.Left and Right Adjustment: To shift the cabinet door sideways for alignment.

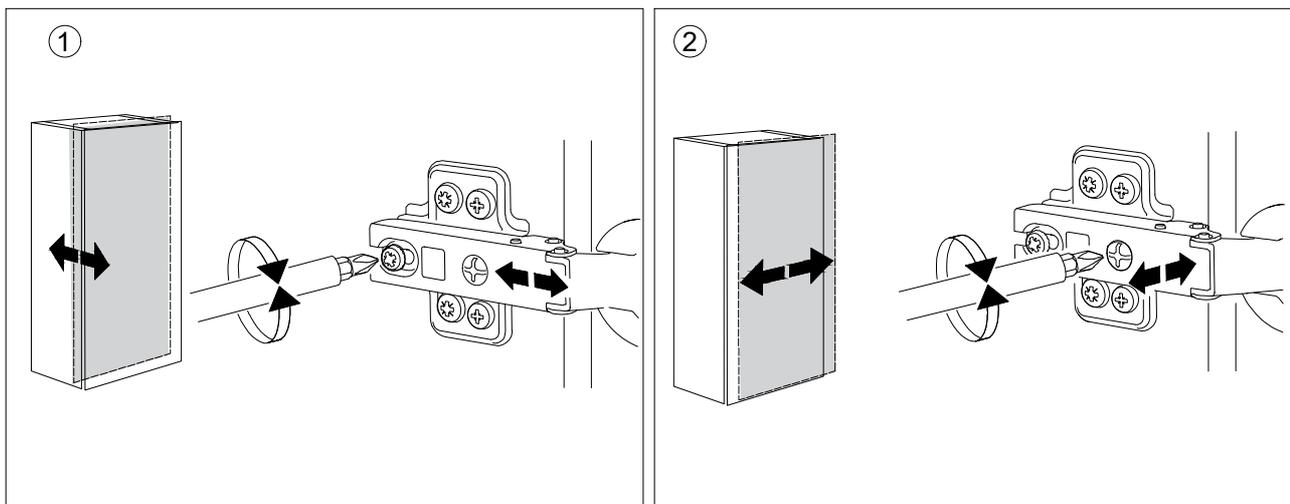

TIPS FOR ADJUSTMENT:

These “adjustments” are not preset and will need to be checked to meet the desired look

- We recommend the use of a #2 Phillips Screwdriver.
- Adjust in small steps and check your progress frequently.
- Use a measuring tape to ensure the gaps between the top and bottom of the door are even.
- Avoid forcing the door closed if it does not align properly, as this may damage the door
- If the alignment is still off, make further adjustments as needed.

By following these steps, you can achieve a balanced door alignment.

If you need further adjustments, repeat the process in small increments.

Important notes

While adjusting the hinges, firmly hold the door in place to prevent it from falling and getting damaged.


Repeatedly tightening and loosening the hinge screws can cause the screw holes to widen. To avoid this, minimize adjustments and avoid overtightening.

Cabinet Restraint Device Installation Instruction


! WARNING!!

Serious or fatal crushing injuries can occur from tipping furniture. To help prevent tip-over: ALWAYS secure this furniture to the wall using Nightstand Restraint Device.


See product instructions for more ways to help prevent furniture tip-overs

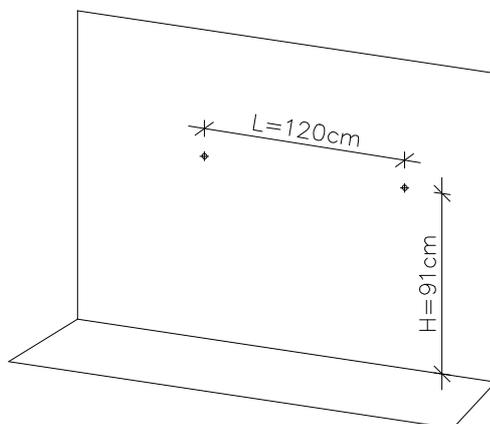


Determine the location where the screws should be inserted into the wall. Mark the points on the wall at the same height and length as shown above

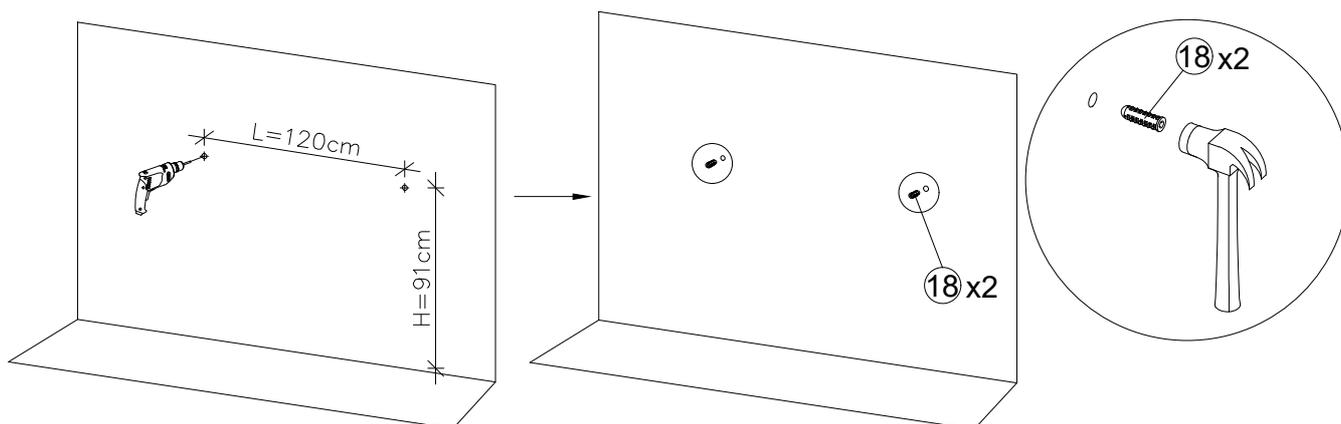

Affix the two Plastic Wall Plugs (17) to the wall. Using a power drill (not provided), drill two holes in the wall, then insert the Plastic Wall Plugs into the holes using a hammer (not provided), as shown above.

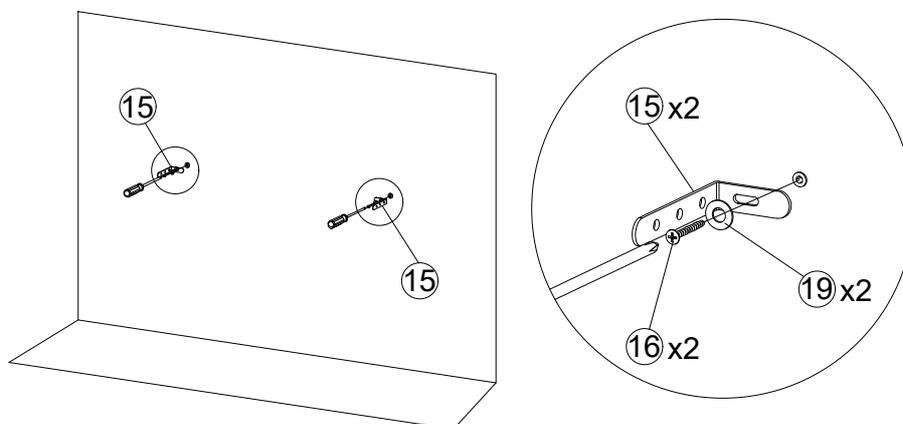

Affix the two L-Brackets (14) to the wall. Then, using a screwdriver (not provided), secure the two L-Brackets to the holes in the wall with two Screws (M4x40mm) (15) and two Washers (18), as shown above.

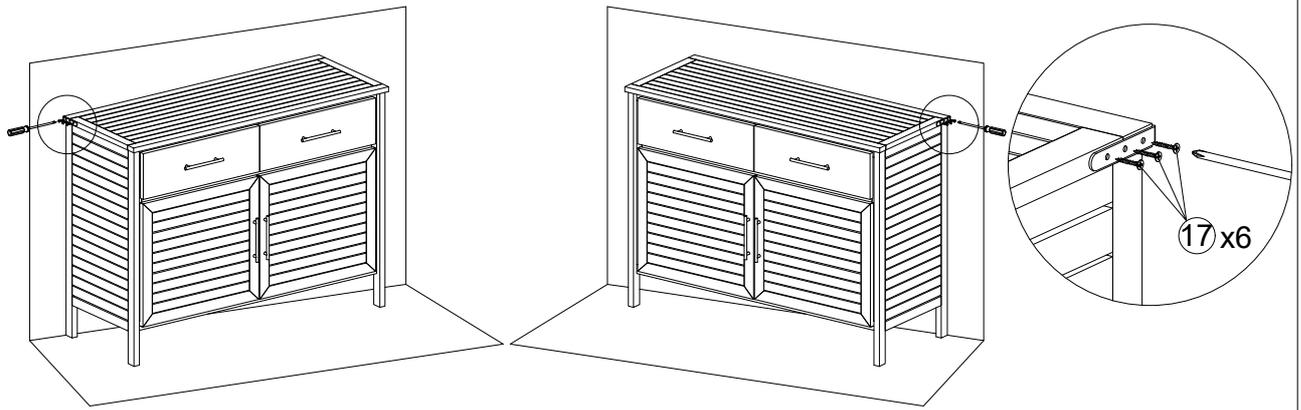

Use the screwdriver to tighten the 6 Screws (M4×20mm) (16) in the positions shown in the picture.

Questions & Answers about Proposition 65

- What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

- What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

- What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

- Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.