


ASSEMBLY INSTRUCTIONS
3-Piece Knox Nook Set
ITEM # 25513

3-pc Knox Nook Set:

(A) - Corner Bench

(B) - Table

(C) - Bench

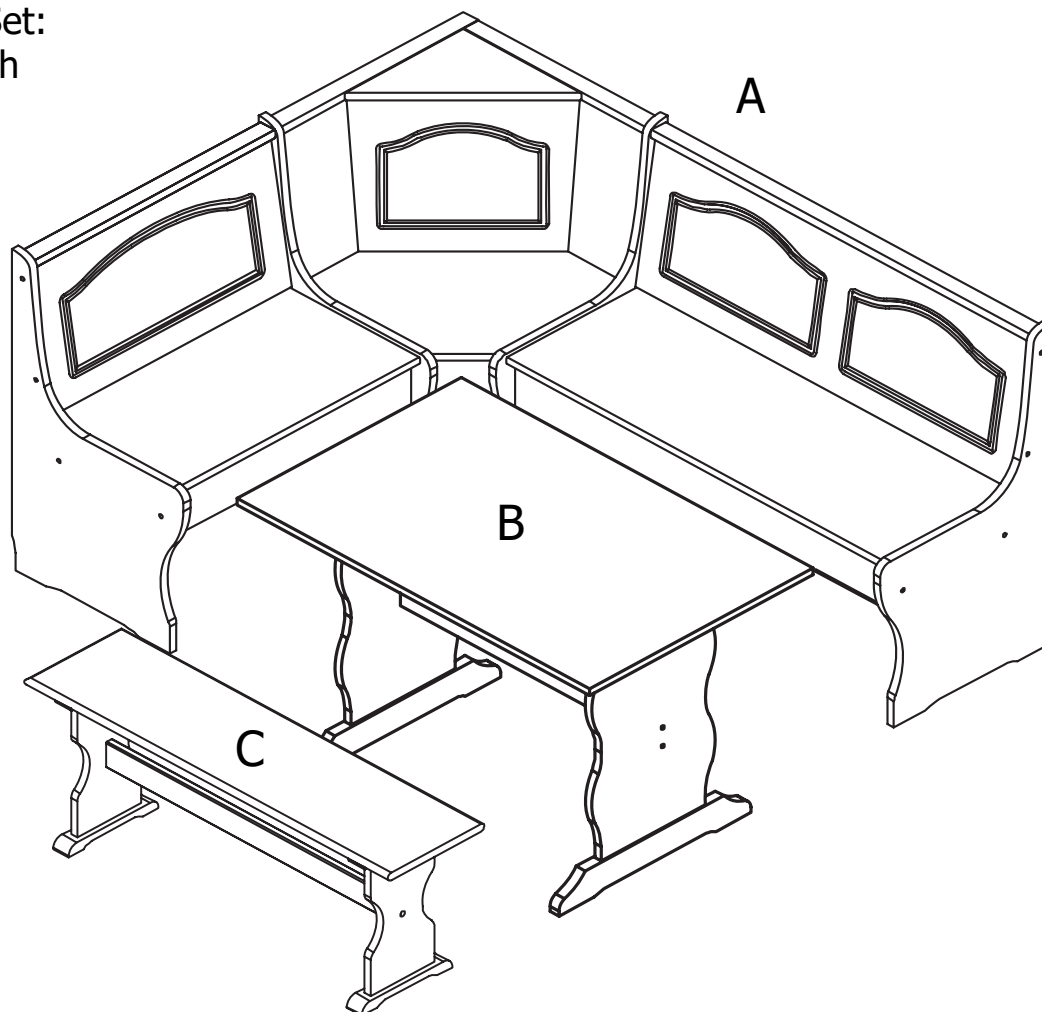

ASSEMBLY
REQUIREMENTS

2-Person
Assembly

3 Hours
Assembly Time
(Approximate)

Tools Required
(Not Provided)



Phillips Screwdriver



Flat Screwdriver



Mallet

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

Email: replacementparts@buylateral.com
Within 30 days from delivery date

We appreciate your business!

ASSEMBLY INSTRUCTIONS

3-Piece Knox Nook Set

ITEM # 25513

ASSEMBLY INTRODUCTION:

The assembly of the 3-Piece Knox Nook Set is divided into 3 Sections:

Section 1 - Bench Assembly (estimated assembly time: 30 minutes)

Section 2 - Table Assembly (estimated assembly time: 30 minutes)

Section 3 - Corner Bench Assembly (estimated assembly time: 2 hours).

This Nook Set looks complicated to assemble; in fact, it is fairly straight forward when you follow the assembly instructions. You will find it rewarding and fulfilling when you see the parts you assembled become each section of the Nook.

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are complete before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

ASSEMBLY TIPS:

1. Identify and group the parts and hardware for each Section of the Nook before assembly. Before each assembly step identify each part and hardware required for that assembly step.
2. Assemble the Bench first, followed by the Table - they are simpler and allow you to familiarize the assembly steps and processes for the Corner Bench. Allow ample room for assembly.
3. Before you assemble the Corner Bench, it is very important that you determine the location to place the Corner Bench. Assemble the Corner Bench where you want it to be sited - it is very cumbersome to move the Corner Bench once it is assembled.
4. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat, level surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

1. Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
2. Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
3. Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
4. Do not place hot items (e.g. hot drinks) directly onto the wood surface.
5. Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.


ASSEMBLY INSTRUCTIONS

3-Piece Knox Nook Set







Section 1 - Bench

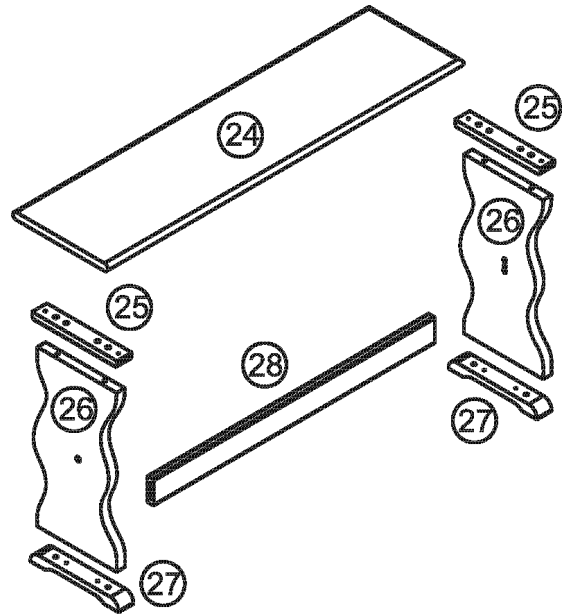PARTS LIST


Part#	Part Description	Quantity
24	Seat	1
25	Seat Top Support	2
26	Leg	2
27	Leg Base	2
28	Crossbar	1



HARDWARE LIST

D		SCREW 1"LONG (FULL SIZE) 5X25mm	4
E		SCREW 2"LONG (FULL SIZE) 5X50mm	8
F		WOOD HOLE COVER (FULL SIZE)	2
G		WOOD DOWEL 2"LONG (FULL SIZE) 10X50mm	12
H		SCREW 1-3/4"LONG (FULL SIZE) 6X45mm	2
I		BARREL NUT (CH46) (NOT TO SCALE)	2
J		ALLEN WRENCH (NOT TO SCALE)	1

Instructions for Installing Barrel Nut

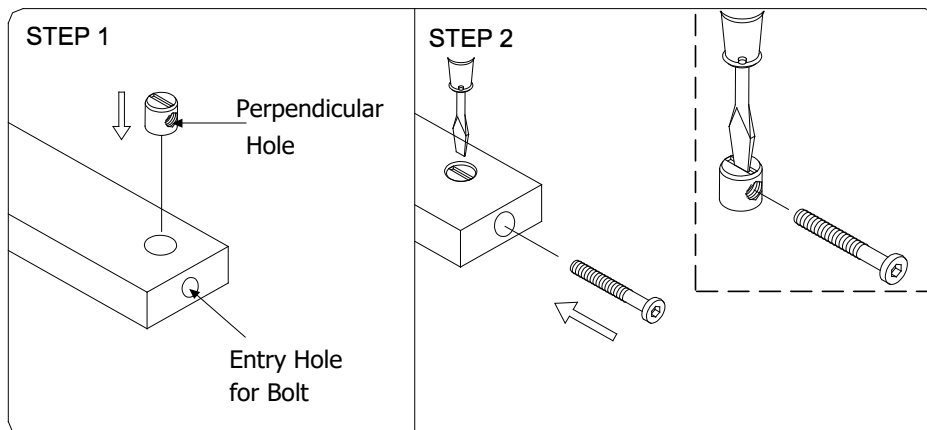

Insert Barrel Nut with the perpendicular hole facing and in-line with the drill hole that the bolt is to be inserted.

Use a Flat-head Screwdriver to hold Barrel Nut in position before inserting bolt to thread into the Barrel Nut.

ASSEMBLY INSTRUCTIONS

3-Piece Knox Nook Set

Section 1 - Bench

STEP 1

- Lay bench Legs (26) and Crossbar (28) flat down on a material that does not scratch the parts.
- Insert Wood Dowels (G) into the designated holes at each end of the parts as shown in Figure 1.

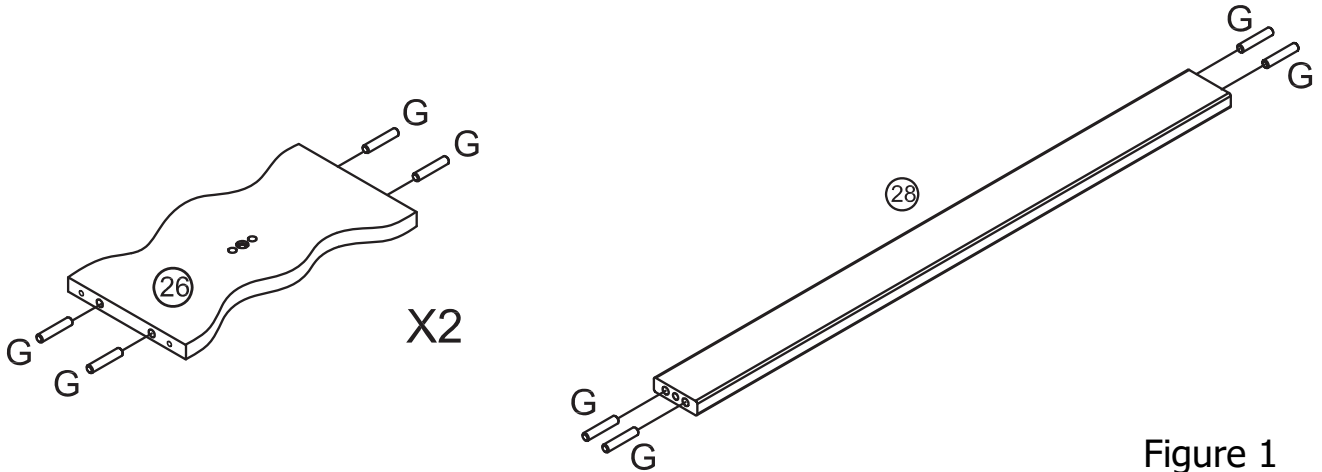


Figure 1

STEP 2

- Lay the parts on a material that does not scratch the parts.
- Attach Seat Top Support (25) and Leg Base (27) to Leg (26) completed in STEP 1 via wood dowels as shown in Figure 2.
Note: Wood Dowel is supposed to protrude out of Seat Top Support (25).
- Use Screw (E) to fasten (25) to (26) and (27) to (26).
- Use the above procedures to assemble the second Leg.

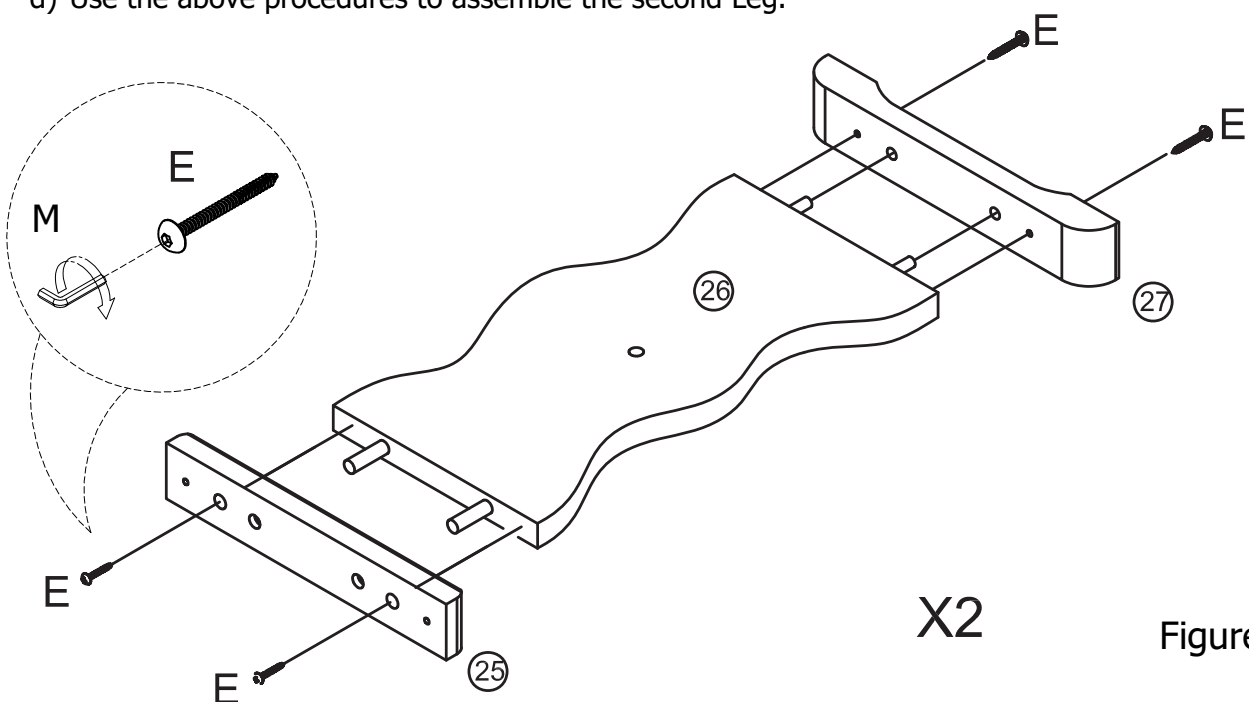


Figure 2

ASSEMBLY INSTRUCTIONS

3-Piece Knox Nook Set

Section 1 - Bench

STEP 3

- With assistance, attach Crossbar (28) to fit between the two Legs (26) - completed in STEP 2 - via wood dowels. Ensure that the legs mirror/match each other. Refer to Figure 3.
- Insert Barrel Nut (I) into the designated hole on (28). Refer to Page 3 for Instructions on Installing Barrel Nut.
- Insert Screw (H) through each Leg to screw into the Barrel Nut on Crossbar. Do not tighten (H) until both screws are screwed into the Barrel Nuts. Do not over-tighten the screws.
- Use Wood Hole Cover (F) to conceal screw hole on each leg.

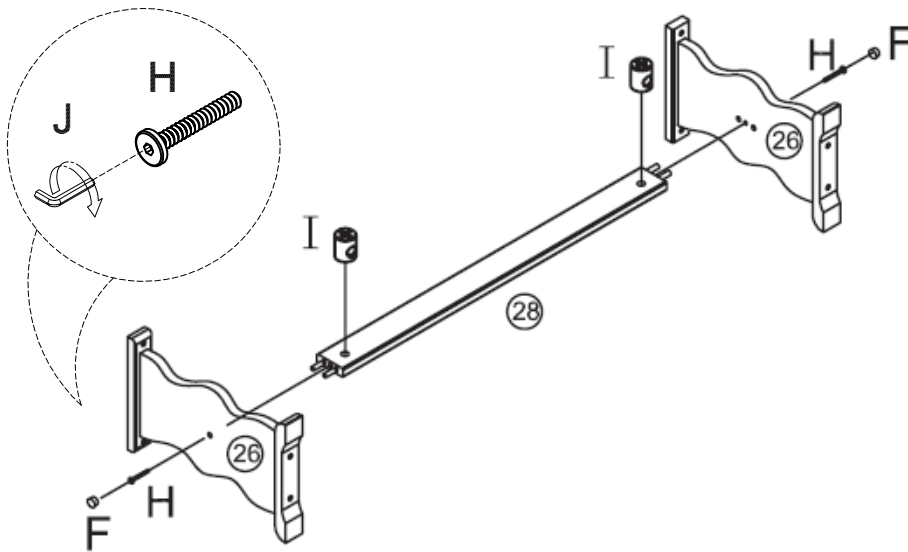


Figure 3

STEP 4

- Lay bench Seat (24) bottom-side up as shown on a material that does not scratch the part.
- Attach Seat Top Support (25) on the leg assembly completed in STEP 3 to bottom-side of (24) via wood dowels on (25) as shown in Figure 4.
- Use Screw (D) to fasten (25) to (24).
- Set the bench right Side up.

The assembly of the Bench is complete.

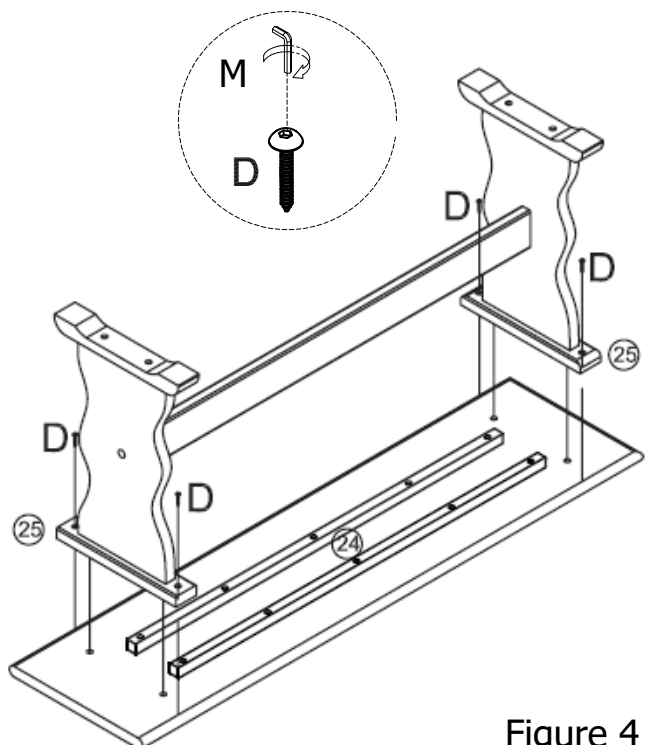


Figure 4


ASSEMBLY INSTRUCTIONS

3-Piece Knox Nook Set







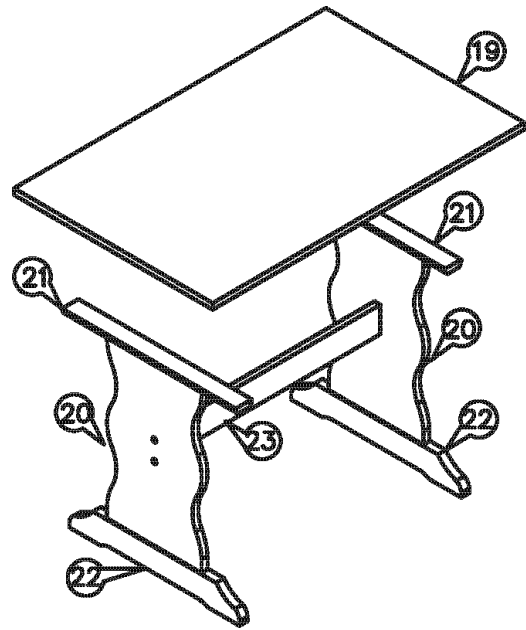

Section 2 - Table

PARTS LIST


Part#	Part Description	Quantity
19	Table Top	1
20	Leg	2
21	Table Top Support	2
22	Leg Base	2
23	Crossbar	1



HARDWARE LIST

D		SCREW 1"LONG (FULL SIZE) 5X25mm	8
E		SCREW 2"LONG (FULL SIZE) 5X50mm	4
F		WOOD HOLE COVER (FULL SIZE)	4
G		WOOD DOWEL 2"LONG (FULL SIZE) 10X50mm	10
H		SCREW 1-3/4"LONG (FULL SIZE) 6X45mm	4
I		NUT (NOT TO SCALE)	4
J		ALLEN WRENCH (NOT TO SCALE)	1
N		SCREW 2"LONG (FULL SIZE) 5X50mm	4

Instructions for Installing Barrel Nut

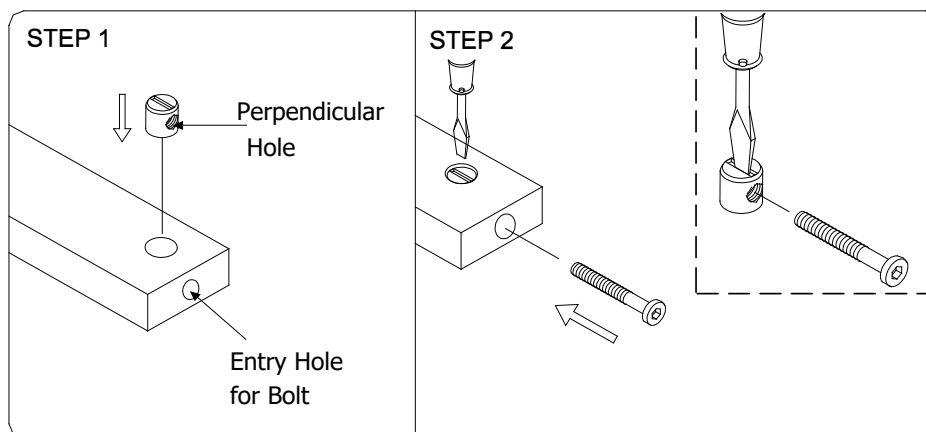

Insert Barrel Nut with the perpendicular hole facing and in-line with the drill hole that the bolt is to be inserted.

Use a Flat-head Screwdriver to hold Barrel Nut in position before inserting bolt to thread into the Barrel Nut.

ASSEMBLY INSTRUCTIONS
3-Piece Knox Nook Set
Section 2 - Table

STEP 1

- a) Lay table Legs (20) and Crossbar (23) flat down on a material that does not scratch the parts.
- b) Insert Wood Dowels (G) into the designated holes at each end of the parts as shown in Figure 1

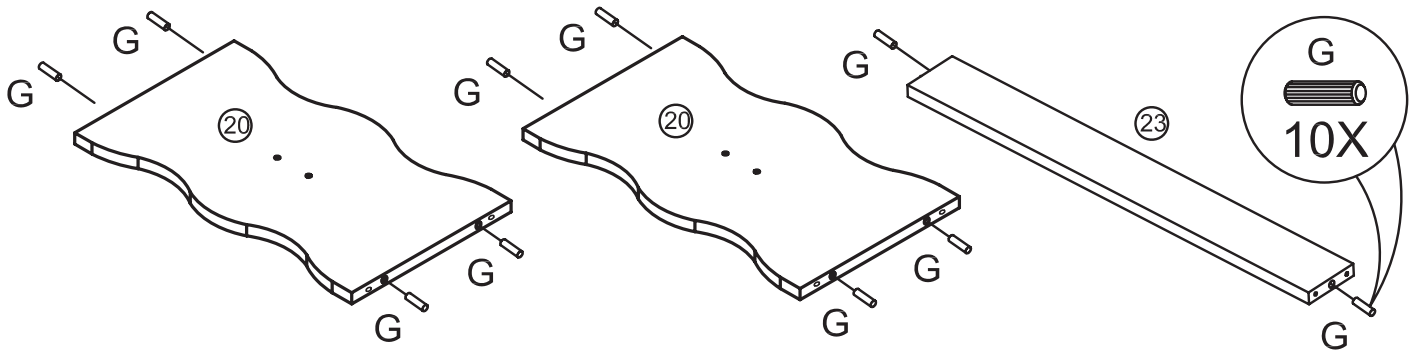


Figure 1

STEP 2

- a) Lay the parts on a material that does not scratch the parts.
- b) Attach Table Top Support (21) and Leg Base (22) to Leg (20) completed in STEP 1 via Wood Dowels as shown in Figure 2.
Note: Wood Dowel is supposed to protrude out of Table Top Support (21).
- c) Use Screw (E&N) to fasten (21) to (20) and (22) to (20).
- d) Use the above procedures to assemble the second Leg.

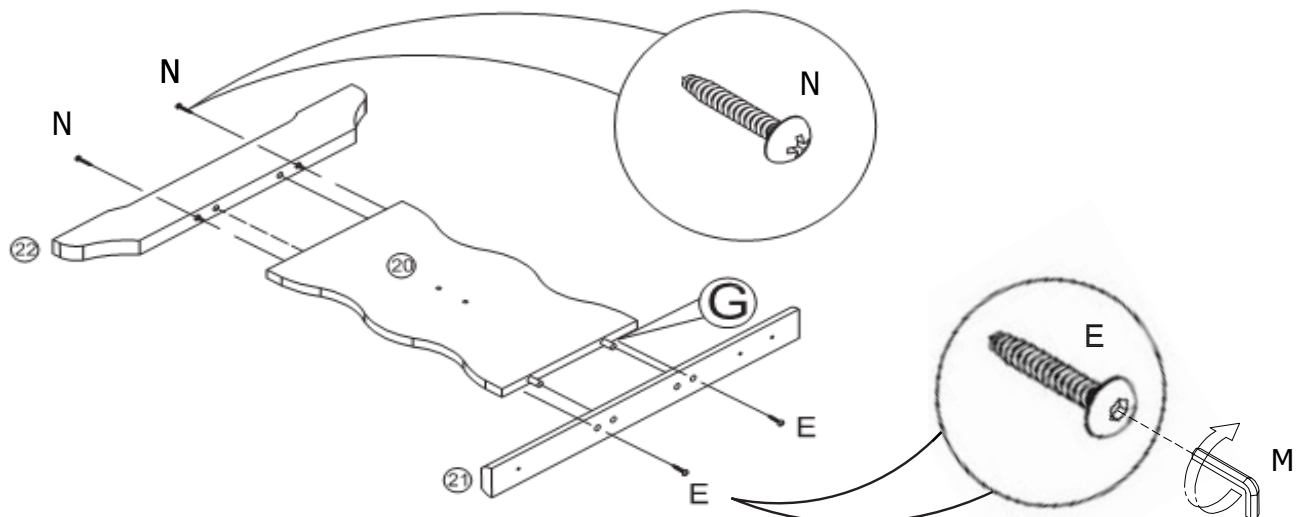


Figure 2

ASSEMBLY INSTRUCTIONS

3-Piece Knox Nook Set

Section 2 - Table

STEP 3

- With assistance, attach Crossbar (23) to fit between the two Legs (26) - completed in STEP 2 - via wood dowels. Ensure that the legs mirror/match each other. Refer to Figure 3.
- Insert Barrel Nut (I) into the designated hole on (23). Refer to Page 6 for Instructions on Installing Barrel Nut.
- Insert Screw (H) through the Leg to screw into the Barrel Nut on Crossbar. Do not tighten (H) until both screws are screwed into the Barrel Nuts. Do not over-tighten the screws.
- Use Wood Hole Cover (F) to conceal screw hole on each leg.

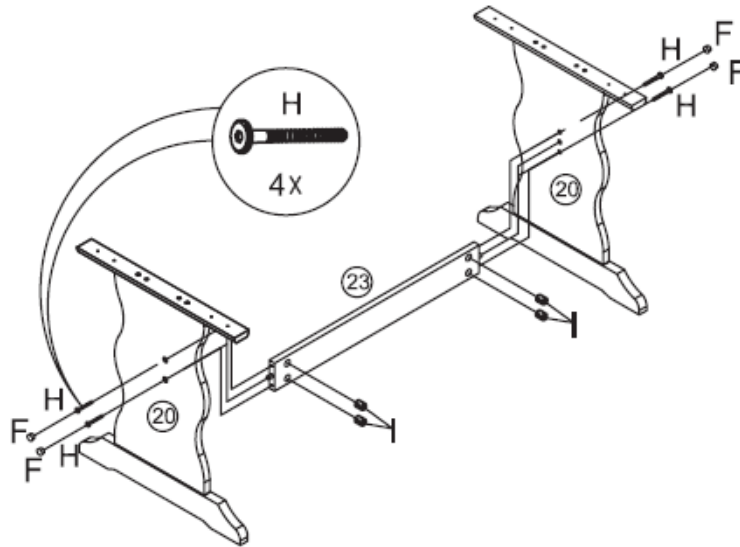


Figure 3

STEP 4

- Lay Table Top (19) bottom-side up as shown on a material that does not scratch the part.
- Attach Seat Top Support (21) on leg assembly completed in STEP 3 to bottom-side of (19) via wood dowels on (21) as shown in Figure 4. Note: wood dowels to be inserted into the two inner-most middle holes.
- Use Screw (D) to fasten (21) to (19).
- With assistance, set the table right-side up.

The assembly of the Table is complete.

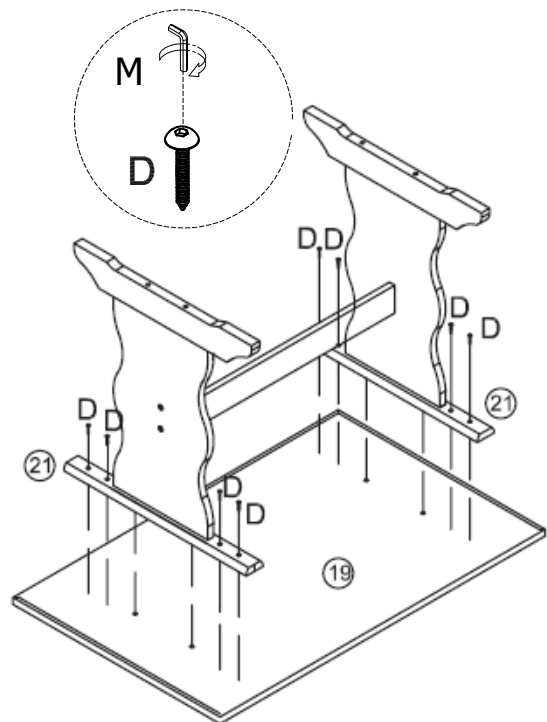


Figure 4

ASSEMBLY INSTRUCTIONS


3-Piece Knox Nook Set

Section 3 - Corner Bench

CORNER BENCH LAYOUT OPTIONS







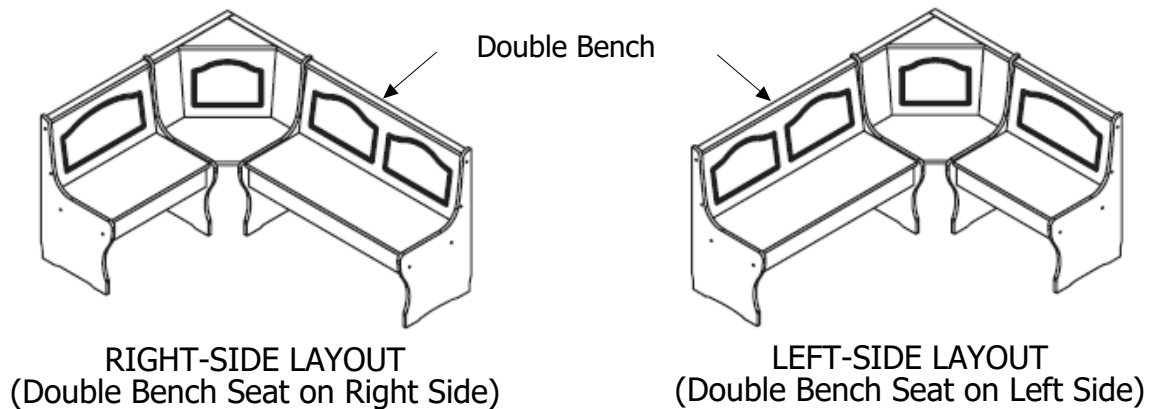


The Corner Bench section of the Nook set has two layout options: Right-side Layout or Left-Side Layout - which is defined by the side that the Double Bench Seat is installed. Refer to the illustration below. Before assembling the Corner Bench it is necessary to determine the layout that fits the space for the Corner Bench.

Reminder: Assemble the Corner Bench at the place where it is to be placed.



THIS ASSEMBLY INSTRUCTION IS FOR RIGHT-SIDE LAYOUT. REFER TO PARTS LIST SECTION FOR SUBSTITUTION BETWEEN LEFT AND RIGHT LAYOUT.

HARDWARE LIST

A		WOOD DOWEL 1-3/16" LONG (FULL SIZE) 8X30mm	36
B		SCREW 1-3/8" LONG (FULL SIZE) 5X35mm	4
C		PLASTIC PIN (FULL SIZE)	4
D		SCREW 1" LONG (FULL SIZE) 5X25mm	57
E		SCREW 2" LONG (FULL SIZE) 5X50mm	16
F		WOOD HOLE COVER (FULL SIZE)	8
K		WOOD SCREW (FULL SIZE) 3.5X15mm	8
L		METAL BRACKET (NOT TO SCALE)	4
M		ALLEN WRENCH (NOT TO SCALE)	1

ASSEMBLY INSTRUCTIONS


3-Piece Knox Nook Set

Section 3 - Corner Bench

PARTS LIST

Part#	Part Description	Quantity	Part#	Part Description	Quantity
1	Middle Legs (Right & Left)	2	11	Double Bench Storage Bottom	1
2	Single Bench Front & Back Rail	2	12	Double Bench Backrest	1
3	Center Back Panel	1	13	Double Bench Seat Cover	1
4	Single Bench Storage Bottom	1	14	Corner Shelf	1
5	Single Bench Backrest	1	15	Double Bench Backrest - Top Rail	1
6	Left Outside Leg	1	16	Single Bench Backrest - Top Rail	1
7	Single Bench Seat Cover	1	17	Corner Right Back Panel	1
8	Right Outside Leg	1	18	Corner Left Back Panel	1
9	Double Bench Front & Back Rail	2	29	Rail	6
10	Corner Top Panel	1	30	Stretchers	5
			31	Corner Top Panel Support	1

PARTS ASSEMBLY OVERVIEW

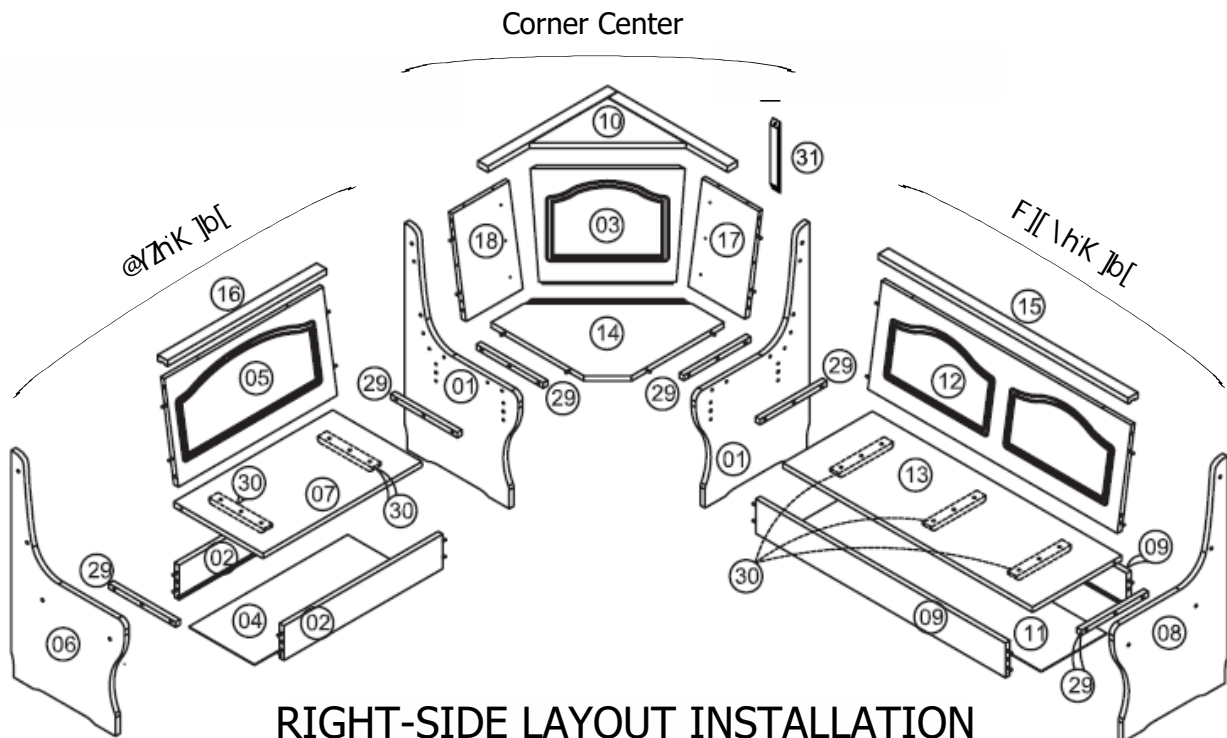

For Left-Side Layout Assembly:

(a) Assemble Parts 9, 11, 12, 13, 15 & 30 (3pcs) on the left wing of the Corner Bench

(b) Assemble Parts 2, 4, 5, 7, 16 & 30 (2pcs) on the right wing of the Corner Bench

Note: Parts 6 & 8 and the parts in the Corner Center remain unchanged.


ASSEMBLY INSTRUCTIONS

3-Piece Knox Nook Set

Section 3 - Corner Bench

STEP 1

- a) ~~UmU`cZH`Y`dufrg`as g`vck b`ZUhXck b`cb`
U`a UHfJ`U`h`UhXcYg`bchg`MUH`cf`
XUa U[`Y`h`Y`dufrg`~~
- b) Insert Wood Dowel (A) into the designated holes on Parts (9, 2, 5, 12, 17, 18 & 14) as shown.

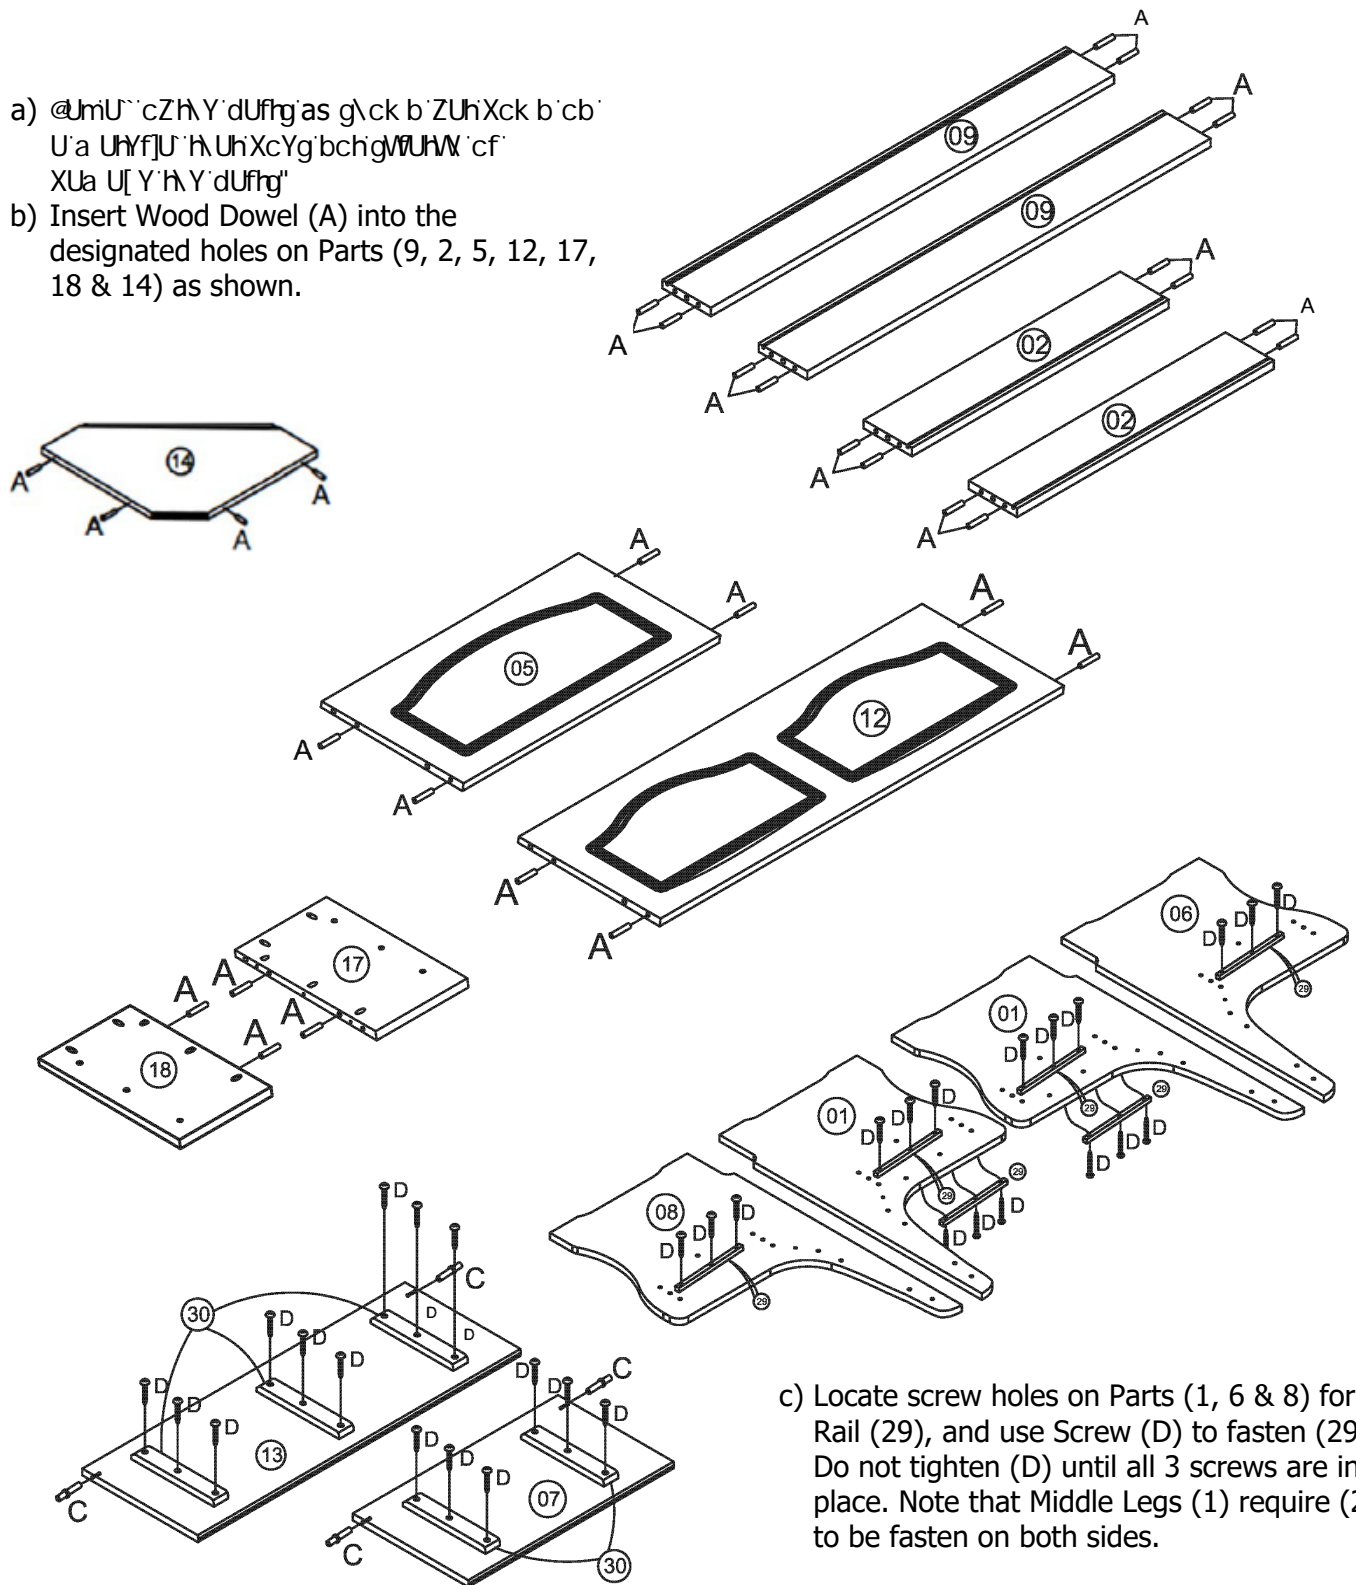

- c) Locate screw holes on Parts (1, 6 & 8) for Rail (29), and use Screw (D) to fasten (29). Do not tighten (D) until all 3 screws are in place. Note that Middle Legs (1) require (29) to be fasten on both sides.

- d) Locate screw holes on Parts (7 & 13) for Stretcher (30), and use Screw (D) to fasten (30). Do not tighten (D) until all 3 screws are in place.
- e) Insert Plastic Pin (C) into the designated hole on (7 & 13) as shown.

ASSEMBLY INSTRUCTIONS

3-Piece Knox Nook Set

Section 3 - Corner Bench

STEP 2 - ASSEMBLE SINGLE BENCH (LEFT WING)

- Refer to Figure 2.1 - Position a Middle Leg (1) as shown and attach Front & Back Rail (2) for Single Bench to (1) via wood dowels on (2). Check that the groove on each rail is at the bottom and facing inward towards each other.
- Use Screw (E) to fasten (2) to (1).
- Insert a Wood Dowel (A) into (1) & (6) as shown.

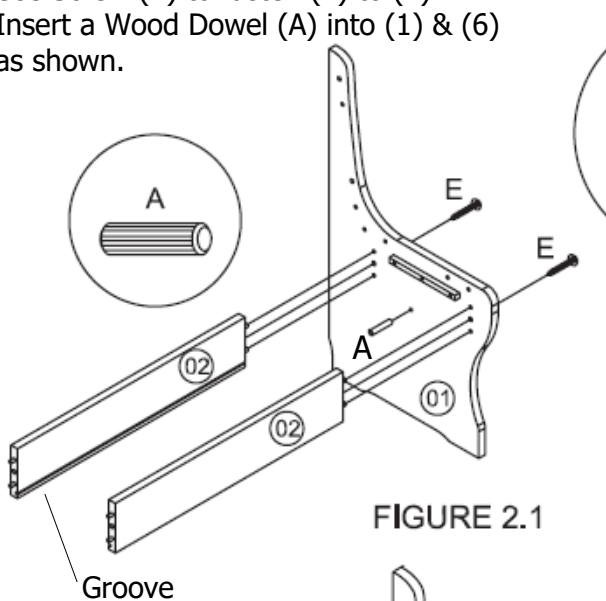


FIGURE 2.1

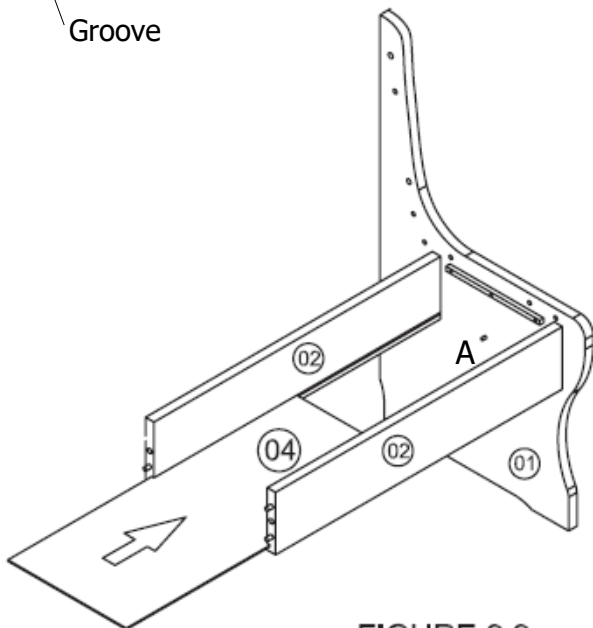


FIGURE 2.2

- Fit Storage Bottom (4) via groove on Front and Back Rail (2) as shown in Figure 2.2, and check that (4) sits on Wood Dowel (A) on (1)

- Refer to Figure 2.3 - Attach Single Bench Backrest (5) to a Middle Leg (1) via wood dowels on (5).
- Use Screw (E) to fasten (5) to (1).
- With assistance, place the assembly on its side as shown in Figure 2.4.

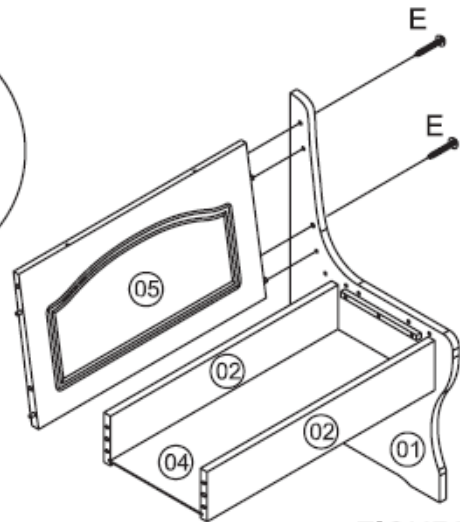


FIGURE 2.3

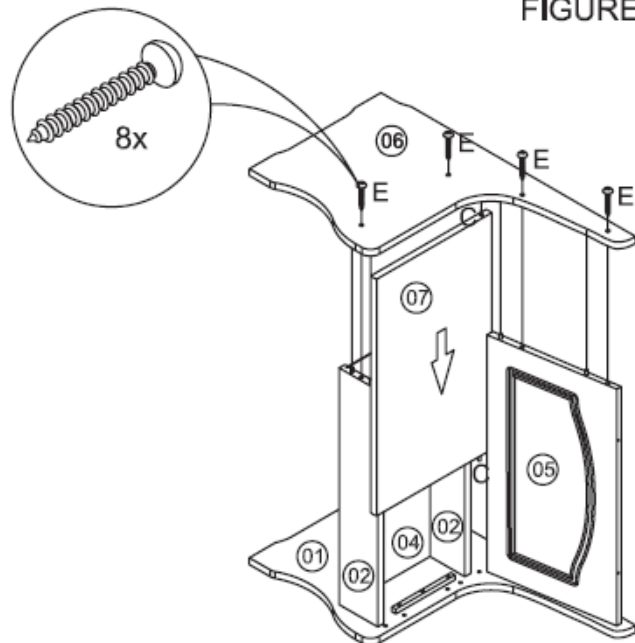


FIGURE 2.4

- Refer to Figure 2.4 - Fit Single Bench Seat Cover (7) between (5 & 2) and insert Plastic Pin (C) on (7) into designated hole on (1). Attach
- Left Outside Leg (6) to (2, 5, 7 & 4). via wood dowels on (2 & 5). Check that Pin (C) on (7) fits into the designated hole on (6), and (4) sits on wood dowel on (6).
- Use Screw (E) to fasten (6) to (2 & 5).
- Set the bench right-side up.

The assembly of the Single Bench is complete.





ASSEMBLY INSTRUCTIONS

3-Piece Knox Nook Set

Section 3 - Conner Bench

STEP 3 - ASSEMBLE DOUBLE BENCH (RIGHT WING)

- Refer to Figure 3.1 - Attach Front & Back Rail (9) for Double Bench to remaining Middle Leg (1) via wood dowels on (9). Check that the groove on each rail is at the bottom and facing inward towards each other.
- Use Screw (E) to fasten (9) to (1).
- Insert a Wood Dowel (A) into (1) & (8) as shown.
- Fit Storage Bottom (11) via groove on Front and Back Rail (9) as shown in Figure 3.2, and check that (11) sits on Wood Dowel (A) on (1)

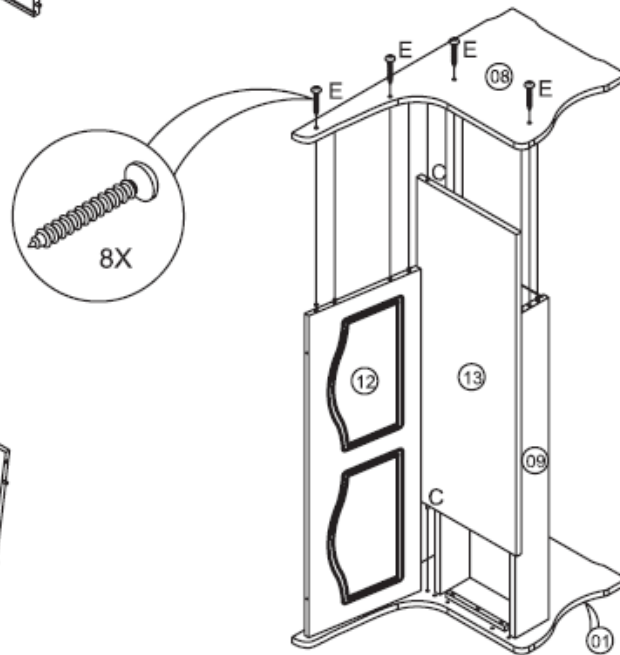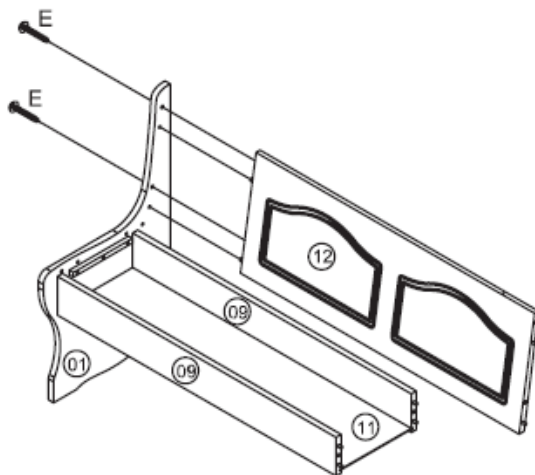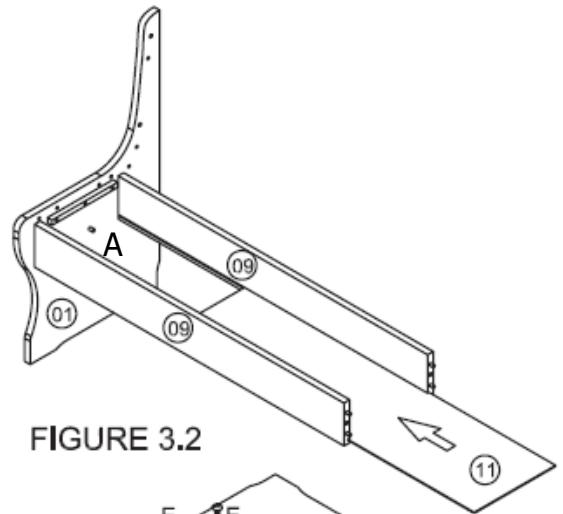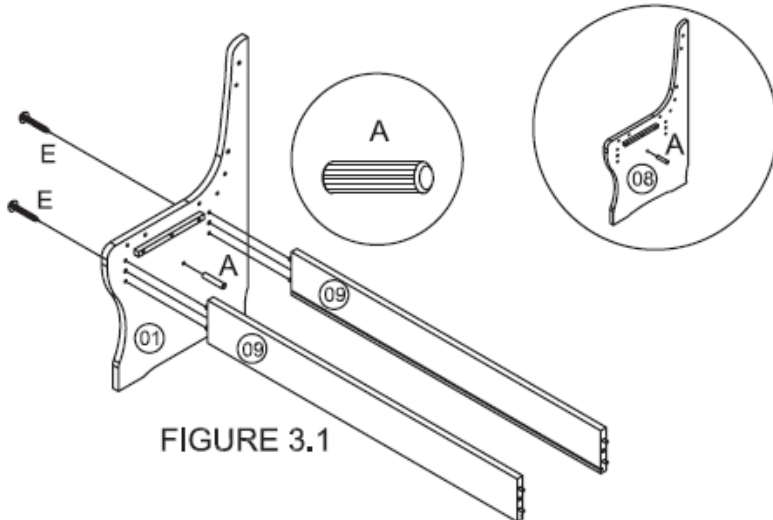

- Refer to Figure 3.3 - Attach Double Bench Backrest (12) to Middle Leg (1) via wood dowels on (12).
- Use Screw (E) to fasten (12) to (1). With assistance position the assembly vertically to sit (1) as shown in Figure 3.4.
- Fit Double Bench Seat Cover (13) between (9 & 12) and insert Plastic Pin (C) on (13) into designated hole on (1).
- Attach Right Outside Leg (8) to (9, 11, 12, & 13) via wood dowels on (9 & 12). Check that Pin (C) on (13) fits into the designated hole on (8), and (11) sits on wood dowel on (8).
- Use Screw (E) to fasten (8) to (12 & 9).
- Set the bench right-side up.

The assembly of the Double Bench is complete.

ASSEMBLY INSTRUCTIONS
3-Piece Knox Nook Set
Section 3 - Corner Bench

STEP 4

- a) Attach Center Shelf (14) to Middle Leg (1) of Single and Double Bench via wood dowels on (14).
- b) Use Screw (B) to fasten (14) as shown.
- c) Cover screw holes on Left & Right Outside Legs (6 & 8) with Wood Hole Cover (F).

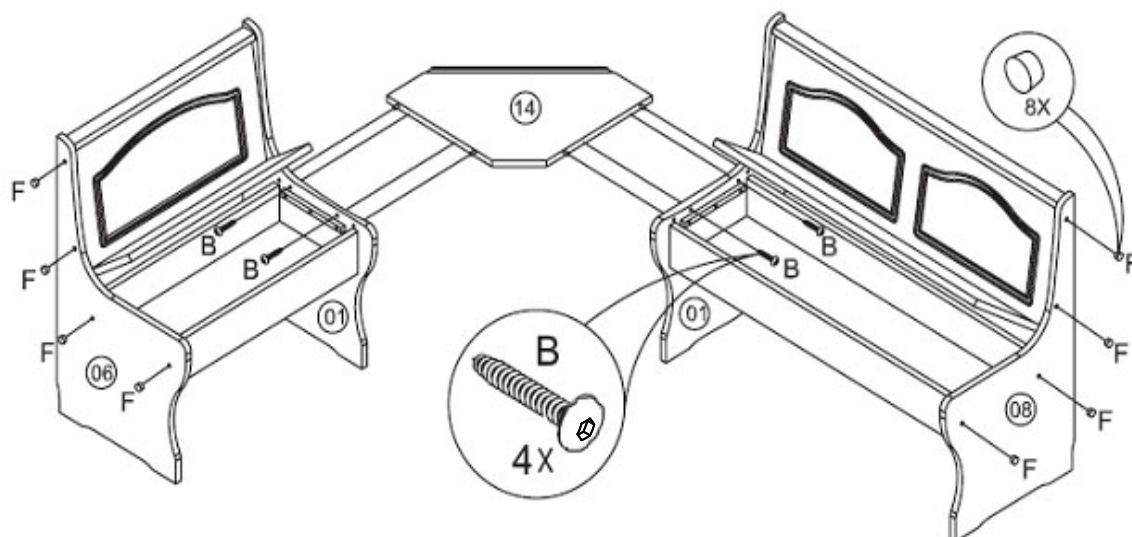


FIGURE 4

STEP 5

- a) Attach Corner Right & Left Back Panel (17 & 18) to the respective Middle Leg (1) via wood dowels on (17 & 18).
- b) Use Screw (D) to fasten (17 & 18) to Middle Legs (1).

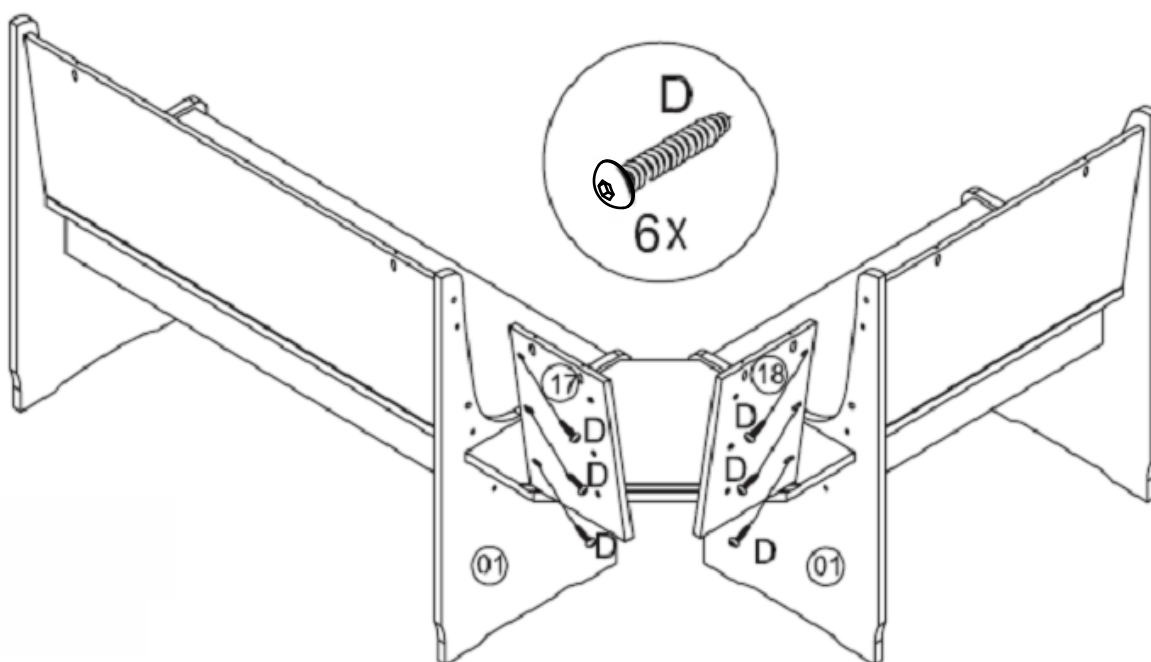


FIGURE 5

ASSEMBLY INSTRUCTIONS

3-Piece Knox Nook Set

Section 3 - Corner Bench

STEP 6

- a) Refer to Figure 6 - Fit Center Back Panel (3) between Corner Right & Left Back Panel (17 & 18) to sit on (14), and use Screw (D) to fasten (3) to (17 & 18). Do not tighten the screws completely until all 6 screws are in place.
From the bottom side of Corner Shelf (14), use Screw (D) to fasten (17 & 18) to (14).

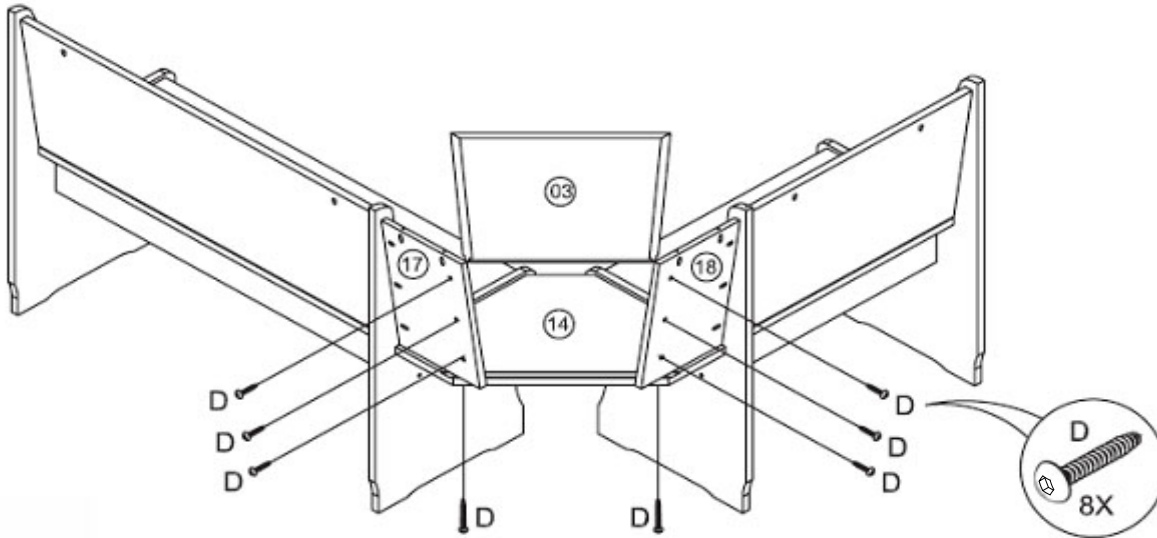


FIGURE 6

STEP 7

- a) Refer to Figure 7 - Fit Corner Top Panel (10) between Middle Legs (1) to sit on (17, 18 & 3), and use Screw (D) to fasten (10) to (17 & 18).
b) Fit Double Bench Backrest - Top Rail (15) between Middle and Right Legs (1 & 8) to sit on (12), and use Screw (D) to fasten (15) to (12).
c) Fit Single Bench Backrest - Top Rail (16) between Middle and Left Legs (1 & 6) to sit on (5) and use Screw (D) to fasten (16) to (5) .

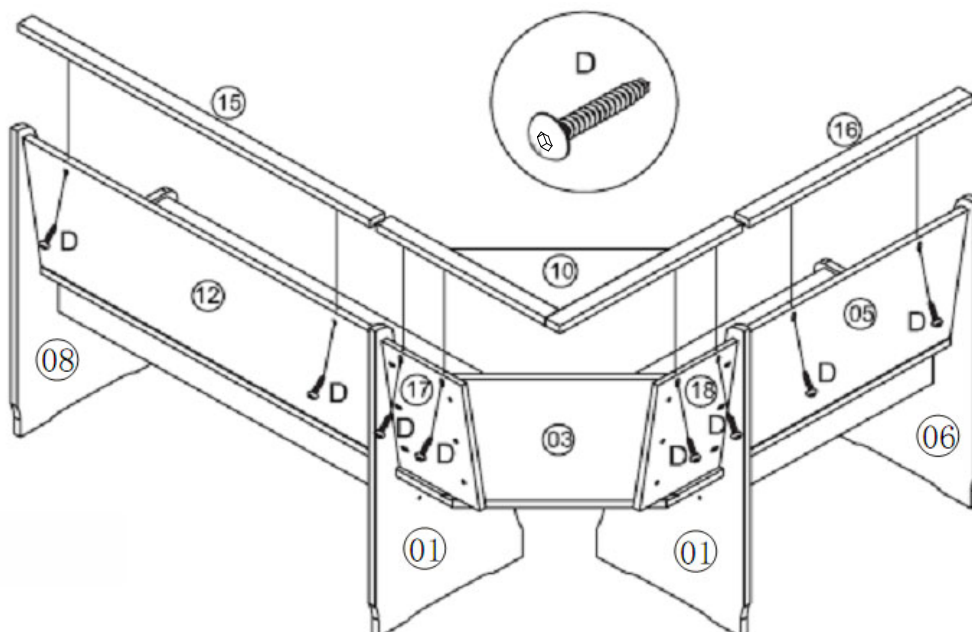


FIGURE 7

ASSEMBLY INSTRUCTIONS
3-Piece Knox Nook Set
Section 3 - Corner Bench

STEP 8

- a) Use Bracket (L) and Screw (K) to secure Corner Right & Left Back Panel (17 & 18) to Middle Legs (1).

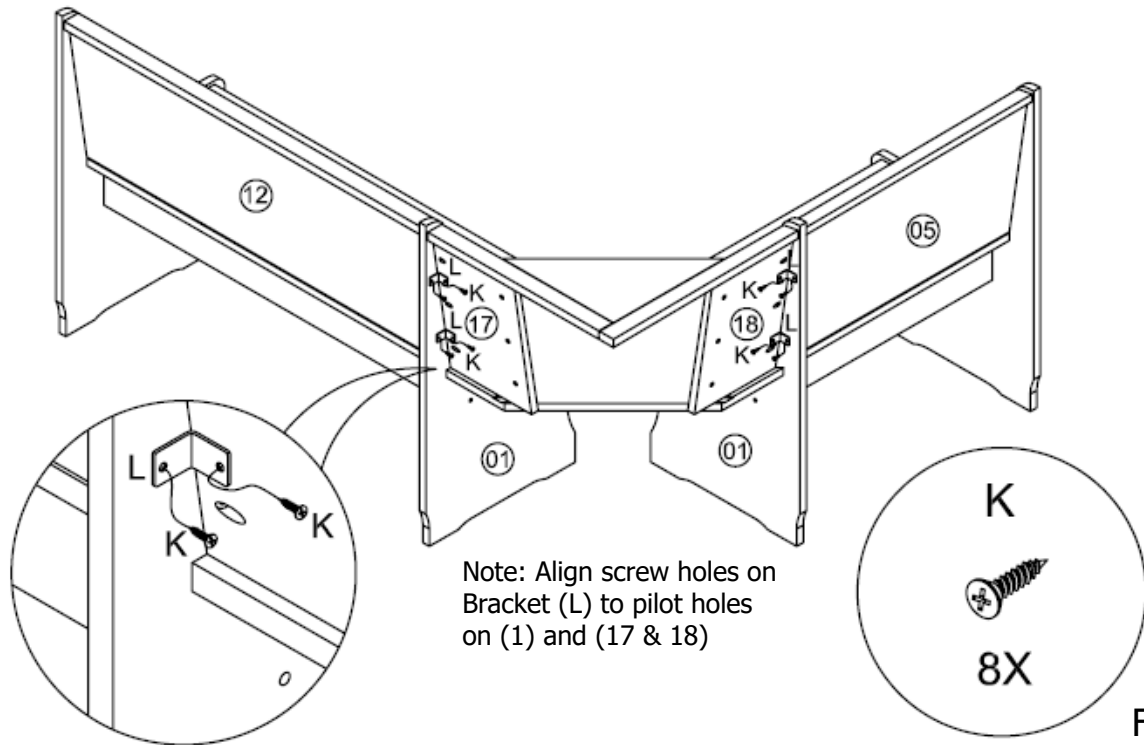


FIGURE 8

STEP 9

- Place Corner Top Panel Support (31) against Center Back Panel (3) and bottom side of Corner Top Panel (10) and use Screw (D) to fasten (31) to (3).


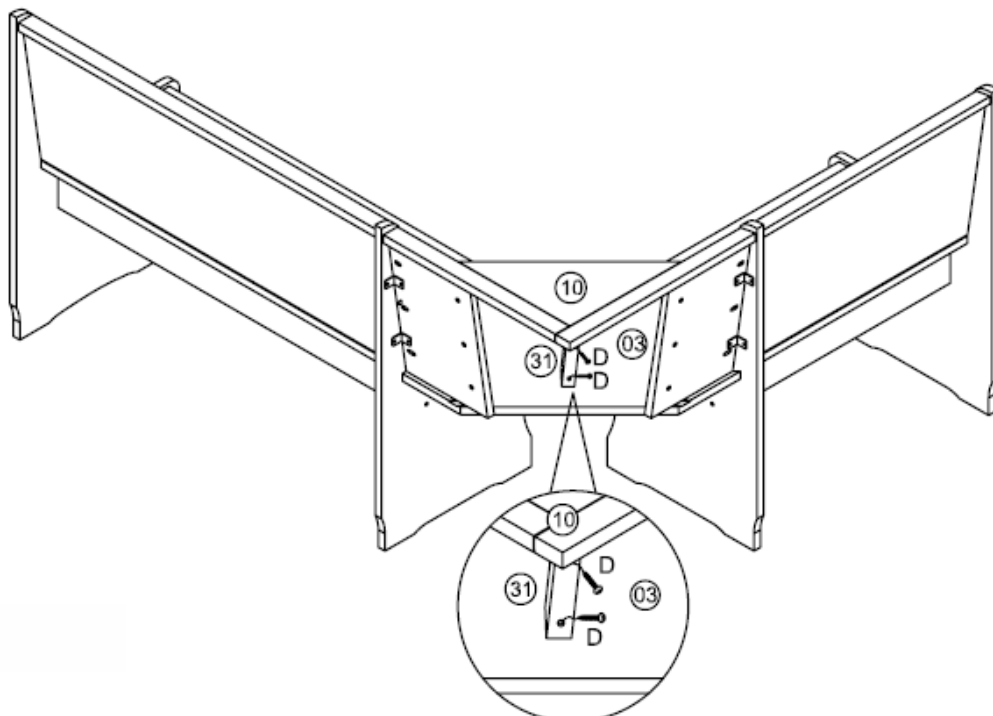


FIGURE 9

ASSEMBLY INSTRUCTIONS
3-Piece Knox Nook Set
Section 3 - Corner Bench

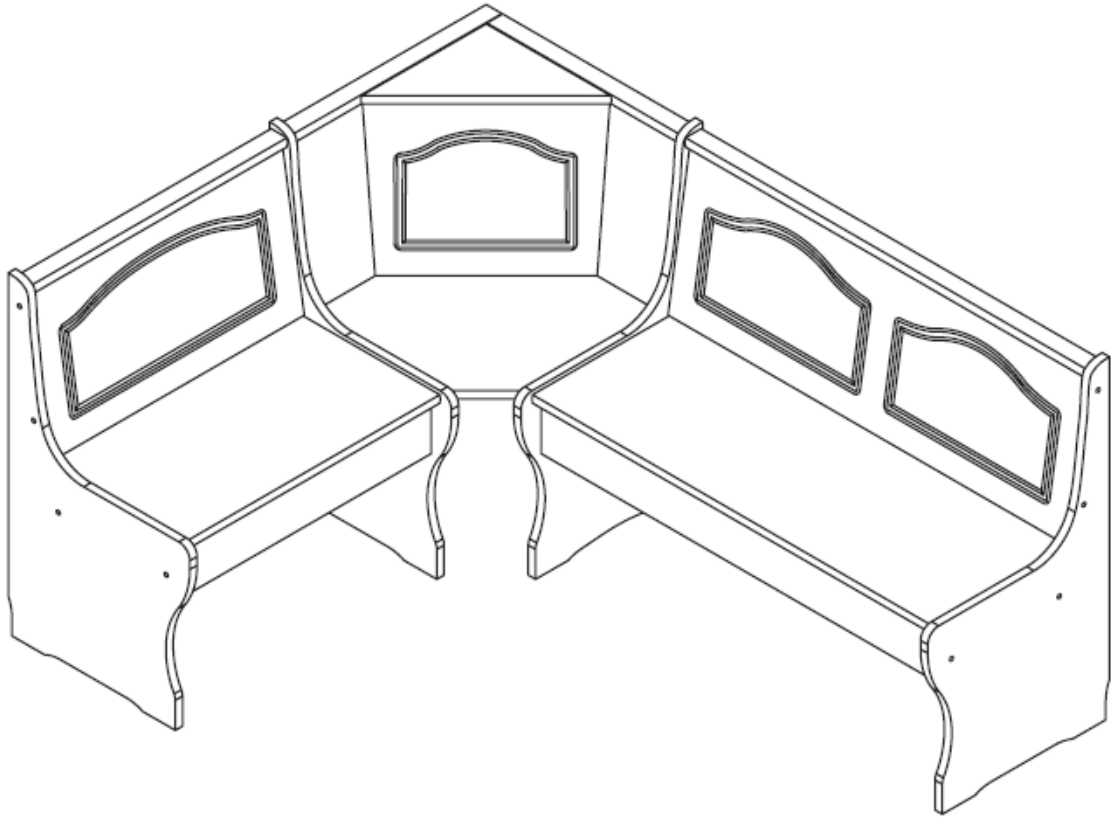

The assembly of the Corner Bench section of the 3-piece Nook set is complete.