C169 ASSEMBLY INSTRUCTION

1

2
Put the screws in the holes,tight the screws,
but not too tight,90% is ok.

3

4
Put the screws in the holes,tight the screws,
but not too tight,90% is ok.

5
Then adjust the balance of the chair.

6
Tight all the screws to 100%.

7
Stick the black part on the seat.

8

CODE	PARTS	QTY.
1	BACK	1
2	FRONT LEG	2
3	BACK LEG	2
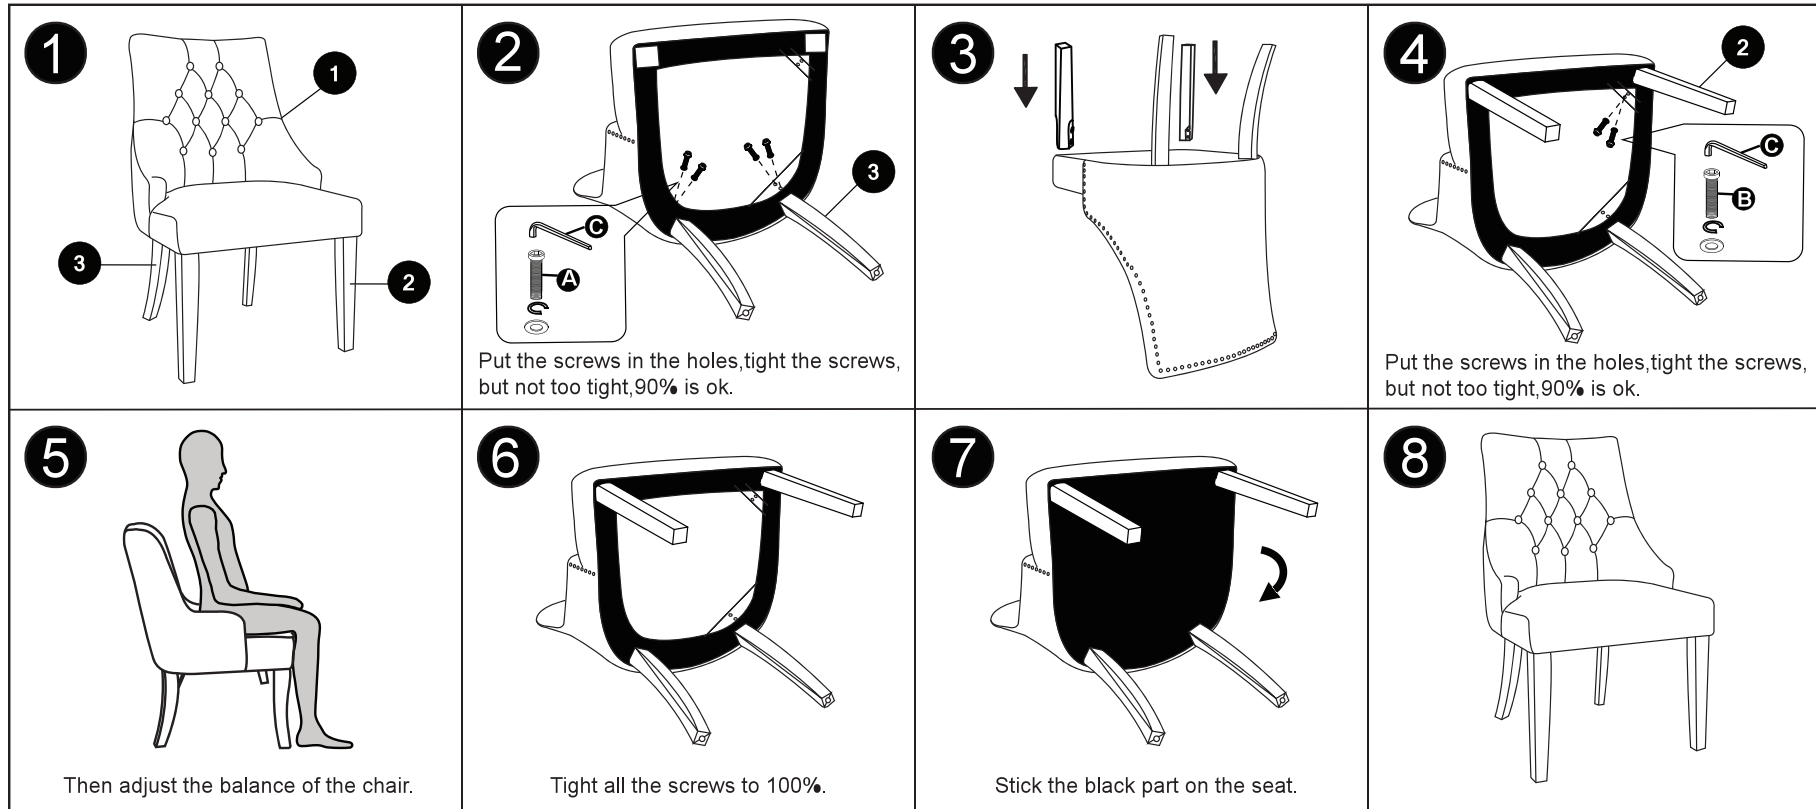
HARDWARE LIST

CODE	PARTS		QTY.
A	M8x50MM		4
B	M8x60MM		4
C	ALLEN KEY		1

HARDWARE LIST

Please find legs and
hardware pack inside
dust cover underneath
seat cushion!