
User's Manual



INSTALLATION INSTRUCTIONS

Installation Manual

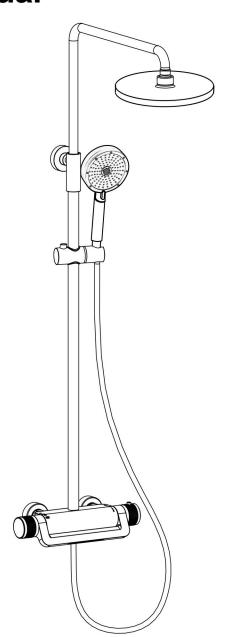

RB1202

IAPMO RESEARCH AND TESTING, INC.













IAPMO RESEARCH AND TESTING, INC.













IAPMO RESEARCH AND TESTING, INC.















STANDARD ACCESSORIES LIST


This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.





Before installing the faucet, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.




Serial number	Name	Quantity
1	Faucet body group	1
2	Faucet body fitting kit	1
3	Shower pipe set	1
4	Shower pipe kit	1
5	Slip on	1
6	Top spray shower	1
7	Hand shower	1
8	Shower Hose	1






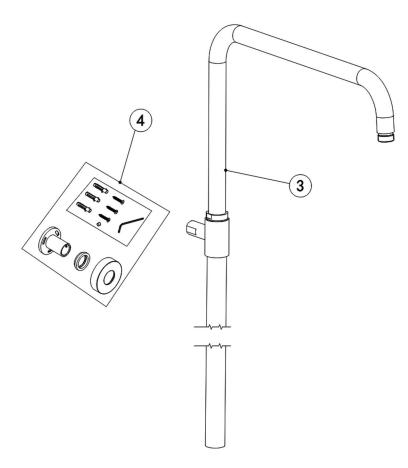

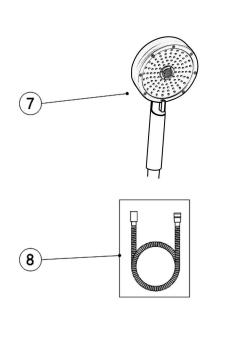


Tools required for installation:

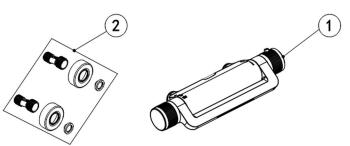


Electric drill	Ptfe Tape	Flat water ruler
D===©		
Wrench	Screwdriver	


INSTALLATION STEPS

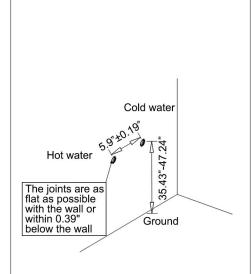


1, An first to ensure that the two out in the same level and ensure that the distance between the two outlets in the deviation in the allowable range according to the left hot right cold method connected to the hot and cold water source Flush the debris in the water

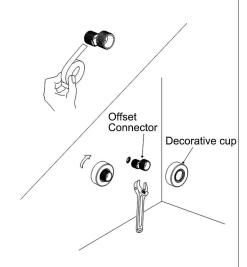


2, Wrap the appropriate amount of raw material tape around the threads of the curved foot and use an adjustable wrench to install the two curved feet wrapped with raw material tape on the water pipe and then screw in the decorative cover

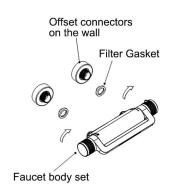


3, Use the installation positioning tool curved foot center distance and level to assemble the body on the filter gasket after fixed on the curved foot Test the water with 0.5Mpa water pressure, confirm no leakage and then install the shower pipe set

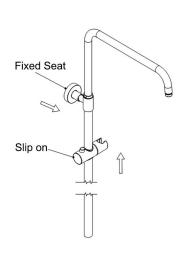

4, Slip the slide set into the shower pipe set, and put the fixed seat on the shower pipe set

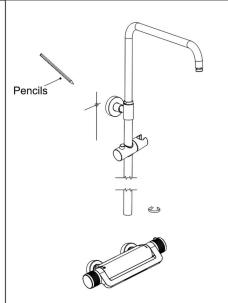


5, Rotate the shower tube and fix it on the body, then mark the fixing position of the fixing seat.

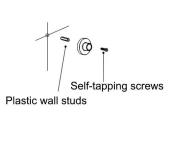




6, Remove the shower pipe assembly and fix the fixing block to the wall at the marked position.

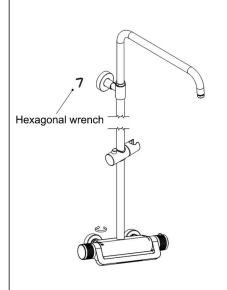

7, Rotate and fix the shower tube assembly on the main body, and then fix the tube set on the fixed base with a hex wrench.




8, the shower hose, handheld shower, top spray shower installed on. Installation is complete.

INSTALLATION STEPS

1, turn the left hand wheel to adjust the temperature of the water; clockwise rotation of the hand wheel to lower the temperature of the water, counterclockwise rotation of the hand wheel to raise the temperature of the water. When the temperature rises to 40C, you need to press the handwheel button to continue to adjust the higher temperature.

2, turn the left switch handwheel control faucet switch and switch the handheld shower and top spray shower counterclockwise rotation of the top spray shower water clockwise rotation of the handheld shower

3, Press the slide button to adjust the lift position of the slide

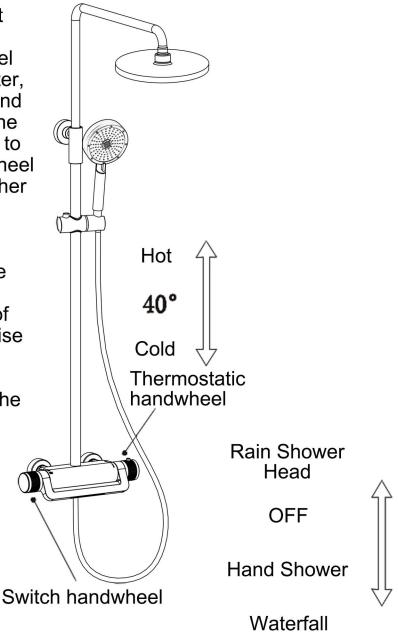

CLEANING CARE

In order to keep the appearance of faucet clean, bright and good performance, please take care of the faucet as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc.;
- 4.Do not use acid cleaner or cleaner and soap with insoluble gran etc.;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.

Please feel free to contact us if you have any questions. We will help to solve the issue together with you. OUR EMAIL: services@rbrohant.com



Manufacturer: Rbrohant
After-sale phone:+1(801) 800-9309
After-sale email: services@rbrohant.com