


INSTALLATION MANUAL

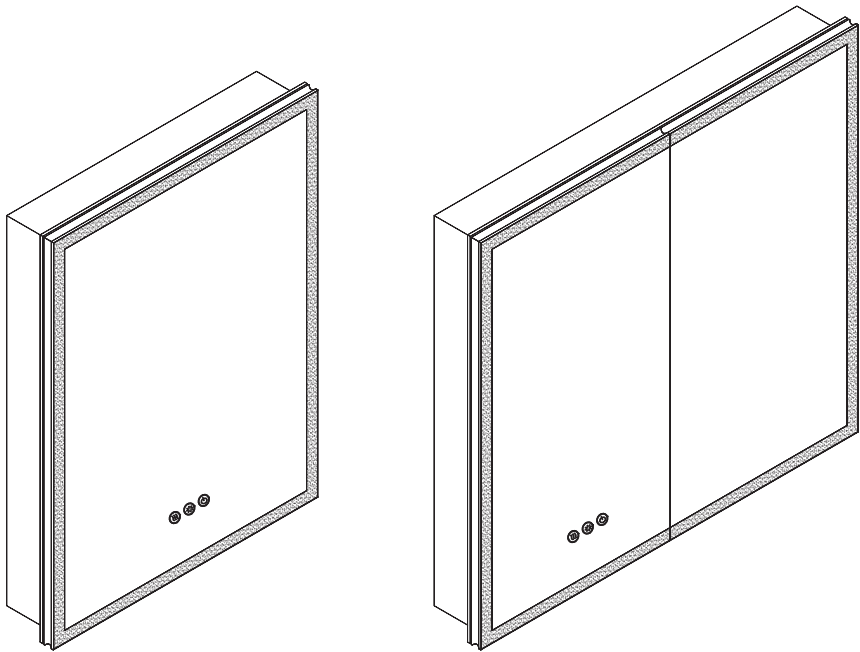

Bathroom LED Medicine Cabinet

BEFORE INSTALLATION

Thank you for choosing us. To ensure the best experience, **please read carefully and follow the instructions provided below before assembling and installing the product.**

1. Important Safety Instructions:

- Assembly by two or more adults is highly recommended, so as to ensure proper installation.
- To connect the wires to the electrical junction box, a qualified technician or electrician is highly recommended.
- Disconnect power before installing, adding, or changing any components.
- Make sure that the fixing location can support the weight of the entire fixture (e.g. solid stone or brick walls).
- To prevent injury, the mirror must be installed as per the instructions provided.

2. Pre-Assembly:

- Inspect the product immediately upon receipt for any transit damage or missing parts.
- The voltage for your product should be between 100V and 120V. If the voltage exceeds 120V, please use a transformer.
- You can connect the wires directly to your junction box or plug.

3. Before Installation







- Please check and make sure that the mirror is functioning properly.

CONTACT US

After opening the package, please inspect the product immediately and see if there is any damage or missing parts, If there is, please feel free to contact us by email or find us at Amazon by following steps:





Please leave us a message, and we will reply within 24 hours.


PACKING LIST

 4*30 Self-Tapping Screws	 Plugs	 DTC Hinge Cover	 Black hole plug	 Wiring Cap	 Hanging Strip
4	4	1	4	3	1

SURFACE-MOUNT INSTALLATION

Installation Tools

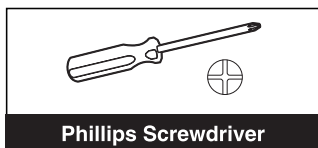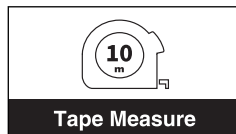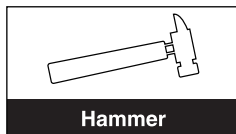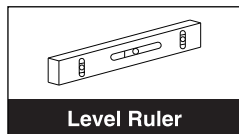

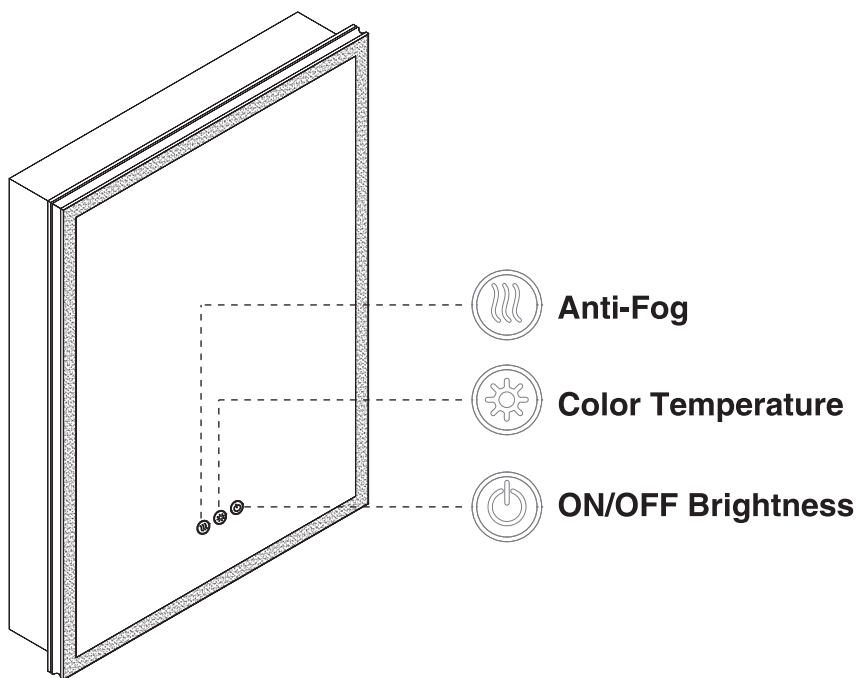

1. Short Press to Turn on/off the Light.

Press and hold the switch button for 3-5 seconds to activate the dimmer function.

The first long press adjusts brightness from strong to weak.

The second long press adjusts brightness from weak to strong.

These two operations cycle in turn.

2. Gently Press to Change the Color Temperature.

First press causes the neutral light, it is 4500K.

Second press causes the cool white light, it is 6400K .

Third press causes the warm yellow light, it is 3000K.

The three operations cycle in turn.

3. Anti-Fog


First short press, anti-fog function works.

Second short press, anti-fog function stops.

The two operations cycle in turn.

Installation Instructions for Hanging Walls


1. Place the medicine cabinet against the wall and mark the placement of the cabinet. Draw a line on the wall with a level and marker to indicate where the cabinet bottom is and mark spots (①②) for the lower brackets.

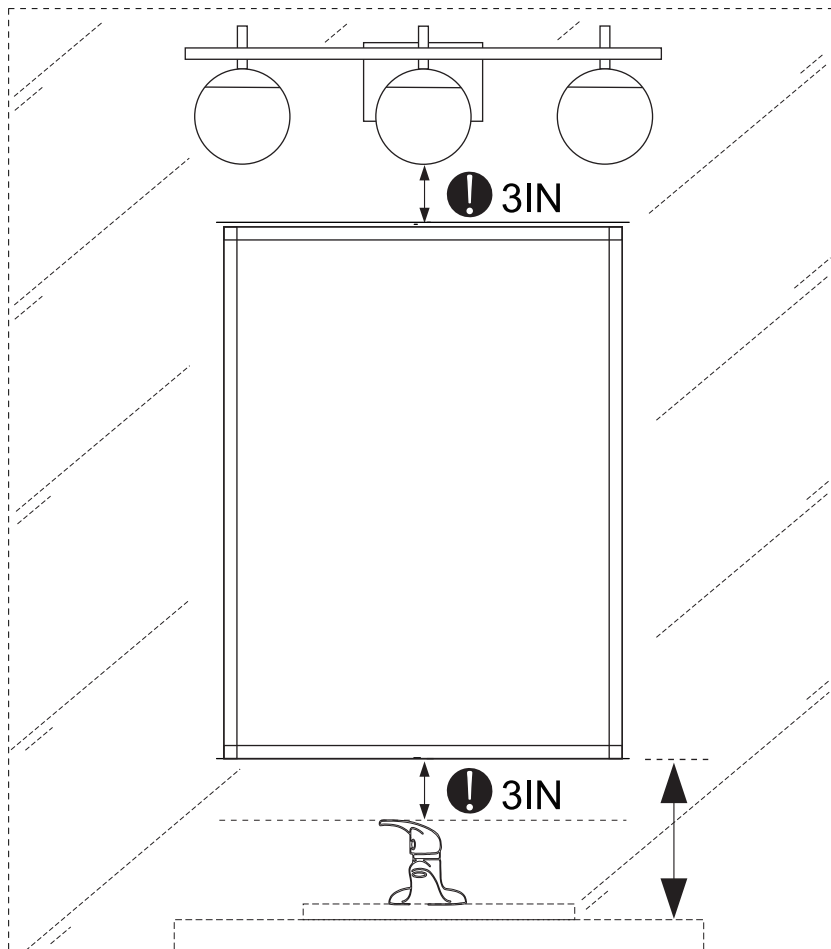

NOTE: Please hang the cabinet at least 3 inches above the faucet.


Installation Instructions for Hanging Walls

2. Use an electric drill to punch holes at the marked spots , then apply the 3 wall anchors with a hammer.

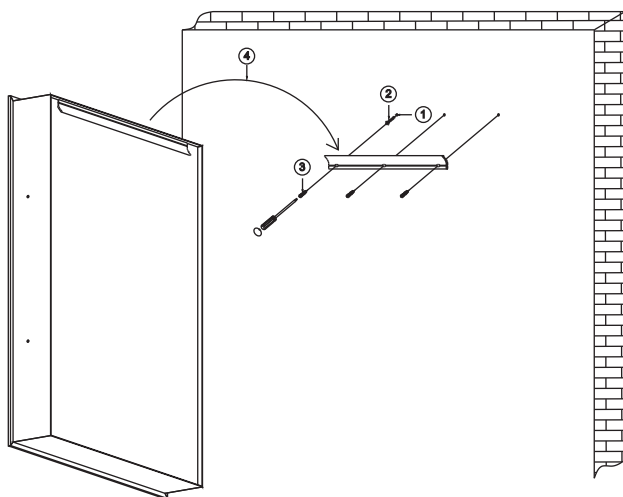


NOTE: Please wear goggles and pay attention to your safety while drilling.

3. Install the Glass Shevles.

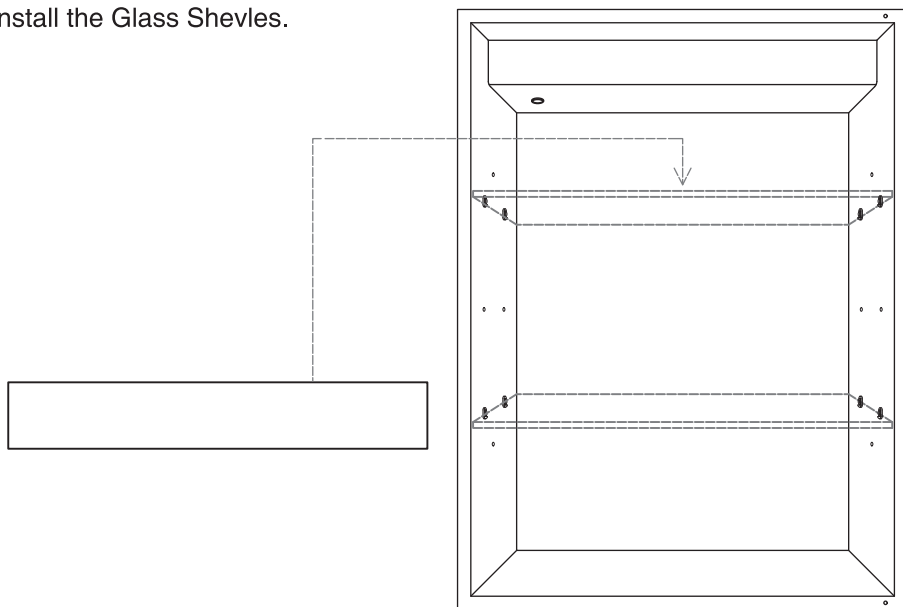


Embedded Installation Instructions

1. Drill holes as shown (①). Place the cabinet in the cutout opening, secure the cabinet to the framing studs with screws.

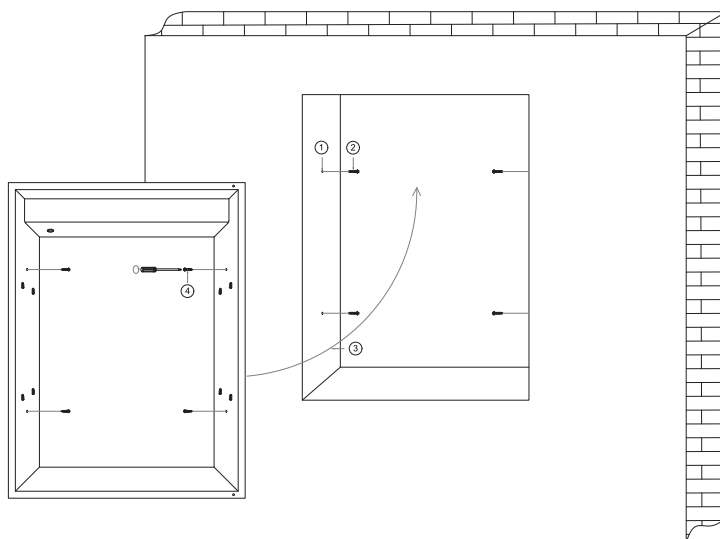

2. Install the Glass Shevles.

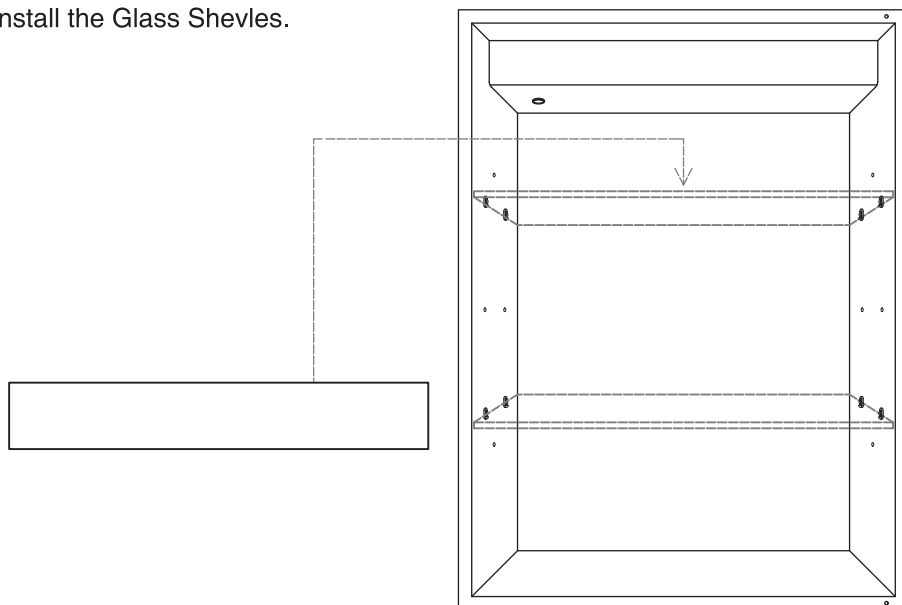


Connect Power Instruction


Connect power through a hardwired or plug-in setup.

Hardwired

Connect the cable that comes with the mirror into the household wiring.

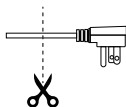

BLACK WIRE --- POWER SUPPLY L (HOT)
WHITE WIRE --- POWER SUPPLY N (NEUTRAL)
GREEN WIRE --- POWER SUPPLY E (EARTH)

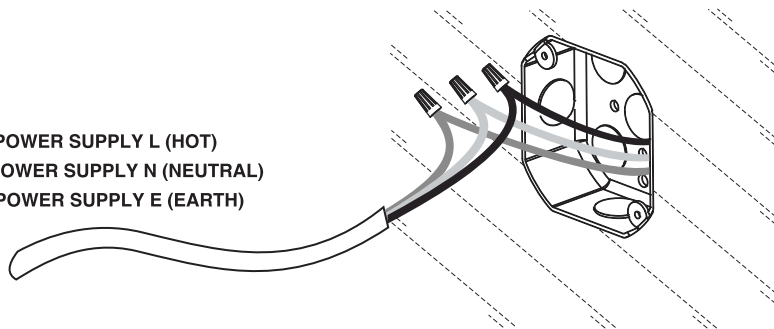


! WARNING: This mirror must be earthed.

Plug-In

- Use plug

After hanging the mirror, insert the plug directly into a standard electrical outlet.

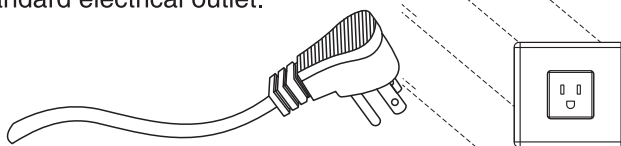

- Installation hardwired

Cut the plug and connect the mirror's wire to the power by the wire connectors.

! DANGER: Before installation, make sure the main power is cut off.

HOW TO USE AND CLEAN

In order to keep the LED mirror in perfect condition, we suggest aproper use and regular cleaning.

1. Please use the product within the safe voltage range of 100V-120V.
2. Please wrap electrical tape around the wires to prevent electrical leakage.
3. Avoid using hard or pointed items to strike the mirror glass.

How to Use

1. Please ensure that the product is used within the safe voltage range of 100V-120V.
2. Please wrap electrical tape around the wires to prevent electrical leakage.
3. Avoid using hard or pointed items to strike the mirror glass so as to prevent damage.

How to Clean

When cleaning the mirror, please follow these steps:

1. Use a soft, non-abrasive cloth to clean the mirror. Avoid using rough or abrasive materials that may damage the surface.
2. Do not use any cleaning agents that may cause irritation or damage to the mirror's finish. Instead, use any of the recommended cleansers to remove dirt and grime.