

Your furniture purchase is an investment. Here are a few tips to maximize the lifetime of your furniture with a minimum amount of effort. Properly caring for your furniture can help ensure that it looks great year after year.

Wood Furniture Maintenance:

- Always dust, wipe, and clean *with* the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- Use the same type of polish consistently as interchanging oil-based and wax-based polishes will cause a build-up and result in a foggy or cloudy appearance.
- If a polished surface becomes foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surfaces. Water can penetrate the finish and raise the grain on wood, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface.

The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which results in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

High Gloss Resin Table Maintenance:

- Resin tabletops have approximately 1/8" of a resin coat on the top face of the table, which will resist ice, water, wine, liquor, food, cleaning fluids, and warm or hot liquids; however, cups, glasses, etc. containing hot liquids should not be left on the table without a coaster for protection.
- Resin tabletops will scratch just the same as any other glossy surface and basic precautions should be taken.
- For lasting shine, the resin table should be waxed with a car wax that does not contain silicon. Maintaining this wax build-up will result in a high gloss shine.
- When wiping down the table, a soft, clean rag should be used. Do not use a heavy paper.

Granite Top Maintenance:

The surface of the granite on your table has been polished or sealed to create a generally non-porous surface. The stone has many natural characteristics including: veining, hairline cracks, and color variations - which make up the stone's beauty.

To maintain the beauty of your granite:

- Protect surfaces from scratching, staining and etching by:
 - * Keeping them free of debris or sharp objects
 - * Wiping up spills immediately
 - * Avoiding contact with chemicals (particularly acid-based materials)
 - Clean with pH neutral products or those especially formulated for use on stone.
 - It is not recommended to use a water-based solvent for dark granite as it will remove the polish from the surface.
 - After a period of use, apply a penetrating sealer to prevent contaminants from being absorbed into the stone.
 - Remove stains with special absorbent poultices formulated for use on stone.
 - Renew the surface on polished granite (granite with a high gloss surface) by buffing with special stone polish, powder or cream.
- Do not use granite polish on granite with a matte finish, which has been honed rather than polished. (Penetrating sealer may be used on both polished and honed granite.)

Marble Top Maintenance:

Marble may be stone, but it is porous stone and can stain easily. Treating marble surfaces the same as wood surfaces is a great rule of thumb.

- It is recommended to seal the tops on a regular basis (every 6 to 12 months). A good quality stone sealer can be purchased from any tiles/stone store or any homecare store and should be applied according to the manufacturer's recommendation.
- When sealed properly, marble tops can be used indoors and outdoors and can withstand any weather conditions except internal freezing. Snow or freezing rain will penetrate the table and cause cracks.

Caring for the Fabric on Upholstered Furniture:

- Frequent vacuuming of the entire upholstered area will prevent dust from settling into the fibers.
- Professional cleaning is always recommended for all upholstered pieces.
- Always pre-test a small area of fabric in an inconspicuous area when cleaning before proceeding.
- Do not use cleaning products containing brightening agents.

VERY IMPORTANT !!

NEVER
USE GLASS CLEANERS
ON FINISHED SURFACE
AMMONIA WILL
CHEMICALLY ATTACK
THE FINISH.

DO NOT
WRITE
DIRECTLY
ON
SURFACE



PREVENT
MARKING

DO NOT
PLACE
DIRECTLY
IN
SUNLIGHT



PREVENT
FADING

DO NOT
WRITE
PIA CMATS
WITH
RUBBER
BASES



PREVENT
DISCOLORING

NEVER
ALLOW LIQUIDS OF ANY
KIND TO LINGER ON
SURFACE ABSORPTION
CAUSES THE WOOD TO
WARP AND THE FINISH
TO DELAMINATE

DO NOT USE
COMMERCIAL
POLISHES
AND WAXES



PREVENT
YELLOWING

DO NOT
PLACE HOT
POD, ETC
ON SURFACE




PREVENT
DAMAGE TO
FINISH

DO NOT USE
COMMERCIAL
POLISHES
AND WAXES



PREVENT
SPLITTING

ASSEMBLY INSTRUCTIONS

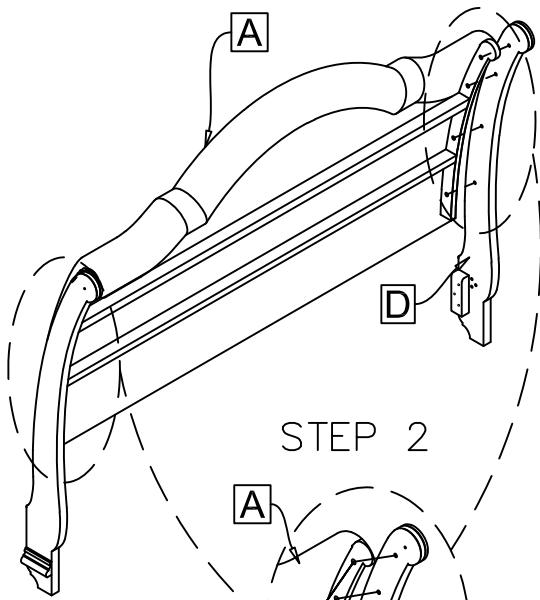

Step 1: Attach Stretcher(F), to the Left/Right Leg (D) by inserting Bolts (2), Spring Washer (3), Flat Washer (4) into the holes on the Left/Right Leg (D). Secure by Allen key (1). Fully tighten all bolts.



Step 2: Attach Left/Right Leg (D), to the Headboard (A) by inserting Bolts (5), Spring Washer (6), Flat Washer (7) into the holes on the Headboard (A). Secure by Allen key (1). Fully tighten all bolts.

Step 3: Attach Bun Foot(E) into Footboard (B)


Step 4: Loosen the assembled bolts on the Headboard Legs (D) & Footboard (B). Attached the Side Rail (C) to Left/Right Headboard Legs (D) & Footboard (B) by hooking on the loose bolts. Then tighten bolts again.

Step 5: Attach Support Leg (H) to the bottom of the Slats (G) with the hanger bolt at top of the Support Leg.

Step 6: Attach Slats (G) to the Side Rail (C) by using Screw (8) Assembly products is now completed .

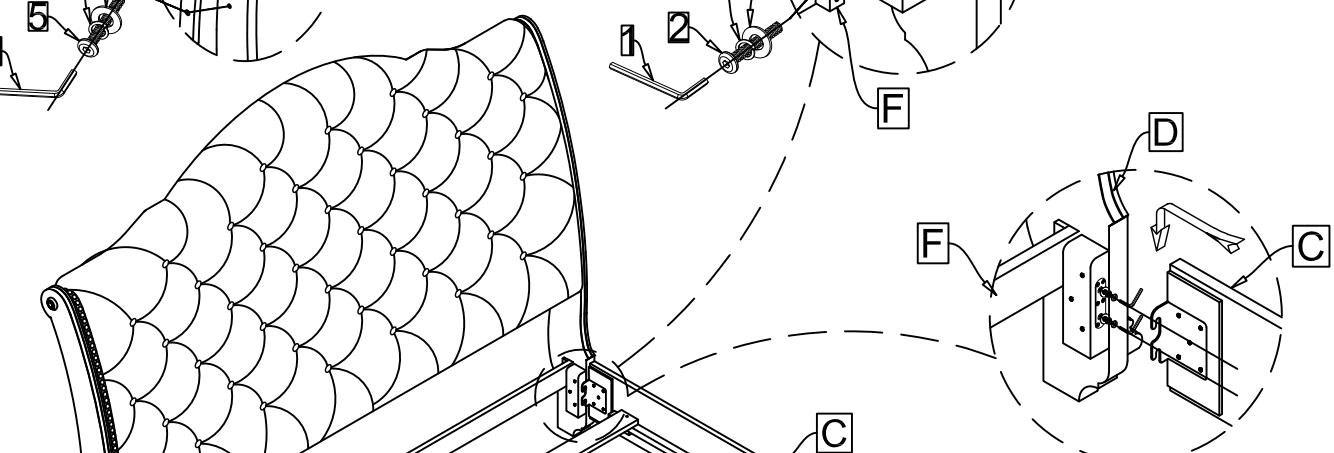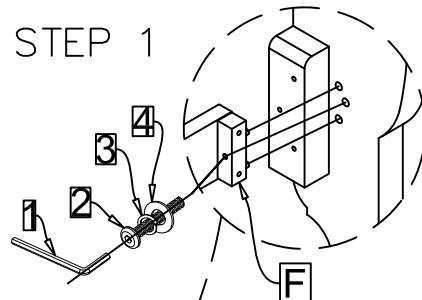


STEP 4

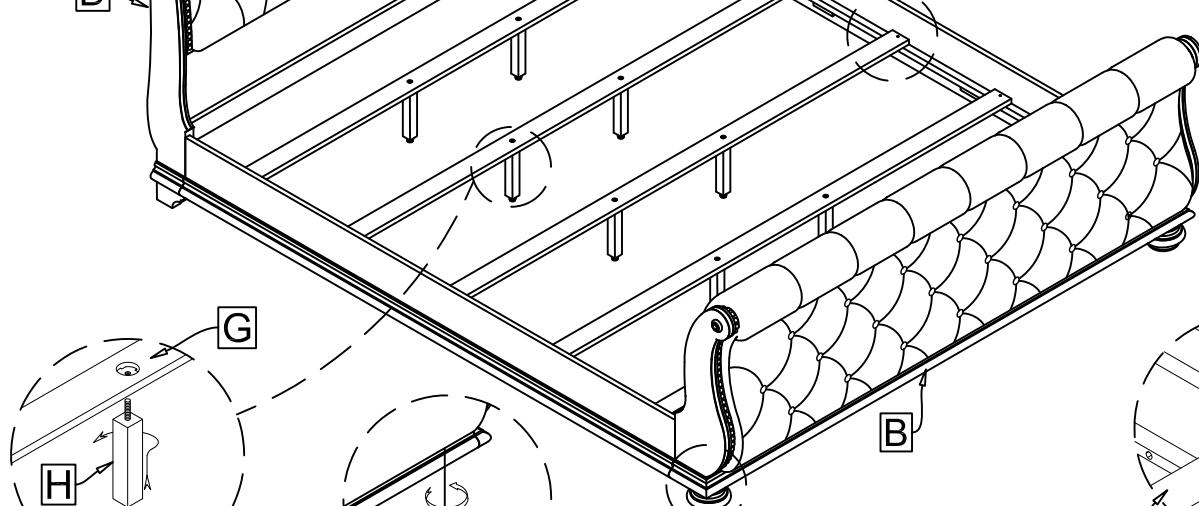

STEP 5

STEP 3

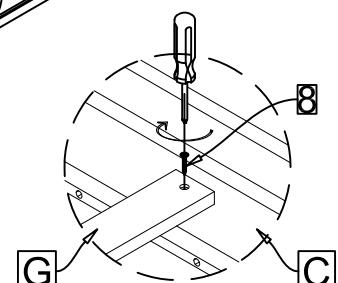

STEP 6

PARTS LIST

(A) HEADBOARD (1PC)		(B) FOOTBOARD (1 PC)	
(C) SIDE RAIL (2PCS)		(D) LEFT/ RIGHT LEG (2 PCS)	
(E) BUN FEET (2 PCS)		(F) STRETCHER (1PC)	
(G) SLATS (5PCS)		(H) SUPPORT LEG (10PCS)	


Hardware Pack

NO.:	HARDWARE LIST FOR HEADBOARD		Q'TY
1		(L57x4MM) ALLEN KEY	1 piece
2		(Ø1/4*13*1-1/2"L) BOLT	2 pieces
3		(Ø1/4*13*1.2MM) SPRING WASHER	2 pieces
4		(Ø1/4*19*1.8MM) FLAT WASHER	2 pieces
5		(Ø 5/16*13*2"L) BOLT	8 pieces
6		(Ø5/16*13*1.2MM) SPRING WASHER	8 pieces
7		(Ø5/16*19*1.8MM) FLAT WASHER	8 pieces

HARDWARE BAG FOR FOOTBOARD

8		8*30MM SCREW	10 pieces
---	--	--------------	-----------

COMPLETE HARDWARE

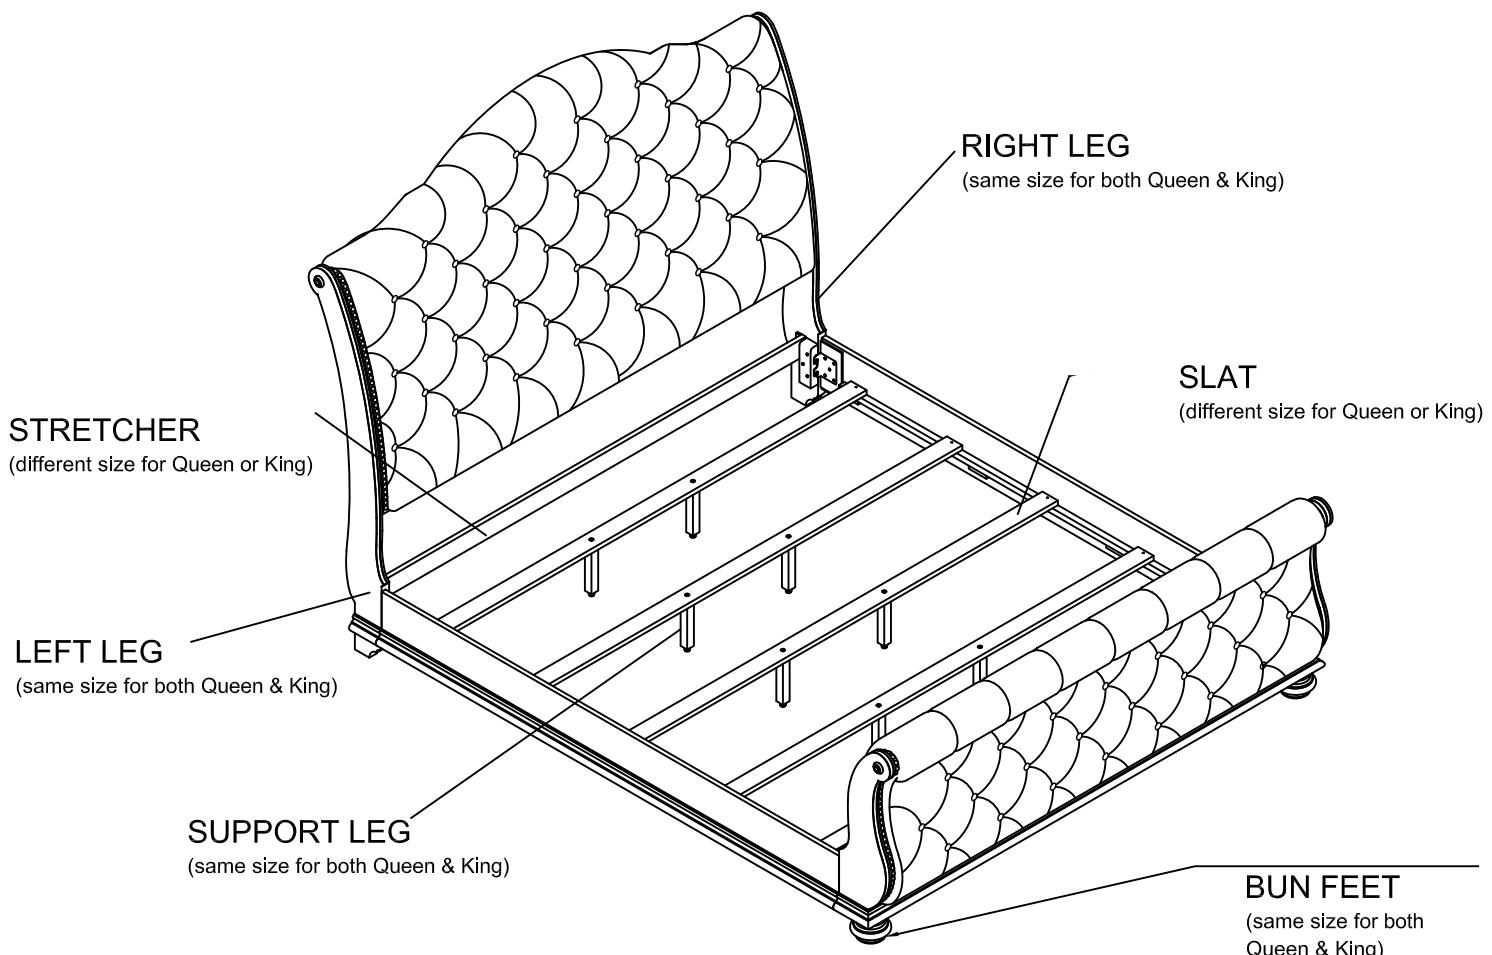

HEADBOARD PRODUCT DETAILS	
TOP APRON	WOOD PU ON MDF
PRODUCT SIZE	81" x 18.5" x 65.5"H
	65" x 18.25" x 63.75"H
CARTON SIZE	81" x 49.5" x 10.5"
	64.5" x 48" x 10.5"
NET WEIGHT	60.5 LBS
	51.7 LBS
GROSS WEIGHT	90.2 LBS
	78.1 LBS
CUFT	24.36'
	18.81'

FOOTBOARD PRODUCT DETAILS	
TOP APRON	WOOD PU ON MDF
PRODUCT SIZE	81.5" x 9.75" x 31.25"H
	65.5" x 9.75" x 31.25"H
CARTON SIZE	85" x 33.5" x 12.25"
	69.25" x 33.5" x 12.25"
NET WEIGHT	90.2 LBS
	68.2 LBS
GROSS WEIGHT	108.9 LBS
	91.3 LBS
CUFT	20.19'
	16.45'

SIDERAILS PRODUCT DETAILS	
TOP APRON	OAK VENEER ON MDF WOOD
PRODUCT SIZE	81.2" x 2.5" x 8.25"H
CARTON SIZE	86.5" x 11" x 7.25"
NET WEIGHT	28.6 LBS
GROSS WEIGHT	37.4 LBS
CUFT	3.99'