Your furniture purchase is an investment. Here are a few tips to maximize the lifetime of your furniture with a minimum amount of effort. Properly caring for your furniture can help ensure that it looks great year after year.

Wood Furniture Maintenance:

- Always dust, wipe, and clean *with* the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- Use the same type of polish consistently as interchanging oil-based and wax-based polishes will cause a build-up and result in a foggy or cloudy appearance.
- If a polished surface becomes foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surfaces. Water can penetrate the finish and raise the grain on wood, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface.

The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which results in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

High Gloss Resin Table Maintenance:

- Resin tabletops have approximately 1/8" of a resin coat on the top face of the table, which will resist ice, water, wine, liquor, food, cleaning fluids, and warm or hot liquids; however, cups, glasses, etc. containing hot liquids should not be left on the table without a coaster for protection.
- Resin tabletops will scratch just the same as any other glossy surface and basic precautions should be taken.
- For lasting shine, the resin table should be waxed with a car wax that does not contain silicon. Maintaining this wax build-up will result in a high gloss shine.
- When wiping down the table, a soft, clean rag should be used. Do not use a heavy paper.

Granite Top Maintenance:

The surface of the granite on your table has been polished or sealed to create a generally non-porous surface. The stone has many natural characteristics including: veining, hairline cracks, and color variations - which make up the stone's beauty.

To maintain the beauty of your granite:

- Protect surfaces from scratching, staining and etching by:
  * Keeping them free of debris or sharp objects
  * Wiping up spills immediately
  * Avoiding contact with chemicals (particularly acid-based materials)
- Clean with pH neutral products or those especially formulated for use on stone.
- It is not recommended to use a water-based solvent for dark granite as it will remove the polish from the surface.

  absorbed into the stone.
- After a period of use, apply a penetrating sealer to prevent contaminants from being
- Remove stains with special absorbent poultices formulated for use on stone.
- Renew the surface on polished granite (granite with a hight gloss surface) by buffing with special stone polish , powder or cream .

Do not use granite polish on granite with a matte finish, which has been honed rather than polished. (Penetrating sealer may be used on both polished and honed granite.)

Marble Top Maintenance:

Marble may be stone, but it is porous stone and can stain easily. Treating marble surfaces the same as wood surfaces is a great rule of thumb.

- It is recommended to seal the tops on a regular basis (every 6 to 12 months).

A good quality stone sealer can be purchased from any tiles/stone store or any homecare store and should be applied according to the manufacturer's recommendation.

- When sealed properly, marble tops can be used indoors and outdoors and can withstand any weather conditions except internal freezing. Snow or freezing rain will penetrate the table and cause cracks.

Caring for the Fabric on Upholstered Furniture:

- Frequent vacuuming of the entire upholstered area will prevent dust from settling into the fibers.
- Professional cleaning is always recommended for all upholstered pieces.
- Always pre-test a small area of fabric in an inconspicuous area when cleaning before proceeding.
- Do not use cleaning products containing brightening agents.

ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ALL BOLT AND SCREWS UNTIL THE ENTIRE UNIT IS COMPLETELY ASSEMBLED

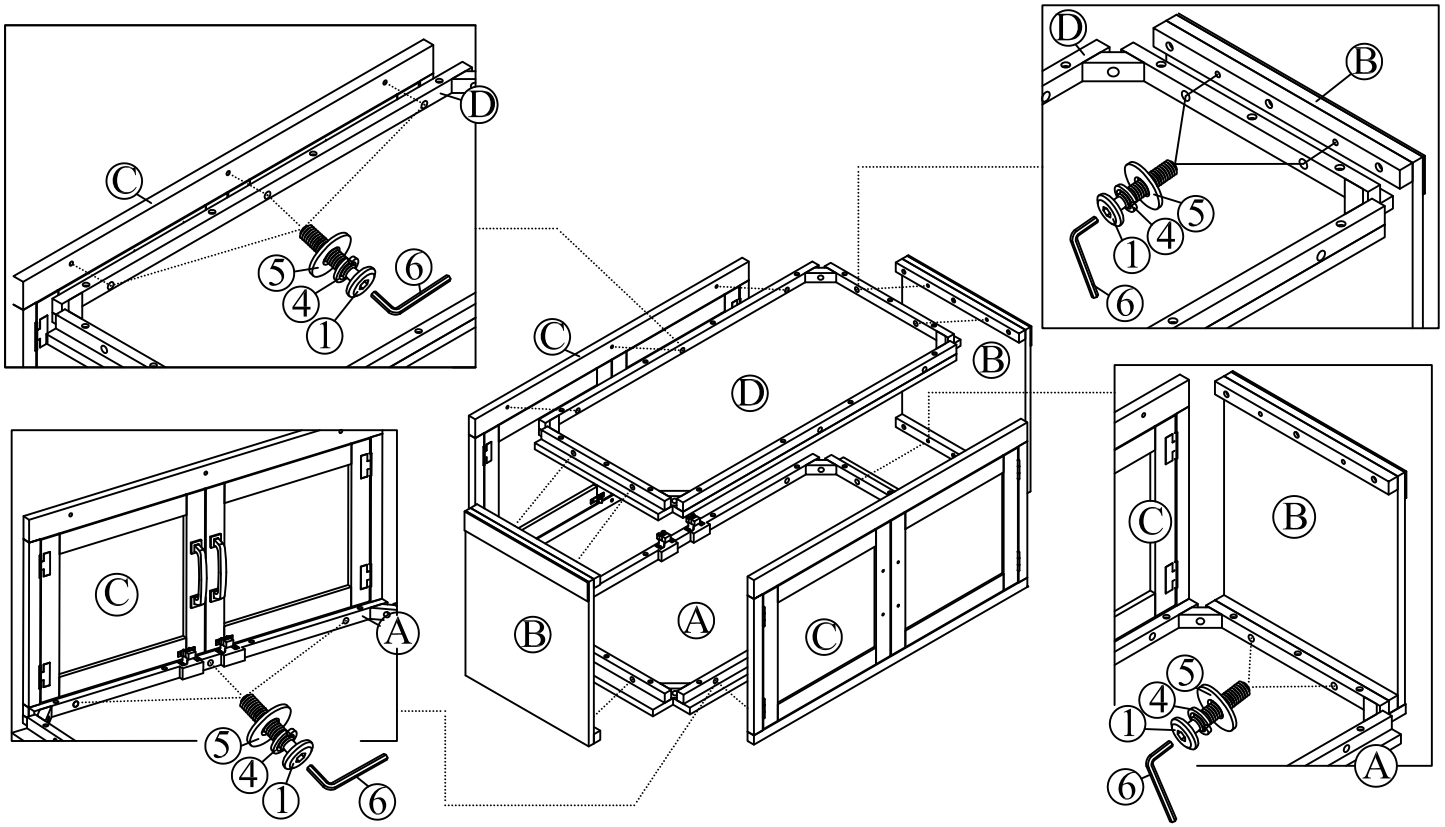

Step 1 : Place the Storage Top (A) on a piece of cloth or carpet to prevent from scratching.
Attach 2pcs Storage Side (B) to the Storage Top (A) and Storage Bottom (D) by inserting Short Bolt (1), Lock Washer (4), Flat Washer (5) and tighten with Allen Key (6) as the picture shown.
Attach 2pcs Storage Door (C) to the Storage Top (A) and Storage Bottom (D) by inserting Short Bolt (1), Lock Washer (4), Flat Washer (5) and tighten with Allen Key (6) as the picture shown. Do not fully tighten.

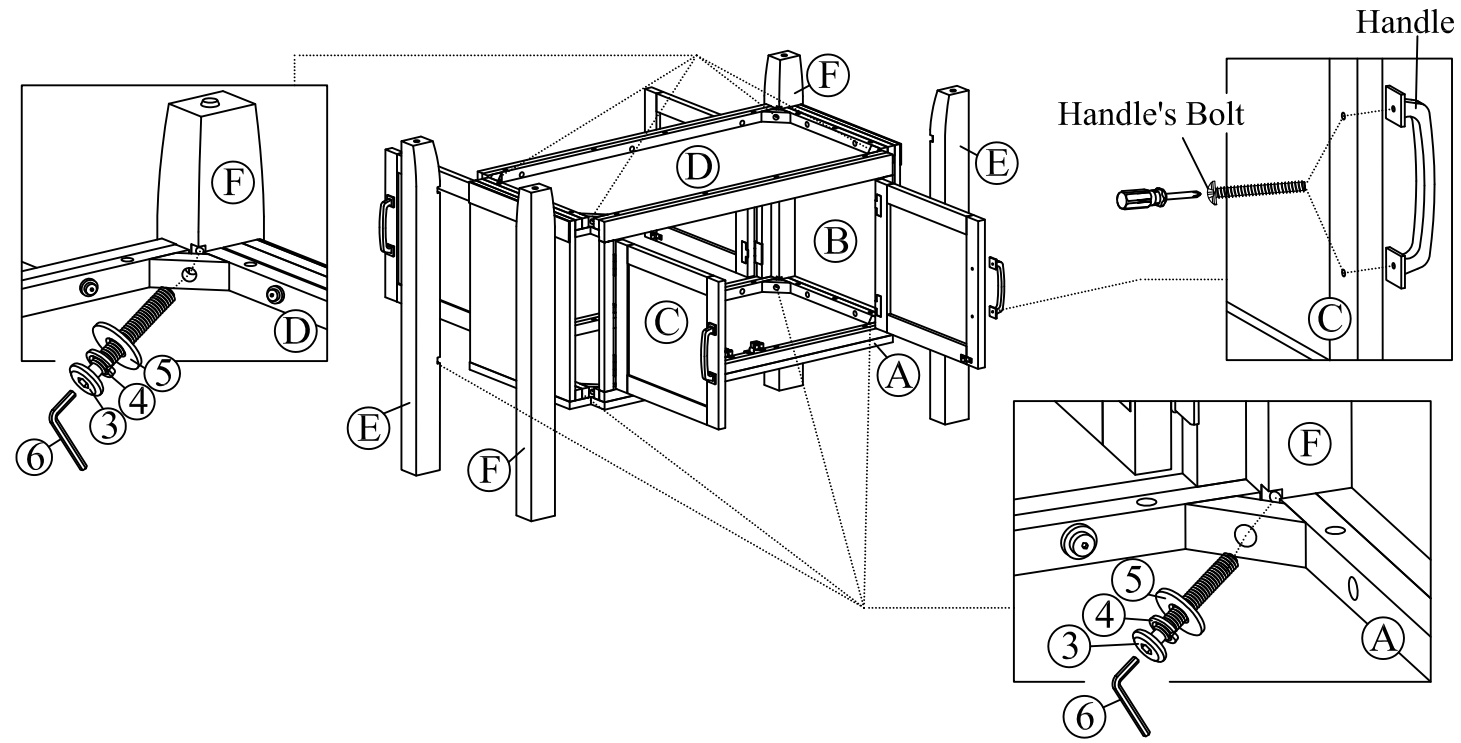

Step 2 : Open the doors of Storage Door (C), remove the Handles by unfasten the Handle's Bolts and attach it to the outside of the Doors by using Phillips-head screwdriver (not provided) as the picture shown.
Attach 2pcs LSF Front/ RSF Back Leg (E) and 2pcs RSF Front/ LSF Back Leg (F) to the assembly base in Step 2 by inserting Flat Washer (5), Lock Washer (4), Long Bolt (3) to corners of the Storage Top (A) and Storage Bottom (D), tighten with Allen Key (6). Do not fully tighten.

ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN ALL BOLT AND SCREWS UNTIL THE ENTIRE UNIT IS COMPLETELY ASSEMBLED

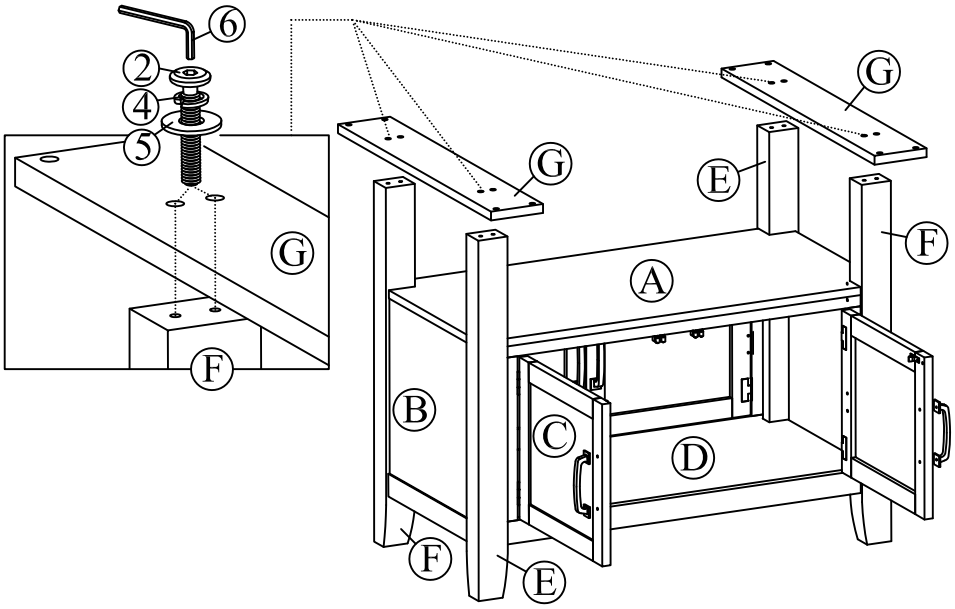

Step 3: Turn the Assembly Base in Step 2 to upright position. Attach the Mounting Bar (G) to LSF Front/ RSF Back Leg (E) and RSF Front/ LSF Back Leg (F) by inserting Flat Washer (5), Lock Washer (4), Medium Bolt (2) and tighten with Allen Key (6). Fully tighten all Bolts in Step 1;2;3 at this time by using Allen Key (6). Do not over tighten.

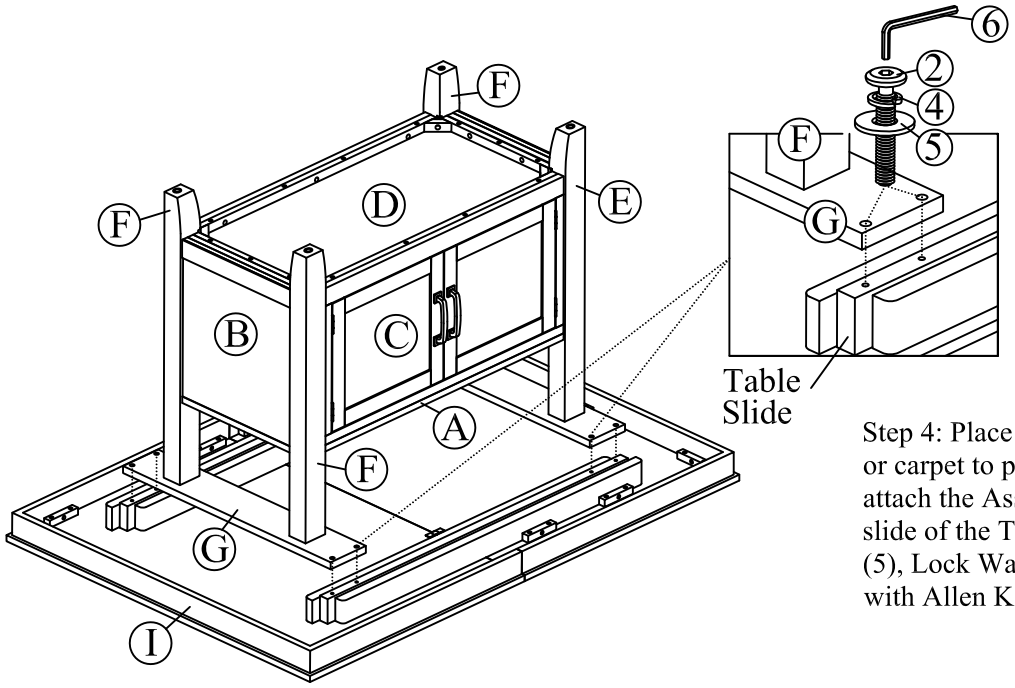

Step 4: Place the Table Top (I) on a piece of cloth or carpet to prevent from scratching. Turn up and attach the Assembly Base in Step 3 to the table slide of the Table Top (I) by inserting Flat Washer (5), Lock Washer (4), Medium Bolt (2) and tighten with Allen Key (6). Do not over tighten.

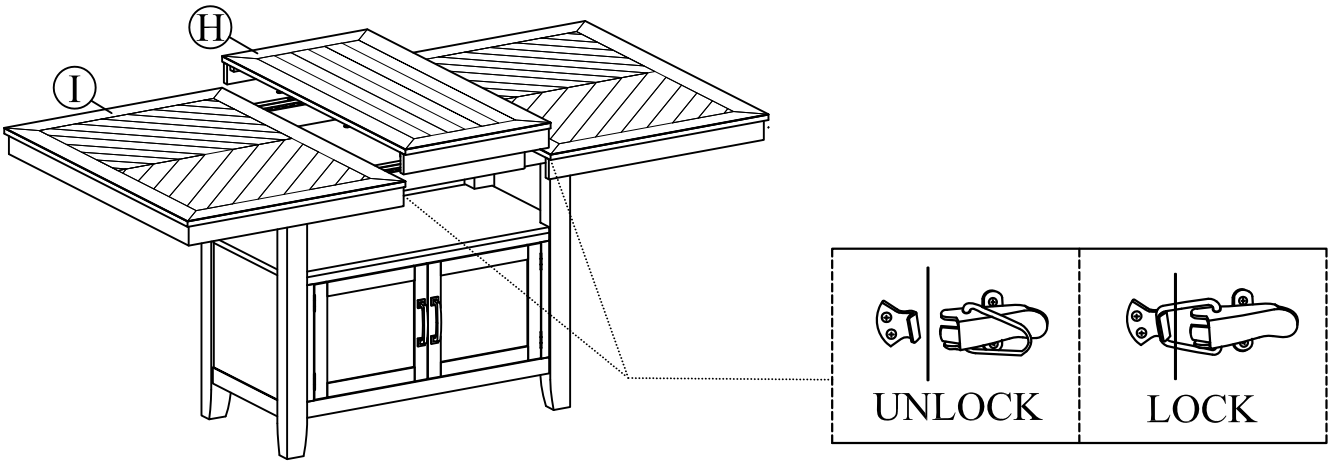

Step 5: Turn the Table to upright position (**Note: It is recommended to use two or more people to turn the Table)*. Place the table on flat surface. Unlock the latch underneath the Table Top (I) and pull the Table Top (I) from both ends. Inserting the Table Leaf (H) into the middle of Table Top (I), close the Table Top (I) by pushing from both ends. Lock the latch underneath the Table Top (I) to prevent from sliding. Assembly product is completed.

PARTS LIST

(A) STORAGE TOP 1 PC	(B) STORAGE SIDE 2 PCS	(C) STORAGE DOOR 2 PCS
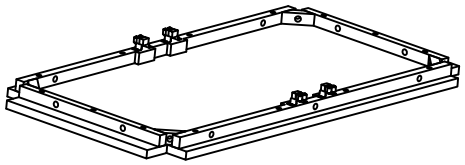 Sticker stick on the part Ⓐ	 Sticker stick on the part Ⓑ	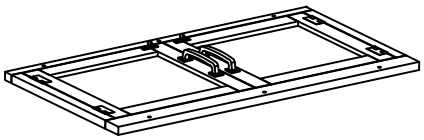 Sticker stick on the part Ⓒ
(D) STORAGE BOTTOM 1 PC	(E) LSF FONT/ RSF BACK LEG 1 PC	(F) RSF FONT/ LSF BACK LEG 1 PC
 Sticker stick on the part Ⓓ	 Sticker stick on the part Ⓛ	 Sticker stick on the part Ⓡ
(G) MOUNTING BAR 2 PCS	(H) TABLE LEAF 1 PC	(I) TABLE TOP 1 PC
	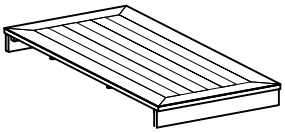	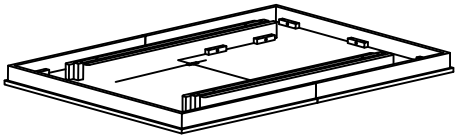

HARDWARE LIST

NO.	DESCRIPTION		DIMENSION	QTY'
1	Short Bolt		Ø 1/4" x 35 mm	20 pcs
2	Medium Bolt		Ø 1/4" x 40 mm	16 pcs
3	Long Bolt		Ø 1/4" x 50 mm	8 pcs
4	Lock Washer		Ø 5/16" x 13 mm	44 pcs
5	Flat Washer		Ø 5/16" x 19 mm	44 pcs
6	Allen key		4 mm	1 pc

PARTS
COMPLETE HARDWARE

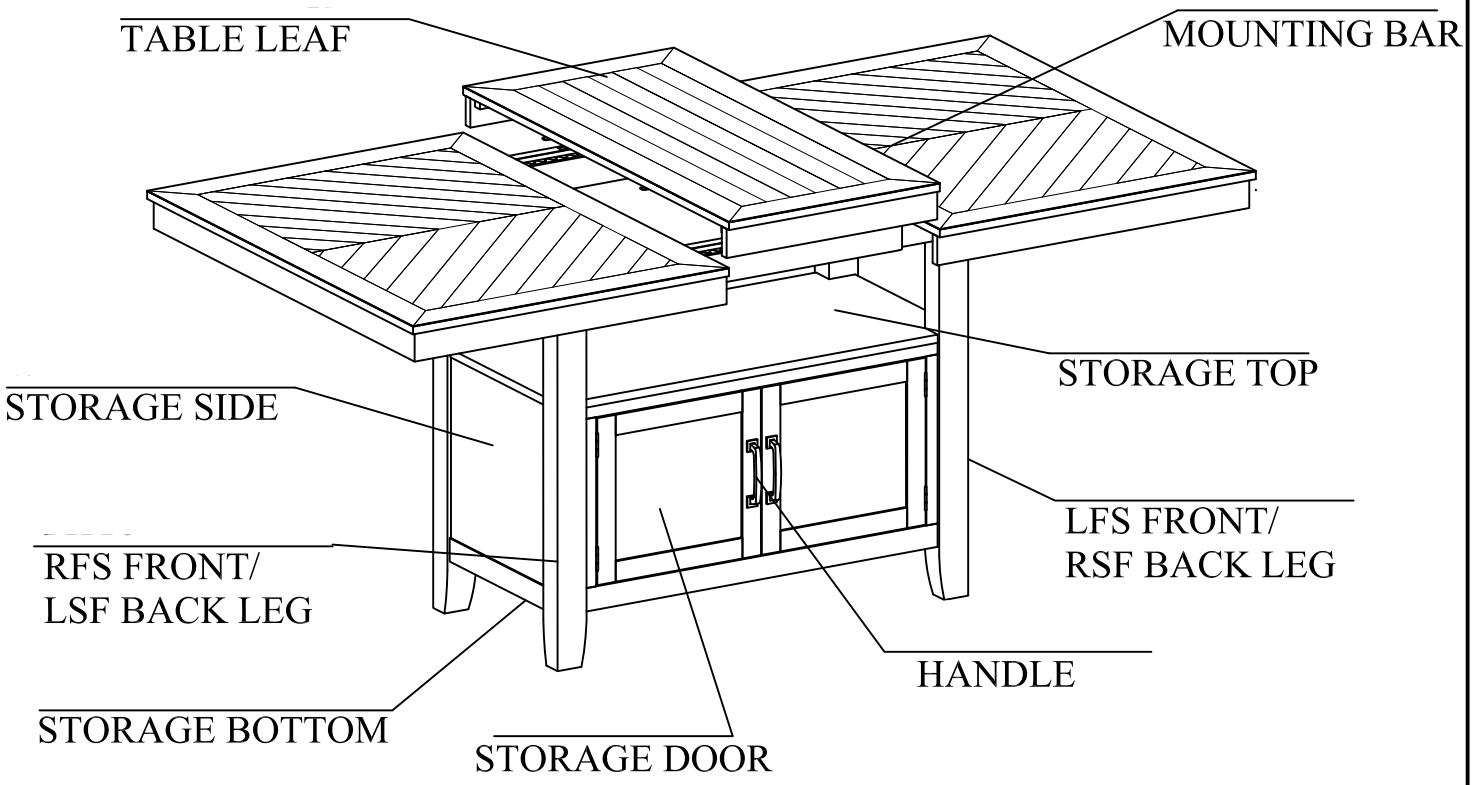

PRODUCT DETAILS

TOP	MDF/ACACIA VENEER
APRON	ACACIA WOOD
LEGS FRAME	ACACIA WOOD
LEGS	ACACIA WOOD
STORAGE	MDF/ACACIA VENEER + ACACIA WOOD
PRODUCT SIZE	42" x 60"-80" x 36.5" H(Leaf 20")
CARTON SIZE	63.58"x 45.67" x10.43" H
NET WEIGHT	165 LBS
GROSS WEIGHT	189.2 LBS
CU.FT.	17.53'

MADE IN VIETNAM