

# E26 (MB) Indoor Luminaires

## Lift & Shift Ceiling Mount – SEMI

### 120VAC / 60Hz

Model #: MCFxxxxMB-xxSF

### Safety Precautions

- Read all safety precautions and installation instructions carefully before installing or servicing this fixture. Failure to comply with these instructions could result in potentially fatal electric shock and/or property damage.
- It is recommended that a qualified electrician perform all the wiring. This fixture must be wired in accordance with all national and local electrical codes.
- Do not handle any energized fixture or attempt to energize any fixture with wet hands or while standing on a wet or damp surface or in water.
- This fixture is designed for use in a 120VAC, 50/60Hz circuit.
- Make sure that the power source conforms to the requirements of the fixture. (See labels on the fixture housing).
- To reduce the risk of electrical shock, and to assure proper operation, this fixture must be adequately grounded. To accomplish proper grounding, there must be a separate ground wire (green) contact between this fixture and the ground connection of your main power supply panel.
- This fixture is intended to be used for general indoor lighting in dry or damp locations.

### Assembly Instructions

#### Step 1 – Preparing for installation

- Disconnect electrical power** at the fuse or circuit breaker box before installing or servicing any part of this fixture.
- Carefully remove the fixture and hardware kit from the carton.
- Remove components from the parts bag.
- Thread the nipple (11) into the stem (8) with one full turn clockwise then insert it to the canopy (4) using lockwasher (10) and jam nut (9) to secure it. Repeat until all three stems are installed and secured onto both top and bottom canopies (4).
- Connect the fixture wires to corresponding green, white, and black on the bottom canopy using included wire nuts to secure it.
- Install the long screws (12) to the outer mounting hole of the fixture pan with flat washer (13) and nut (14) to secure it. Repeat until the other screws are installed on the pan.
- Install bottom canopy (4) to the fixture by aligning two holes on the top with screws (12) using finial nuts (15) to secure it.
- Install mounting bracket (1) to the 3/0 or 4/0 junction box (not included) by using two screws (2) to secure it. Thread the nipple (3) into the mounting until only 1-1/8 inch protrudes toward the fixture.

#### Wiring – All wiring must take place inside the junction box (not included)

**Caution:** Make sure power is off at the fuse or circuit breaker box. Check power wires for damage or scrapes. Use wire suitable for at least 90°C (194°F). **Note:** Most dwellings built before 1985 have supply wire rated to 60°C. Consult a qualified electrician to ensure correct branch circuit conductor before installing.

#### Step 2 – Wiring fixture

- Make all wire connections to appropriate wire. Secure with wire nuts (provided).
- Connect the green wire from the fixture to the supply power source ground wire.
- Connect the white wire from the fixture to the white (N) wire from the supply power source.
- Connect the black wire from the fixture to the black (L) wire from the supply power source.
- Do not mix wires.** Pull on each wire lead to make sure connections are secure. Make certain no bare wires are exposed outside of wire connectors. Tuck all connections neatly into the junction box.

#### Step 3 – Mounting fixture

- Install fixture (4) by aligning to the stem (3) using barrel nut (5) to secure it.


#### Step 4 – Lamping (not included)

- Install lamp Type A19 (E26) 30W max rated into the socket and twist clockwise rotation until securely snug. Repeat until all lamps are installed.

#### Step 5 – Shade

- Install shade (6) by aligning three large openings with the shade support (7) then gently lift up and rotate it until the three small slots rested on top of the support as shown on Fig 1.

#### Step 6 – Restore power at the fuse or circuit breaker box

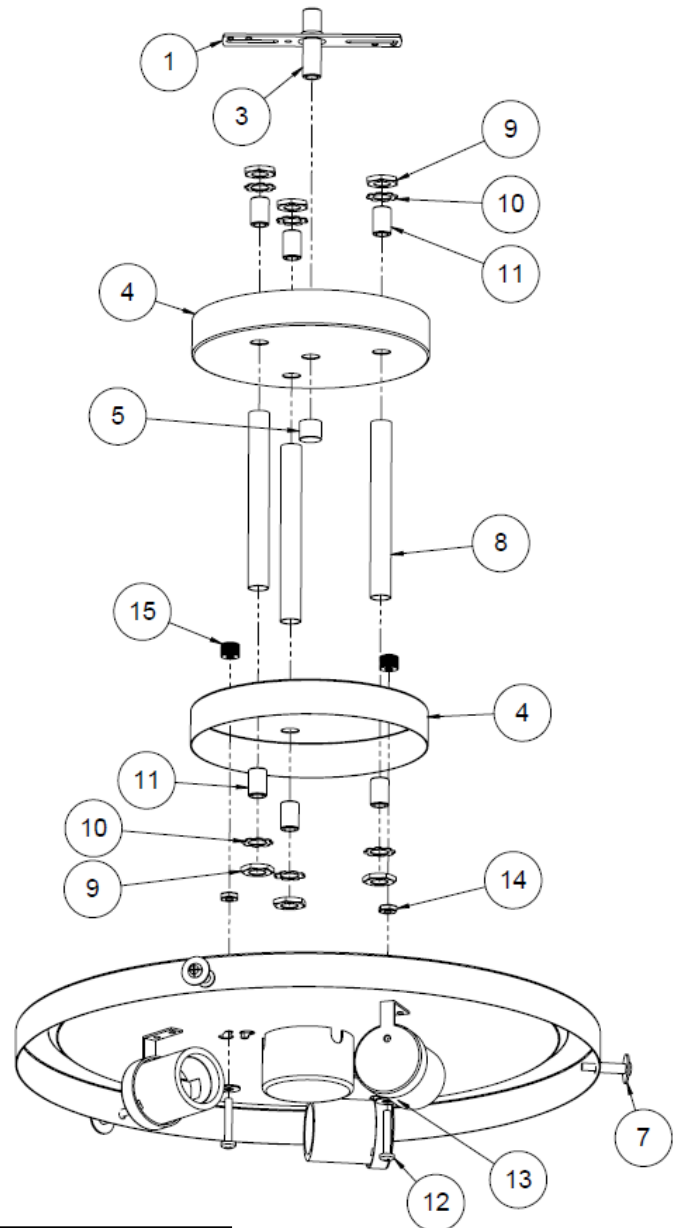

View shown for reference only. Individual models may vary.

**E26 (MB) Indoor Luminaires**  
**Lift & Shift Ceiling Mount – SEMI**  
**120VAC / 60Hz**

**Model #: MCFxxxxMB-xxSF**

METAL PAN SIZE	BULBS REQUIRED
10" PAN	2 QTY
13" PAN	3 QTY
17" PAN	3 QTY
22" PAN	4 QTY


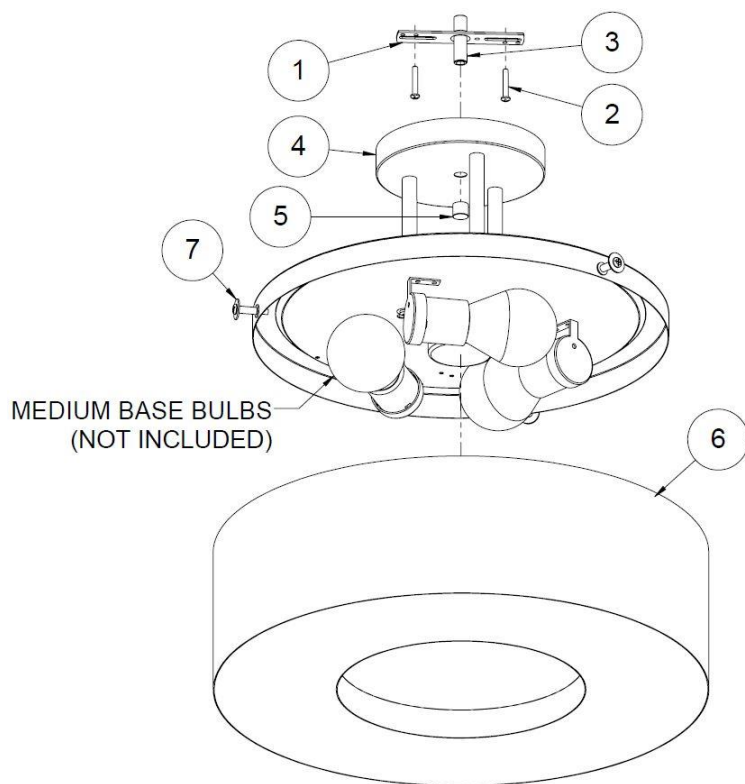


Fig. 1

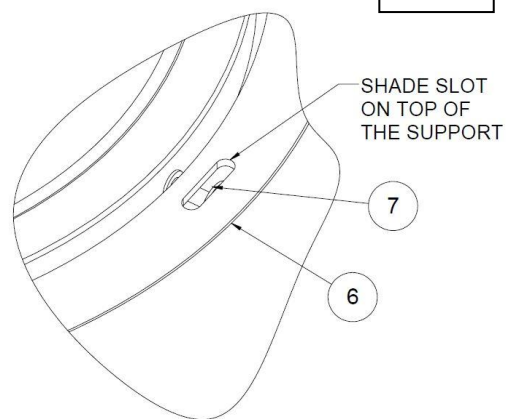

**Limited Factory Warranty**

AFX Inc. hereby warrants that this fixture is free from defects in materials and workmanship when installed and used under normal operating conditions for a period of 2 years from date of purchase. This warranty covers all component parts and extends only to replacement of defective fixture or components; it does not cover failure due to improper installation, misuse, mishandling or damage incurred in transit.