

# **USER MANUAL**

## Ceiling fan

# 1\_Important Safeguards

- ①.To reduce the risk of electrical shock the electricity has been turned off at the circuit breaker or fuse box before begin.
- ②.All wiring must be in accordance with the National Electrical Code NASI/NFPA 70-1999 and local electrical codes.Electrical installation should be performed by a qualified licensed electrician.
- ③.The outlet box and support structure must be securely mounted and capable of reliably supporting 35lb.(15.9kg).Use only UL listed outlet boxes marked "Acceptable for Fan Support of 35lbs(15.9kg)or less."
- ④.The fan must be mounted with a minimum of 7ft.(2m) clearance from the trailing edge of the blades to the floor.
- ⑤.Do not operate the reversing switch while the fan blades are in motion.You must turn the fan off and stop the blades before you reverse the blade direction.
- ⑥.Do not place objects in the path of the blades.
- ⑦.To avoid personal injury or damage to the fan and other items use caution when working around or cleaning the fan.
- ⑧.Electrical diagrams are for reference only.Light kits that are not packed with the fan must be UL-listed and marked suitable for use with the model fan you are installing.Switches must be UL General Use Switches.Refer to the instructions packaged with the light kits and switches for proper assembly.
- ⑨.After making electrical connections,spliced conductors should be turned upward and pushed carefully up into the outlet box.The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box.
- ⑩ .All setscrews must be checked and retightened where necessary before installation.



Remove the rubber motor stops on the bottom of the fan before installing the blades or testing the motor.



To reduce the risk of fire or electric shock,do not use this fan with any solid-state speed control device.



To avoid possible electrical shock,turn the electricity off at the main fuse box before wiring.If you feel you do not have enough electrical wiring knowledge or experience,contact a licensed electrician.




Electrical diagrams are for reference only.Optional use of any light kit shall be UL-listed and marked suitable for use with this fan.




To reduce the risk of fire,electric shock,or personal injury.mount to outlet box marked' Acceptable for fan support of 35 lbs.(15.9 kg) or less."and use the screws provided with the outlet box.

# 2\_Installation Instructions

## 2.1\_Pre-installation

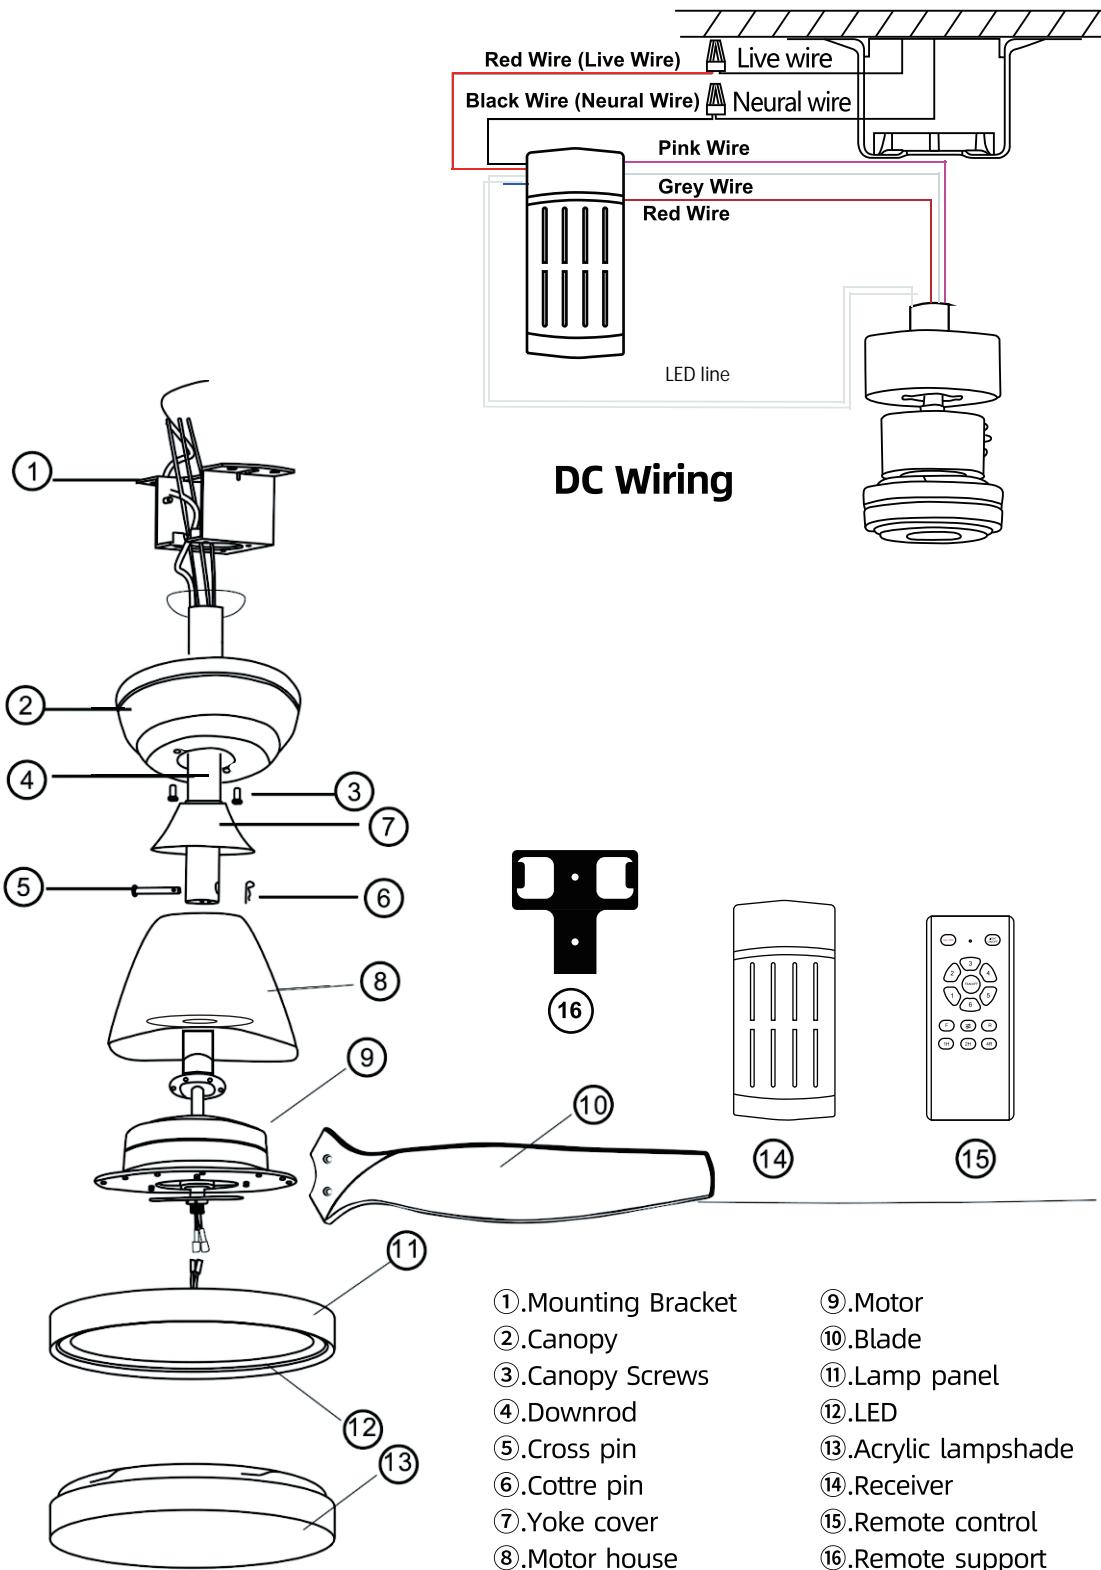


## 2.2\_Tools Needed

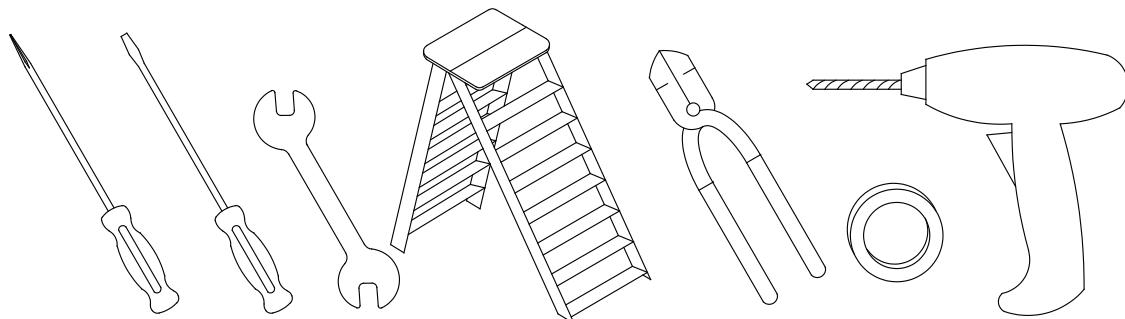

You may need the tools below:

Screwdrivers      Wrench      Ladder  
Wire Strippers      Insulation Tape      Power drill

## 2.3\_Parts Inventory

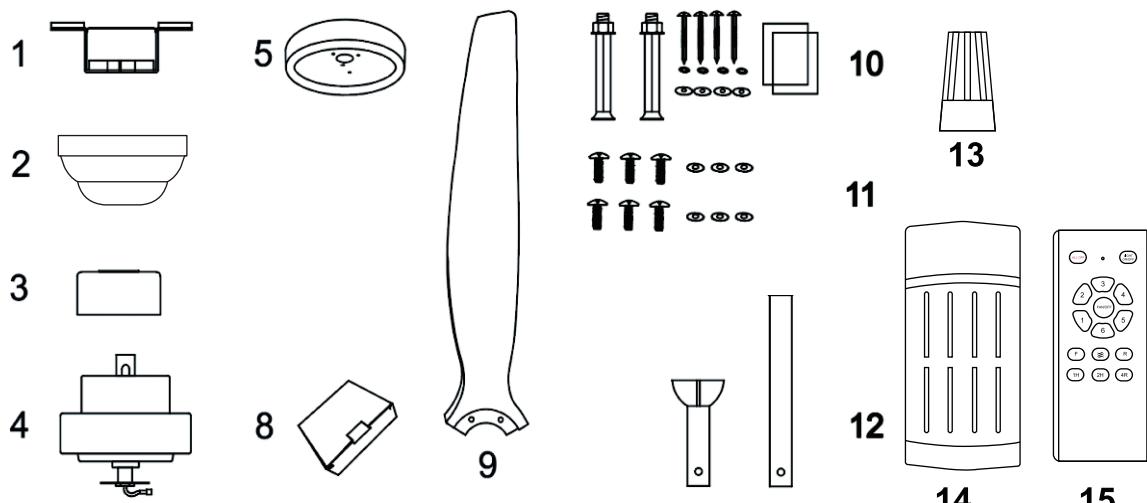


- |                             |   |   |    |
|-----------------------------|---|---|----|
| 1. Mounting Bracket .....   | 1 | 9. Wood Blades .....                      | 5  |
| 2. Top Canopy .....         | 1 | 10. Mounting Screws Kit .....             | 1  |
| 3. Downrod Canopy .....     | 1 | 11. Blades Screws .....                   | 10 |
| 4. Motor Body .....         | 1 | 12. Downrods(5"/10") .....                | 1  |
| 5. Light Mounting Box ..... | 1 | 13. Plastic wire nut (not to scale) ..... | 2  |
| 6. Not Applicable .....     |   | 14. Receiver .....                        | 1  |
| 7. Not Applicable .....     |   | 15. Remote control .....                  | 1  |
| 8. Remote Control Kit ..... | 1 |   |    |

## 2.4 Installation of the hanging bracket(suspension part)

### 2.4.1\_Woodenceling

Mounting Bracket<A>

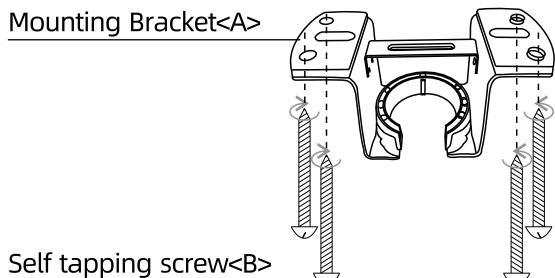

For wooden ceiling,use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket (selection is made according to actual requirements of the customers).

### 2.4.2\_STEP 1A-WOODEN CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- ①.Use the Mounting Bracket (A) as a guide,mark the spots where the 4 Self Tapping Screws (B) will be drilled.
- ②.Remove the Mounting Bracket (A),drill 4 holes for 3MM diameter,install the mounting bracket onto wooden ceiling with the 4 Self Tapping Screws (B).




**IMPORTANT :**

**SCREWS MUST BE TIGHTENED TILL SNUG**

### 2.4.3\_CONCRETE CEILING

Mounting Bracket<A>

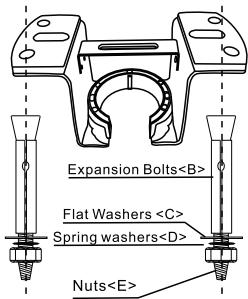

**Note:** According to the ceiling of different materials, use different screws to fix the hanging bracket.Don't fix the hanging bracket on the wood ceiling less than 12MM to prevent danger caused by loosening of screws.After the hanging bracket is completed, ensure that it can withstand the tension test of more than 68KG for safety.

For concrete ceiling,use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

### 2.4.4\_STEP 2A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- ①.Use the Mounting Bracket(A) as a guide, mark the spots where the 4 Expansion Bolts (B) will be drilled.
- ②.Remove the Mounting Bracket(A),drill 4 holes and insert 4 Expansion Bolts (2) into the concrete ceiling,install the mounting bracket and secure with Flat Washers (C), Spring Washers (D) and Nuts (E).

**IMPORTANT:SCREWS & NUTS MUST BE**






**TIGHTENED TILL SNUG**

## 2.5\_Install the hanging part of the ceiling fan.

### 2.5.1\_Install downrod assembly


Phillips screwdriver

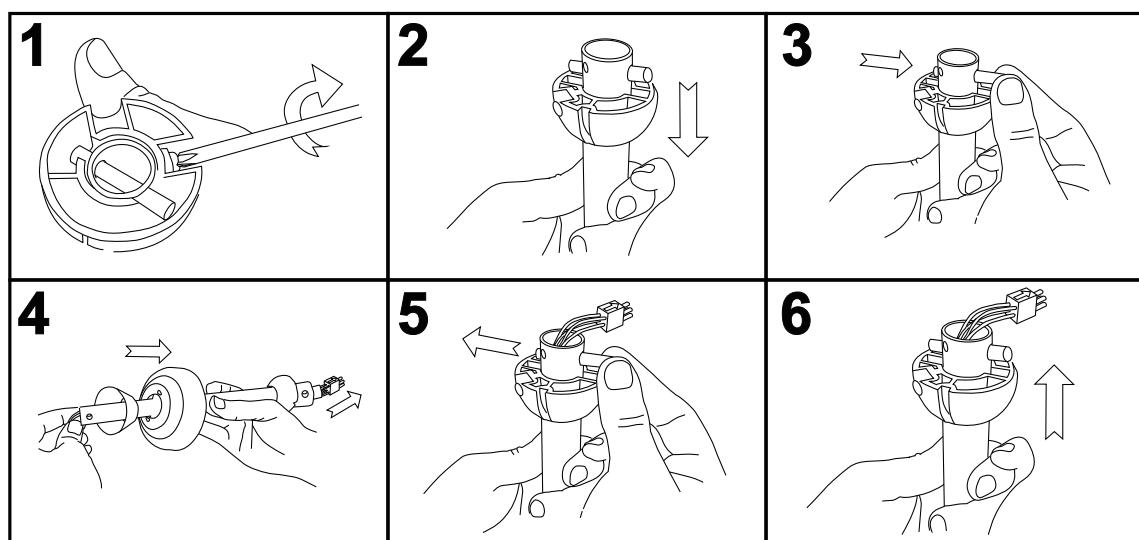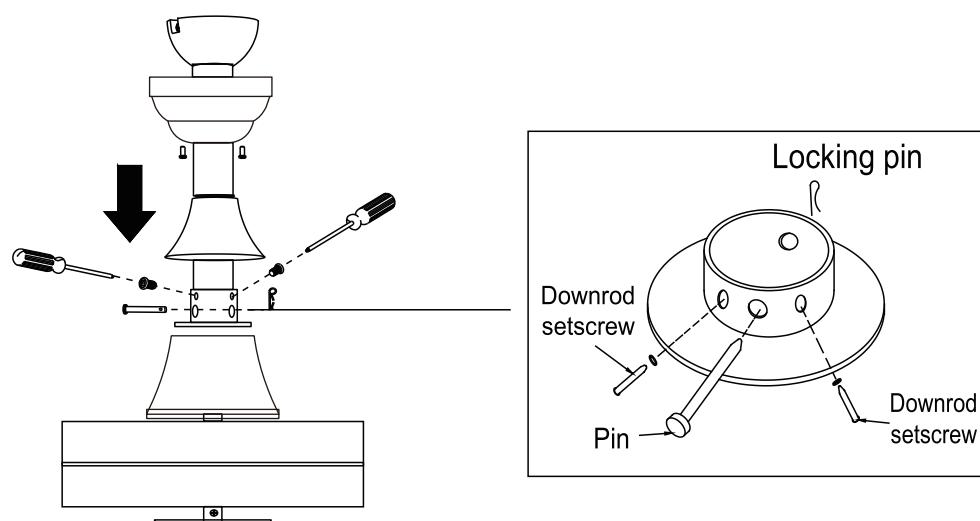

- ①.Thread the suspender through the suspended clock and coupling cover .
- ②.Then insert the tail of the suspender from the lifting head of the motor.
- ③.After the lateral pin is threaded out from the suspendedhead position,insert R type pin.
- ④.Tighten the lifting head screws.
- ⑤.Hang the fan of the hanging pipe into the hanger.

## 2.6\_Assembly - Hanging the Fan(continued)

### 2.6.1\_Mount Fan to Bracket

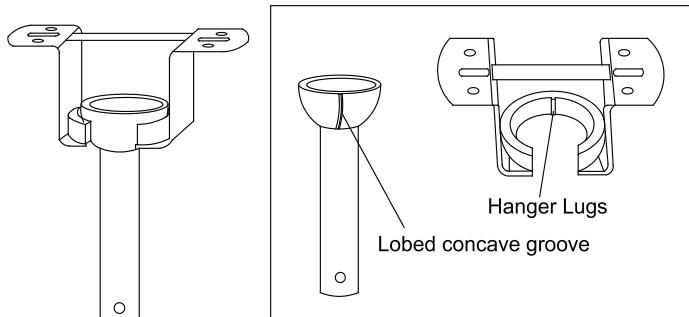


Lift the fan assembly onto the mounting bracket. Ensure the registration slot of the hanger ball is positioned on the stopper of the mounting bracket to prevent the fan from rotating when in operation.




#### Tips:

Seek the help of another person to hold the stepladder and hang the fan body for you.

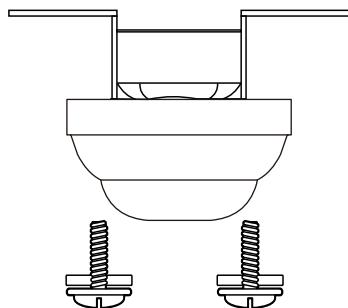


### 2.6.2\_Preparing for mounting

- ① Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L shaped slots.
- ② Remove and save the two canopy screws in the round holes. This will enable you to remove the mounting bracket.

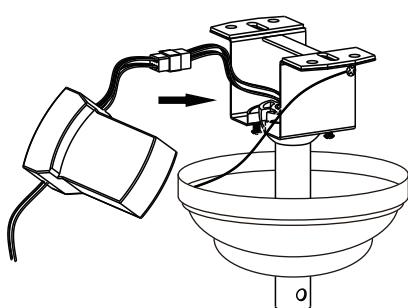


### 2.6.3\_Install remote control

- ① Carefully push the canopy to the bottom of the mounting bracket, make two sliding holes aligned to the two prominent screws on the mounting bracket, and then turn clockwise until tight.
- ② Push the canopy ring to the bottom of the canopy, slide the inner holes aligned to the two prominent screws on the mounting bracket again, and turn the canopy ring clockwise until tight.

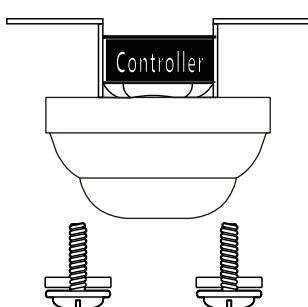

### 2.6.4\_Preparing for mounting


- ① Remove the mounting bracket from the canopy by Controller loosening the two canopy screws located in the L shaped slots.
- ② Remove and save the two canopy screws in the round holes. This will enable you to remove the mounting bracket.



Phillips screwdriver

## 2.7 Assembly - Attaching the Fan Blades

### 2.7.1 Fastening the blade to the motor

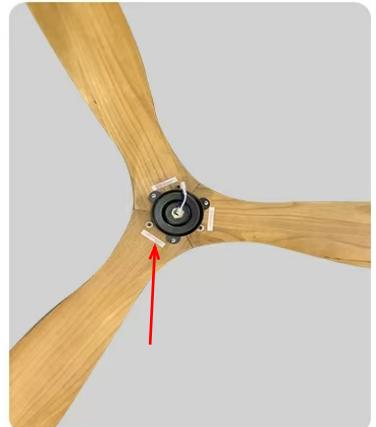

OK


**X**

The label surface should be attached to the motor

Insert a blade screw from the package through the blade hole and position it under the motor so that the screw is aligned with the "center" hole position of any group of two screw holes.

**1.** Fasten the Blade to the fan-motor assembly by inserting the alignment post into the slot on the bottom of the motor and tightening the pre-installed Blade screws.

**2.** Repeat this step for the remaining blade assemblies.





Phillips screwdriver

Attention: The opening of the leaf must face itself


## 2.8 Assembly - Attaching the Lights

### 2.8.1 Install the safety buckle

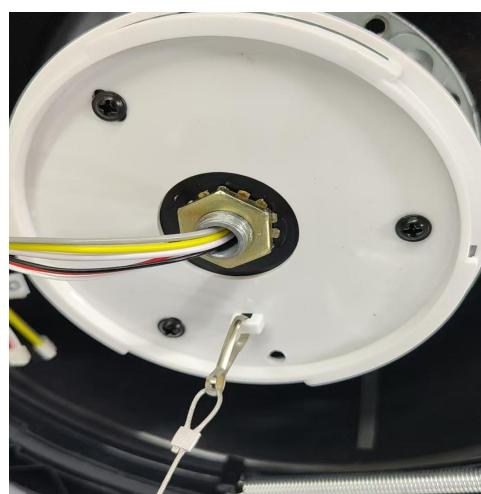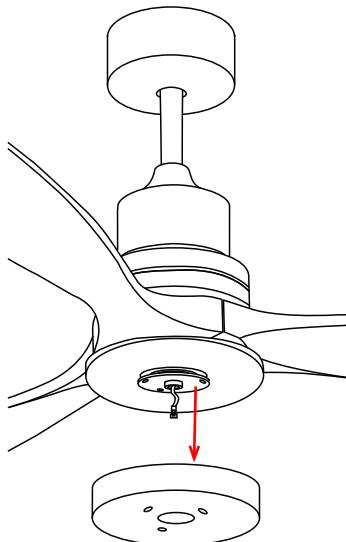

Connect the safety buckle to the host

## 2.8.2\_Connecting lamp wire

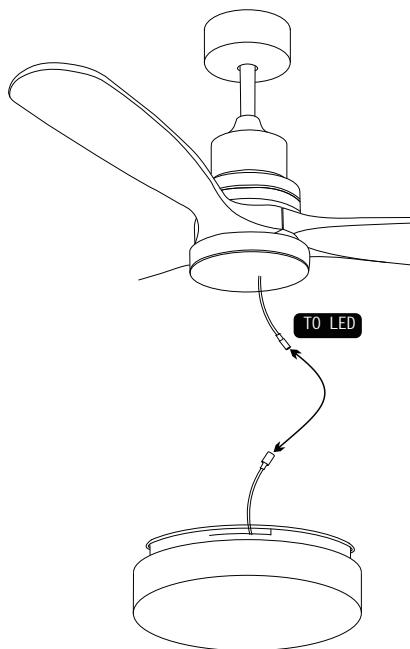


### CAUTION:

To reduce the risk of electric shock, disconnect the electrical circuit to the fan before installing the light fixture.

Insert the "led" line in the switching box of the motor into the "led" line of the light and tie insuklated rubber tape.

## 2.8.3\_Install the lamp cover

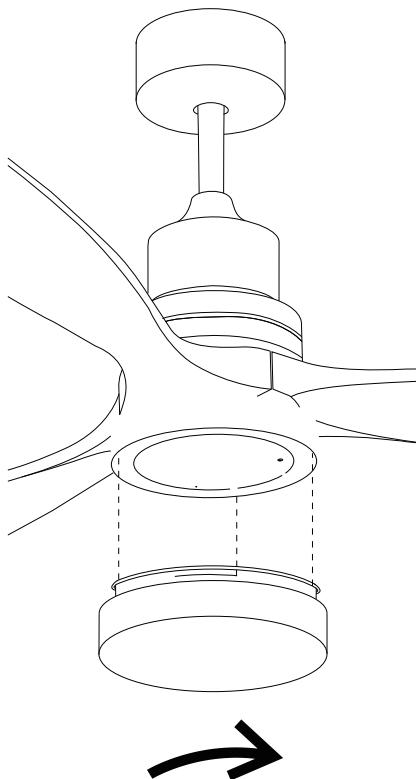

### WARNING:

Allow the shatter resistant bowl to cool completely before removing.



### CAUTION:

Make sure the power is off before attaching or removing the shatter resistant bowl.




### CAUTION:

Do not over tighten the hex nut, over tightening the hex nut may cause the shatter resistant bowl to break.

Install the lamp cover as shown

# Remote control operation instructions

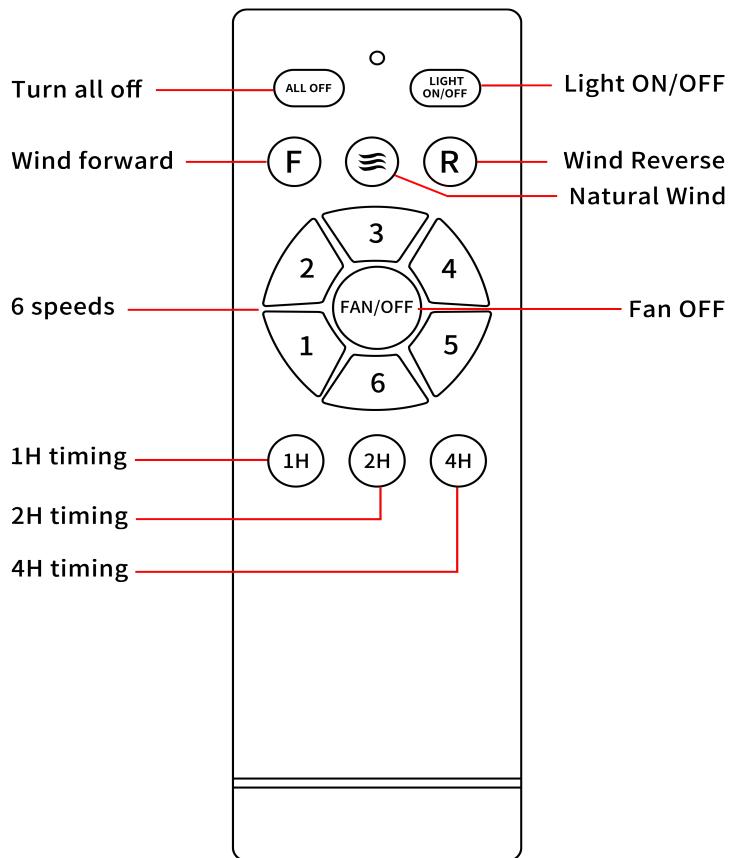

## Warmer Tip:

1. If the remote control is used normally, there is no need to perform code matching operation;
2. If the following three situations occur, you need to try to match the code:
  - (1) When the remote control cannot control the fan normally;
  - (2) After the APP network configuration fails, the remote control cannot control the fan;
  - (3) When you don't use it for a long time and the remote control can't control the fan.



## Solution to remote control pairing failure:

- Step 1: Turn off the wall switch and wait for 10 seconds. Remember not to switch the power on and off continuously.
- Step 2: Turn on the wall switch and wait for the light to light up for 2 seconds.
- Step 3: Immediately press and hold the " 2H " button on the remote control for about 5-20 seconds. The light flashes to indicate successful pairing.