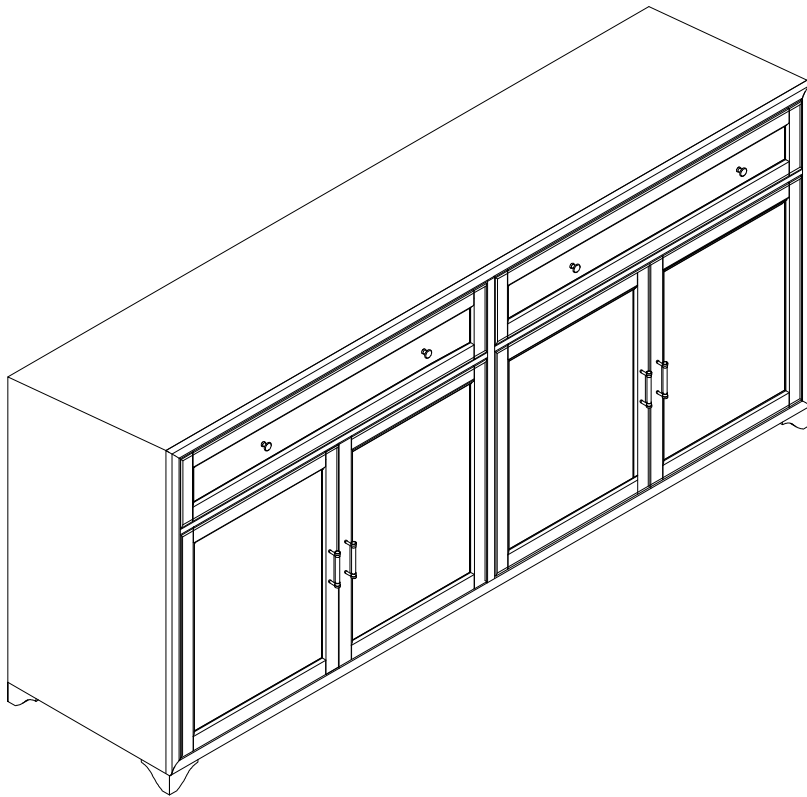

















CROSLEY

FURNITURE











Sideboard CF4209



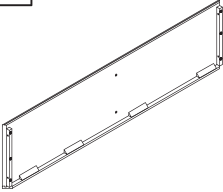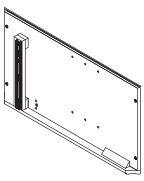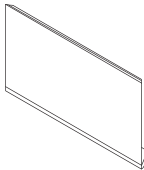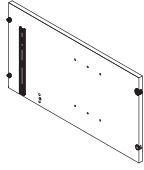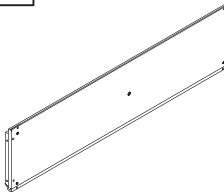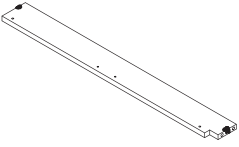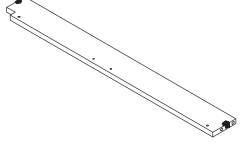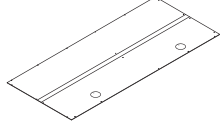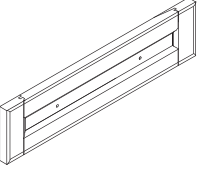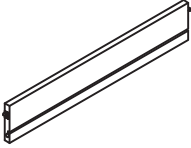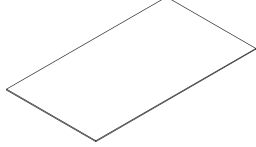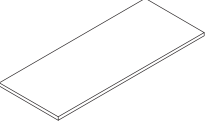PART LIST


A		B		C		D2		E	
Top Panel 1 PC		Left Panel 1 PC		Right Panel 1 PC		Partition Panel 1 PC		Bottom Panel 1 PC	
F		G		H2		I		J	
Left Cross Rail 1 PC		Right Cross Rail 1 PC		Back Panel 1 PC		Left Door Panel 2 PCS		Right Door Panel 2 PCS	
K		L2		M2		N2		O2	
Drawer Front Panel 2 PCS		Drawer Left Panel 2 PCS		Drawer Right Panel 2 PCS		Drawer Back Panel 2 PCS		Drawer Bottom Panel 2 PCS	
P2		Q2		R		S			
Drawer Bottom Rail 2 PCS		Adjustable Shelf 2 PCS		Leg 4 PCS		Support Leg 1 PC			

HARDWARE LIST

#1  Ø8*30mm	#2  Ø6*30mm	#3 	#4 	#5 
Wood Dowel 10 PCS (Extra 1)	Small Wood Dowel 12 PCS (Extra 1)	Large Wood Dowel 1 PC	Magnet 2 PCS	Round Head Screw 4 PCS (Extra 1)
#6 	#7 	#8 	#9 	#10 
Handle 4 PCS	Knob 4 PCS	Round Head Bolt 12 PCS (Extra 1)	Bolt 12 PCS (Extra 1)	Flat Washer 4 PCS
#11 	#12 	#13 	#14 	#15 
Spring Washer 4 PCS	Shelf Holder 8 PCS	Screw 22 PCS (Extra 1)	Adjustable Leveler 5 PCS	Allen Wrench 1 PC
#16  Safety Strap Kit 1 PC				

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

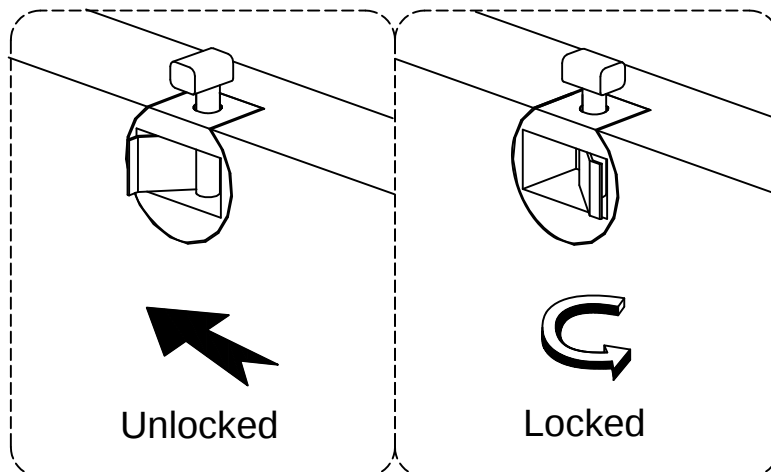Please do not use tools to assemble this unit unless specifically indicated.




Reference the images above any time the instructions state "lock the hardware".
Note: Be sure to check all hardware is locked when completed.

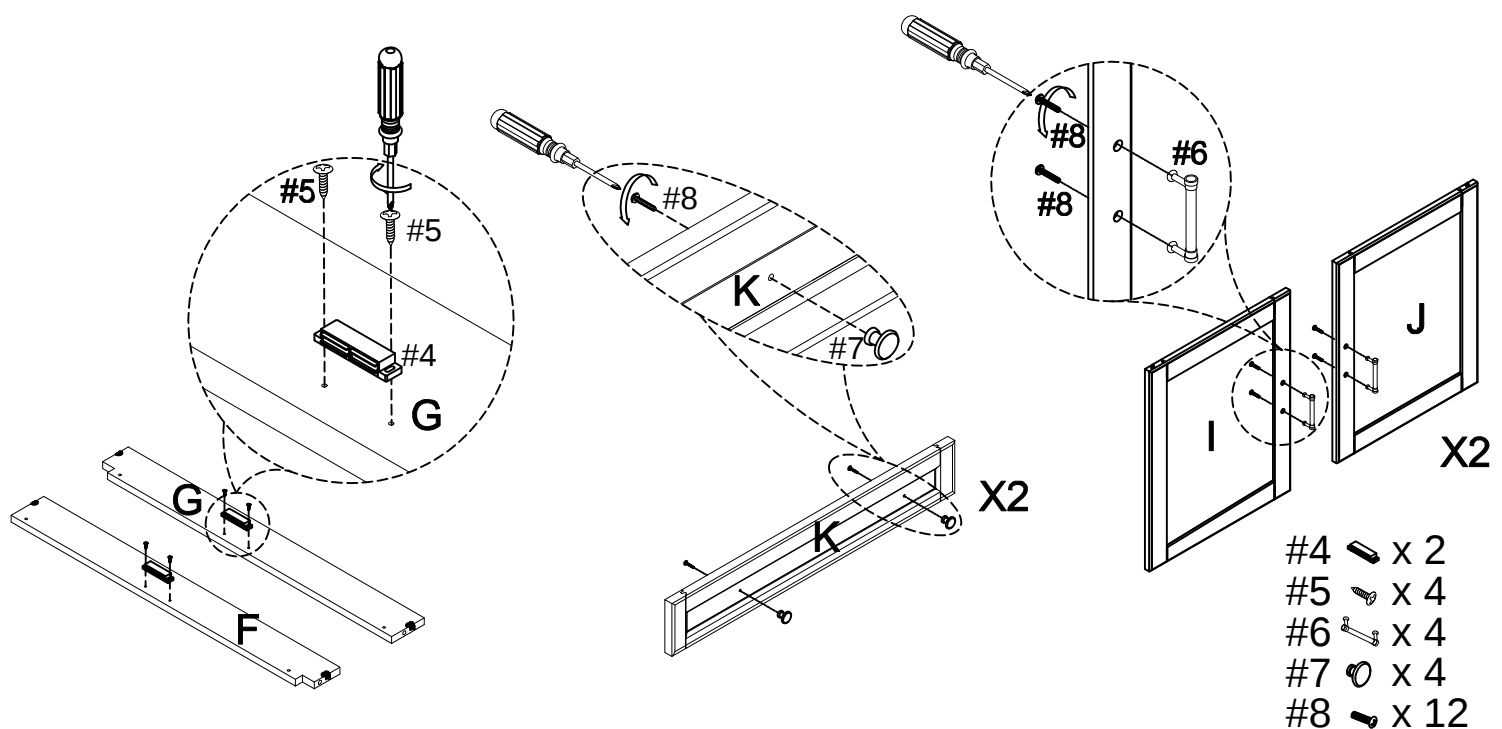Step 1. Attach magnets (part #4) to cross rails (parts F & G) using round head screws (part #5) and phillips head screwdriver. Attach handles (part #6) to door panels (parts I & J) using round head bolts (part #8) and phillips head screwdriver. Attach knobs (part #7) to drawer front panels (part K) using round head bolts (part #8) and phillips head screwdriver.




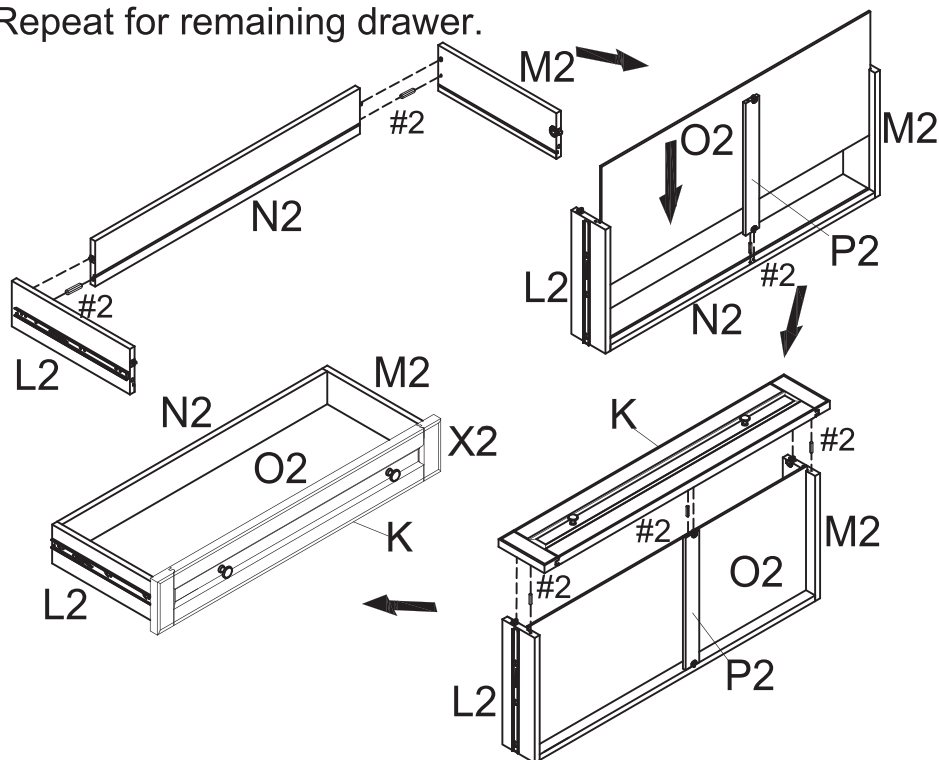Step 2. Attach drawer panels (parts L2 & M2) to drawer back panel (part N2) using small wood dowels (part #2) and lock the hardware. Slide drawer bottom panel (part O2) into grooves of assembled unit (parts L2, M2 & N2). Attach drawer bottom rail (part P2) to drawer back panel (part N2) using small wood dowel (part #2) and lock the hardware. Attach drawer front panel (part K) to assembled (parts L2, M2, O2 & P2) using small wood dowels (part #2) and lock the hardware. Repeat for remaining drawer.




#2  x 12

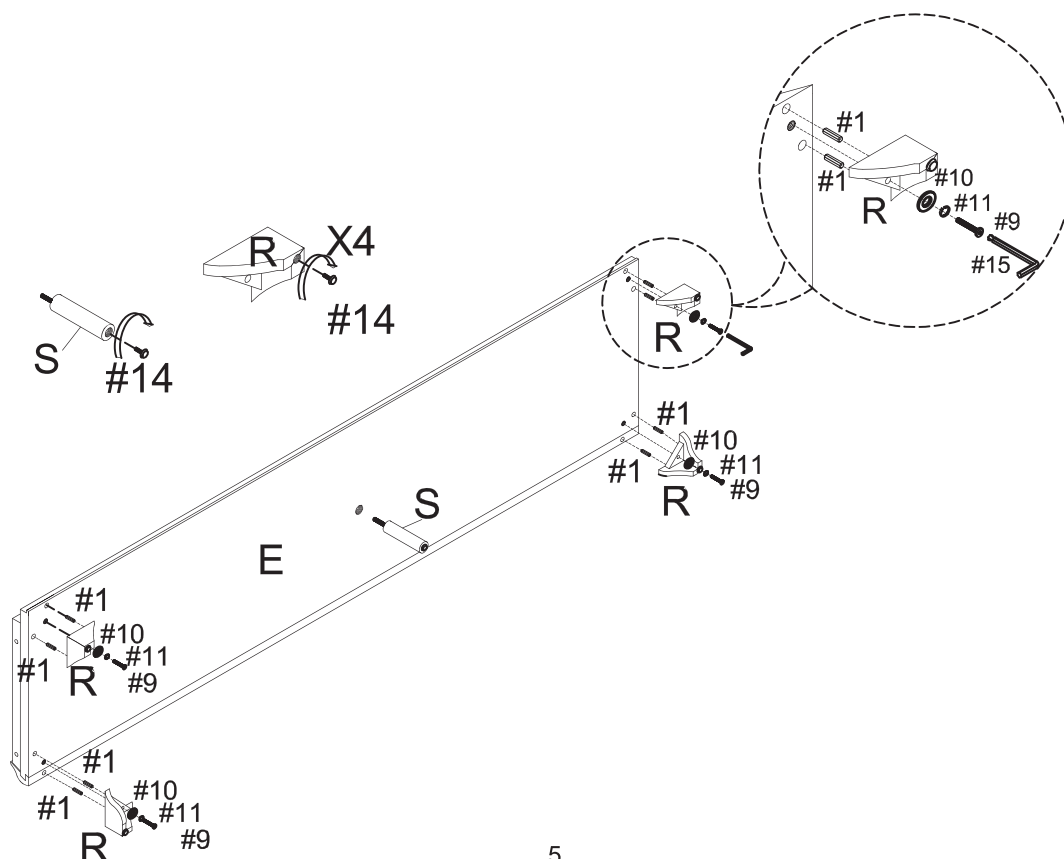Step 3. Attach adjustable levelers (part #14) to legs (parts R & S). Attach legs (part R) to bottom panel (part E) using wood dowels (part #1), bolts (part #9), flat washers (part #10), spring washers (part #11) and allen wrench (part #15). Attach support leg (part S) to bottom panel (part E).




#1  x 8
 #9  x 4
 #10  x 4
 #11  x 4
 #14  x 5
 #15  x 1

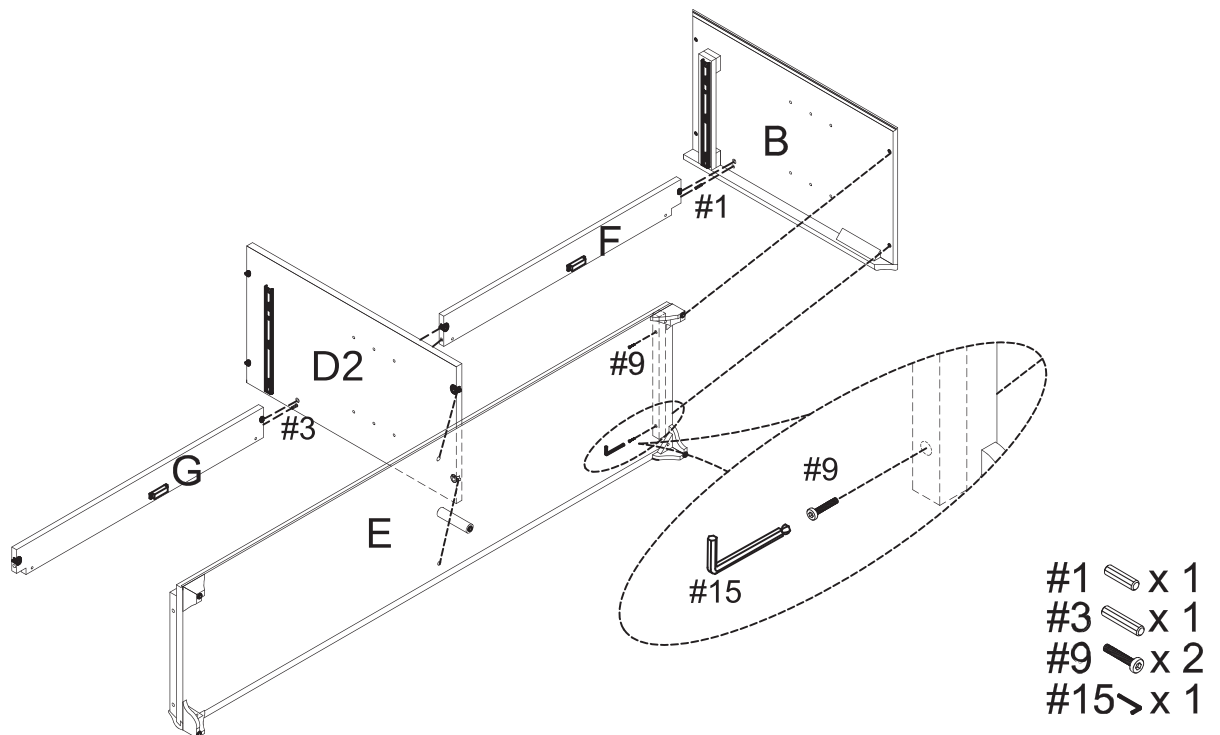
Step 4. Attach partition panel (part D2) to bottom panel (part E) and lock the hardware. Attach left cross rail (part F) to partition panel (part D2) and lock the hardware. Attach left panel (part B) to bottom panel (part E) and left cross rail (part F) using wood dowel (part #1), bolts (part #9), allen wrench (part #15) and lock the hardware. Attach right cross rail (part G) to partition panel (part D2) using large wood dowel (part #3) and lock the hardware.



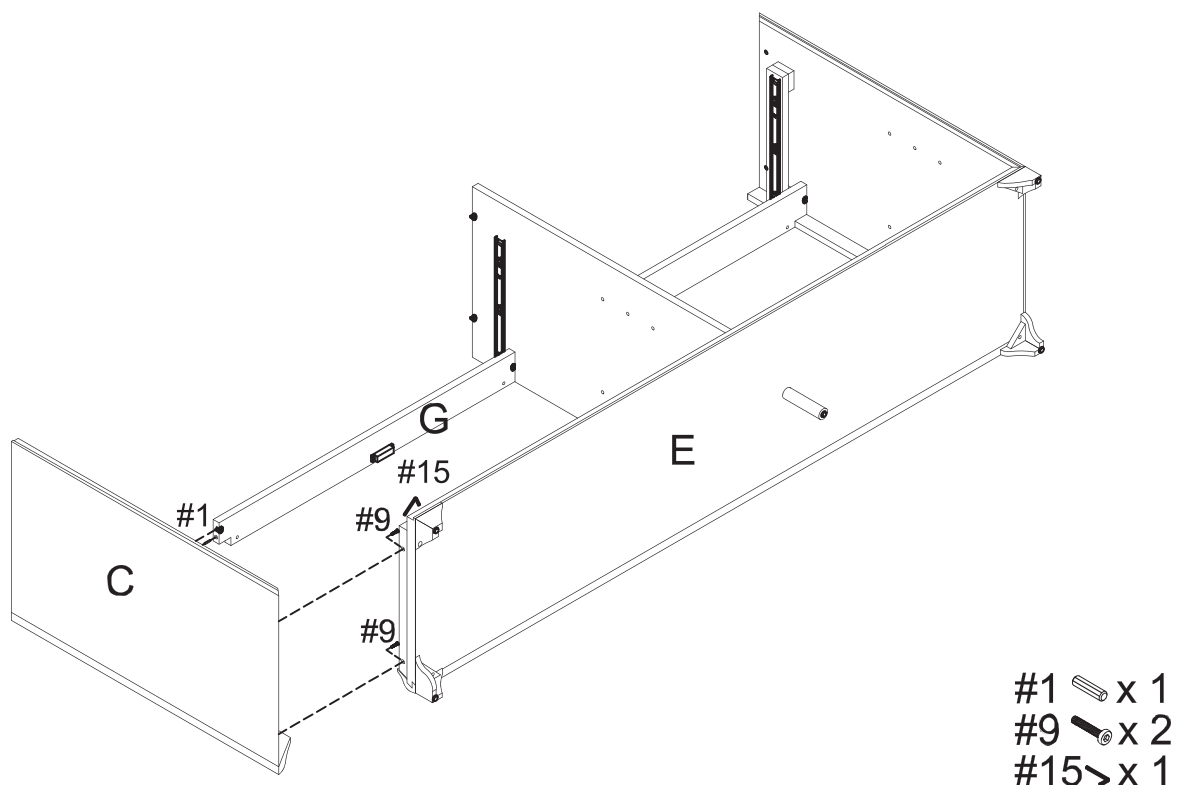
Step 5. Attach right panel (part C) to bottom panel (part E) and right cross rail (part G) using wood dowel (part #1), bolts (part #9), allen wrench (part #15) and lock the hardware.



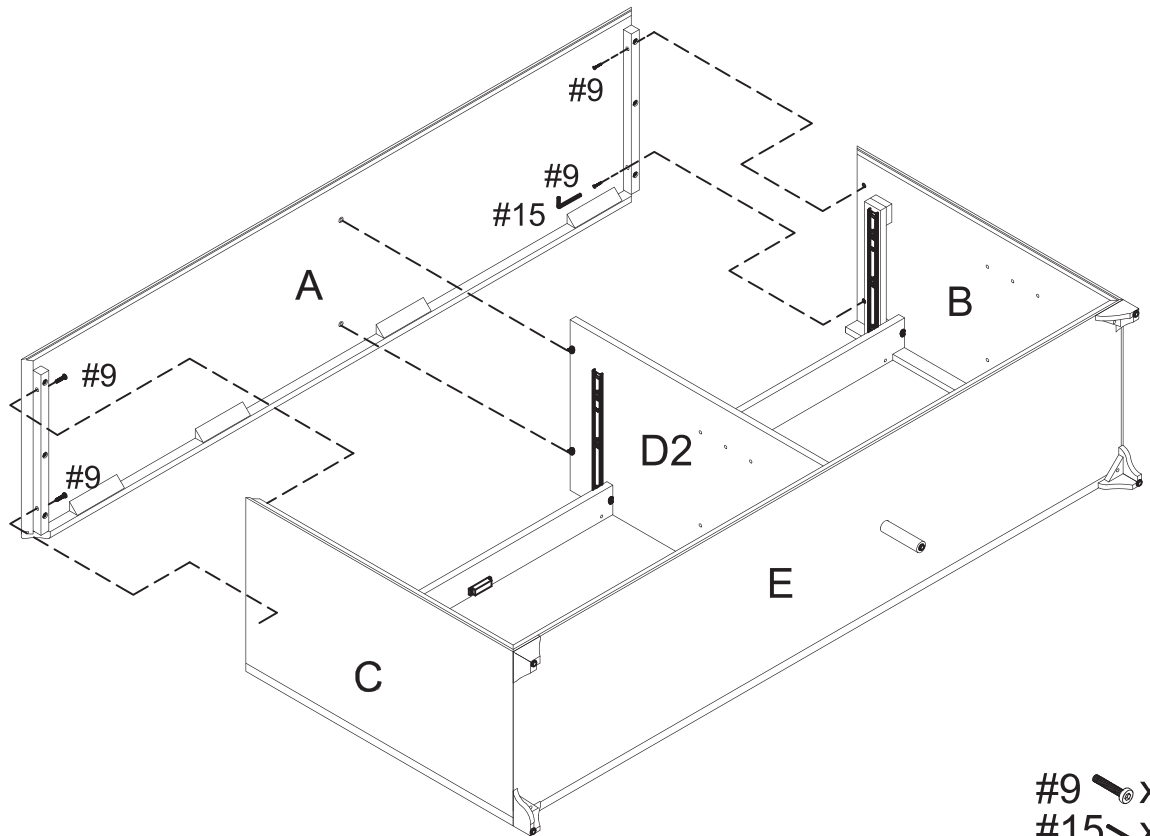Step 6. Attach top panel (part A) to assembled unit (parts B, C & D2) using bolts (part #9), allen wrench (part #15) and lock the hardware.




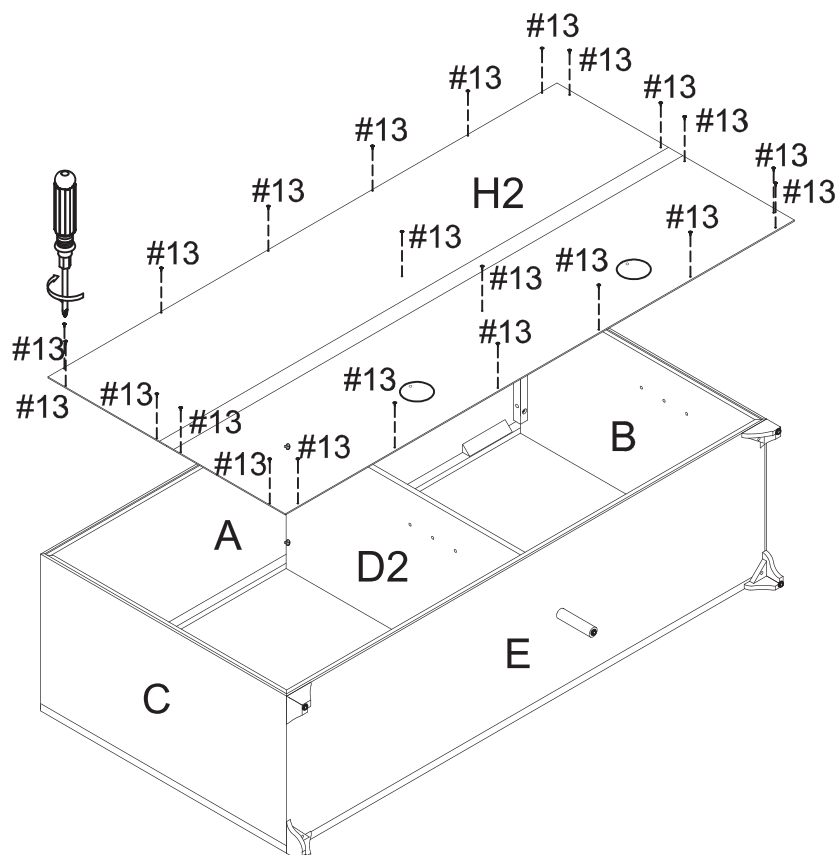Step 7. Attach back panel (part H2) to assembled unit (parts A, B, C, D2 & E) using screws (part #13) and phillips head screwdriver.




Step 8. Carefully turn unit upright. Slide assembled drawers into place.

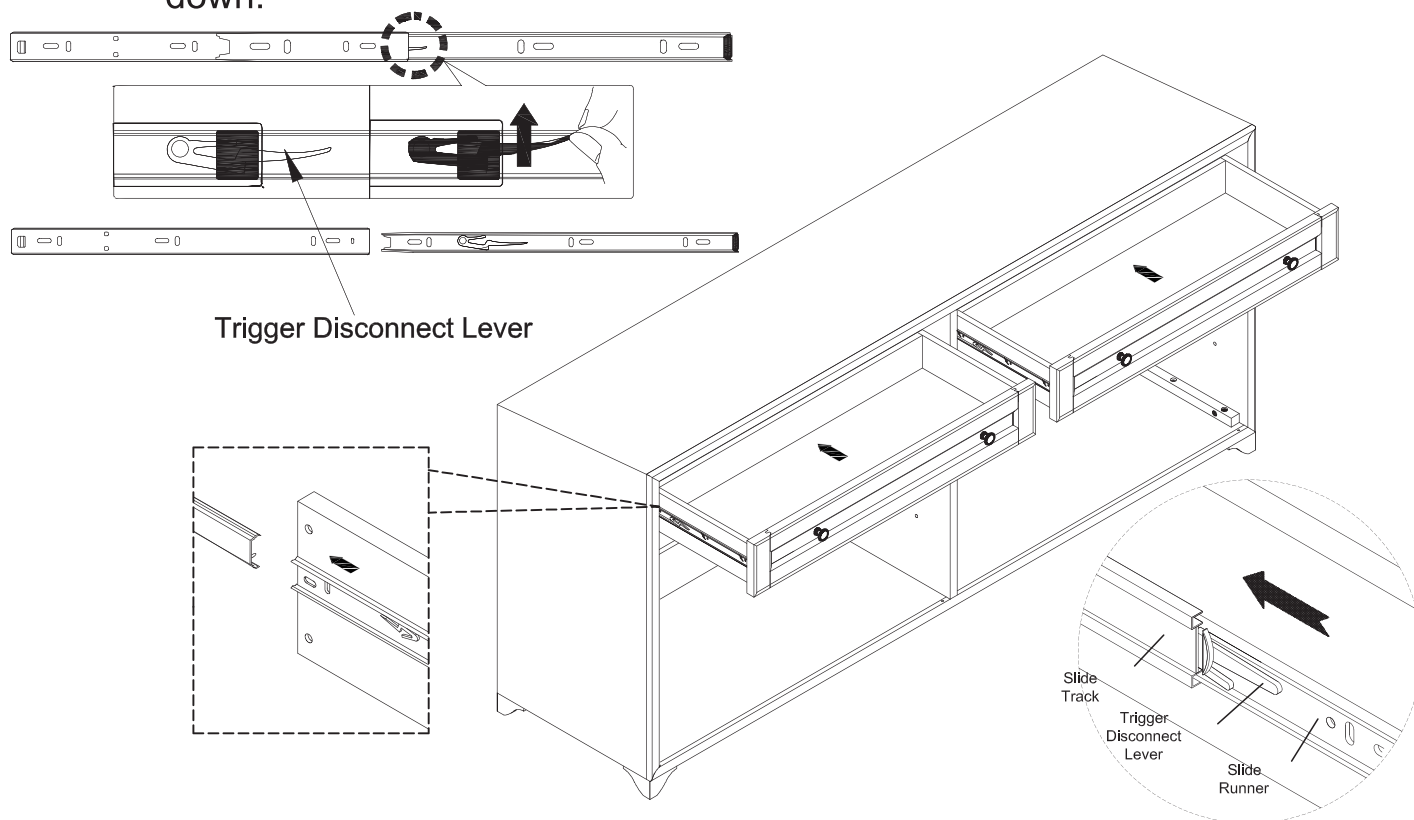Note: To release trigger disconnect levers push one side up and the other down.



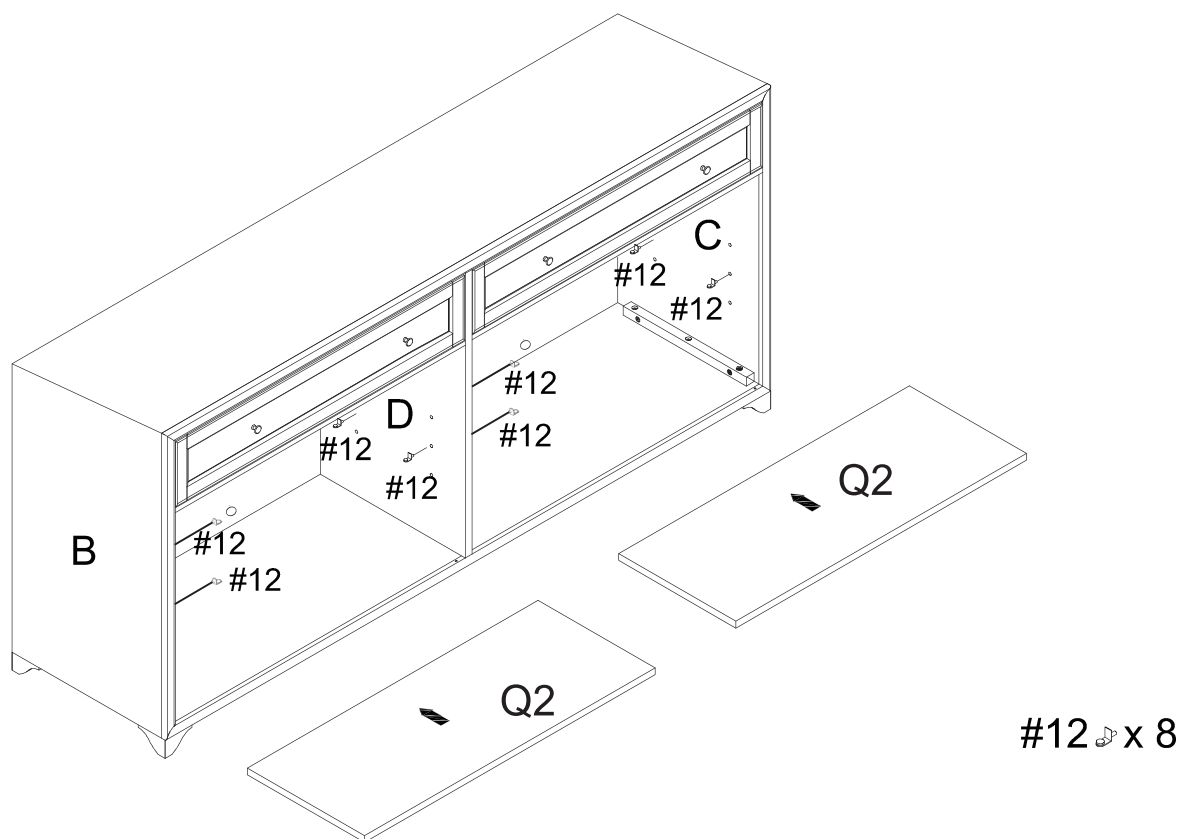Step 9. Place shelf holders (part #12) into desired position and then slide adjustable shelves (part Q2) into place.






Step 10. Attach door panels (parts I & J) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part E). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of cross rails (parts F & G) .

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

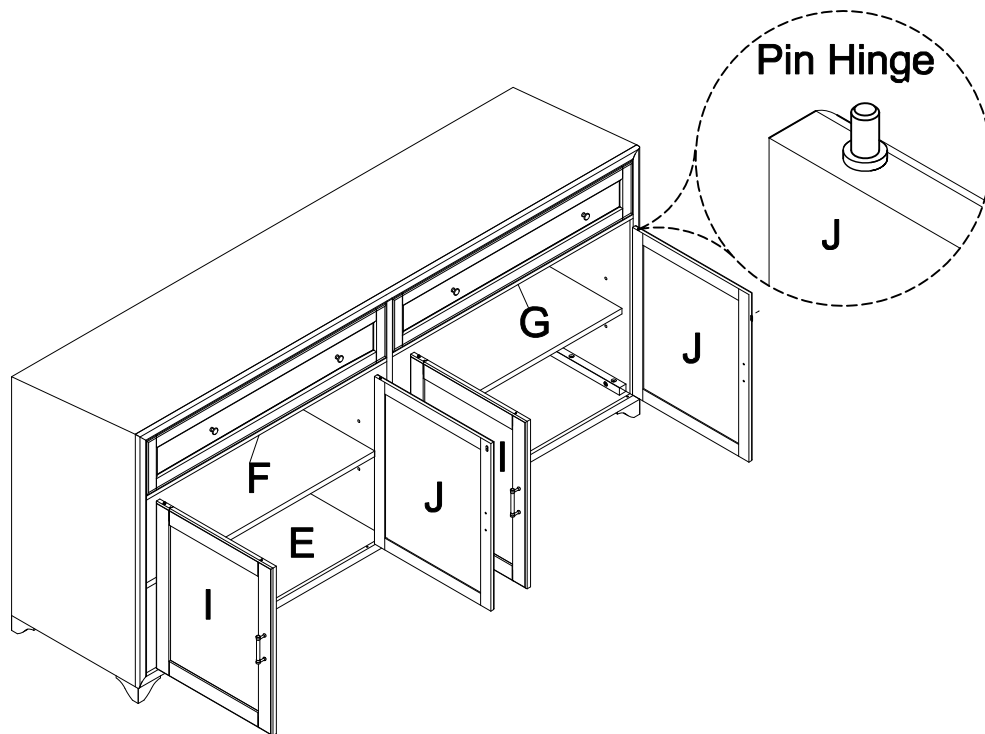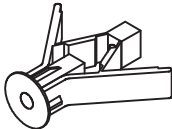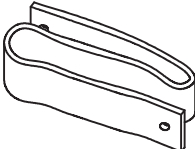Important: Safety strap kit (part #16) must be installed to prevent tipping, damage and/or injury.



#16	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

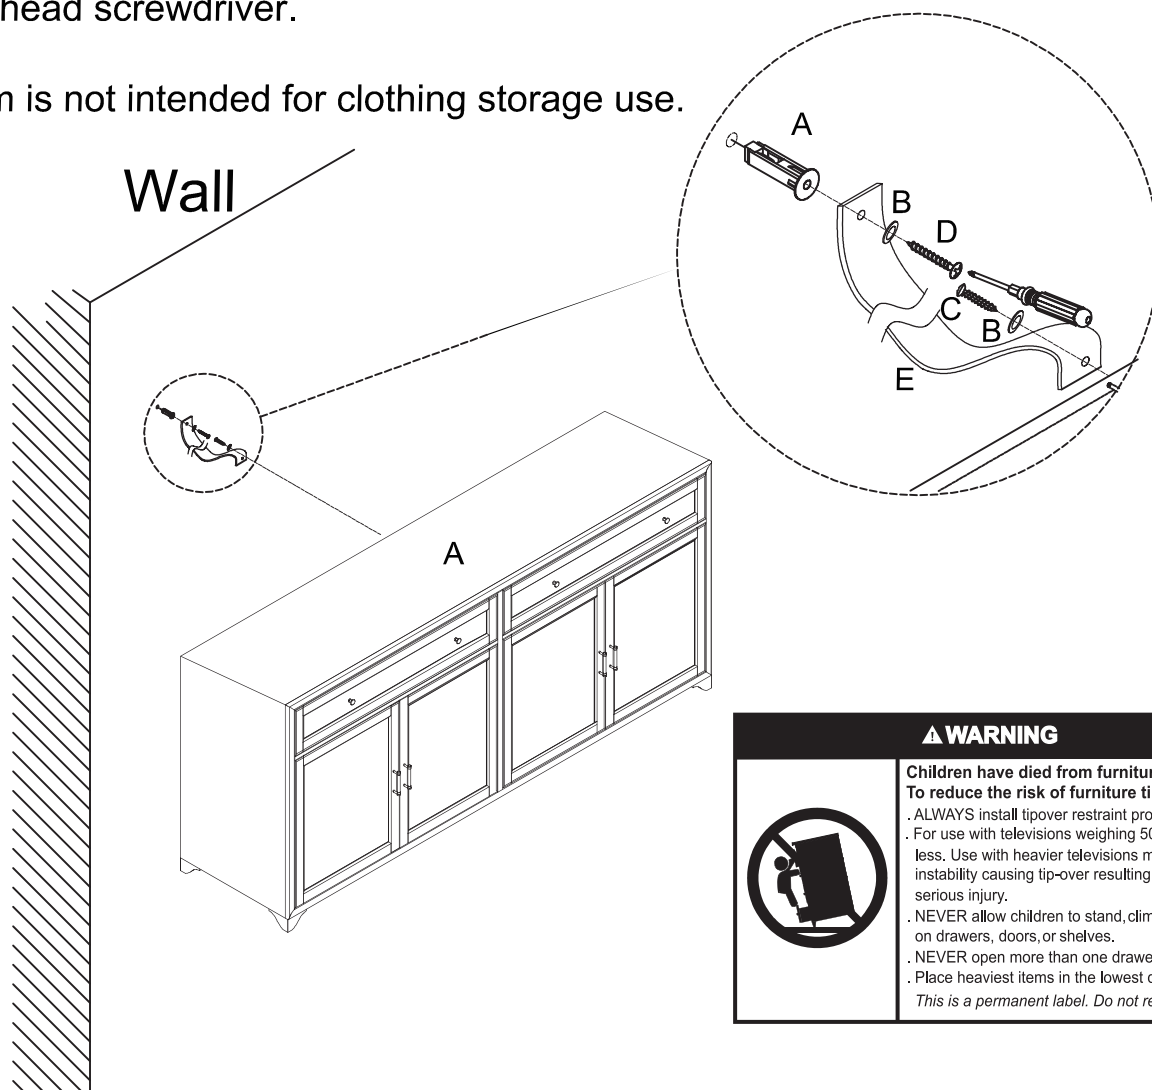
Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1.Insert short screw (C) through washer (B) and safety wall strap (E) and attach to top panel (part A) using phillips head screwdriver.

2.Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.

3.Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.



⚠ WARNING



Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!