


Thank you for your purchase!



Motorized Adjustable Bed Base Frame

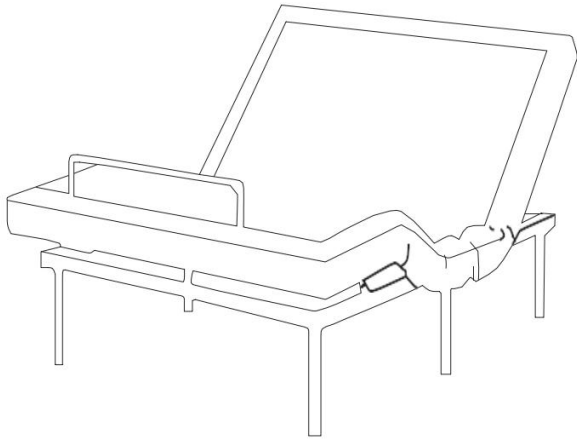

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.

Have a Question/Concern?

Quality products and first-class customer service are the cornerstone of long-lasting consumer relationships. We strive toward excellence in all we do and want you to be completely satisfied with your purchase.

Please contact our exceptional Customer Experience Agents at the email address or phone number shown below to assist you with any product questions or issues before requesting a return.

We look forward to serving you in a friendly, efficient manner to resolve any issues you may have.

Customer Service Email: CustomerExperience@belnick.com

Customer Service Phone: 866-552-2810

Our Warranty Statement

This warranty covers manufacturing defects associated with your new product. The product is warranted from the original purchase date and to the original purchaser for normal usage, according to the below-referenced specifications and limitations.

- Non-moving metal parts are warranted for 5 years.
- Component parts including pneumatic cylinder, control mechanism, base and casters are warranted for 2 years.
- All other items are warranted for 1 year.

Normal usage means use in compliance with the restrictions and weight limits specified for the product. In the absence of product-specific restrictions and weight limits, normal usage means use for no more than forty hours per week by persons weighing 250 lbs. or less. Coverage terminates if the product is sold or otherwise transferred. Repairs made by parties other than Belnick also void this warranty.

This warranty will not cover: (1) labor, freight, or damage from misuse, abuse, negligence, alteration, assembly, installation, attachments, accident, vandalism, acts of nature or any other event beyond the control of Belnick; (2) tearing, scratching, scuffing, or blemishing of leather or fabric; (3) cosmetic damage that may result from normal usage; (4) damage attributable to use by persons exceeding specified weight limits or commercial use exceeding forty hours per week; or (5) rust or other damage caused by exposure to moisture. The user assumes all risk of injury resulting from use of this product. Liability for incidental or consequential damage is excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Thank you for your purchase!

Safety Precautions

Thank you for purchasing the adjustable bed.

PLEASE READ THE FOLLOWING INFORMATION CAREFULLY BEFORE USING THIS PRODUCT

If unable to understand warning, cautions, and/or instructions, contact the dealer or technical personnel if applicable, before attempting to use the equipment. Otherwise, injury or damage may result.







This product is intended for household use only. This product is covered by a limited ten-years warranty. Coverage is subject to limits and exclusions. See warranty for details.

- Use this product only for its intended purpose.
- Close supervision is necessary when this product is used by or near children or handicapped individuals.
- Never operate this product if it has a damaged cord or plug, or is not working properly. Keep the product, remote control, wires and power supply away from heat.
- Do not use this product in a humid environment. The connector part of the wire, and the gap between the motor and the control box, cannot be exposed to liquid or high humidity.
- Never use this product as a substitute for medical attention or treatment.
- Consult your physician if you have any questions regarding the use of this product.
- Do not use this product to treat any unexplained pain before consulting your physician. Stop using the product if you experience pain or swelling.
- Always unplug the product before attaching or detaching any parts or cleaning it.
- Unplug the power cord and remove the remote control battery when the product is not used for a prolonged period of time.
- Do not let children play with or operate this product.
- Do not allow children or pets underneath the bed.

RADIO FREQUENCY: 2.4 GHz FCC COMPLIANCE:

The wireless equipment of this product conforms to the FCC certification standard.

Parts List

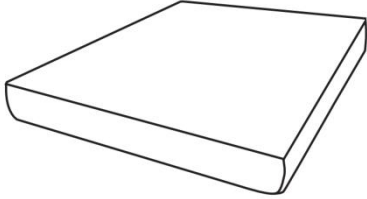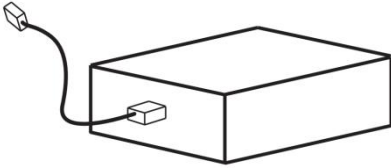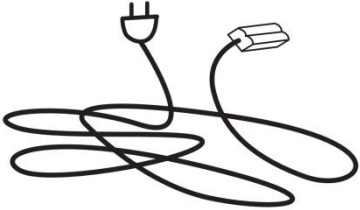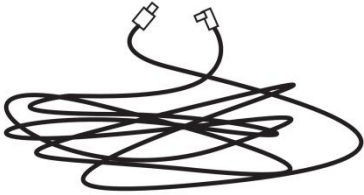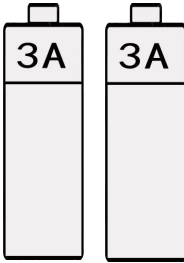		
PART A: Bed platform X 1 pcs	PART B: Mattress rail X 1 pcs	PART C: Legs X 6 pcs
		
PART D: Remote controller X 1 pcs	PART E: Power Supply Box X 1pcs	PART F: Power Cable X 1pcs
		
PART G: DC extension cable X 1 pcs	PART H: AAA batteries X 2 pcs	PART I: User Guide X 1 pcs

Thank you for your purchase!

Assembly

1. Lay the carton flat on the floor and carefully cut it open.



2. Flat the carton so that the open side faces down and take off the carton. Place the bed **Part A** on the floor.



3. Remove and discard the plastic bag. Put together the two pieces of the bed and align them flat on the floor.



4. Cut the zip ties, take out all the part boxes and the mattress rail, and check that you have all the necessary parts according to the parts list.



5. For leg **Part C** assembly push the screw through the triangular brace. Screw in the leg and tighten.



6. First **Part G** DC extension cable connect the control box “Power port” (on the bed), then connect **Part E** power supply box, then **Part E** connect **Part F** power cable, reconnect the **Part F** to your nearby power outlet.





7. Insert **Part H** batteries into the **Part D** remote control. Press the first button (any button). If the motor begins to run, unplug the power supply and turn the bed over to its right side-up position. If the motor does not run, it needs to re-match its code.



Matching code:

Method 1: Cut off the power and waiting for 10 seconds. Then plug the power again. You will see the blue light on the control box (like first picture). At the same time press and hold the buttons that the arrow points of the remote control simultaneously (like the second picture shows). Release them when the white backlight flashes. Finally, if the blue light in the controller turns to green, the code matches.

Method 2: Press twice the controller “PAIR” button that the arrow points to light up the blue light (like the circle shows in the first picture). Then press and hold the buttons that the arrow points of the remote control simultaneously (like the second picture shows). Release them when white backlight flashes. Finally, if the blue light in the controller turns to green, the code matches.

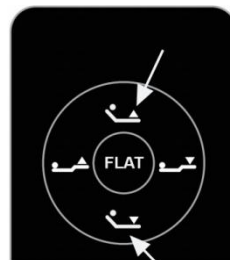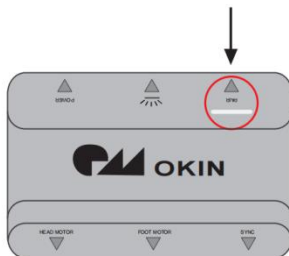


8. Insert the mattress rail **Part B** at the foot of the bed. Then the bed is ready for use.

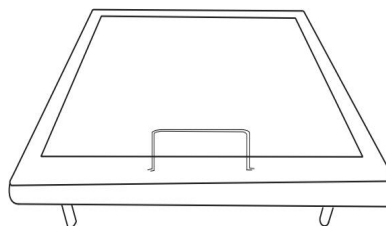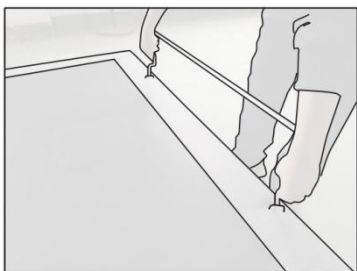

Thank you for your purchase!

Remote Control and Functions:

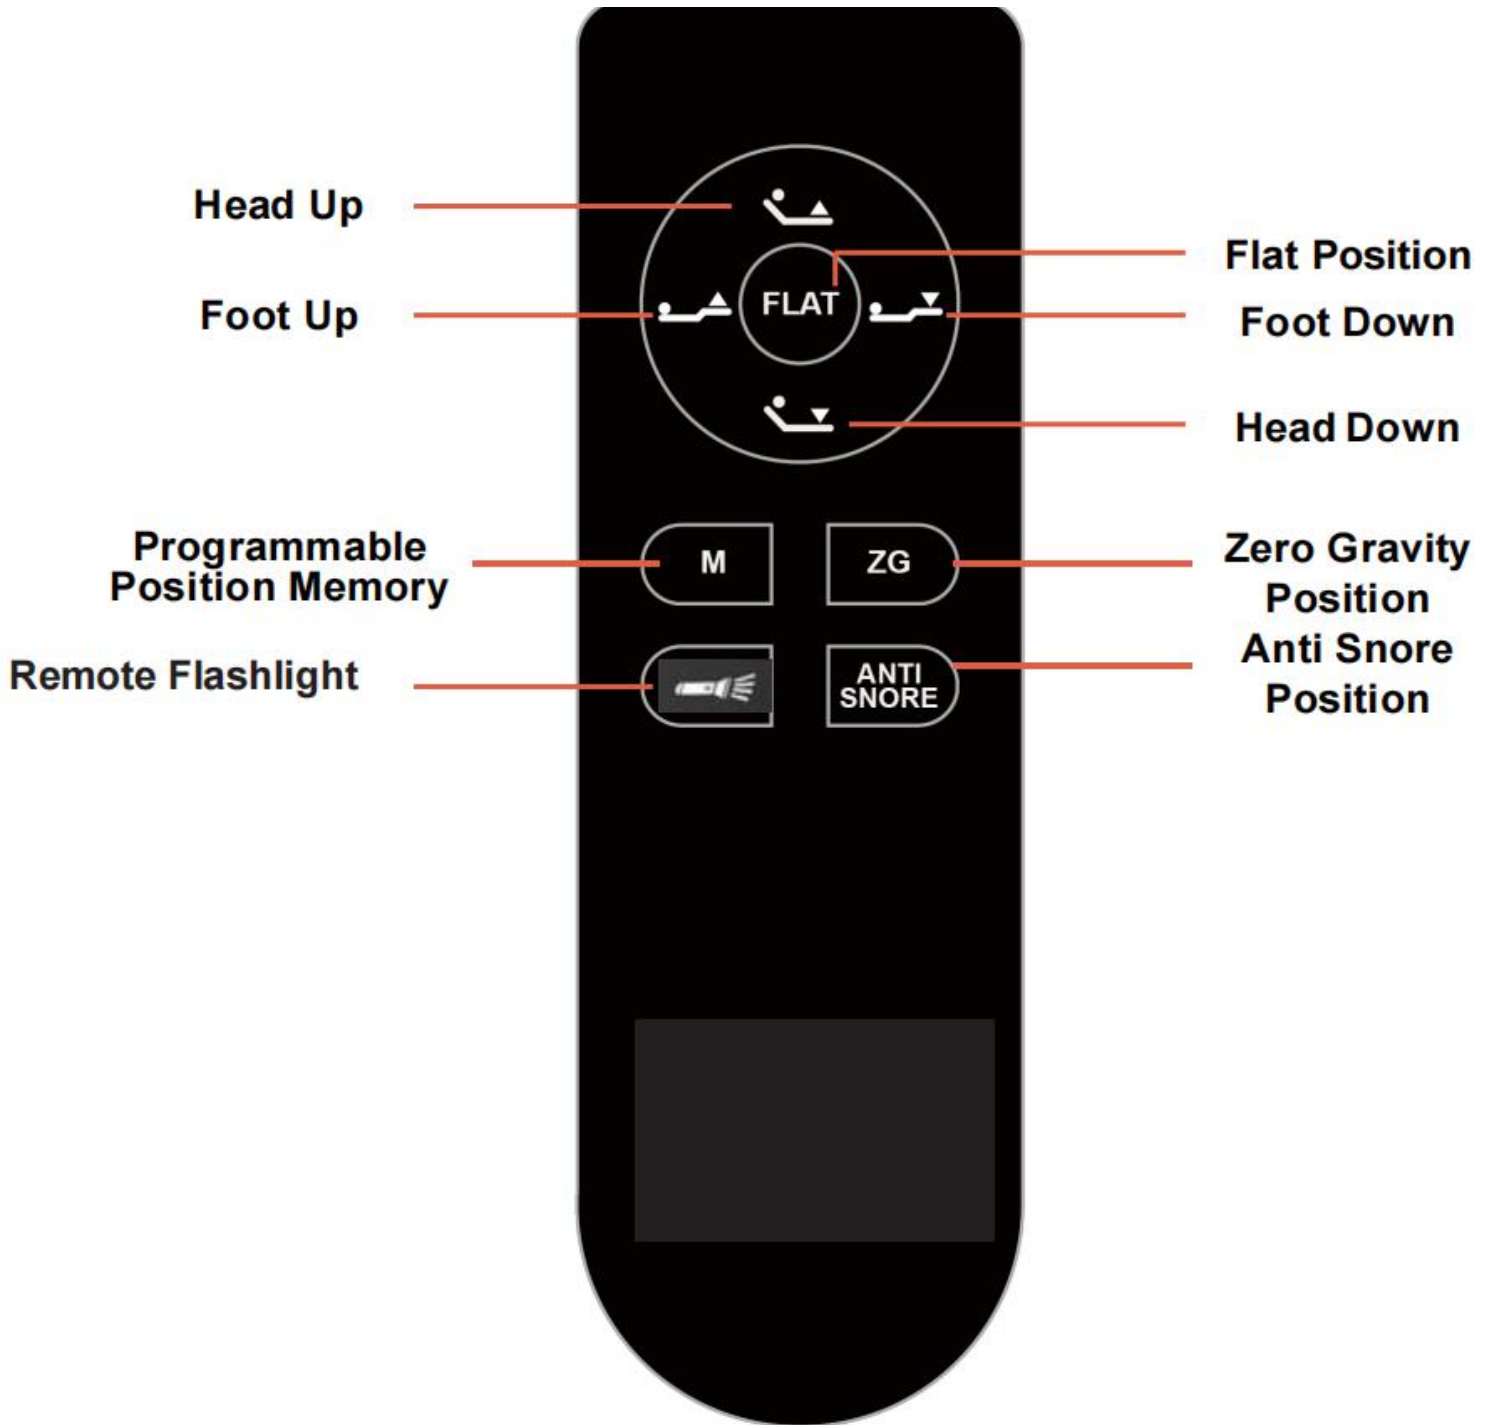

Button	Operation	Button	Operation
	Press and hold to raise the backrest. Let go when the desired position is reached.		Press and hold to raise the footrest. Let go when the desired position is reached.
	Press FLAT button to flatten bed.		Press and hold to lower the footrest. Let go when the desired position is reached.
	Press and hold to lower the backrest. Let go when the desired position is reached.		Click to set a zero gravity position. Position Angle: HEAD-16°, FOOT-35°
	Click to set a user-defined position.		Click to set a Anti Snore Position. Position Angle: HEAD-10°
	Click to turn the LED flashlight on top of the remote on and off.		

Memory Setting:

Setting a memory position if you're not satisfied with the factory setting.

1. Press the FLAT button to flatten the bed. 
2. Adjust the bed to your preferred position by pressing the head and foot up/down buttons.
3. Press and hold button M and let go after you hear the “didi” sound that indicates the setting has been successfully programmed.





Thank you for your purchase!

Split King/Dual Twin XL Sync Instructions

Method 1:

1. Place two(2) Twin XL bases side by side.
2. With one remote, match the code for one bed. Follow the steps in matching code section. Press and hold the two buttons which show in following picture ①
3. Use this remote to code another bed. Follow the steps in matching code section but press and hold the another two buttons which show in following picture ②
4. You can use one remote to control two beds.

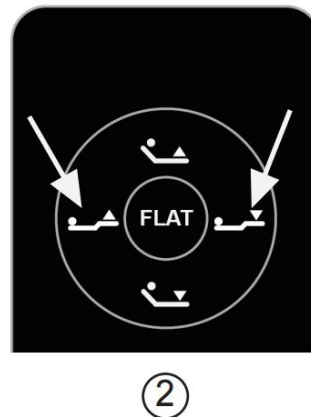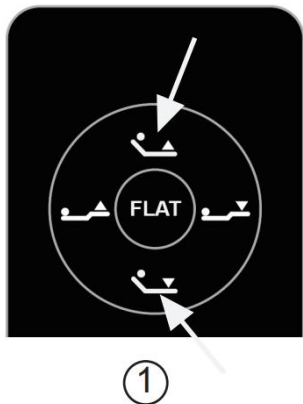

Method 2:

1. Place two(2) Twin XL bases side by side.
2. Using a sync cable connect one bed to another.
3. Make sure that you plug the crystal head of sync cable into the port which marked on "SYNC" on the control box.
4. With one remote, match the code for one bed. Follow the steps in matching code section. Just code for one bed.
5. You can use one remote to control two beds



*** NOTE: (SYNC CABLE: Only for split King.)**

Troubleshooting:

If you experience problems with your adjustable bed, please follow these steps:

1. Press any button on the remote control to see whether the blue backlight is bright. If it's dim or does not light, check the battery.
2. Check the green power indicator light on the power supply. If it's not lit, check the power outlet.
3. Check for loose wires or connectors.
4. Check if the adjustable beds assembled according to the above steps.

If your problems cannot be solved by the above steps, please contact us.