Carmel Platform Bed Queen Size







01:00 hour






- 1 Read and observe carefully all the assembly instructions before beginning assembly.
- 2 The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- 3 The screws must be tightened periodically.
- 4 Avoid contact with sharp objects.
- 5 Avoid banging pieces together.

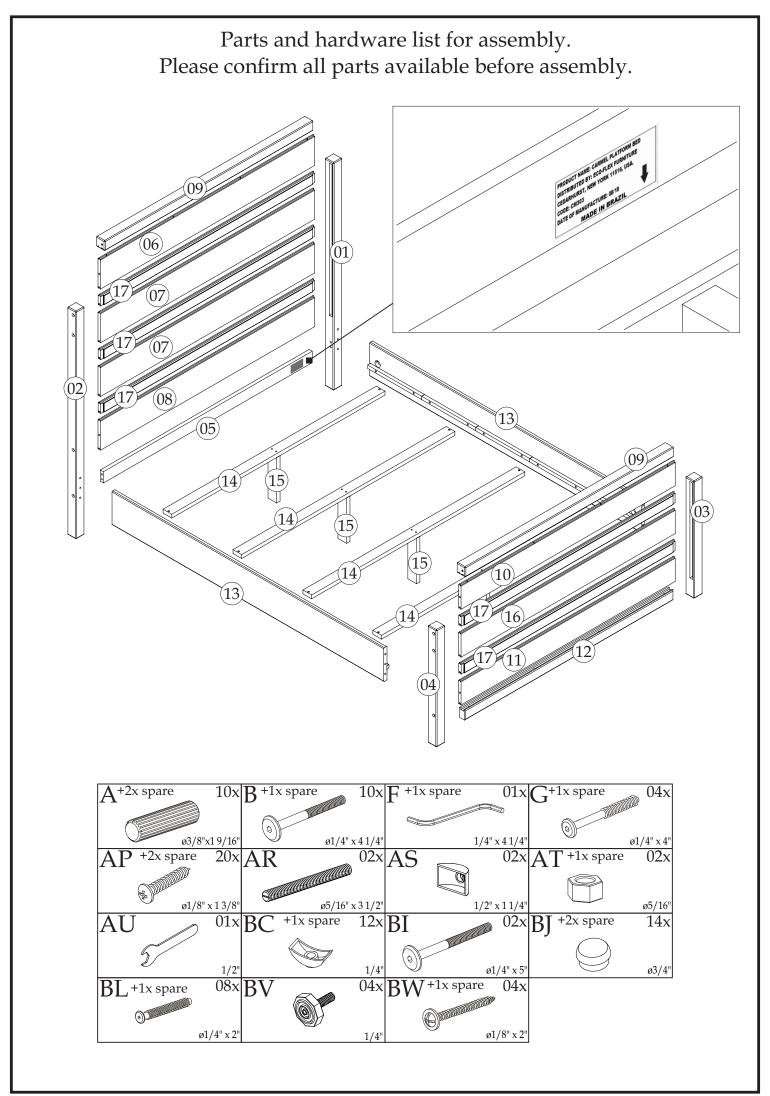


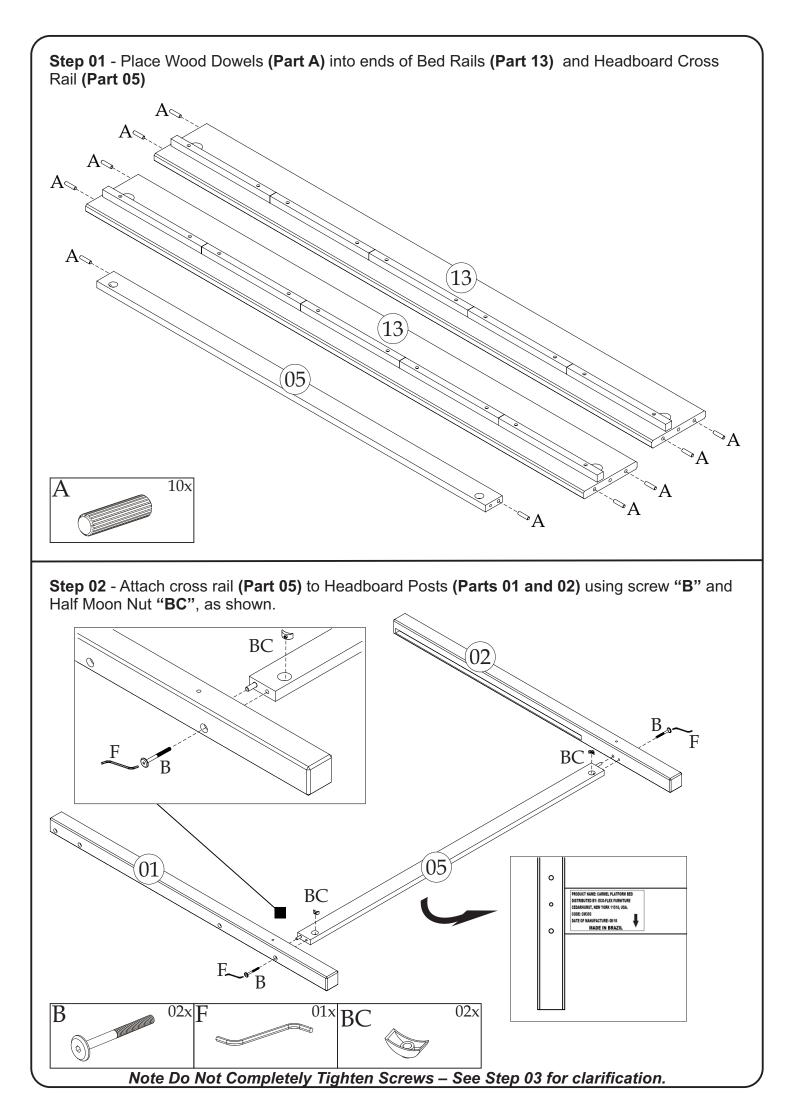


Step 03 - Head Board Assembly OBSERVATION:


When placing Headboard Parts (Nos. 06,07,08 and 17) into Bed Post Channels (Parts 01 and 02), Do Not Completely Tighten Screws into Half Moon Nuts (Screw B and Nut BC). This will leave loose wiggle room allowing easier placement of Headboard Boards into the Bed Post Channels. When the Head Board is completely mounted, fully tighten all screws!

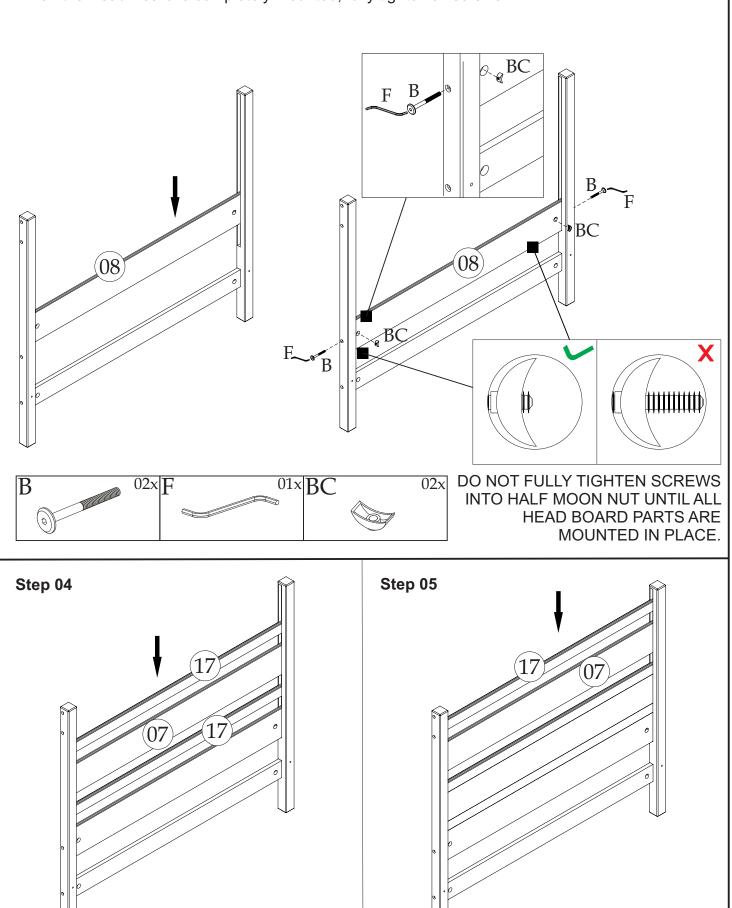

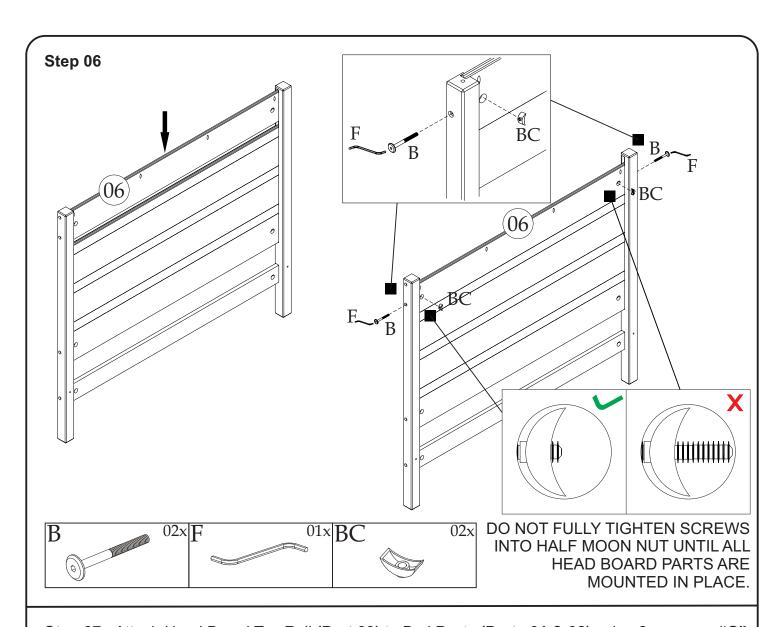

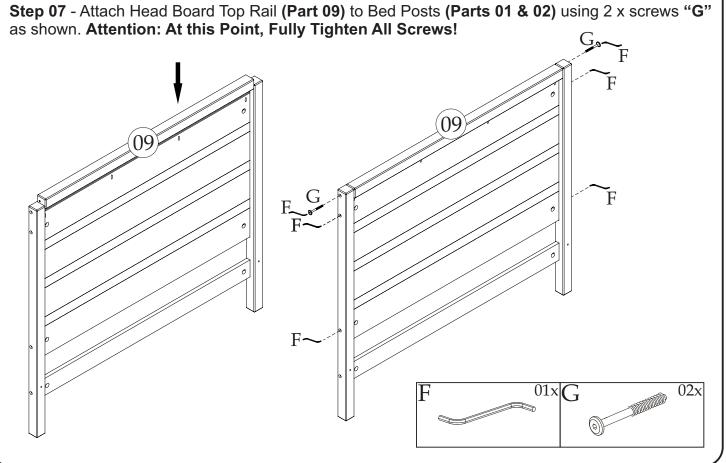



Step 08 - Complete Attachment of Head Board Top Rail (Part 09) to Bed Posts (Parts 01 & 02) and Upper Head Board Part (No. 06) using 6 x Screws "AP".

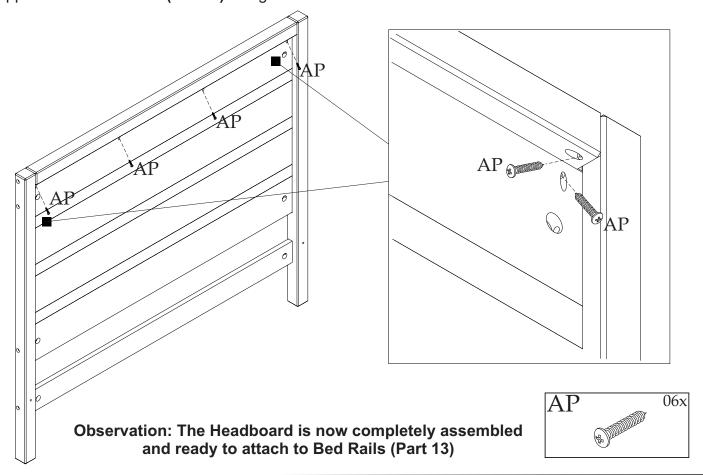


Step 09 - Foot Board Assembly OBSERVATION:

When placing Foot Board Parts (No.11,16,10 and 17) into Foot Board Bed Post Channels (Parts 03 and 04), Do Not Completely Tighten Screws into Half Moon Nuts (Screw B and Nut BC). This will leave loose wiggle room allowing easier placement of Boards into the Bed Post Channels. When the Head Board is completely mounted, fully tighten all screws!

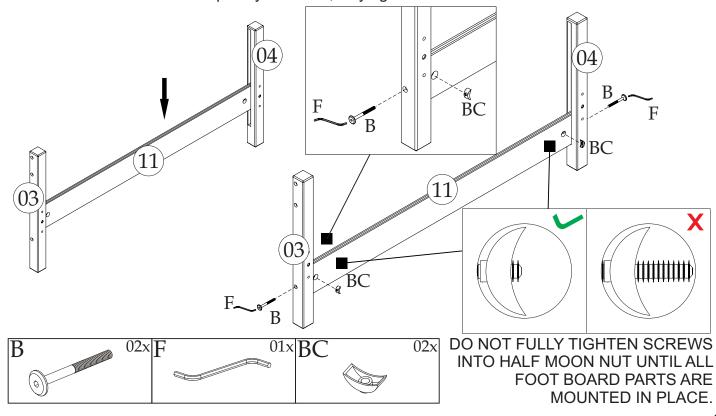


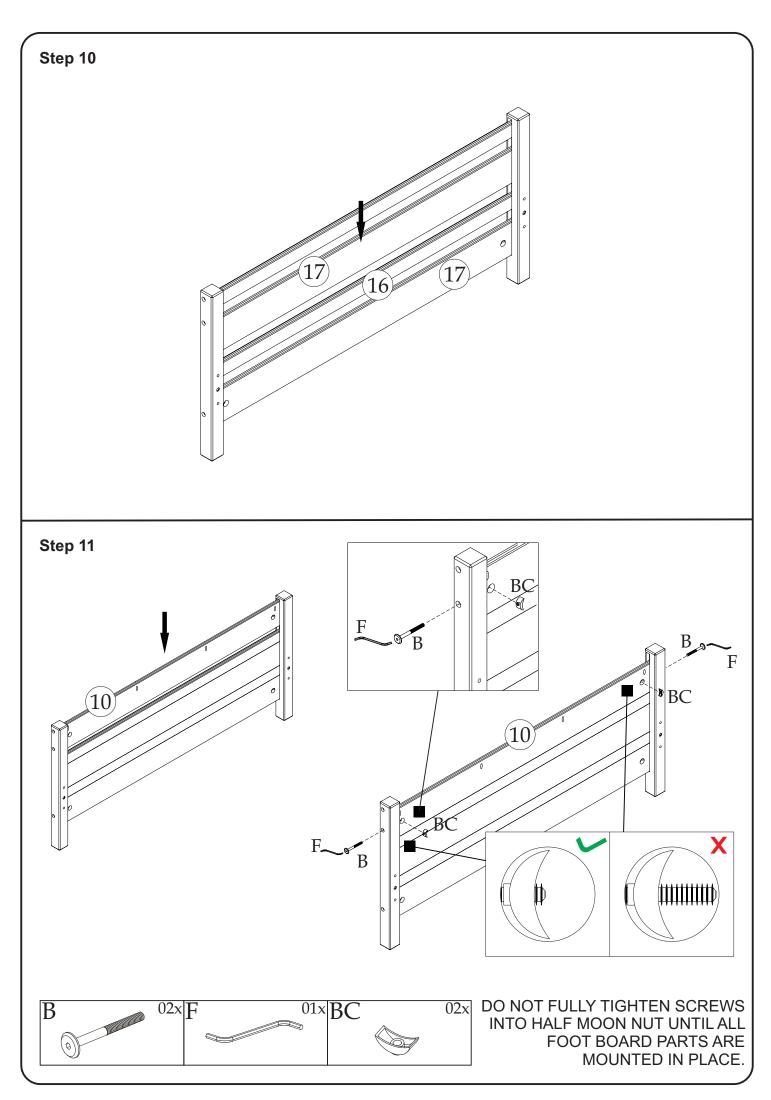

Step 12 - Attach Footboard Top Rail (Part 09) to Bed Posts (Part 03 & 04) using "G" Screws, as shown. Attention: At this Point, Fully Tighten All Screws!

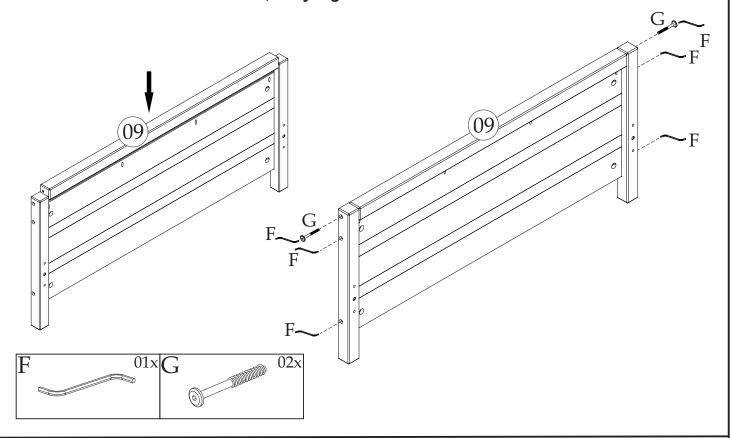


Step 13 - Attach Foot Board Lower Cross Rail (Part 12) to Bed Posts (Parts 03 & 04) using the 4 x Screws "BW". Screw in "AR" screw into Footboard posts (Parts 03 & 04) – as shown in drawing.

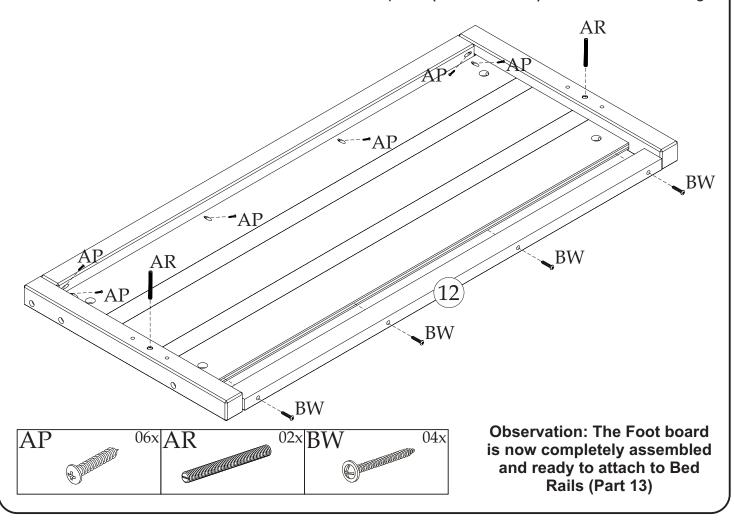

Step 14 - Attach Bed Rails (Part 13) to the assembled Headboard using Screw "BI" with Half Moon Nut "BC". Then Attach Footboard to bed rails using Half Moon Nut "AS" and Hexagon Nut "AT" to the already inserted screw "AR" of Footboard Posts 03 and 04. F BI BC 13 F+BI BC AS+AT+AU 13 AS+AŢ 01x AS02x • AS ΑT 02x AU 01x AT02x BI 02x BC

Step 15 - Attach Floor leveler (Part BV) to Center Support Post (Part 15). Then Attach Support Post (Part 15) to the Center Support Cross Beam (Part 14) using screws "BL", as illustrated in drawing.

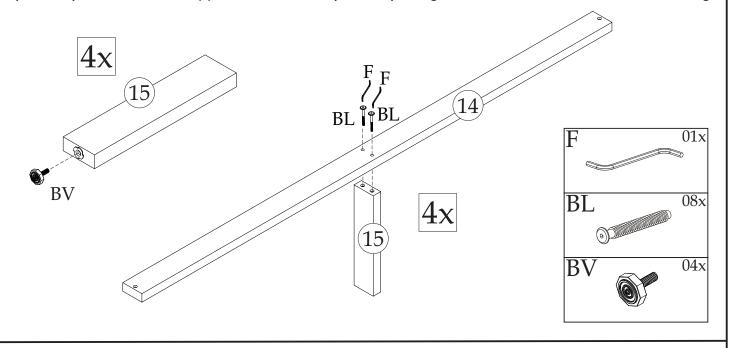

Step 16 - Attach assembled Center Support Beams to Bed Rail Cleats using screws "AP" as shown. Please follow spacing directions for the beams per the illustration.

