
Assembly Instructions

CAUTION: You must read these Assembly Instructions before you proceed.

Care & Maintenance






- O ☐ Do not put hot items directly on furniture surface.
- Do not clean furniture with harsh cleansers or polish.
- To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
- Stains may be removed with mild soap solution and damp cloth.
- ✓ ② Keep away from sources of ignition.
- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look under the Seat frame for hardware packs.

Chair

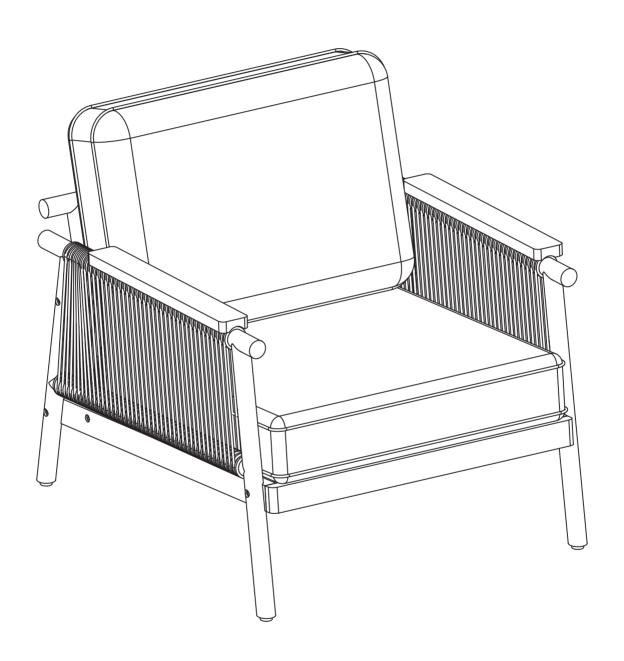

CAUTION: This Chair is NOT a TOY

Keep your child/children at bay during the assembly process.


Whenever moving/lifting the Chair and to prevent damage to the Chair, two adults are needed to execute these actions.

Parts List				
Label	Picture	Description	QTY	
Α		Back Rest	1	
В		Left Leg Panel	1	
С		Right Leg Panel	1	
D	3	Seat Panel	1	
E		Back Cushion	1	
F		Seat Cushion	1	

<u>Hardware</u>					
Label	Picture	Description	QTY		
1		Bolt (M6x40mm)	3		
2		Bolt (M6x70mm)	3		
3		Screws (M6x60mm)	3		
4		Screws (M6x70mm)	3		
(5)		Sleeve Nut (M6x18x13mm)	5		
6		Washer	3		
7		Allen Wrench (K4)	2		

Assembly Preparation

Before Beginning Assembly:

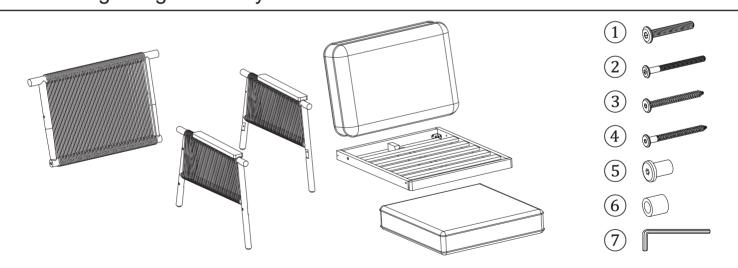



• Read instructions, cover to cover.



• Have 2 adults on hand for assembly.



• Do not assemble on flooring or carpet.




• Assemble on a clean non-marring surface (packing foam).




• Save all packaging until finished.


Assembly Steps

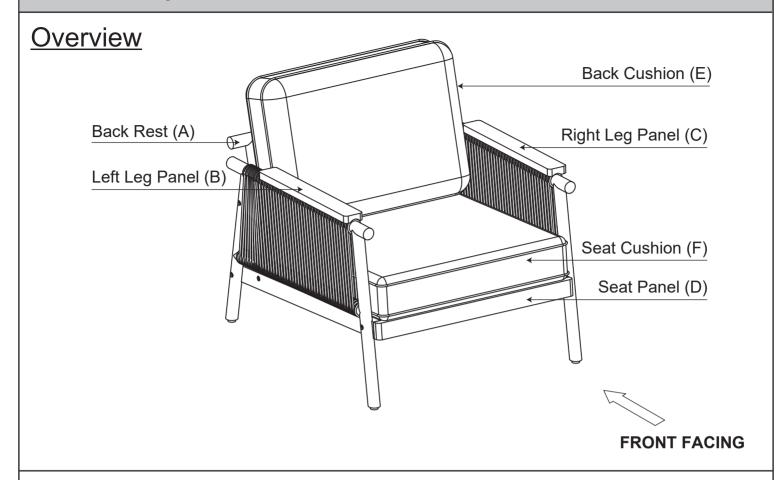

This Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

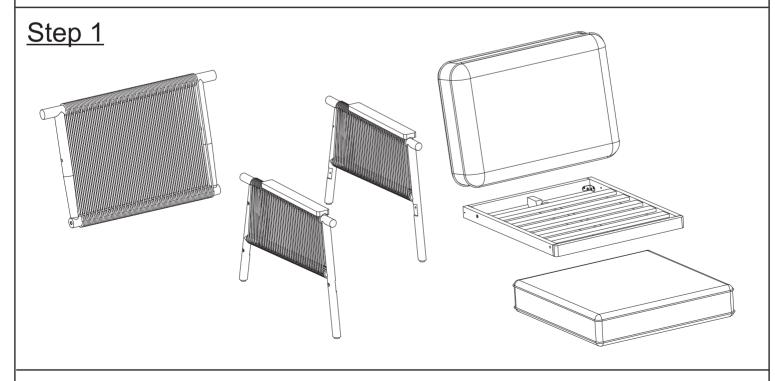


Unpack and place all parts on a clean, non-marring surface.

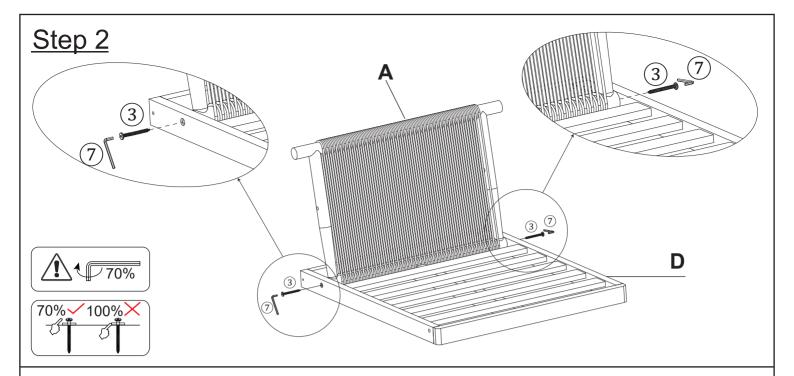

Place the Back Rest (A), Seat Panel (D) on a clean, non-marring surface. Attach Back Rest (A) to the Seat Panel (D) using Screws (3) and the Allen Wrench (K4) (7) as shown above.

Do not fully tighten the Bolts and the Screws.


Caution: Please don't place your hands between the gaps to avoid injury.

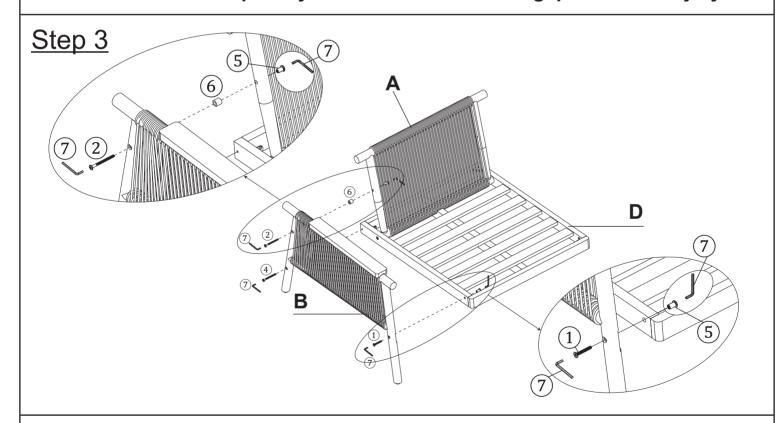

Attach the Seat Panel (D) to the Left Leg Panel (B) using Bolts (1), Screws (4), Sleeve Nut (5) and Allen Wrench (K4) (7) as shown above.

Attach the Back Rest (A) to the Left Leg Panel (B) using Bolts (2), Sleeve Nut (5), Washer (6) and Allen Wrench (K4) (7) as shown above.


Do not fully tighten the Bolts and the Screws.

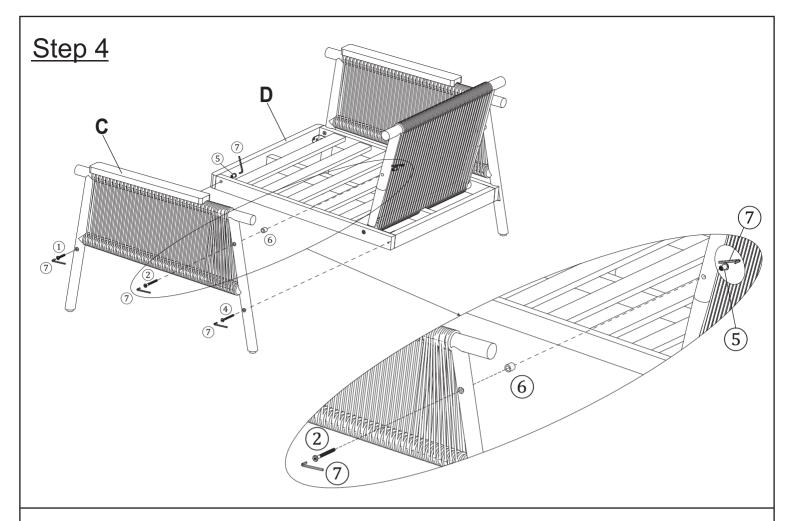

Attach the Seat Panel (D) to the Right Leg Panel (C) using Bolts (1), Screws (4), Sleeve Nut (5) and Allen Wrench (K4) (7) as shown above.

Attach the Back Rest (A) to the Right Leg Panel (C) using Bolts (2), Sleeve Nut (5), Washer (6) and Allen Wrench (K4) (7) as shown above.

Do not fully tighten the Bolts and the Screws.

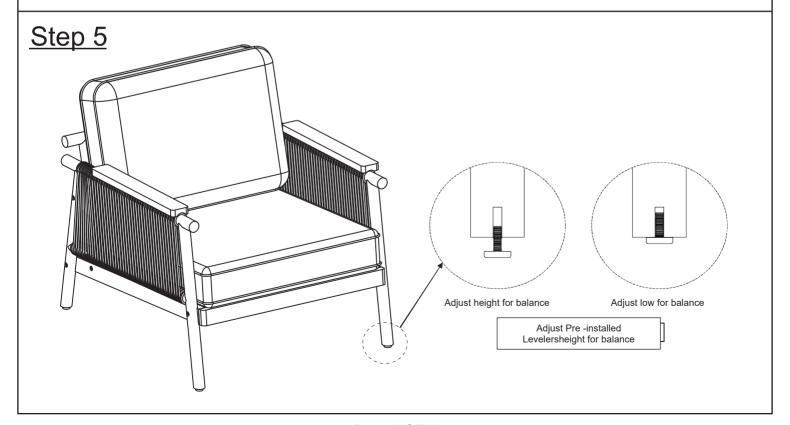

Page 7 OF 9

Place the Chair onto a flat, level surface.

Then EXERT pressure floorward onto the Chair with both hands.


This pressure will help the Chair reach full alignment at all joints.

In a sequential manner, gradually tighten all Bolts and screws at all joints until evenly secured.

Inspect the Chair and make sure all parts are adequately connected.

Adjust the Levelers until the Chair is level with the ground.

To adjust the Levelers, get assistance from an adult partner to lean and hold the Chair while you are working.

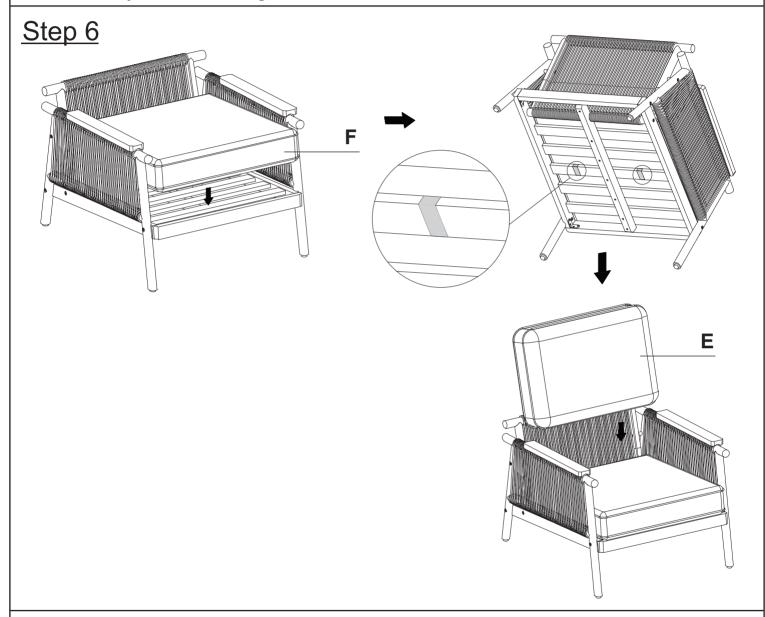

Place the Seat Cushion (F) onto the Seat Panel (D).

With the help of your adult partner, turn the chair over and tie the magic tape straps on the Seat Cushion (F) to the Seat Panel (D) as shown above.

Place the Back Cushion (E) onto the Seat Cushion (F).

Inspect it and make sure all parts are adequately connected.

Ensure all screws, bolts are fully locked into position and secured.

The Chair is ready to be used.

Caution: This Chair can only be used on a flat, level surface.

Questions & Answers about Proposition 65

What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals. Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water. Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it

- was first published in 1987.

 What types of chemicals are on the Proposition 65 list?

 The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.
- What does a warning mean?
 If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.
 By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.
- Where can I get more information on Proposition 65? If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.