










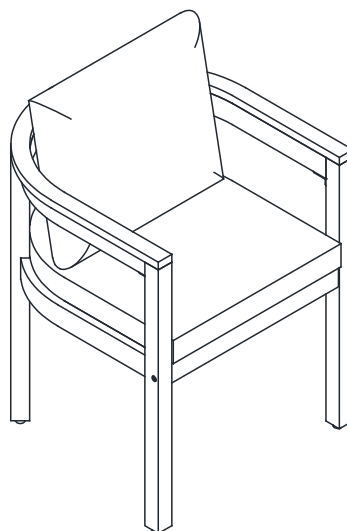
# Assembly Instructions

**Caution : You must read this before you proceed**




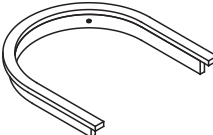
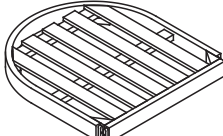
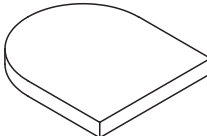
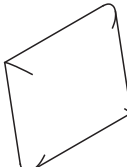
## Care & Maintenance

- ⊘  ● Not for commercial use. For residential use only.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ✓  ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
- ⊘  ● Children should not climb or jump on the furniture.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface.
- ✓  ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ✓  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.







## Chair



# Parts List

Label	Picture	Description	QTY
A		Left Leg	1
B		Right Leg	1
C		Back Leg	2
D		Backrest Frame	1
E		Seat Frame	1
F		Seat Cushion	1
G		Back Cushion	1

# Hardware

Label	Picture	Description	QTY
①		Hex Screw (M6x70mm)	3
②		Hex Screw (M6x25mm)	7
③		Bolt (M6x30mm)	5
④		Connecting Cap (M6x15mm)	3
⑤		L Bracket	2
⑥		Allen Wrench (M4)	2

## Assembly Preparation

Before Beginning Assembly:




A




B



C

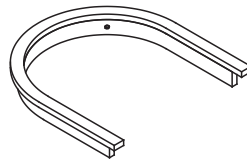


D




1

x3



2

x7




3

x5




4

x3



5

x2



6

x2



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

## Assembly Steps


### Overview

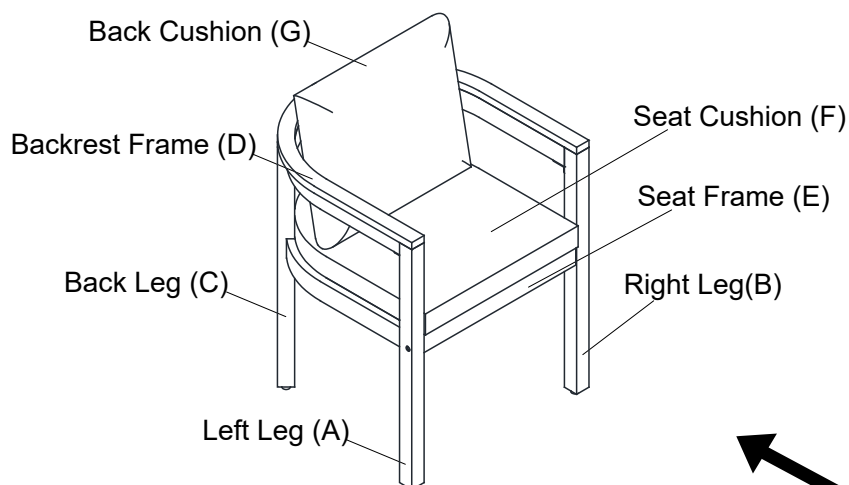

FRONT FACING


This Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chair parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

### Step 1

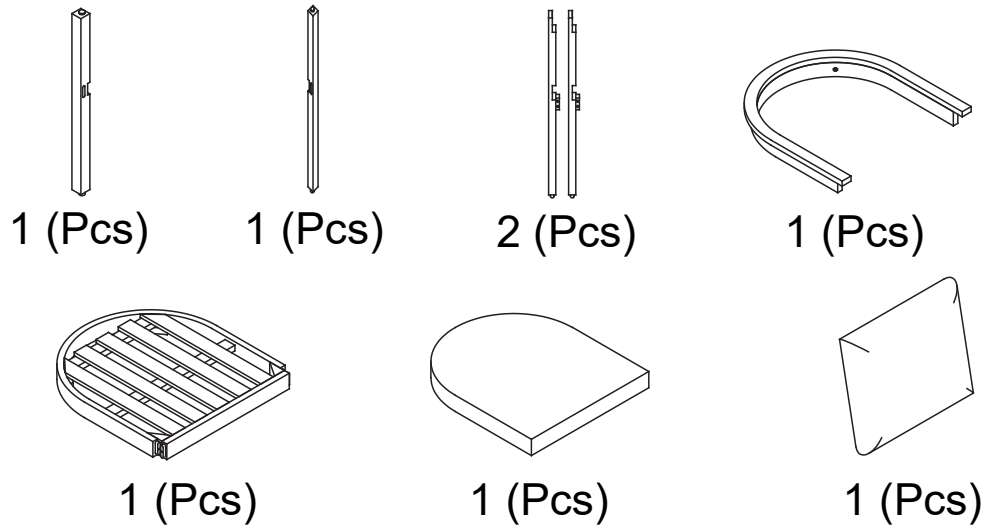

Unpack and place all parts on a clean, non-marring surface.

### Step 2

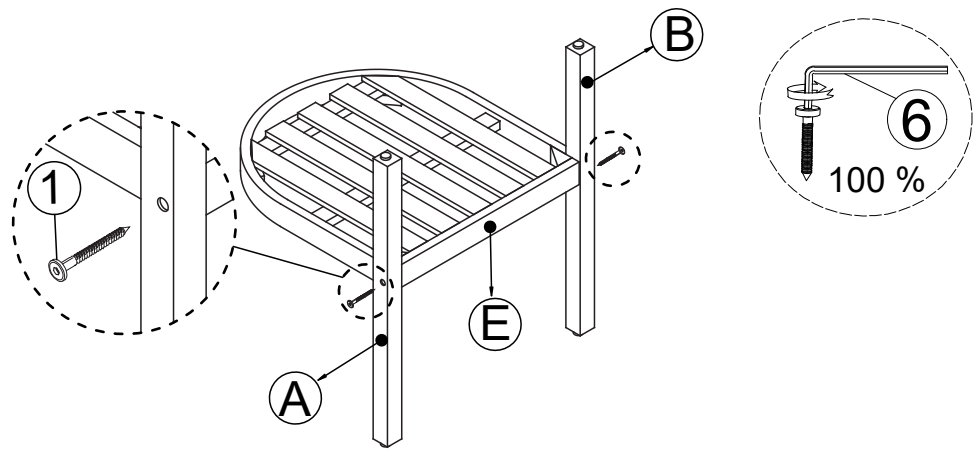


Place the Left Leg (A), Right Leg (B) and Seat Frame (E) with its inner side face skywards onto a clean, soft surface to avoid any scratches or damages to the product.

With the help from your partner, stand the assembled Left Leg (A), Right Leg (B) and Seat Frame (E) standing as shown in picture above.

Align the Mounting Position of Left Leg (A), Right Leg (B) into the Mounting Position of Seat Frame (E) as shown above.

Then, affix the Seat Frame (E) with Left Leg (A) and Right Leg (B) by using Hex Screw (①) with Allen Wrench (M4) (⑥).


### Step 3

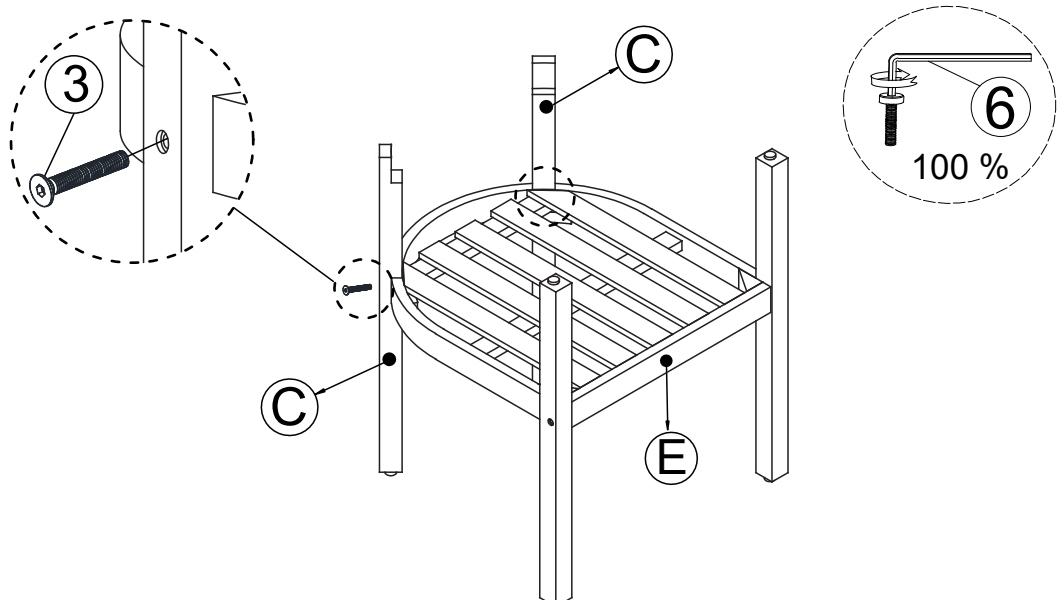

Align the Mounting Position of 2 Back Leg (C) into the Mounting Position of Seat Frame (E) as shown above.

Then, affix the Back Leg (C) to Seat Frame (E) by using Bolts (③) with Allen Wrench (M4) (⑥).


#### Step 4

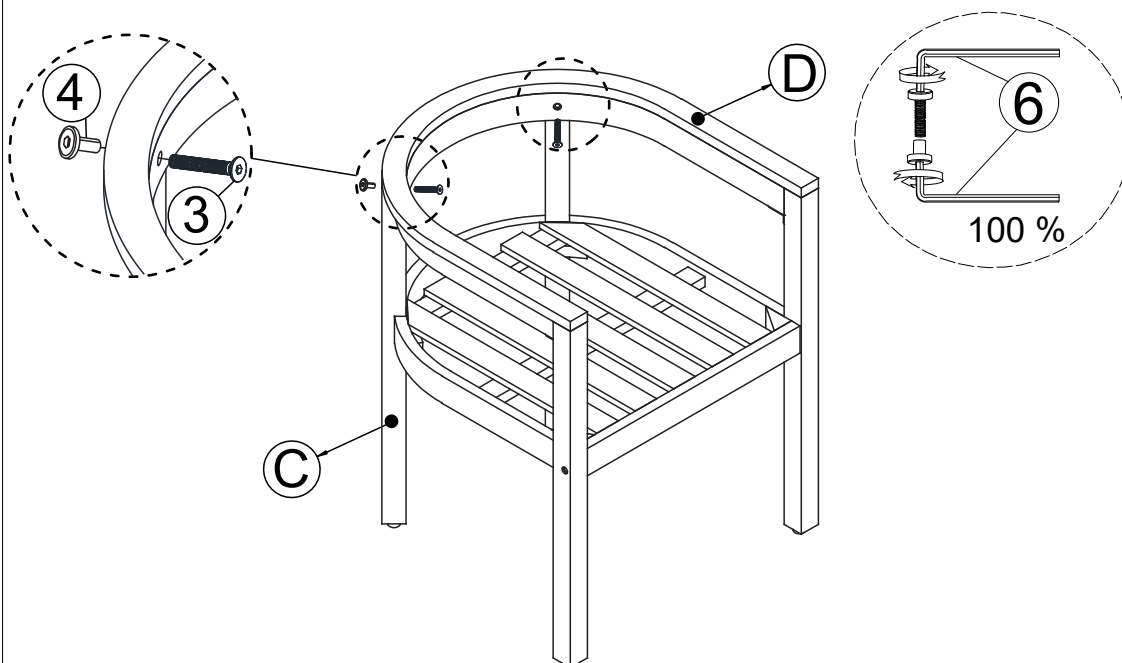

Align the Mounting Position of Back Leg (C) into the mounting positions of Backrest Frame (D) .

Then, affix the Back Leg (C) to Backrest Frame (D) by using Bolt (③) and Connecting Cap (④) with Allen Wrench (M4) (⑥).


#### Step 5

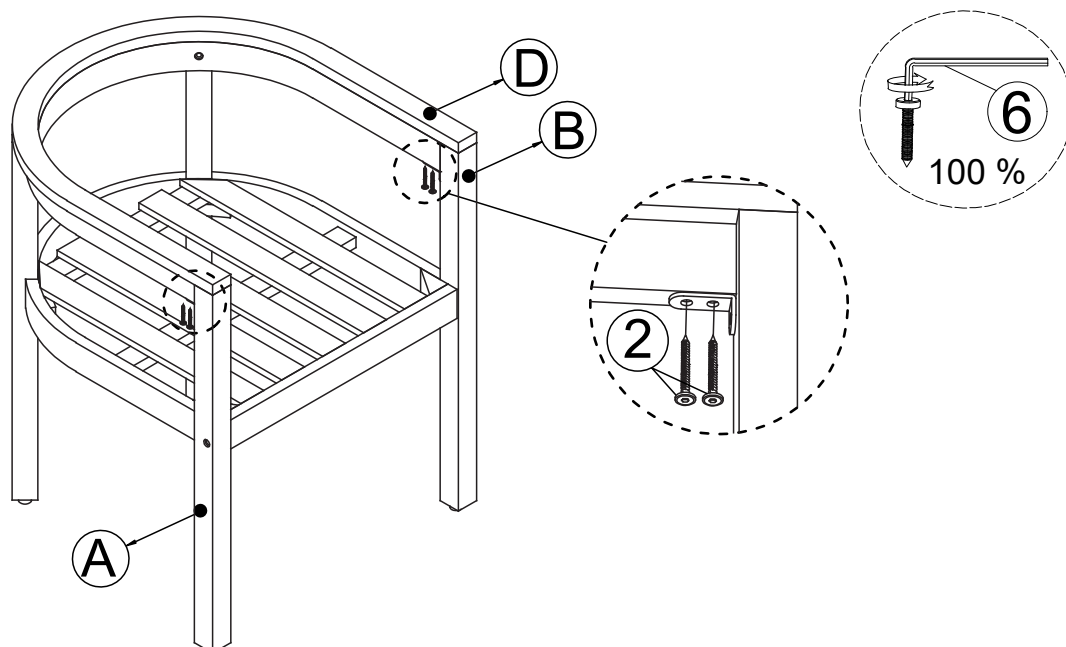

Align the Mounting Position of Left Leg (A), Right Leg (B) into the mounting positions of Backrest Frame (D) as shown in picture above.


Then, affix the Left Leg (A), Right Leg (B) to Backrest Frame (D) by using L Bracket (⑤), Hex Screw (②) with Allen Wrench (M4) (⑥).

### Step 6

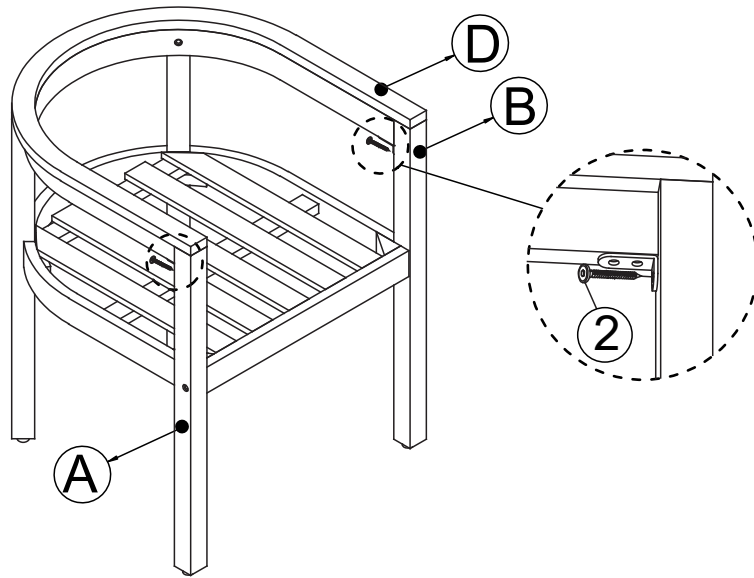


Align the Mounting Position of Left Leg (A), Right Leg (B) into the mounting positions of Backrest Frame (D) as shown in picture above.  
Then, affix the Left Leg (A), Right Leg (B) to Backrest Frame (D) by using L Bracket (⑤), Hex Screw (②) with Allen Wrench (M4) (⑥).

### Step 7

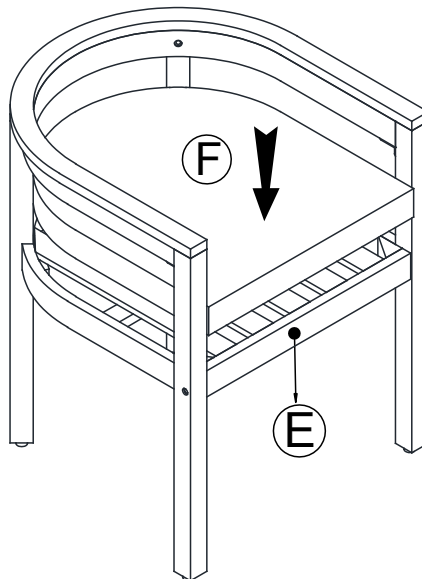


Put Seat Cushion (F) on the Seat Frame (E).

### Step 8

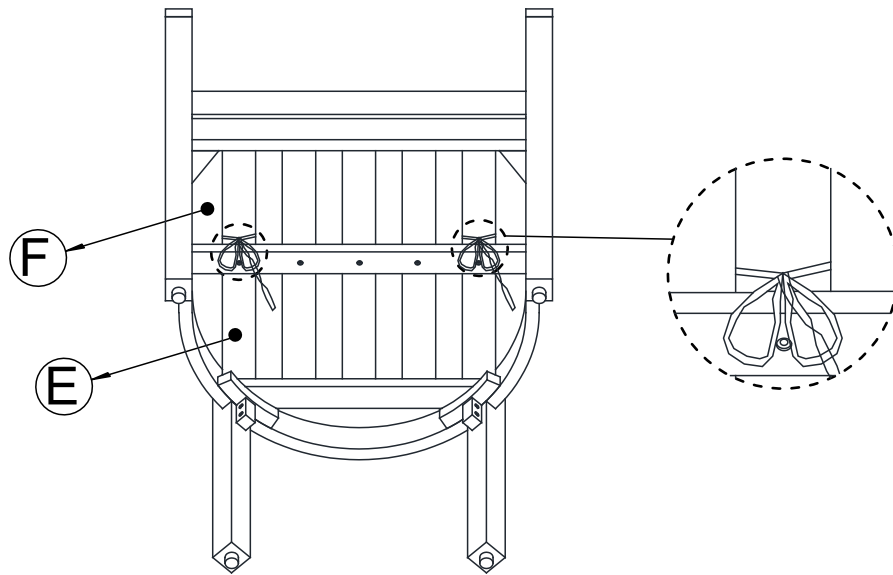

Tight ropes under the Seat Cushion (F) on the Seat Frame (E).

### Step 9

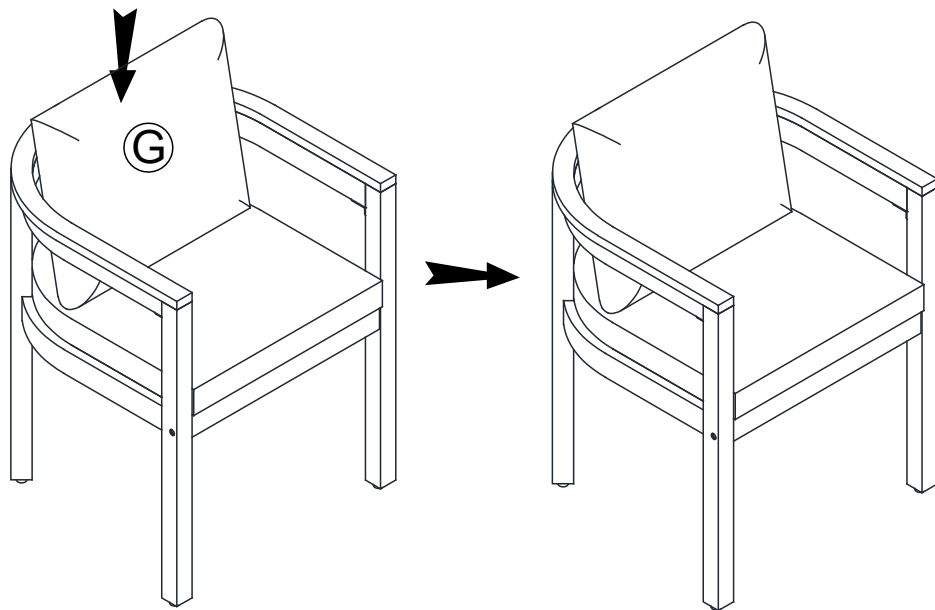

Put Back Cushion (G) on the Chair.  
Your Chair is ready to use.  
This Chair can only be used on a flat, level surface



## Questions & Answers about Proposition 65

- What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

- What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

- What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

- Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at [P65.Questions@oehha.ca.gov](mailto:P65.Questions@oehha.ca.gov), or by phone at (916) 445-6900.