


Bathroom Vanity

Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel. Be sure not to tighten too much or too little.









The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.






Turn the cam lock clockwise to tighten.

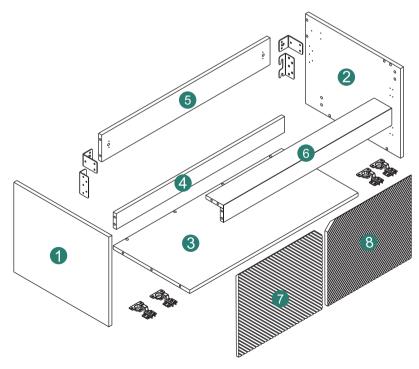



0	x1	6	x1
2	x1	7	x1
3	x1	8	x1
4	x1		
5	x1		

Components - fittings
Please check you have all the panels listed below.
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A	Ø6x26mm	x 26	\oplus	х6
B	Ø15x9mm	x26	\ominus	x1
©	Ø3.5x14mm	x44	\bigcirc	x4
0		x4		
(III)		x4		
F		x4		
G		x2		

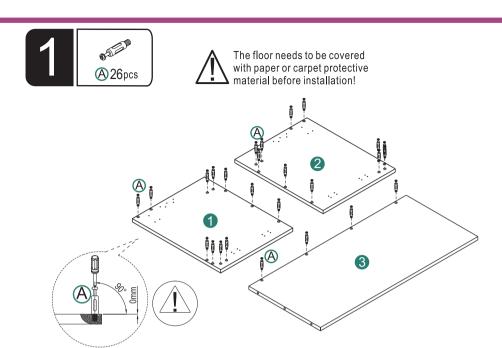

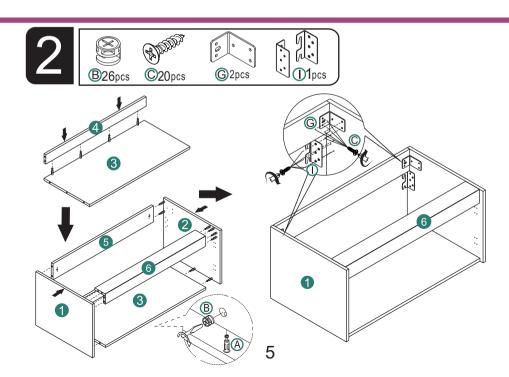

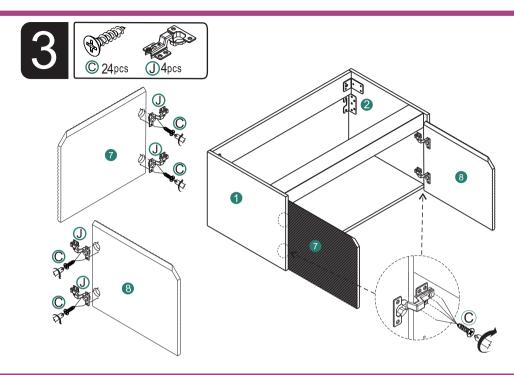



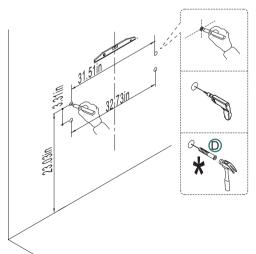

WARNING: To prevent falling down this product must be used with the wall attachment device provided.

WARNING: Assess the suitability of the wall to ensure that the fastening devices will withstand the

ensure that the fastening devices will withstand the forces generated.
WARNING: The maximum load-bearing capacity of this furniture is:40-60kg, please do not overload!
Load-bearing capacity primarily depends on the installation method and wall structure. Always identify the wall type first and hire professional installers using fasteners specifically

designed for that wall type.












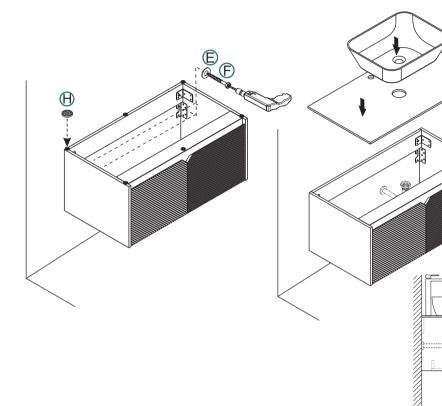


Pop-up Waste Installation

STEP 1 Install Pop-up Waste with over flow.


STEP 2 Connect the drain pipe.

This product does not include drainage accessories. The content on this page is provided as installation suggestions only. Please carry out the installation according to the requirements of the product you actually purchased.

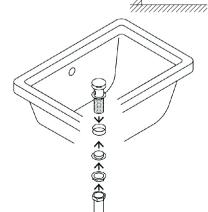


PIVOT-PRO side adjustment

Side adjustment of the door is made by using the indicated screw.

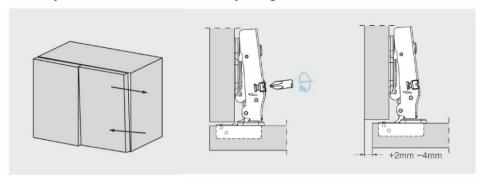

PIVOT-PRO Depth Adjustment

Depth adjustment is made without loosening any screw. The door can be moved in or outby rotating the cam adjuster on the hinge arm.

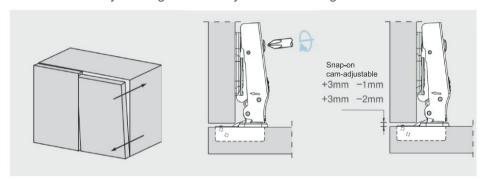

PIVOT-PRO Height Adjustment

By loosening the two fixing screws to allow the mounting plate to slide up or down ,the door can be adjusted vertically by ± 2 mm. After retightening the screws, the Depth adjustment is done.

