Assembly Instructions

CAUTION: You must read these Assembly Instructions before you proceed.

Care & Maintenance



Do not put hot items directly on furniture surface.

Do not clean furniture with harsh cleansers or polish.

 To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.

Children should not climb or jump on the furniture.


 Do not write on furniture without a padded barrier to protect the surface.

 To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.

 Stains may be removed with mild soap solution and damp cloth.

 Dust and pick-up spills using a clean, non-colored, lint-free cloth. Please look underneath the Seat Panel for hardware packs.

Right Loveseat

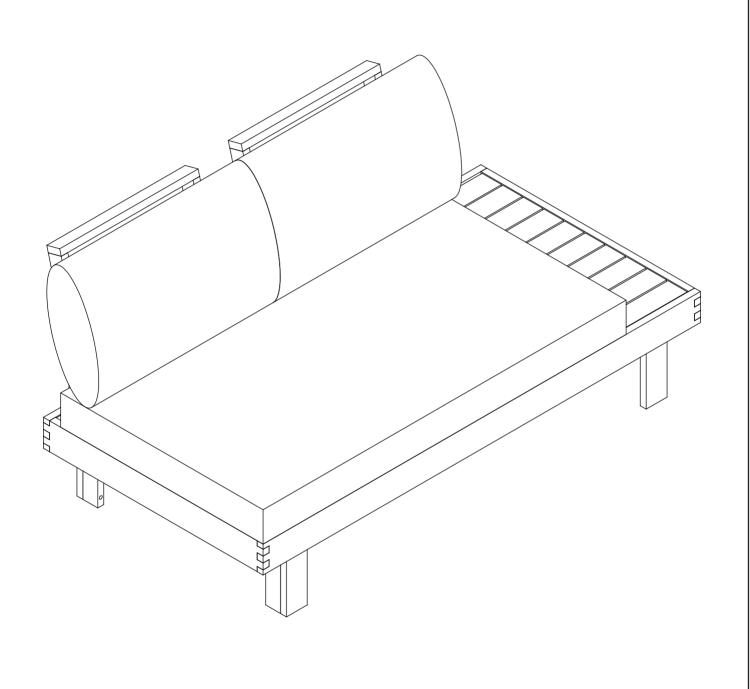

CAUTION: This Loveseat is NOT a TOY


Keep your child/children at bay during the assembly process.

Whenever moving/lifting the Loveseat and to prevent damage to the Loveseat, two adults are needed to execute these actions.

Parts List			
Label	Picture	Description	QTY
А		Backrest Panel	2
В		Seat Panel	1
С		First Leg	2
D		Second Leg	2
E		Seat Cushion	1
F		Back Cushion	2
<u>Hardware</u>			
Label	Picture	Description	QTY
1		Bolt (M6x25mm)	13
2		Bolt (M6x50mm)	9
3		Allen Wrench	2

Assembly Preparation

Before Beginning Assembly:

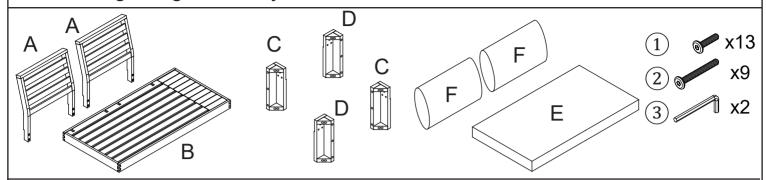



Read instructions, cover to cover.



Have 2 adults on hand for assembly.



Do not assemble on flooring or carpet.




Assemble on a clean non-marring surface (packing foam).




Save all packaging until finished.


Assembly Steps

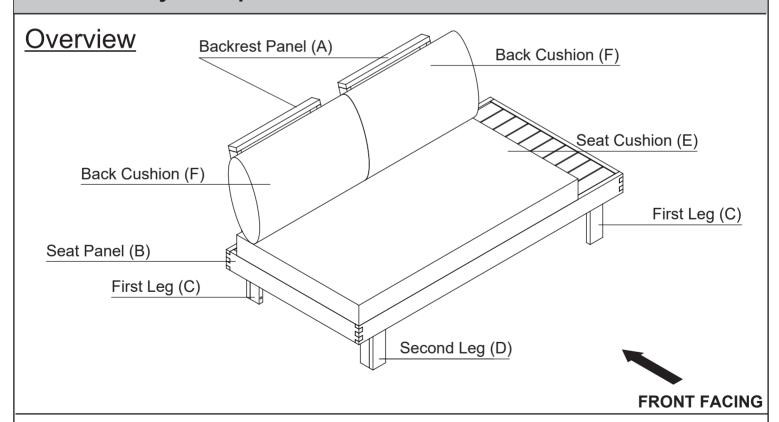


This Loveseat has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Loveseat parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

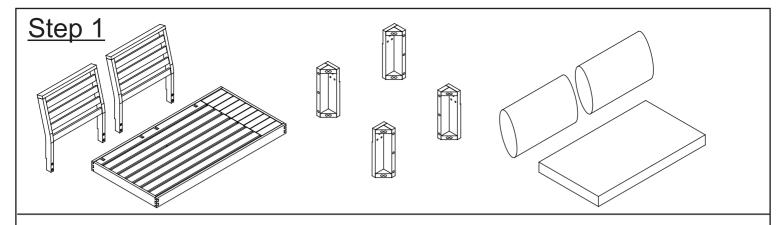

Unpack and place all parts on a clean, non-marring surface.

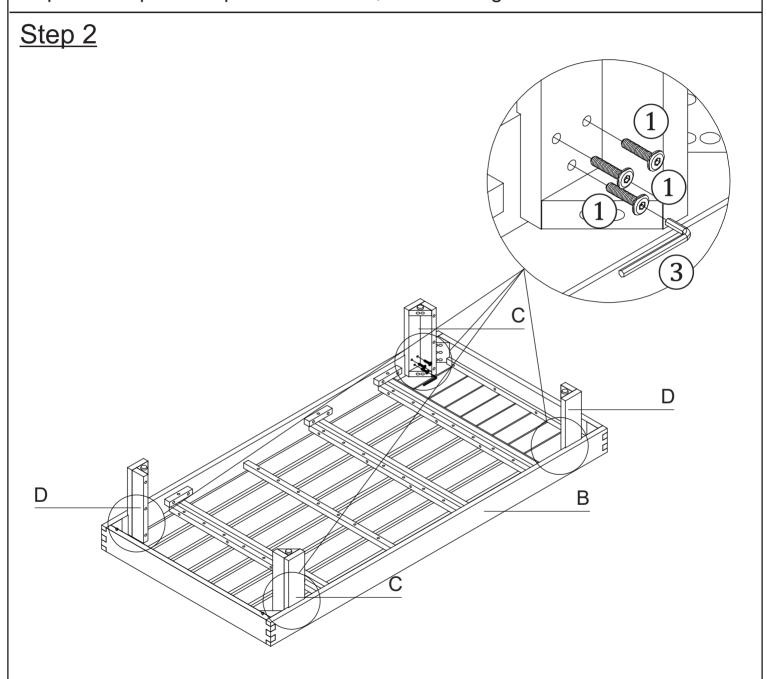


Place the Seat Panel (B) facedown on a clean, non-marring surface. With assistance from your adult partners, attach the First Leg (C), Second Leg (D) to the Seat Panel (B) using Bolts ① and the Allen Wrench ③ as shown above. **Do not fully tighthen Bolts.**

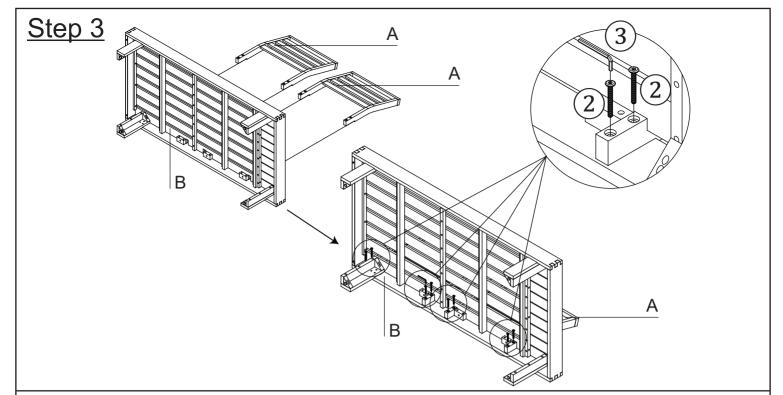

With the help of your adult partner, attach the Backrest Panel (A) to Step 2 using Bolts ② and the Allen Wrench ③ as show above.

Do not fully tighten the Bolts.

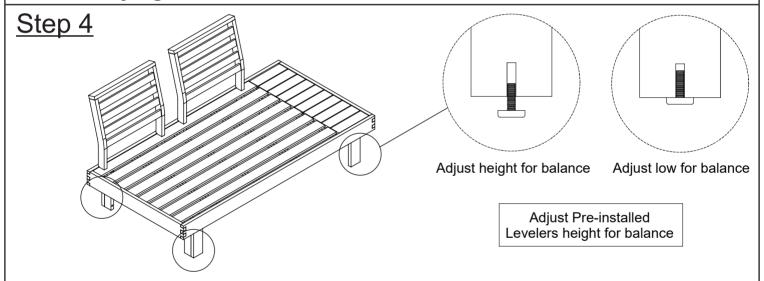

Turn the Loveseat right side up.

Place the Loveseat on a LEVEL SURFACE.

Inspect it and make sure all parts are adequately connected.

Press on the Loveseat with both hands and apply pressure towards the floor.

This would help the Loveseat reach full alignment at all joints.

Check for wobbles.

In a sequential manner, proceed to tighten all bolts.


CAUTION: When tightening these bolts, tighten sequentially.

DO NOT tighten any bolts fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the bolts and execute this same process.

Ensure all botls are fully locked into position.

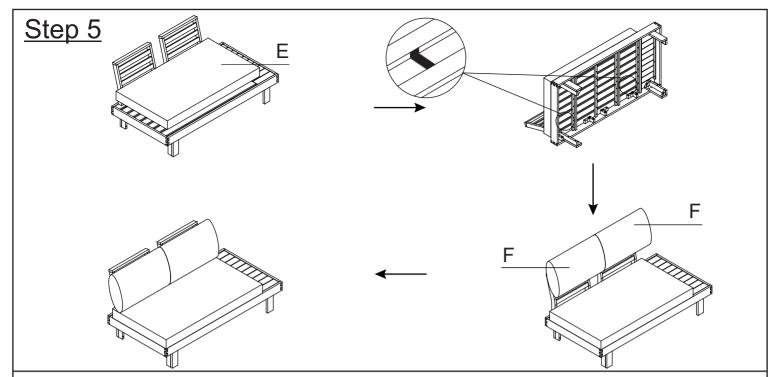

Place the Seat Cushion (E) and the Back Cushion (F) on the Seat Panel (B).

With the help of your adult partner, turn the Loveseat right side up.


Tie the magic tape straps on the Seat Cushion (E) to the Seat Panel (B) as show above.

Inspect it and make sure all parts are adequately connected.

Ensure all bolts are fully locked into position and secured.

The Loveseat is ready to be used.

Caution: This Loveseat can only be used on a flat, level surface.

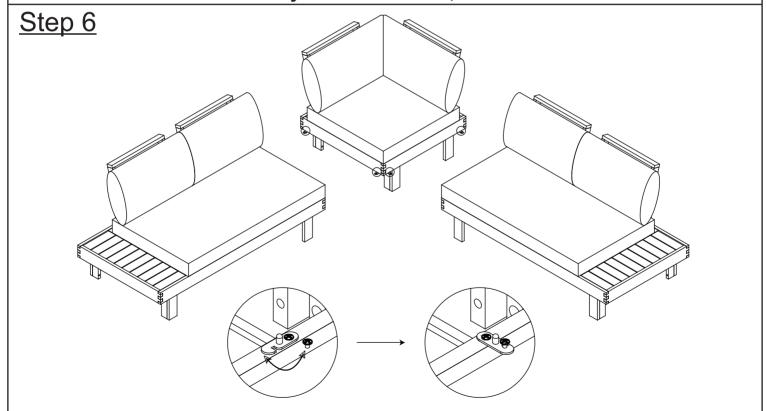

Note: This is on optional step in case you want to connect the two Loveseat and the corner chair of the set together and should be done before placing the cushions.

With assistance from your adult partners, turn the Loveseat and corner chair up side down and use the pre-fixed clips to connect the Loveseat and corner chair together.

Questions & Answers about Proposition 65

• What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals. Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water. Proposition 65 requires California to publish a list of chemicals known to cause

- Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.
- What types of chemicals are on the Proposition 65 list? The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.
- What does a warning mean?
 If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.
 By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.
- Where can I get more information on Proposition 65? If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.