

Assembly Instructions

CAUTION : You must read these Assembly Instructions before you proceed.




SAFETY WARNING

Never adjust chaise lounge or recliner backrest while seated.

Always make sure the backrest is flat before moving the chaise lounge.





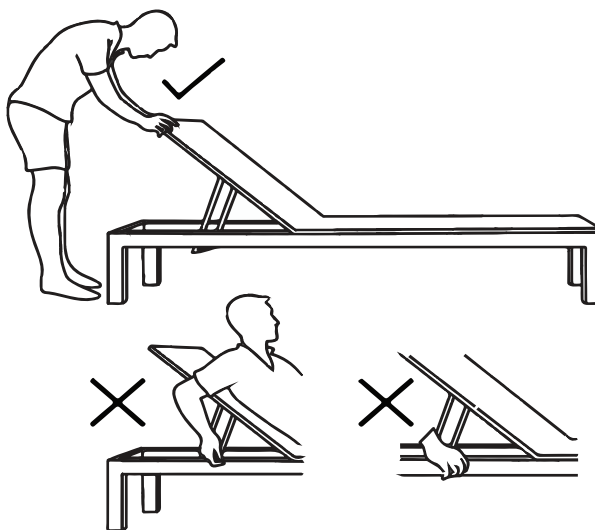





Keep all limbs clear from under the backrest when it is in a raised position.

Serious finger, hand, or other bodily injuries may result from adjusting the chaise lounge backrest position while seated.




The examples pictured above are non exhaustive and are for your reference only

Care & Maintenance

- ⊘  ● Not for commercial use. For residential use only.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ✓  ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
- ⊘  ● Children should not climb or jump on the furniture.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface.
- ✓  ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ✓  ● Keep away from sources of ignition.
- ✓  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.











CHAISE LOUNGE











Please look in the box for hardware packs

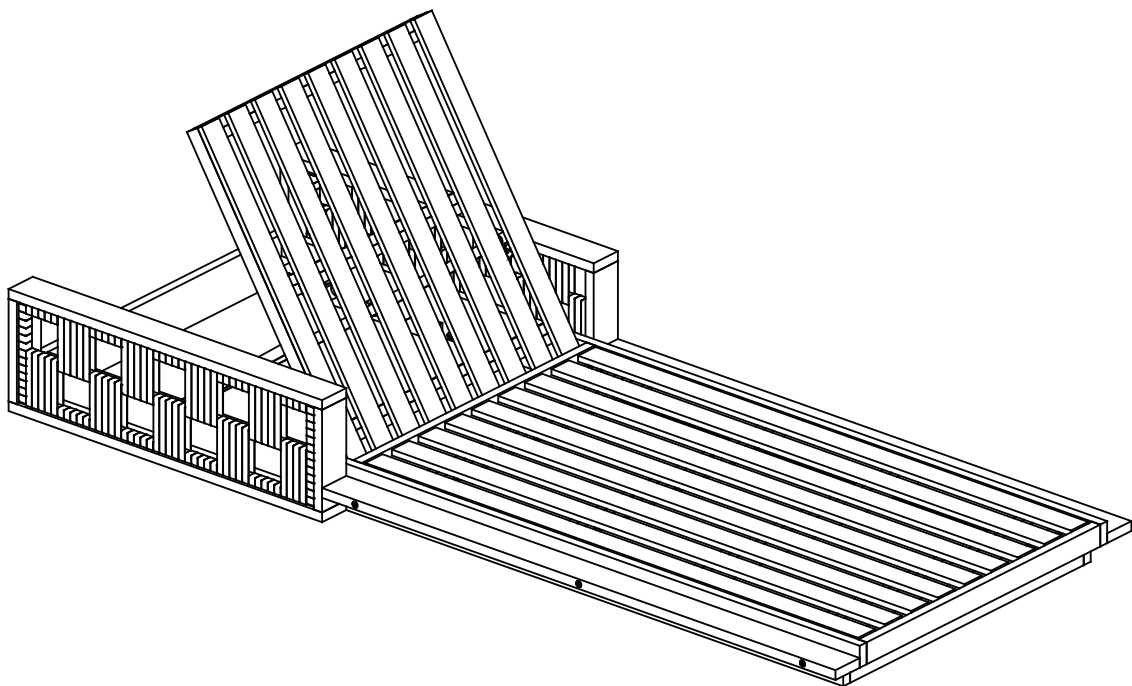



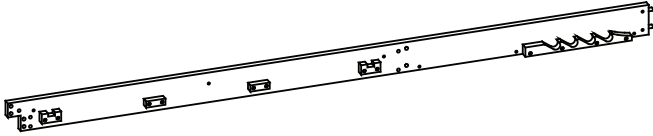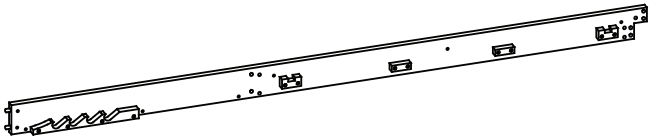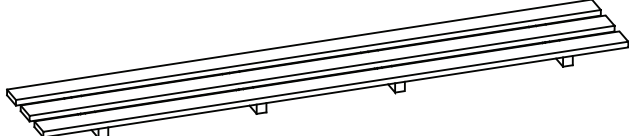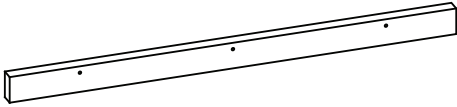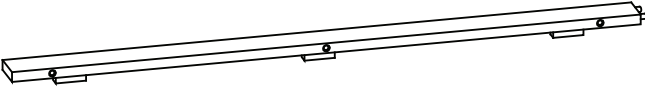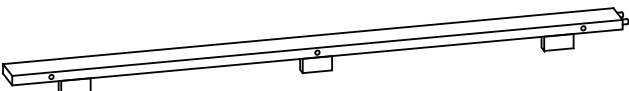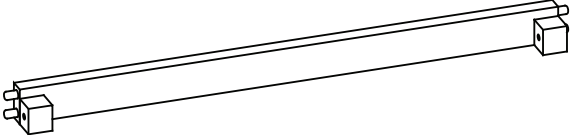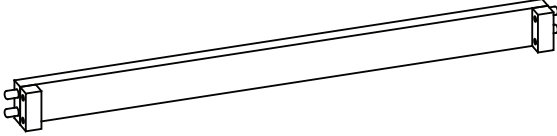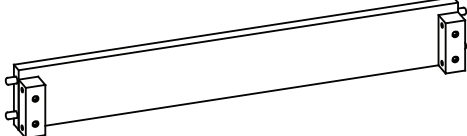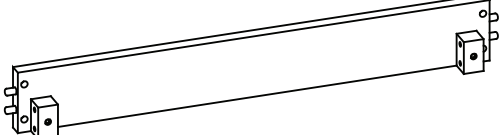





CAUTION: This Chaise Lounge is NOT a TOY.
Keep your child / children at bay during the assembly process.
For turning the Chaise Lounge and to prevent damage to the Chaise Lounge, 02 person may be needed to execute this action.

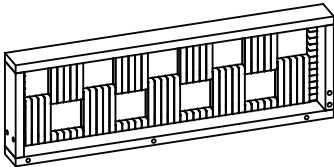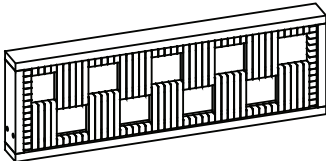Parts List

Label	Picture	Desription	Qty
A		Left side bed bar	1
B		Right side bed bar	1
C		Seat frame	3
D		Support bar	4
E		Right support bar	1
F		Left support bar	1
G		Front support bar-1	1
H		Front support bar-2	1
I		Middle support Bar	1
J		Head support bar	1


K		Right backrest frame	1
L		Middle backrest frame	1
M		Left backrest frame	1
N		Head Backrest Support Bar	1
O		End Backrest Support Bar	1
P		Middle Backrest Support Bar	1
Q		Vertical bar	2
R		Horizontal bar	1
S		Left armrest cluster	1
T		Right armrest cluster	1


Hardware

Label	Picture	Desription	Qty
①		Bolt M6x80mm	7
②		Bolt M6x45mm	23
③		Bolt M6x35mm	3
④		Screw M6x60mm	3
⑤		Screw M6x35mm	22
⑥		Washer Plastic M6x18x3mm	5
⑦		Horizontal nut	7
⑧		Allen Wrench	2

Assembly Preparation

Before Beginning Assembly

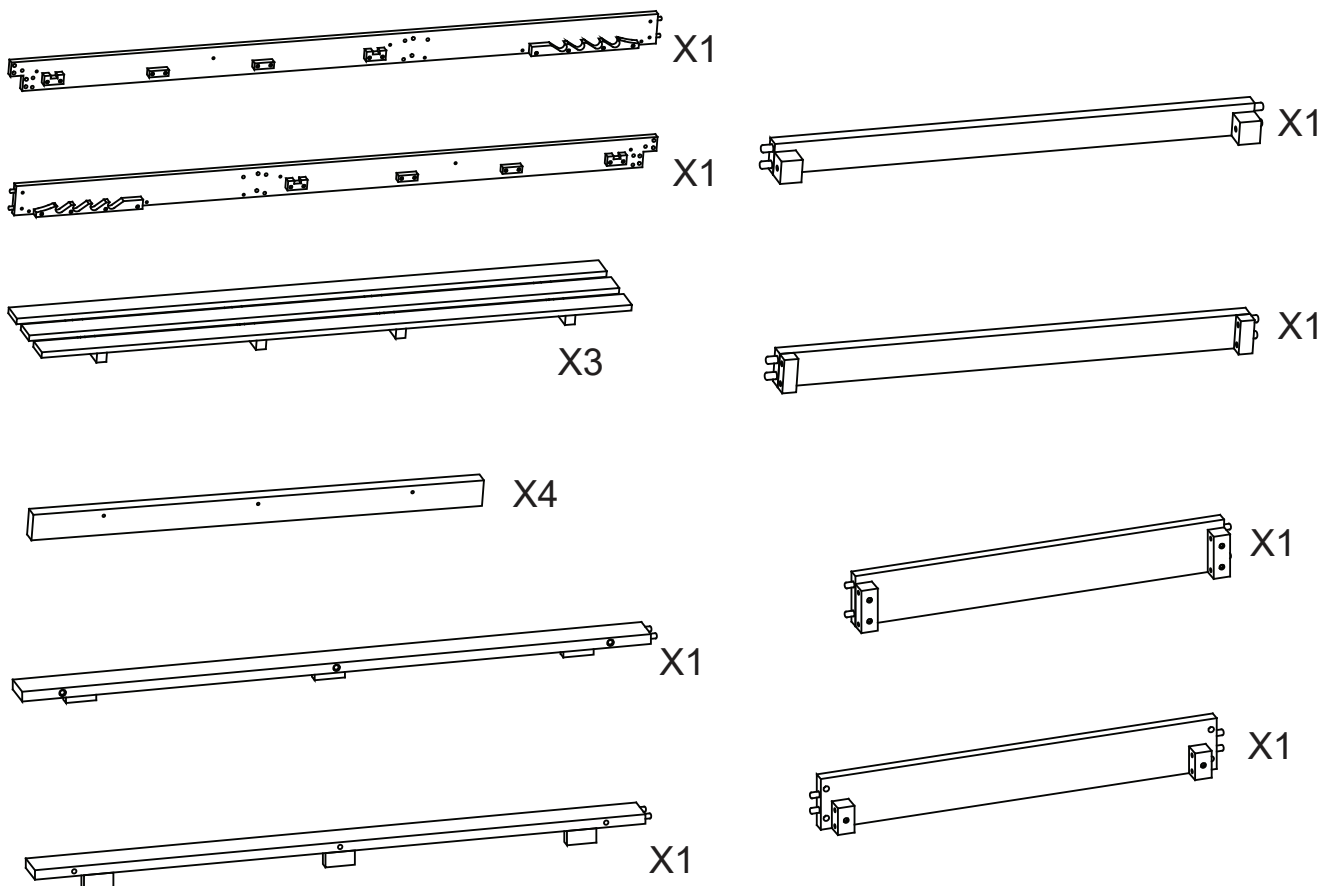


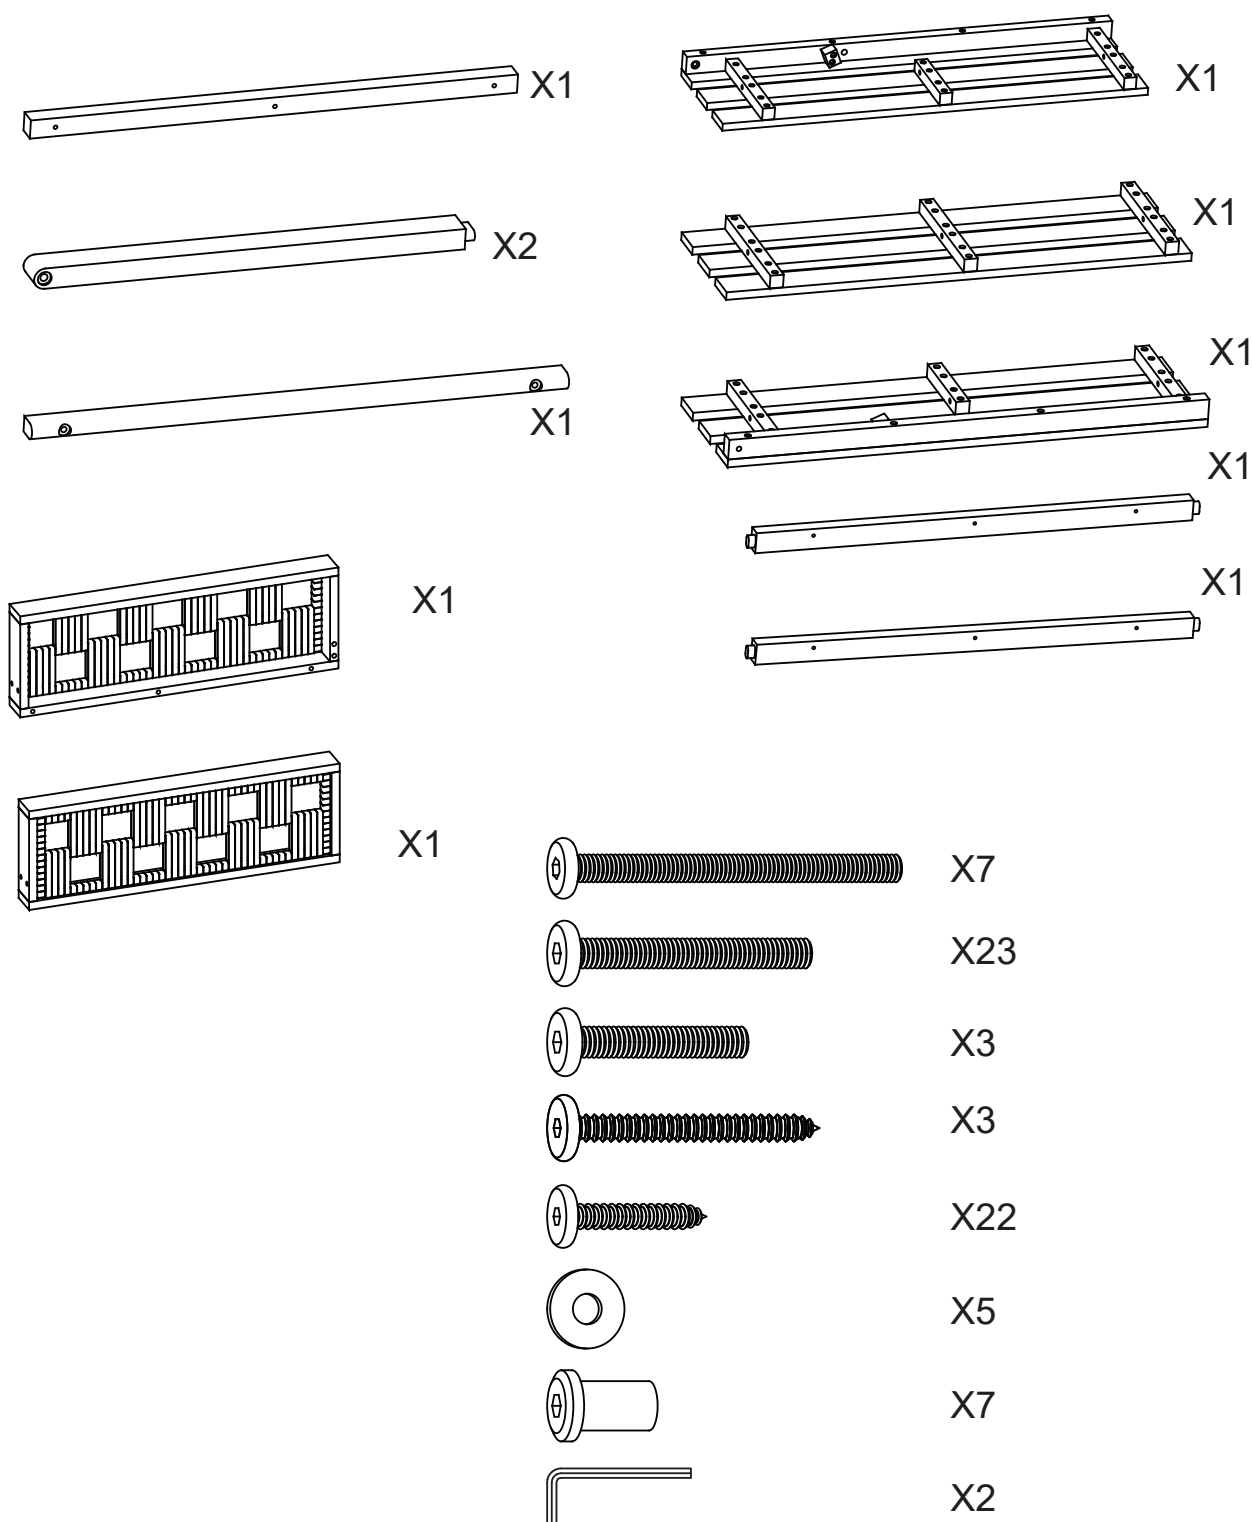

- Read instructions, cover to cover.
- Have 2 adults on hand for assembly.
- Do not assemble on flooring or carpet.
- Assemble on a clean non-marring surface (packing foam).
- Save all packaging until finished.


Assembly Steps

OVERVIEW

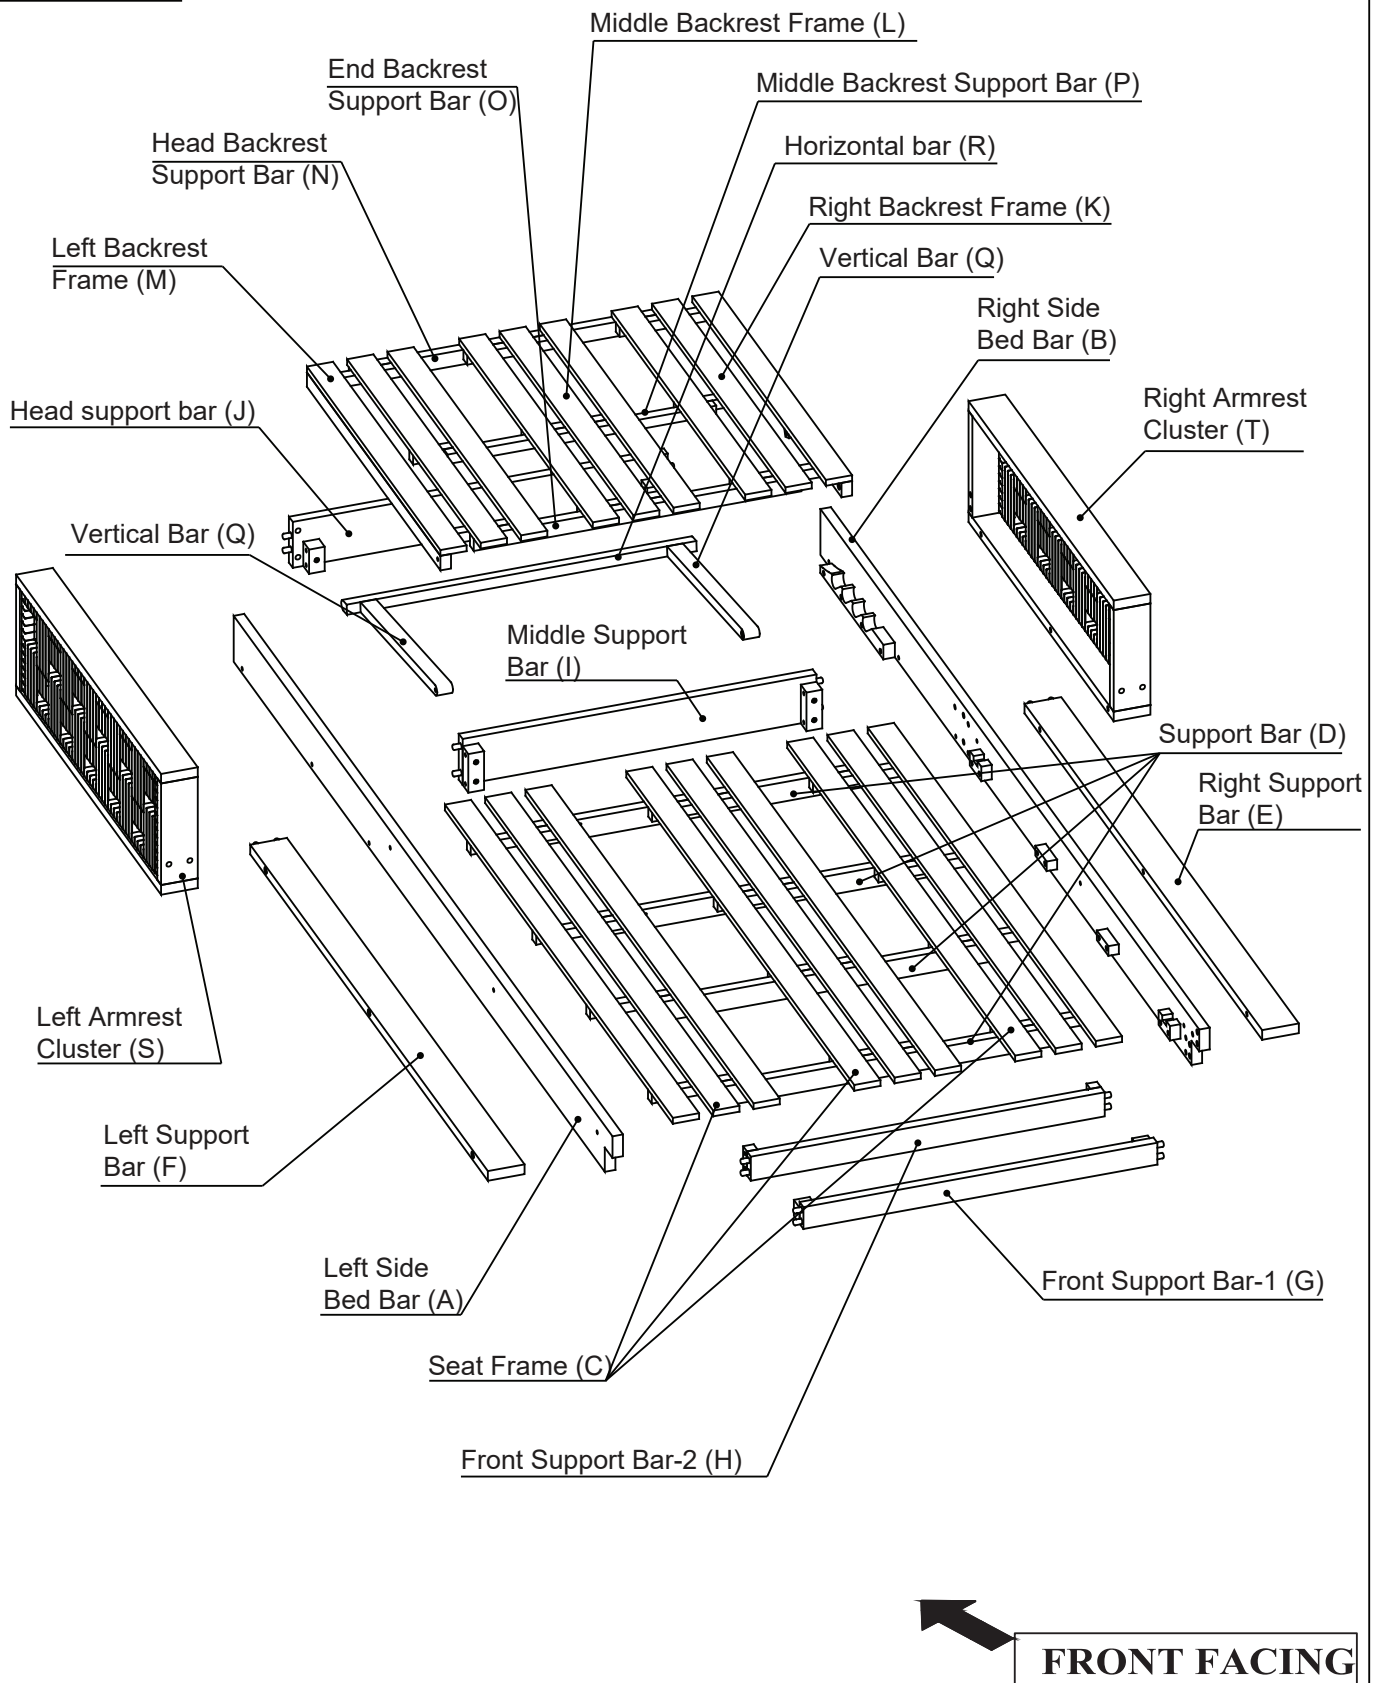


This Chaise Lounge has multiple parts and may require up to 40 minutes to assemble. To give you an overview of the Chaise Lounge parts, we have provided the above picture to put the various parts in perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

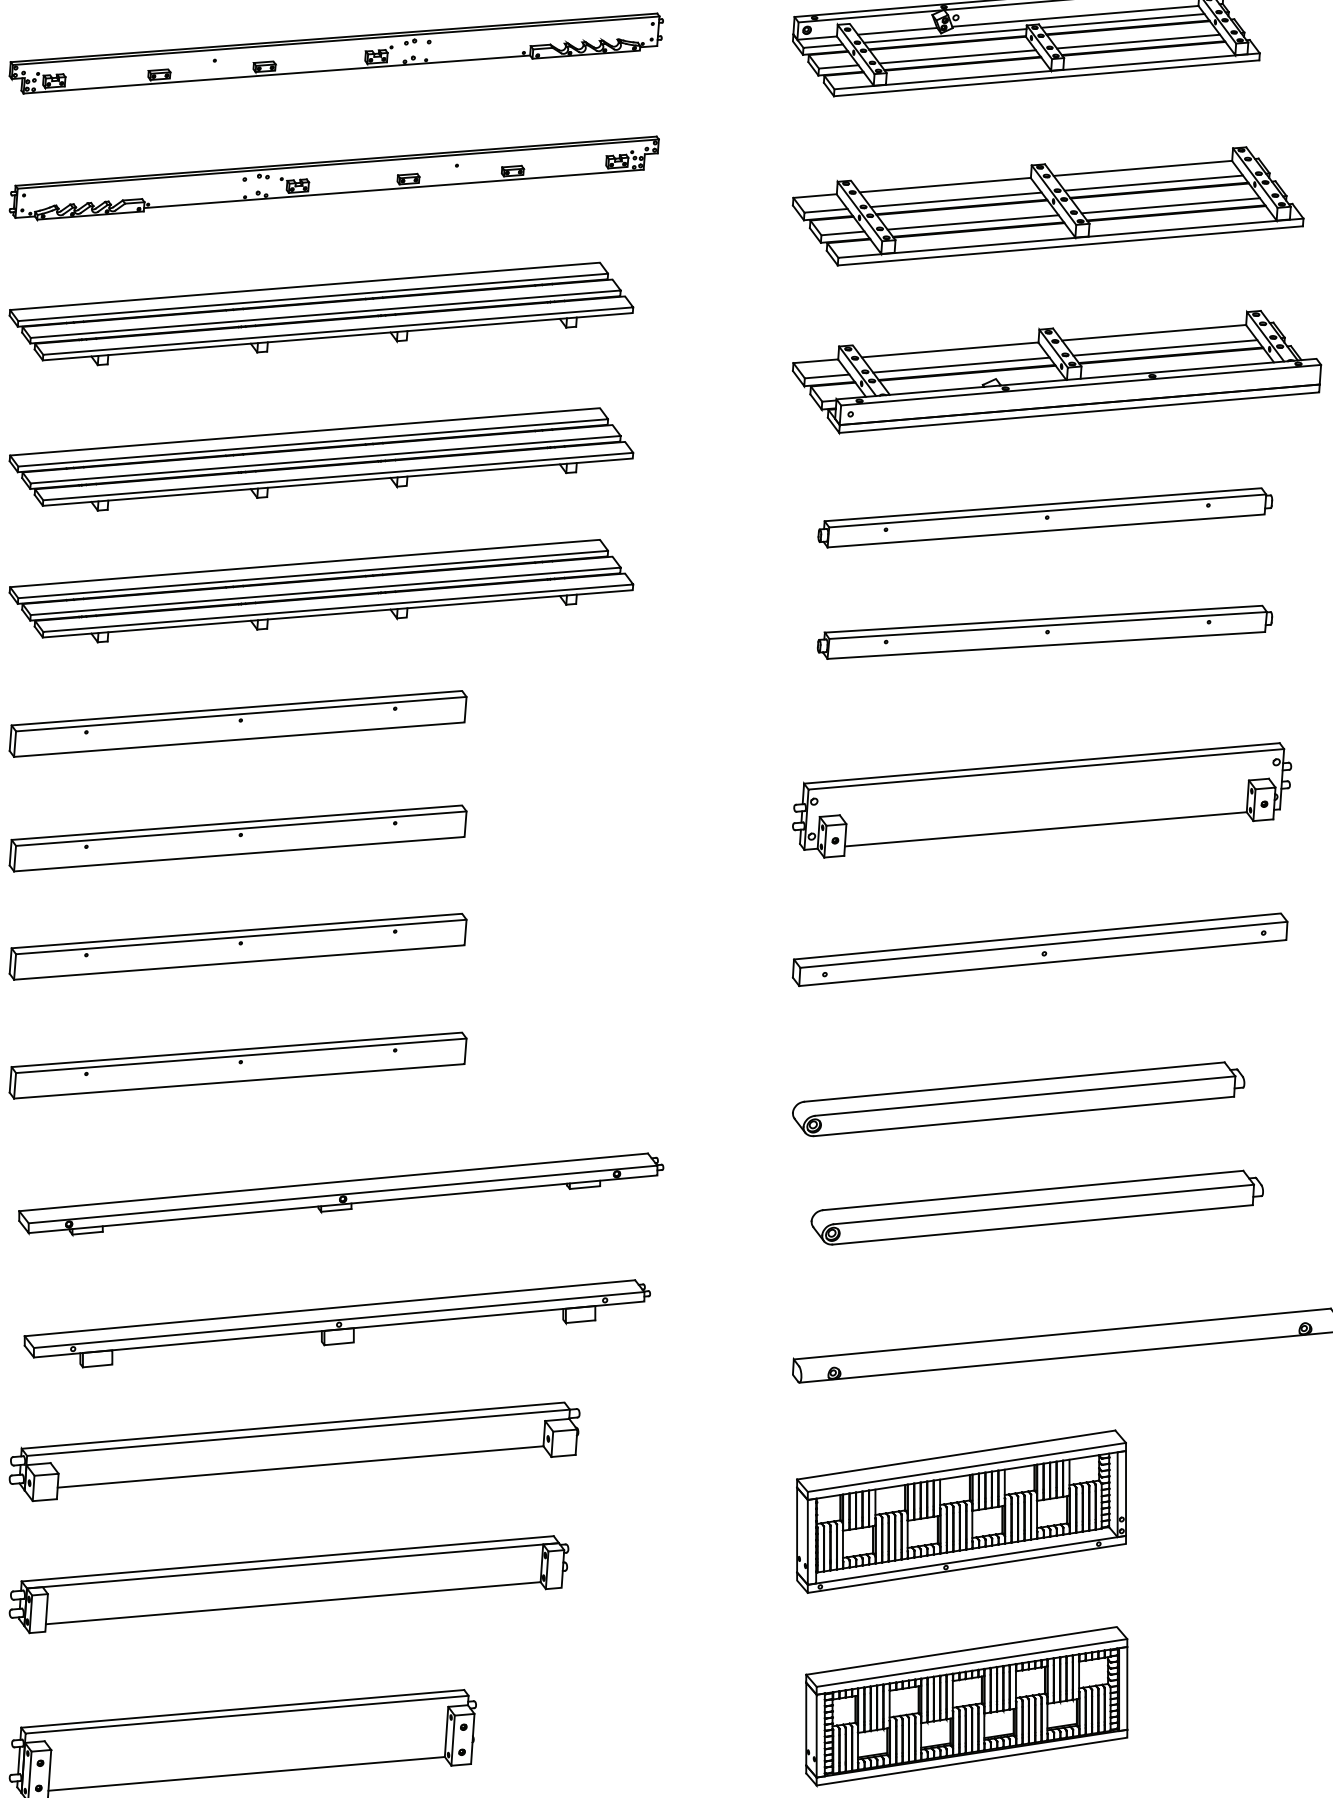


Unpack and place all parts on clean, non-marring surface.

Step 2

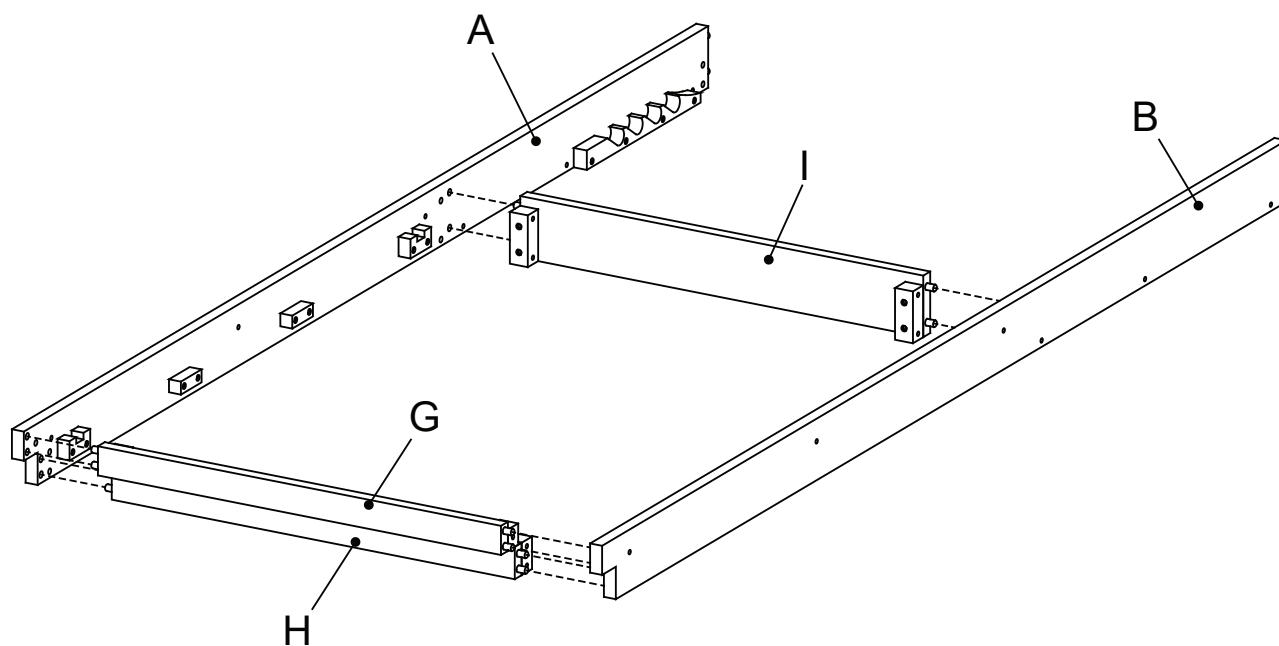


Place the parts on the clean, non-marring surface.
Attach the Middle Support Bar (I) and the Front Support Bar-1 (G) and Front Support Bar-2 (H) to the Left Side Bed Bar (A) and the Right Side Bed Bar (B) as shown above.

Step 3

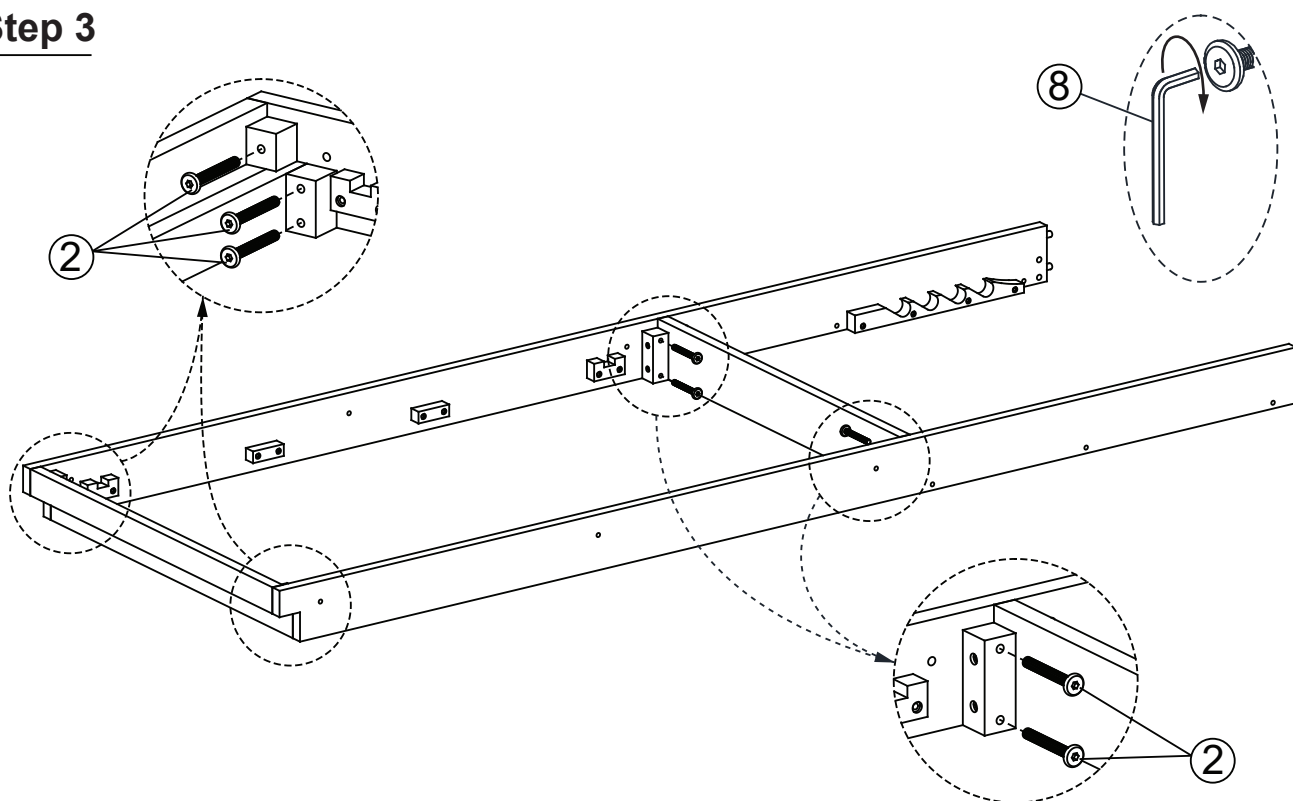

Attach the parts by using Bolts (②) and Allen Wrench (⑧) as shown above.
Note: DO NOT fully tighten the Bolts at this time.


Step 4

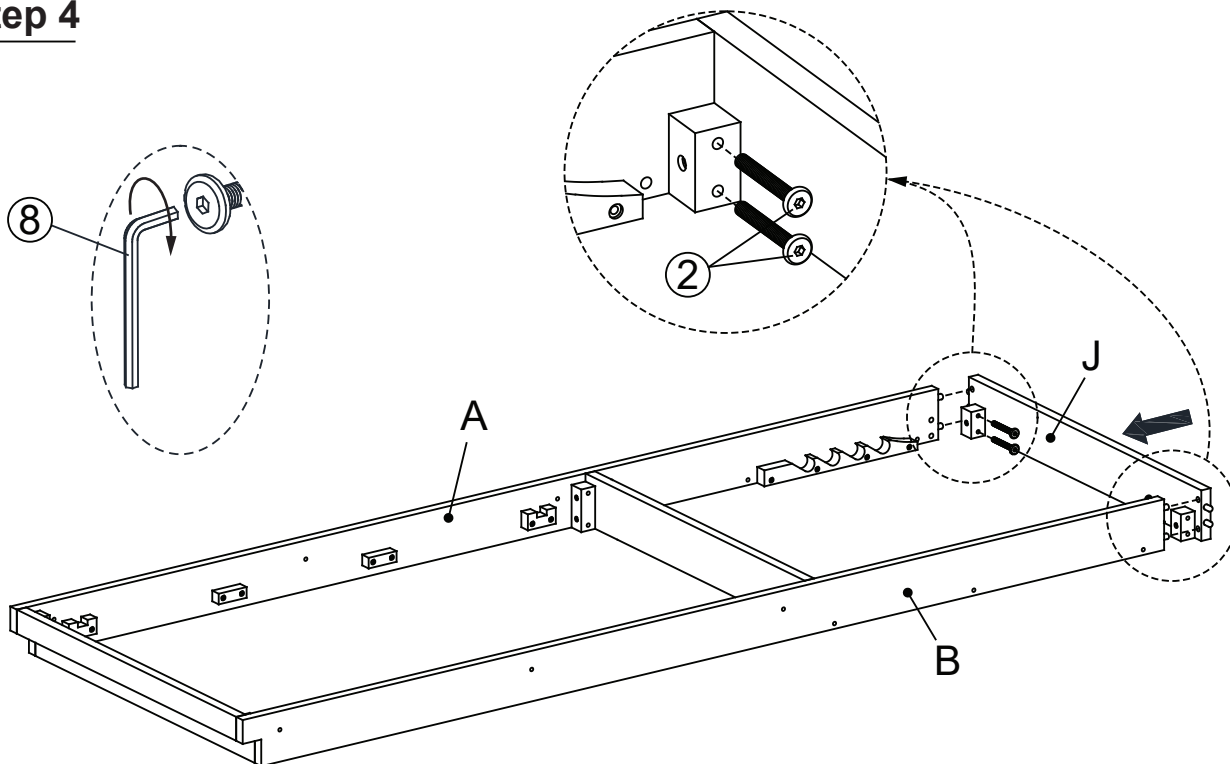

Attach the Head Support Bar (J) to the Left Side Bed Bar (A) and the Right Side Bed Bar (B) by using Bolts (②) and Allen Wrench (⑧).

Note: DO NOT fully tighten the Bolts at this time.


Step 5

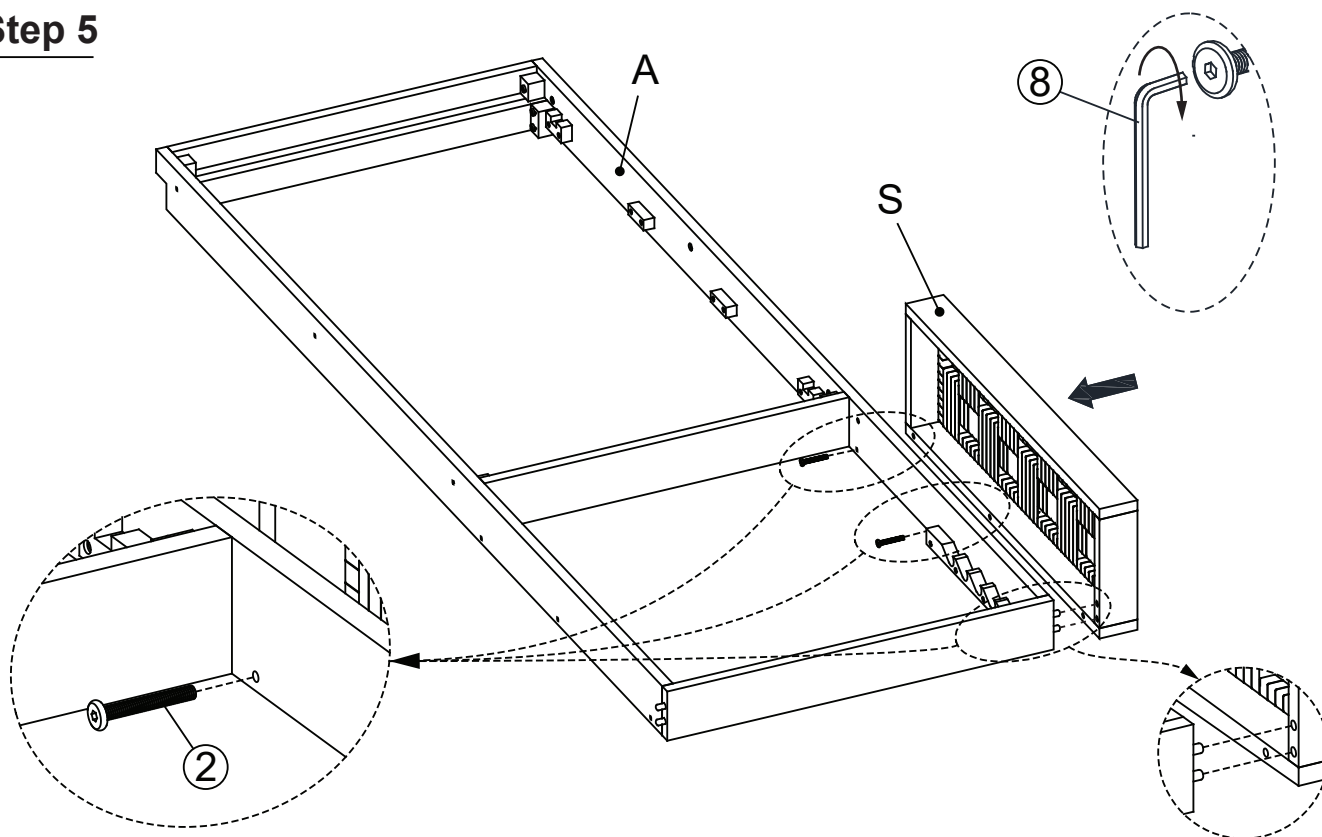

From Step 4, attach the Left Armrest Cluster (S) to the Left Side Bed Bar (A) by using Bolts (②) and Allen Wrench (⑧).

Note: DO NOT fully tighten the Bolts at this time.


Step 6

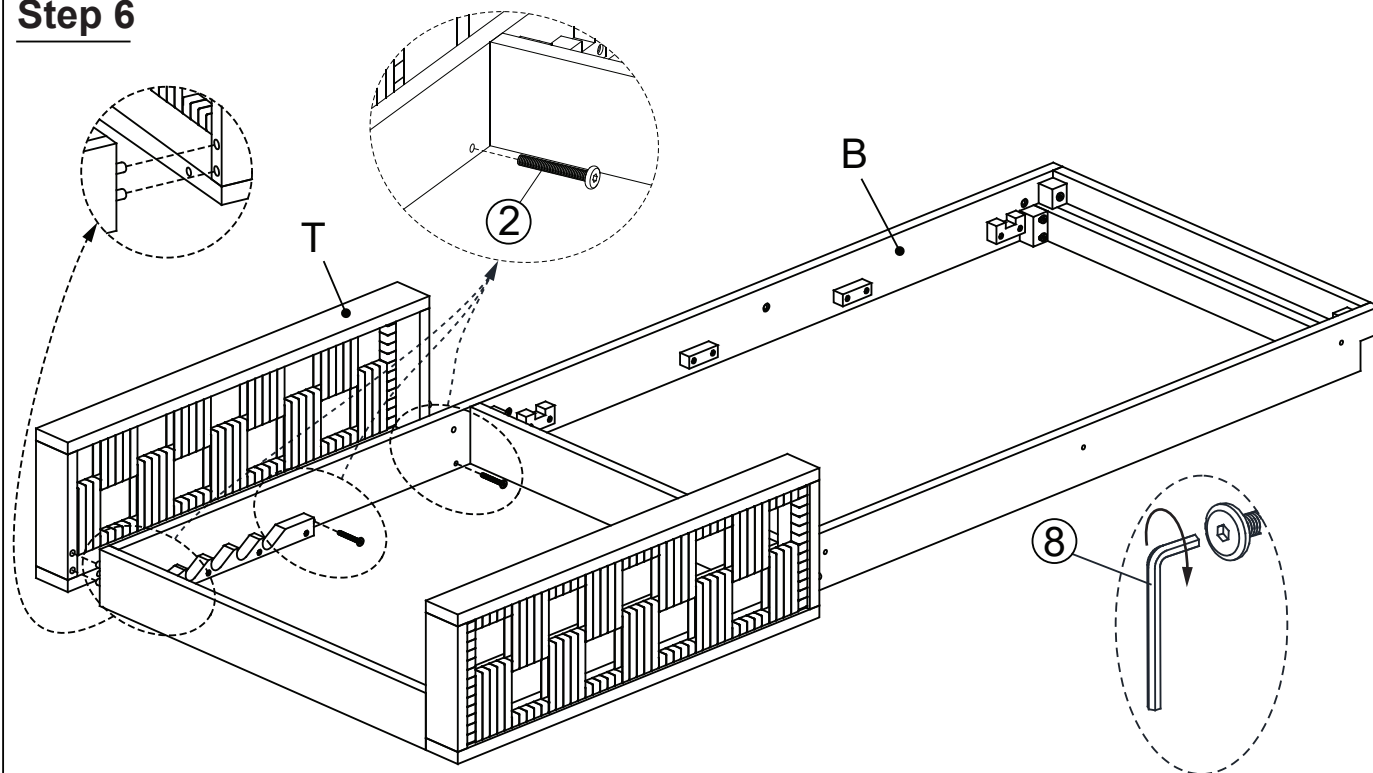

Turn the assembled part in Step 5 to the left side as shown above. Attach the Right Armrest Cluster (T) to the Right Side Bed Bar (B) by using Bolts (②) and Allen Wrench (⑧).

Note: DO NOT fully tighten the Bolts at this time.


Step 7

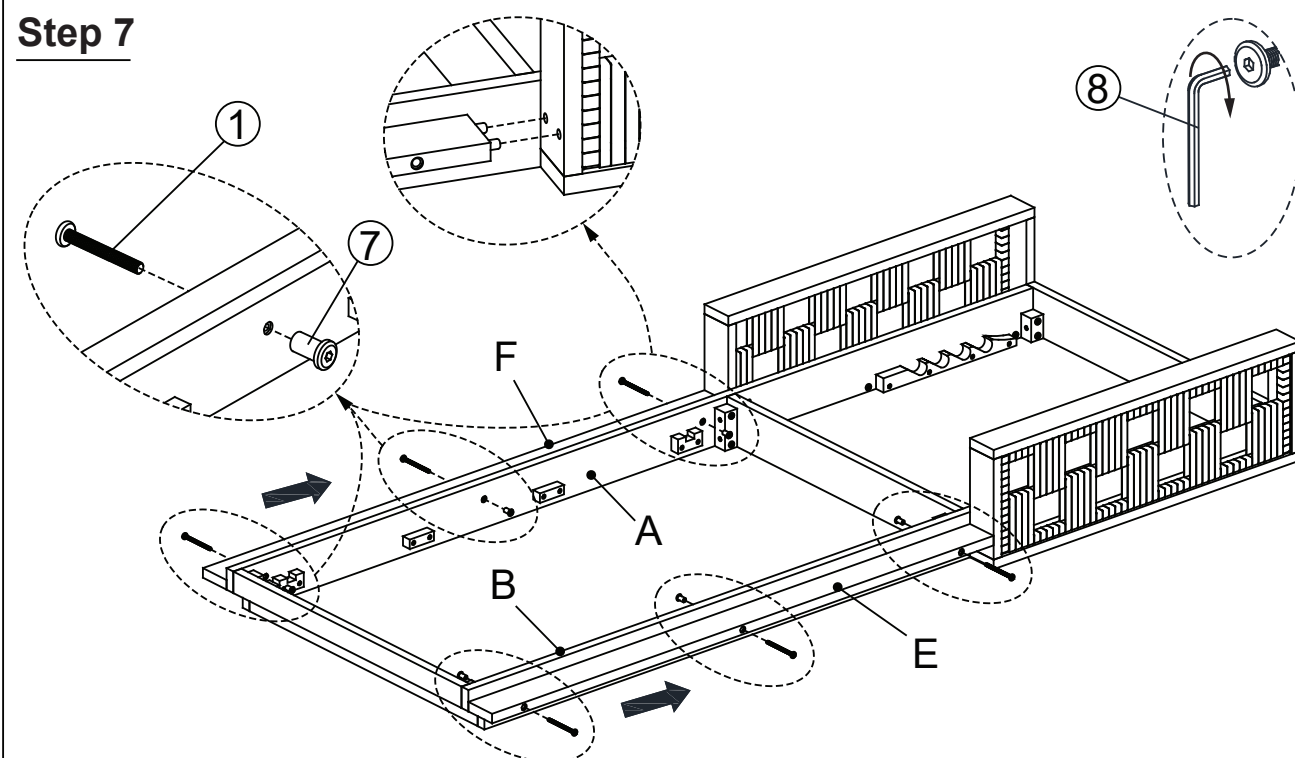

Turn the assembled part in Step 6 to the right side as shown above. Attach the Right Support Bar (E) to the Right Side Bed Bar (B) and Left Support Bar (F) to the Left Side Bed Bar (A) by using Bolts (①), Horizontal Nut (⑦) and Allen Wrench (⑧), as shown above.

Note: DO NOT fully tighten the Bolts at this time.


Step 8

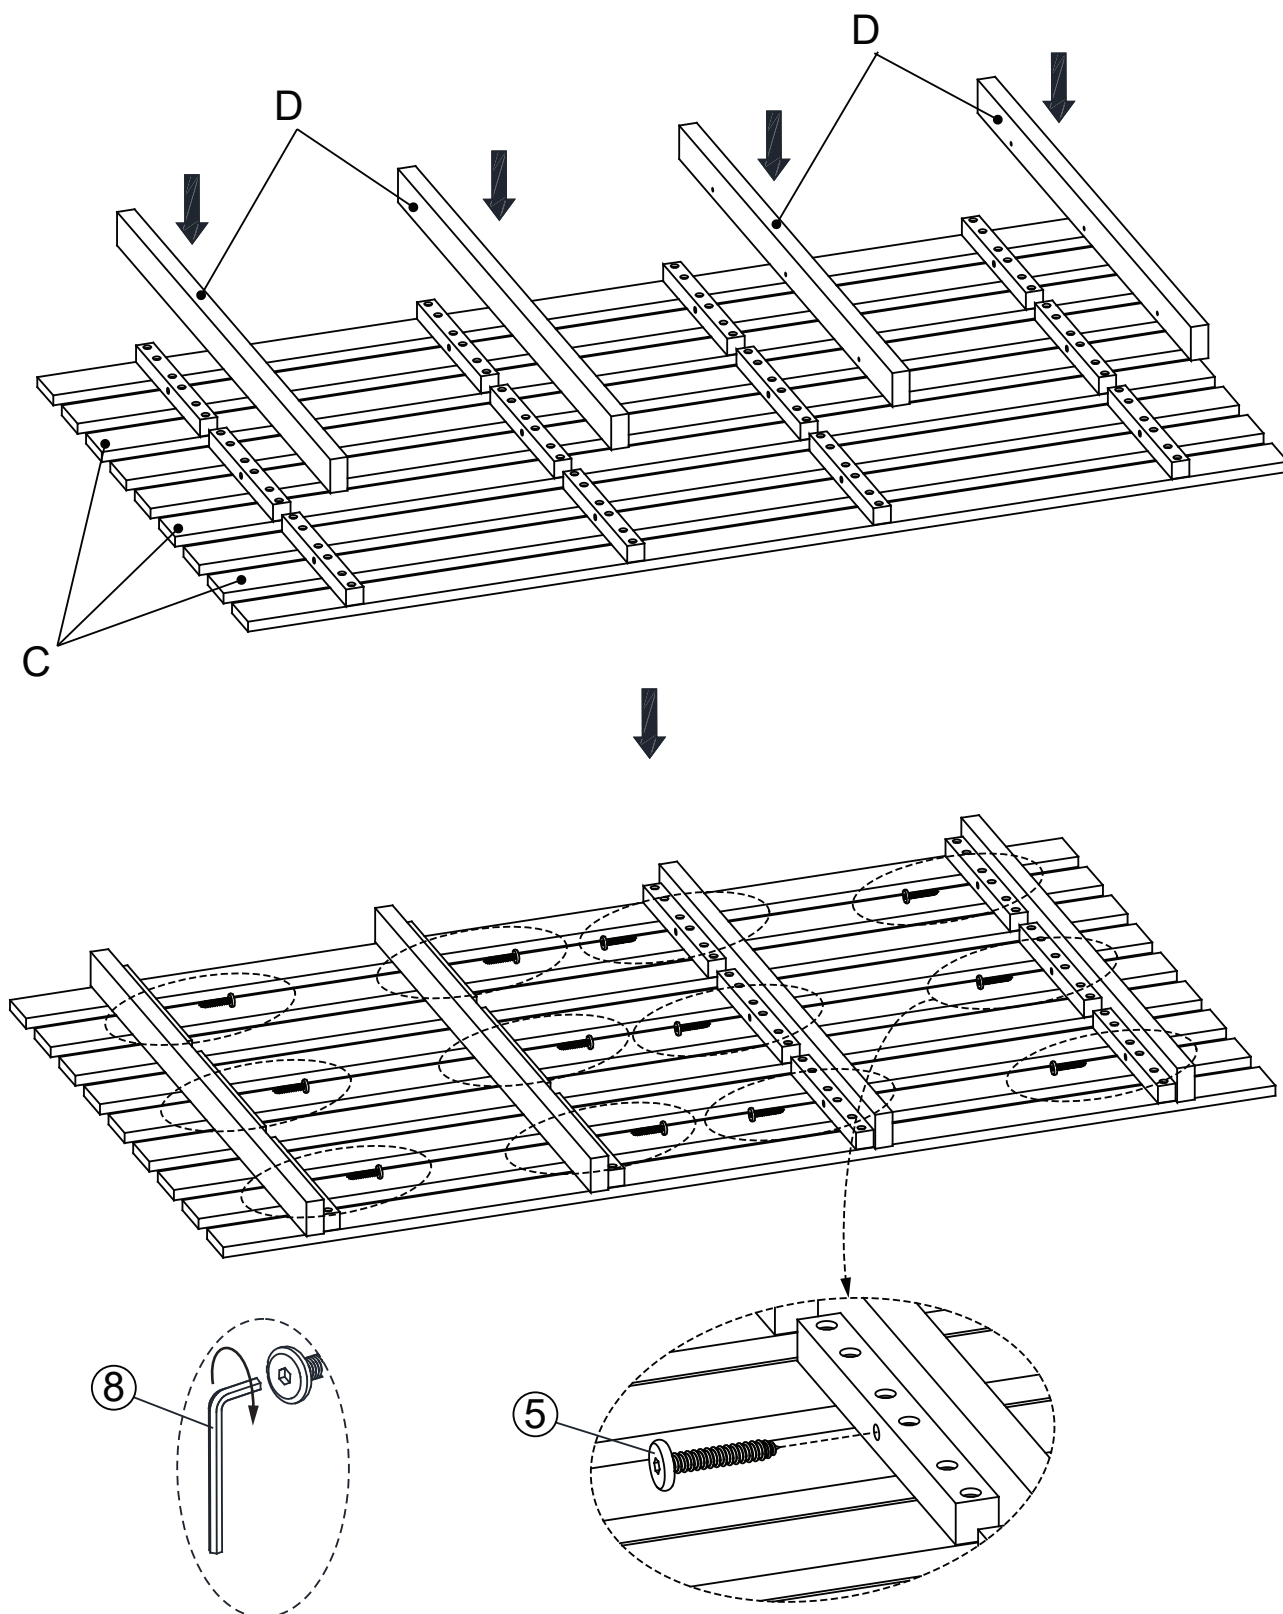

Place the Seat Frame on a on the clean, non-marring surface. Attach all the Support Bar (D) to the Seat Frame (C) by using Screws (5), Allen Wrench (8) as shown above.


Note: DO NOT fully tighten the Screws at this time.

Step 9

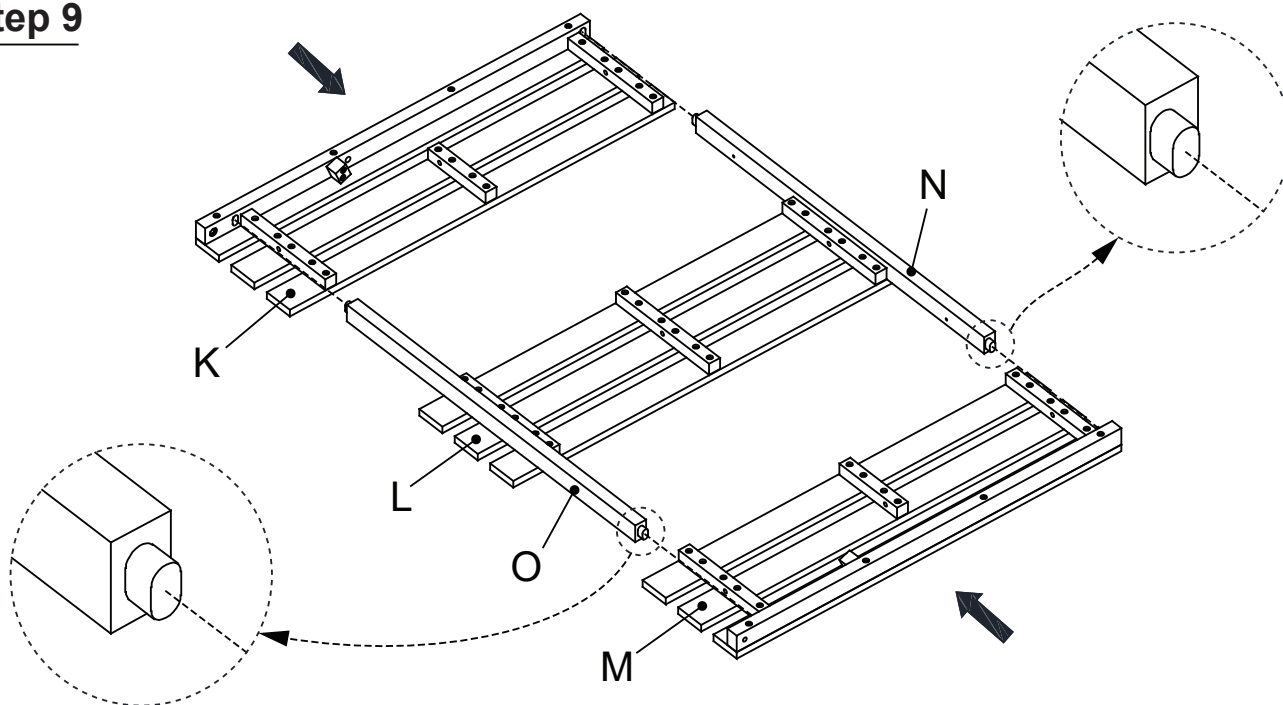


Place Left Backrest Frame (M), Middle Backrest Frame (L), and Right Backrest Frame (K) on a clean, non-marring surface.
Position the tenon of the Head Backrest Support Bar (N) and the End Backrest Support Bar (O) into the hole of Left Backrest Frame (M) and Right Backrest Frame (K)

Step 10

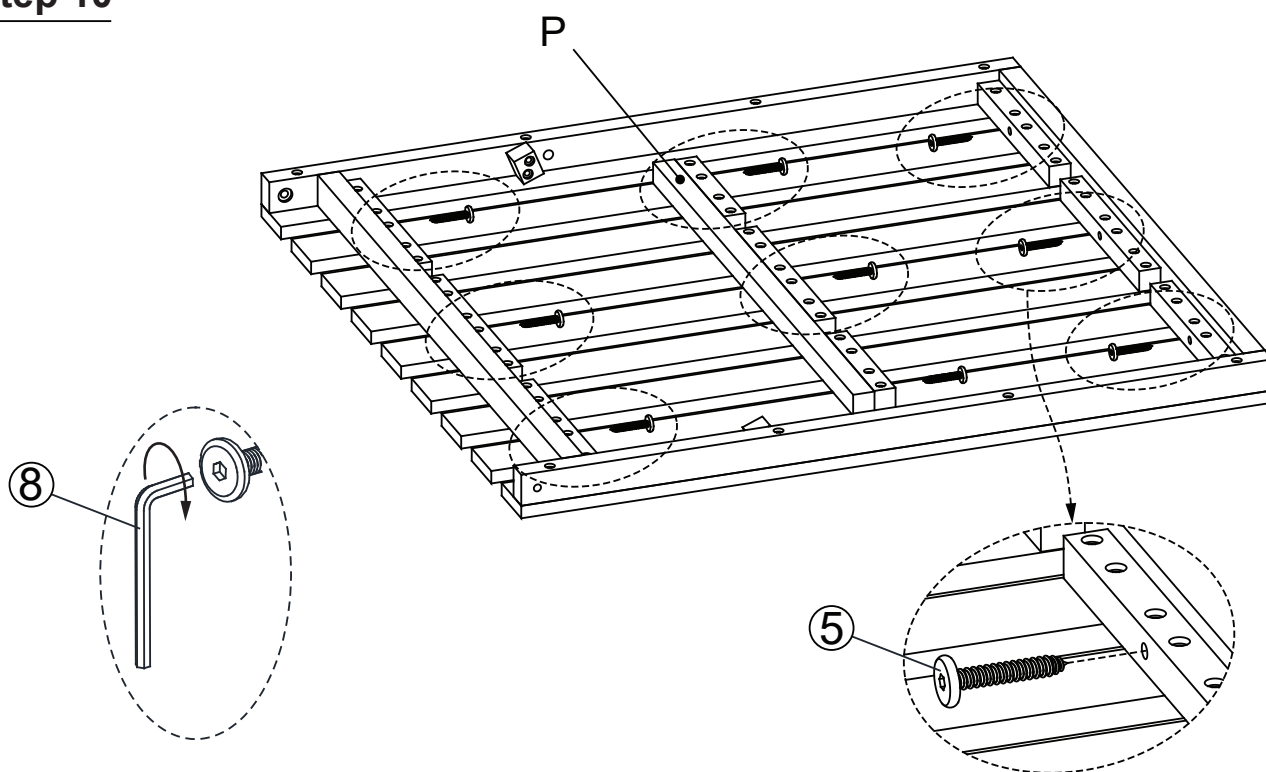

From step 9, attach the Middle Backrest Support Bar (P) to the assembled part in Step 8 by using Screws (⑤) and Allen Wrench (⑧).
Note: DO NOT fully tighten the Screws at this time.


Step 11

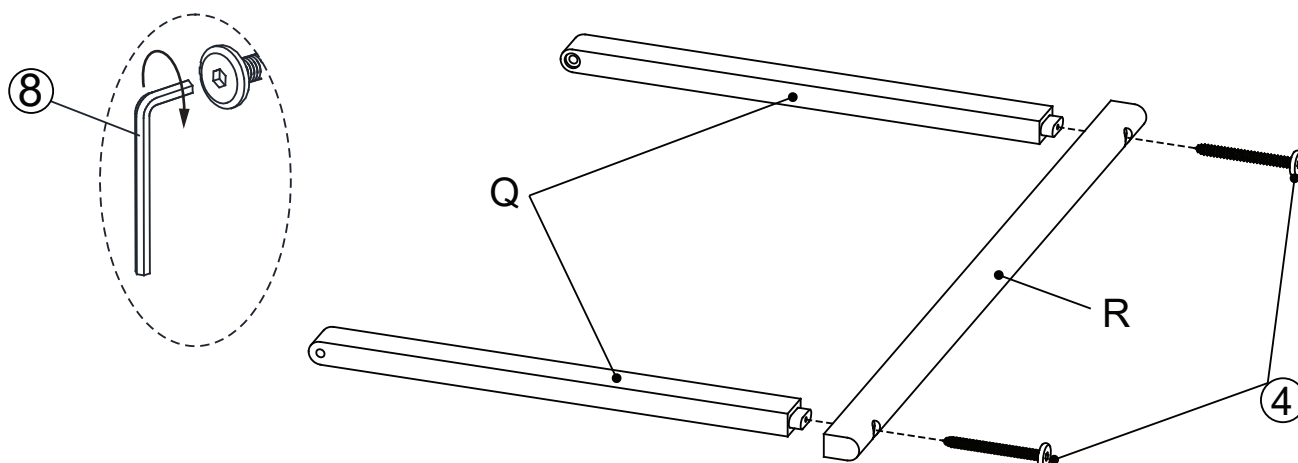

Place the Vertical Bar (Q) and Horizontal Bar (R) on the clean, non-marring surface. Attach the tenon of Vertical Bar (Q) to the Horizontal Bar (R) by using Screws (④) and Allen Wrench (⑧).

Note: DO NOT fully tighten the Screws at this time.


Step 12

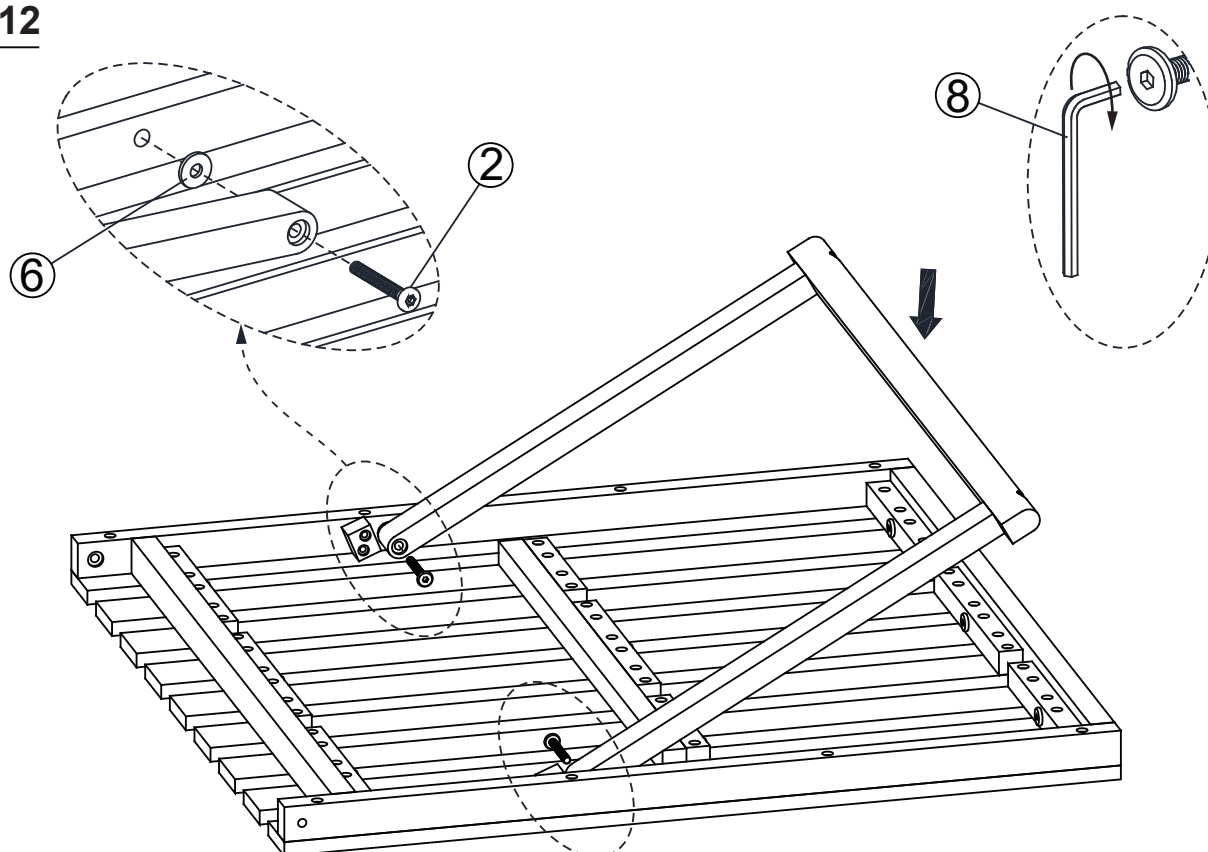

Attach the assembled part in Step 10 to the assembled part in Step 11 by using the Bolts (②), Washer Plastic (⑥), and Allen Wrench (⑧).


Note: DO NOT fully tighten the Bolts at this time.

Step 13

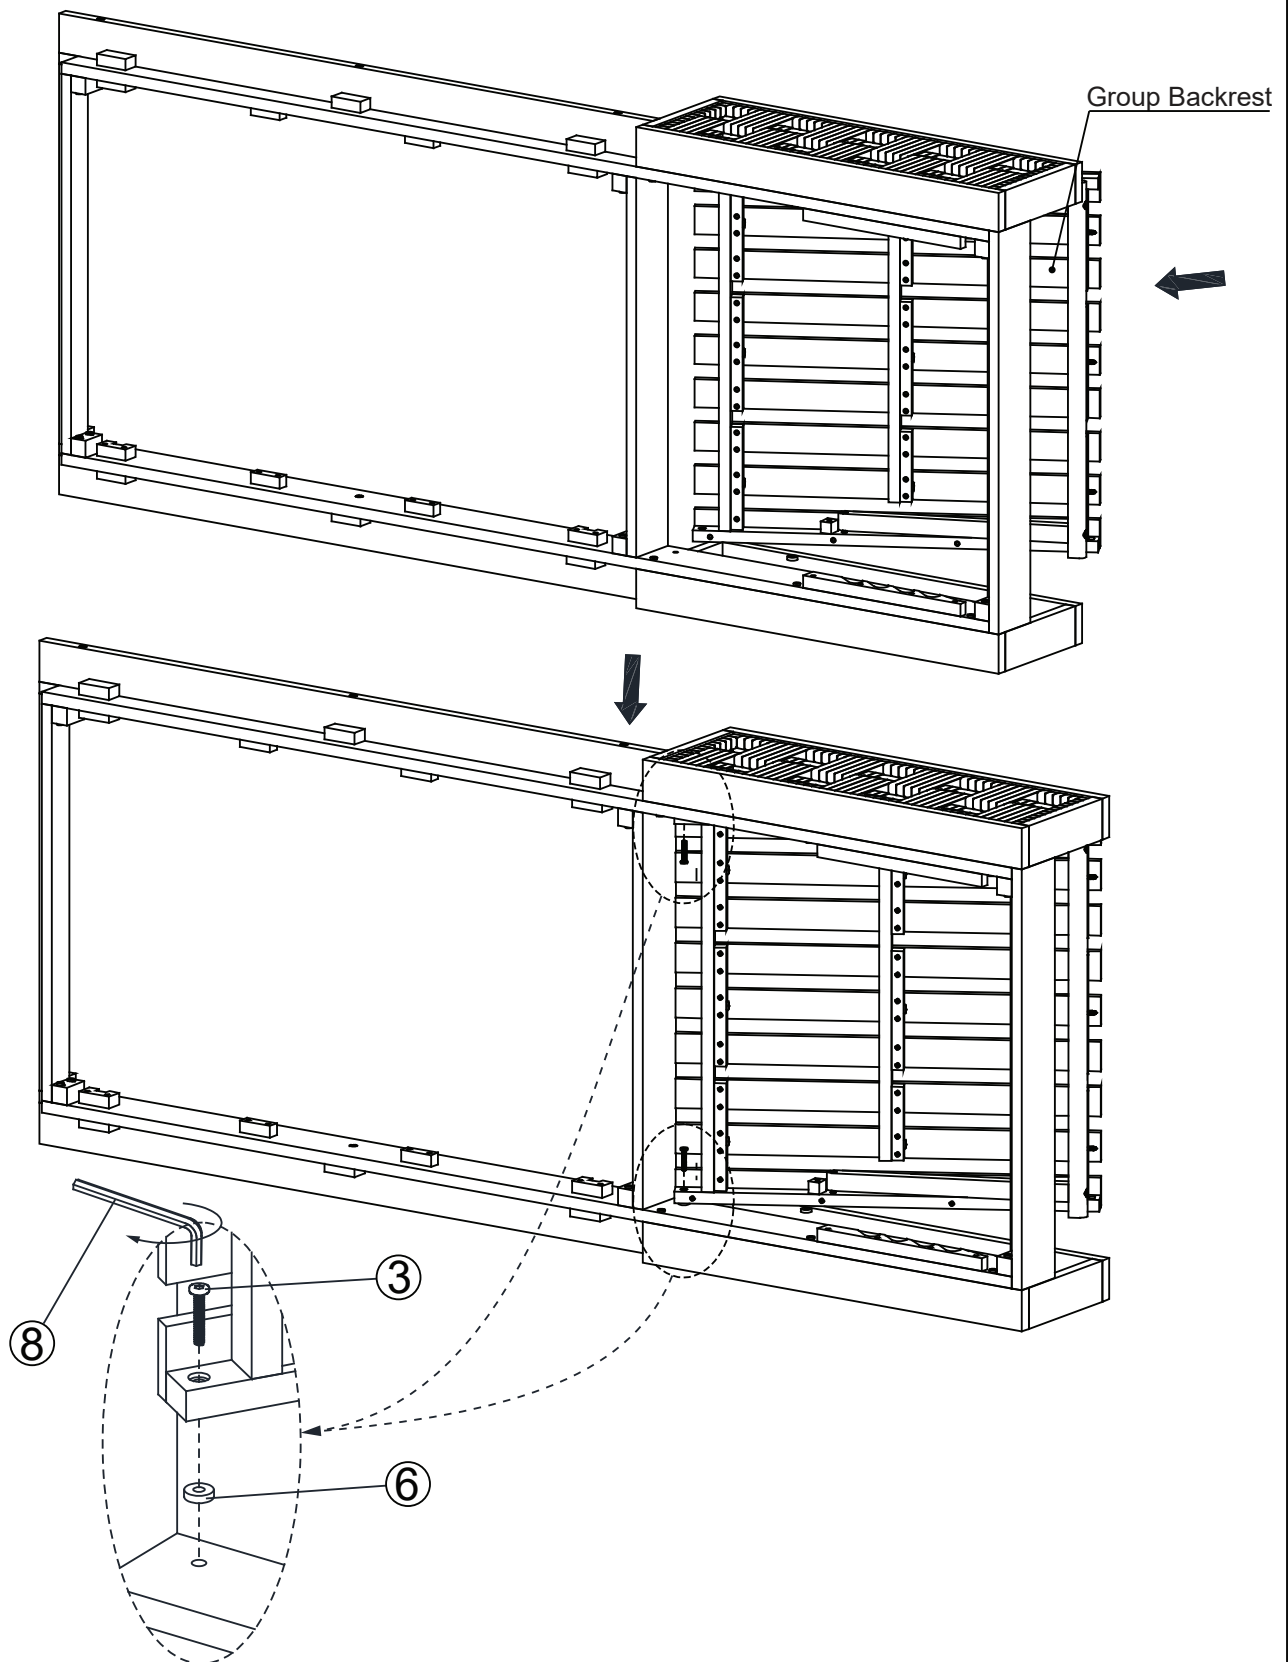

With the help of your adult partners, flip up the assembled part in step 7 (left side-bottom), then attach the assembled part in step 12 to the assembled part in step 7 by using Bolts (③), Washer Plastics (⑥), and Allen Wrench (⑧). Note: DO NOT fully tighten the Bolts at this time.

Step 14

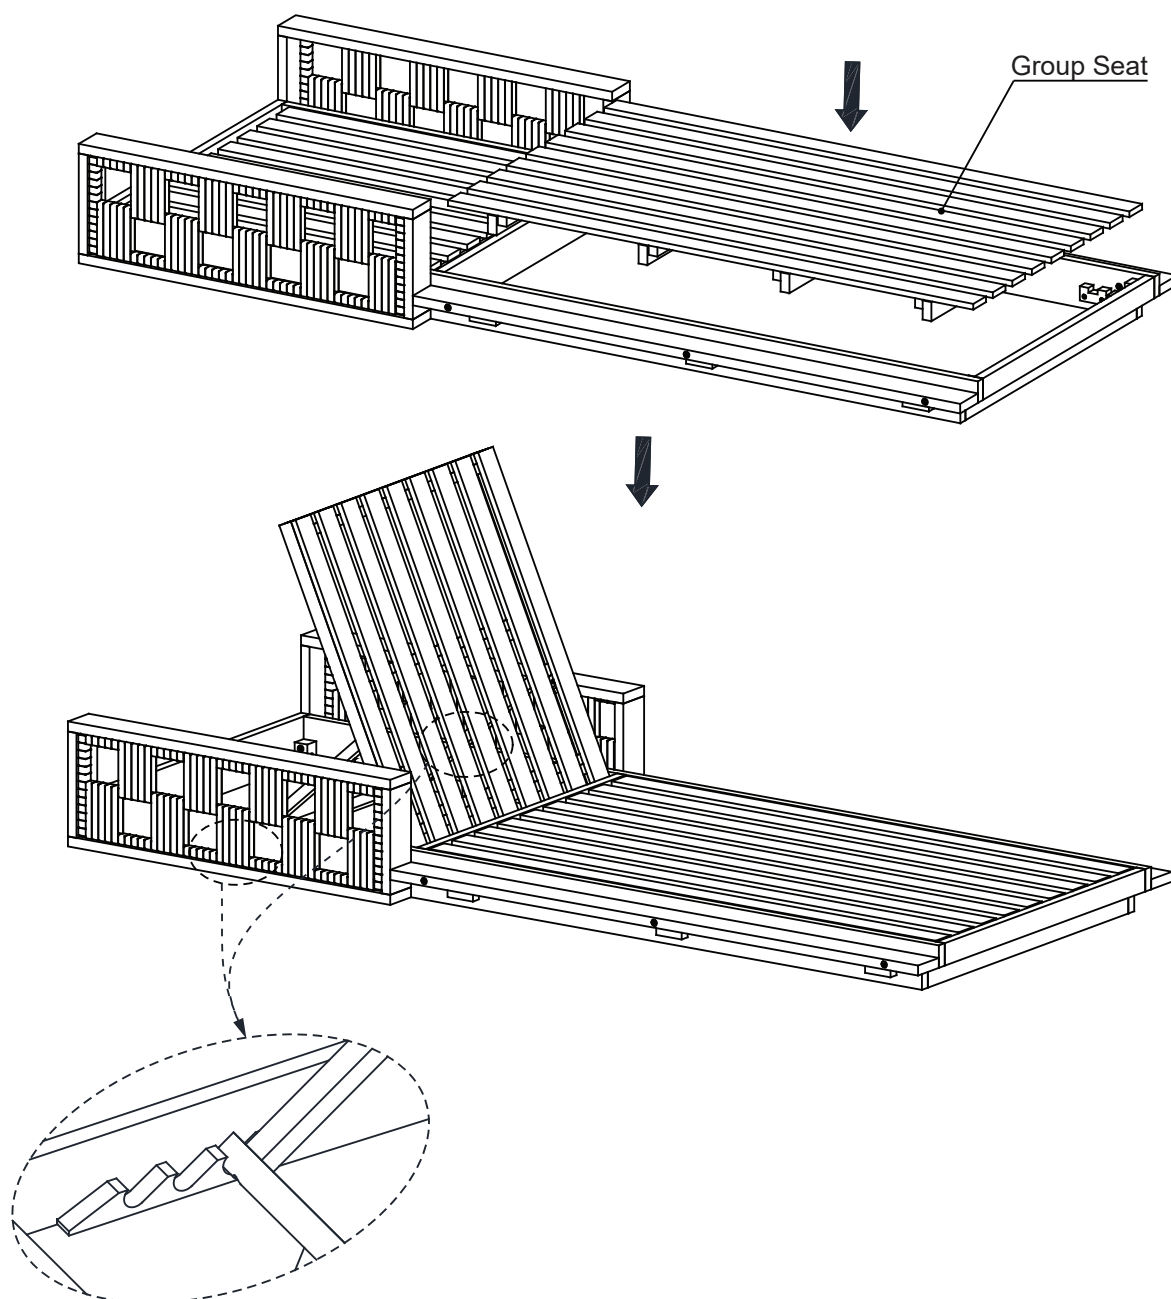

With the help of your adult partners, place the assembled part in Step 13 on the clean, non-marring surface. Attach the assembled part in Step 10 to the assembled part in Step 13 as shown above.

Inspect the Chaise Lounge and make sure all parts are adequately connected.

In a sequential manner, tighten all Screws and Bolts at all joints.

CAUTION: When tightening these screws and bolts, tighten sequentially.

DO NOT tighten any screws or bolts fully and then move towards the next one.

This could cause the frame to warp.

WARNING!! IF THE CHAISE LOUNGE IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

Your Chaise Lounge is ready for use.

This Chaise Lounge can only be used on a flat, level surface.

Questions & Answers about Proposition 65

- What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals. Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

- What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

- What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

- Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.