

# Assembly Instructions

**Caution : You must read this before you proceed**

## Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.







- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in boxes for hardware packs and legs.

# Dining Chair

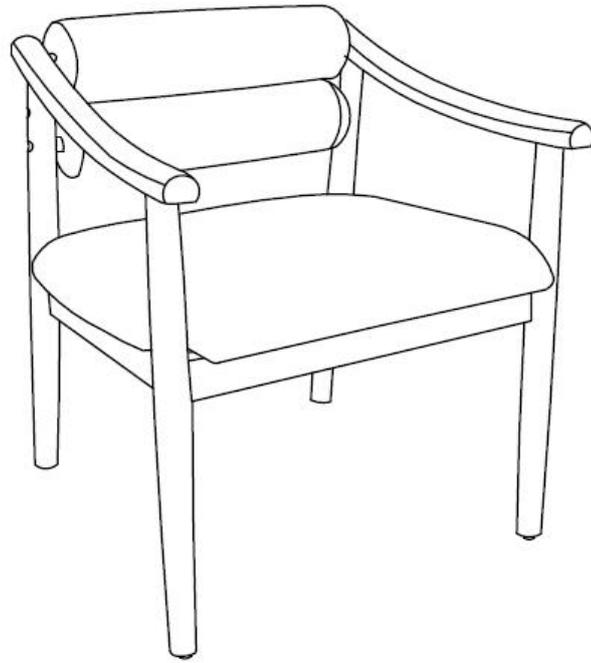

## Parts List

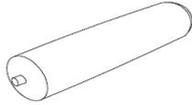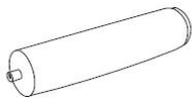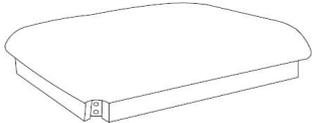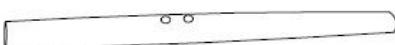
| Label | Picture   | Description    | QTY |
|-------|---|----------------|-----|
| A     |  | Upper Backrest | 1   |
| B     |  | Lower Backrest | 1   |
| C     |  | Seat           | 1   |
| D     |  | Left Armrest   | 1   |
| E     |  | Right Armrest  | 1   |
| F     |  | Front Leg      | 2   |
| G     |  | Left Back Leg  | 1   |
| H     |  | Right Back Leg | 1   |

# Hardware

| Label | Picture | Description          | QTY |
|-------|---------|----------------------|-----|
| ①     |         | Bolt (M8X80mm)       | 9   |
| ②     |         | Bolt (M6X30mm)       | 3   |
| ③     |         | Bolt (M6X20mm)       | 11  |
| ④     |         | Iron sheet Connector | 2   |
| ⑤     |         | Spring Washer        | 9   |
| ⑥     |         | Flat Washer          | 9   |
| ⑦     |         | Allen Wrench(M8)     | 1   |
| ⑧     |         | Allen Wrench(M6)     | 1   |

# Assembly Preparation

Before Beginning Assembly:

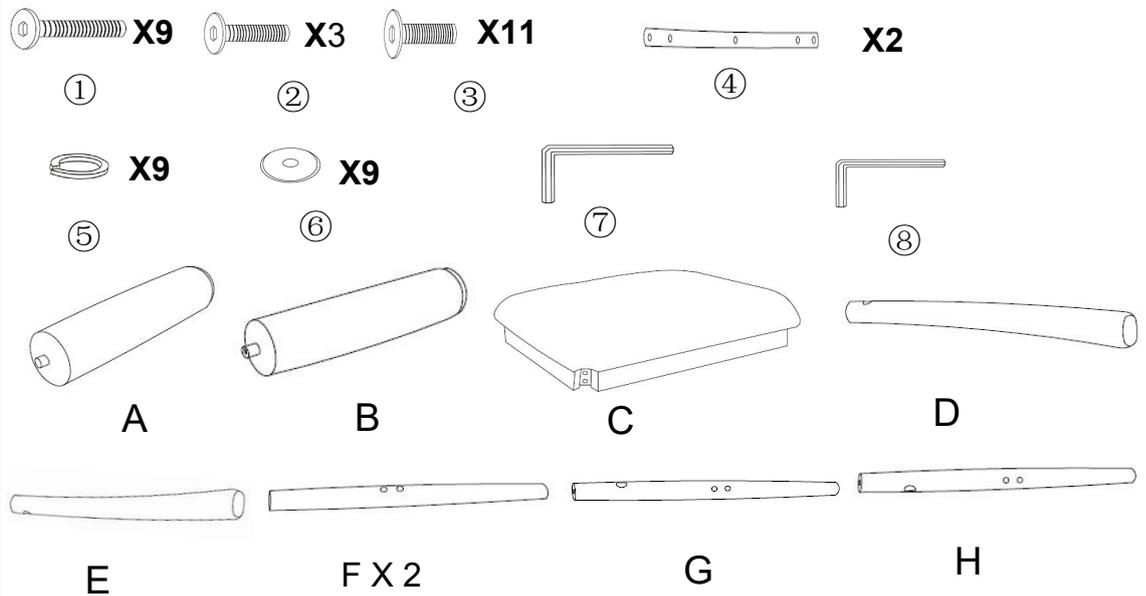

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

# Assembly Steps

## Overview

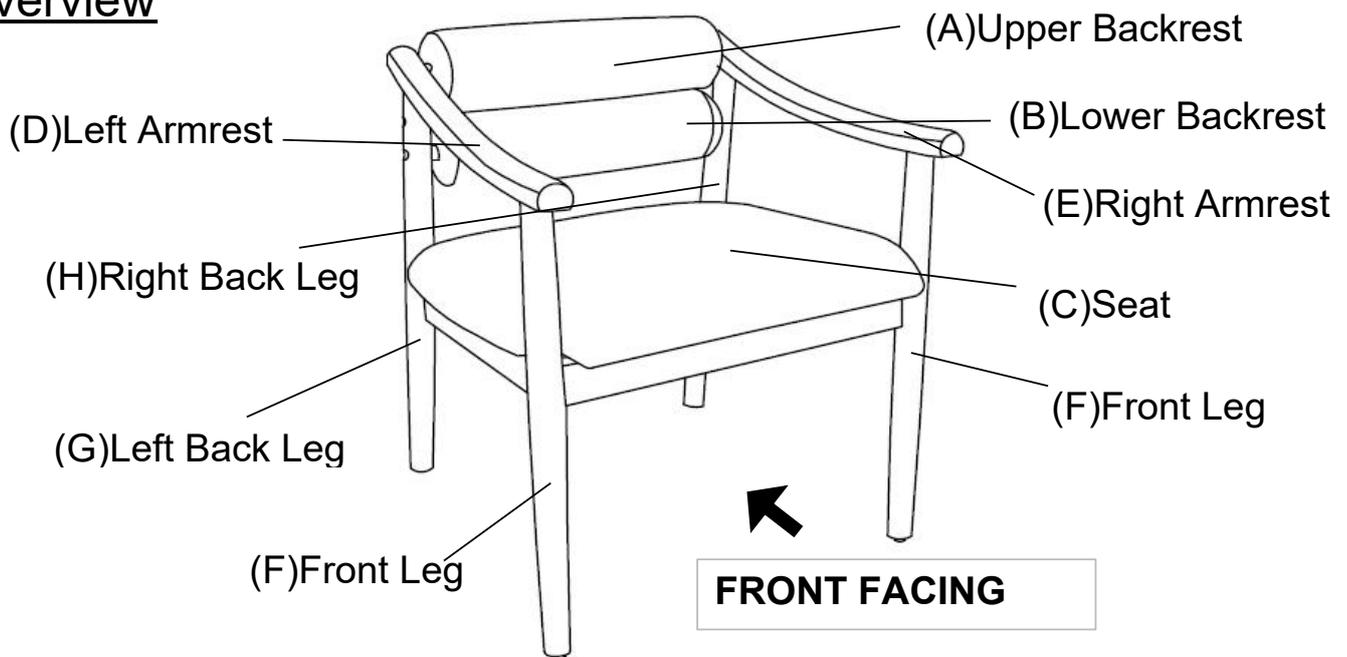


This Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chair parts, the above picture is provided to help you put the various parts into perspective.

Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Friendly reminder: Tighten all the bolts after all mounting positions are installed.

## Step 1

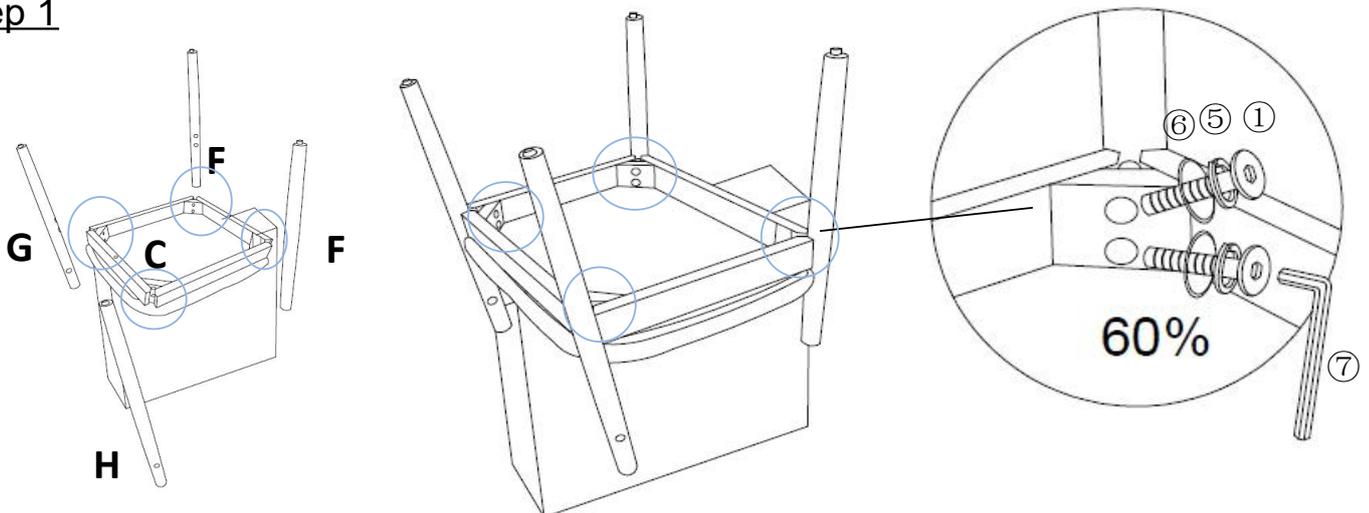

Open the carton, and place all parts on a clean, non-marring surface.

Take out Seat(C), Front Leg(F), Left Back Leg(G) and Right Back Leg(H).


Align the mounting position on the Front Leg(F) to the mounting position on the bottom of Seat(C) as shown.

Attach Front Leg(F) to the Seat(C) using Bolt(①), Spring Washer(⑤) and Flat Washer(⑥) with Allen Wrench(⑦).

Repeat same step to attach the other Front Leg(F), Left Back Leg(G) and Right Back Leg(H) to the Seat(C).


**Do not fully tighten the Bolts.**

## Step 2

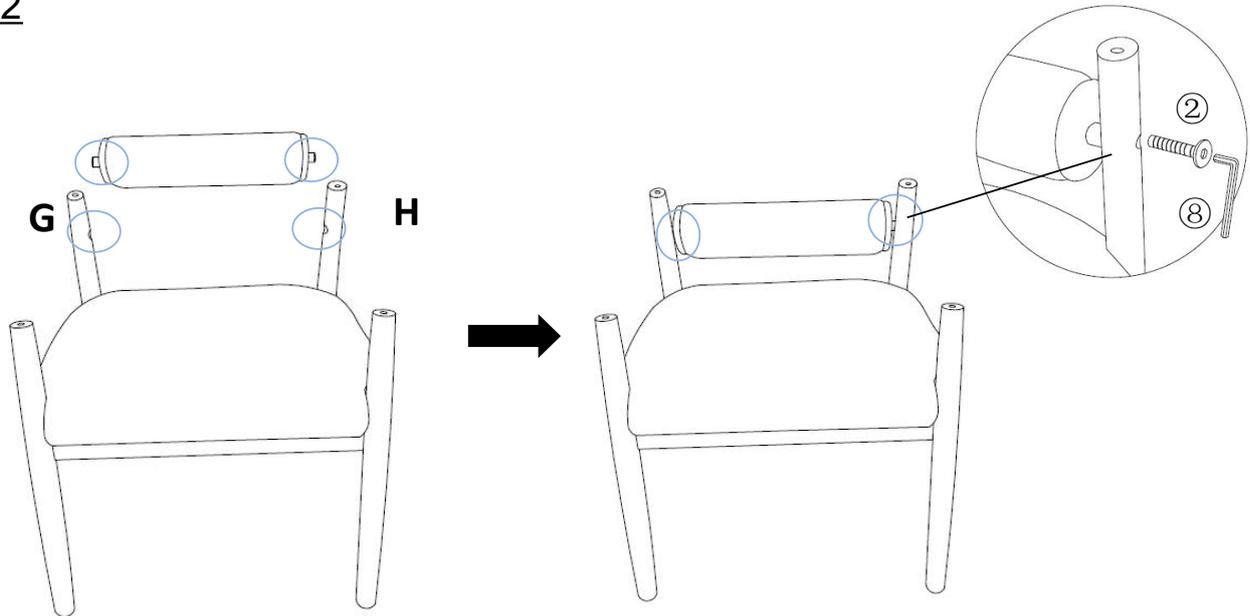


Insert Lower Backrest(B) into the mounting position on the Left Back Leg(G) and Right Back Leg(H) as shown.  
Attach Left Back Leg(G) and Right Back Leg(H) to Lower Backrest(B) using Bolt(2) with Allen Wrench(8).

## Step 3

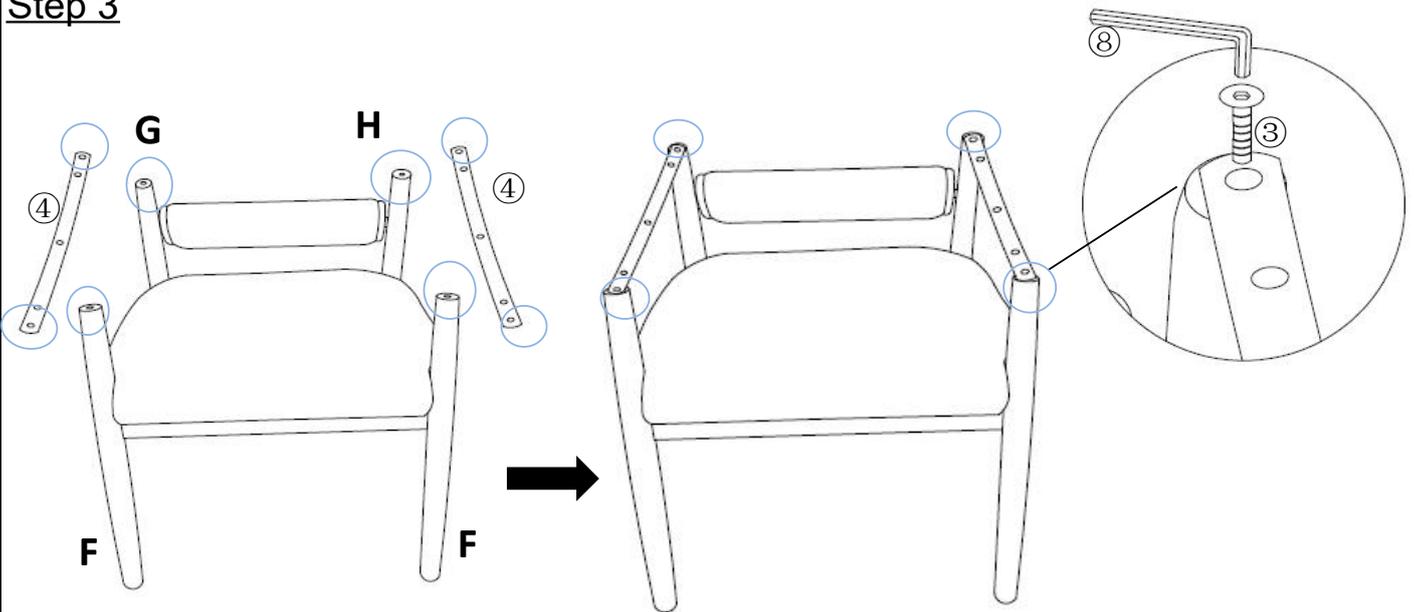

Install Iron sheet Connector(4) into the joint of Front Leg(F), Left Back Leg(G) and Right Back Leg(H) using Bolt(3) with Allen Wrench(8).  
Ensure that the outer mounting position of the Iron sheet Connector(4) are aligned with the mounting position on the upper of the leg as shown.


### Step 4

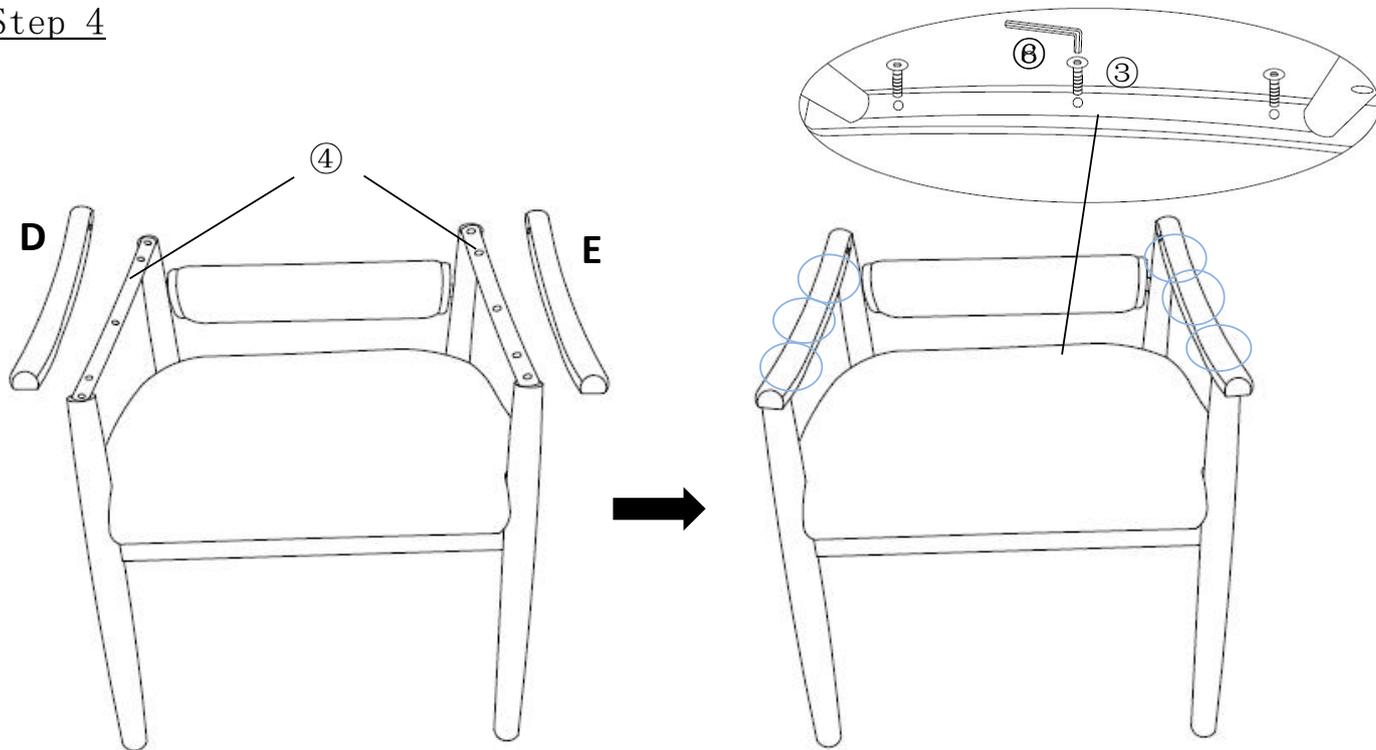

Align the mounting position on Left Armrest(D) and Right Armrest(E) to Iron sheet Connector(④).


Attach Left Armrest(D) and Right Armrest(E) to Iron sheet Connector(④) using Bolt(③) with Allen Wrench(⑧).

### Step 5

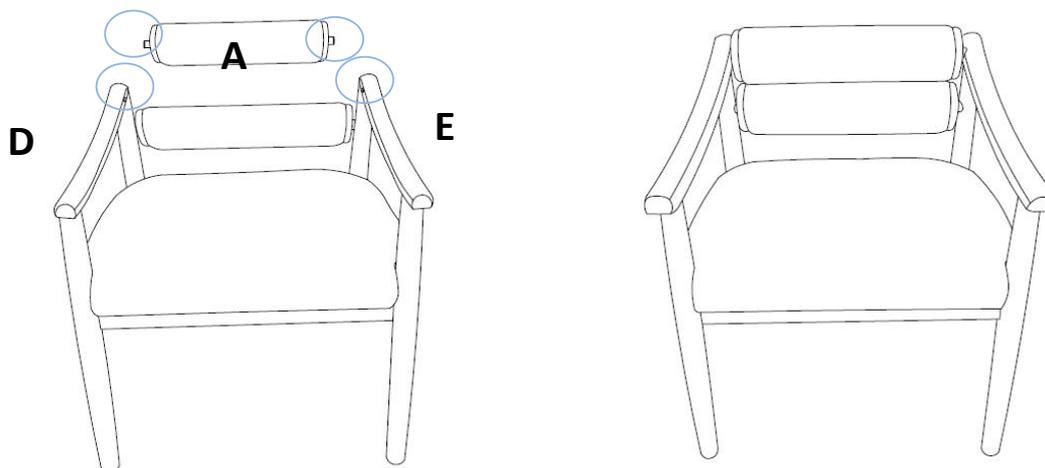

Clip Upper Backrest(A) into the mounting position on the top of Left Armrest(D) and Right Armrest(E), and secure it in place.

## Step 6

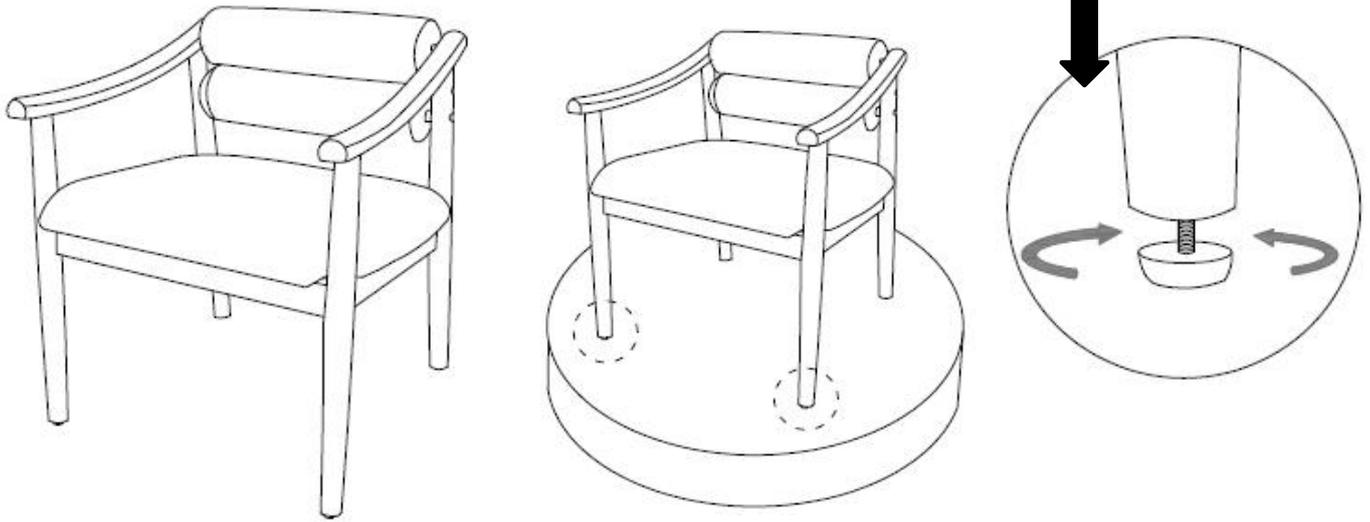

**Now, fully and securely, tighten all bolts, at all joints.**

Adjust the Pre-attached levellers at the bottoms of the chair legs until the chair is level with the ground.

Your Chair is ready for use.

This CHAIR can only be used on a flat, level surface.

## Questions & Answers about Proposition 65

- What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

- What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

- What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

- Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at [P65.Questions@oehha.ca.gov](mailto:P65.Questions@oehha.ca.gov), or by phone at (916) 445-6900.