



SLEIGH STYLE BABY CHANGING TABLE WITH HAMPER AND 3 BASKETS

MODEL NUMBERS:

02400 White
02402 Cherry
02404 Black

02401 Natural
02403 Honey
02405 Espresso



**Assembly
Instructions.
Adult Assembly
Required.
Save these
instructions for
future use.**

**VERSION CODE:
3.0/0509/TG**

Visit us online at www.badgerbasket.com

Toll-Free Customer Service: 1-800-236-1310 (Monday through Thursday 7:30 AM to 4:30 PM CST)

Web: <http://www.badgerbasket.com/parts> • **E-mail:** parts1@badgerbasket.com

Mail: PO Box 227, Edgar, WI 54426-0227 • **Phone:** 715-352-2311 • **Fax:** 715-352-3163



BEFORE YOU BEGIN ASSEMBLY:

Check all parts and hardware. If anything is missing or not satisfactory, please **DO NOT** call the store where purchased or return the product to them. **Contact Badger Basket for assistance.** Most problems are resolved without you needing to leave home. When contacting us, please have this instruction manual, your product model number, and your product version code ready. For fastest service, go to:

<http://www.badgerbasket.com/parts>

Your Product Version Code is: **3.0/0509/TG**











USE AND CARE INSTRUCTIONS:

Wipe the table, pad, and safety belt clean with a damp cloth and mild soap as needed. Spot clean baskets as needed. Do not immerse baskets in water. Hamper bag can be removed for machine washing (cold water, tumble dry low or no heat or air dry).




WARNING - FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH

READ ALL INSTRUCTIONS before use of this changing table. Keep instructions for future use. Product and/or hardware may include small parts or screws with sharp points. **Choking Hazard!** Keep unassembled parts out of the reach of small children. Use only the changing pad, parts, and hardware provided by Badger Basket. Do not use the changing table if it is damaged, broken, or missing any parts. **FALL HAZARD** - To prevent death or serious injury, always keep baby within arm's reach. **NEVER** leave your baby unattended, not even for a moment, when you are changing Baby's diaper. **ALWAYS** use the safety belt provided; and as an extra precaution keep at least one hand on your baby at all times. **DO NOT** allow any children to climb or play on the table. **Periodically check** to make sure all the bolts and screws remain tight. This table is suitable for use with children weighing up to 30 lbs. (13.64 kg). Buckle child securely using the safety belt whenever child is on the table. Keep child's skin/body clear of the safety belt buckle when snapping/unsnapping to prevent injury. Buckle is not securely fastened unless you hear an audible "click" to indicate the parts have connected securely together. **NEVER** allow child to stand up on the table due to risk of falls and injury or death. **NEVER** use the changing table without the safety belt and metal bar properly installed. **ALWAYS** secure the changing pad to the changing surface by placing it onto the top shelf and ensuring it's underneath, not on top of, the safety belt.

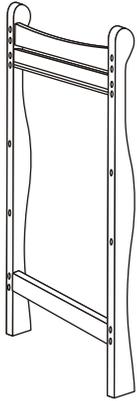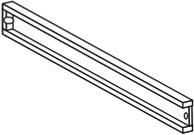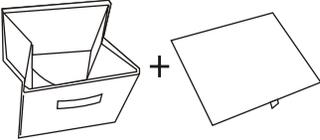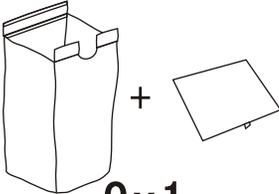 <p>Ax1 LEFT SIDE PANEL</p>	 <p>Bx1 RIGHT SIDE PANEL</p>	 <p>Cx2 TOP RAILS</p>	 <p>Dx2 (DR AND DF) TOP SHELF RAILS</p>
 <p>Gx1 SHELF PANEL</p>	 <p>Hx2 HAMPER TRACK</p>	 <p>Ex2 (ER AND EF) BOTTOM RAILS</p>	 <p>Fx2 VERTICAL POSTS</p>
 <p>Kx2 LEFT BASKET TRACKS - TOP/MIDDLE</p>	 <p>Lx2 RIGHT BASKET TRACKS - TOP/MIDDLE</p>	 <p>Ix2 HAMPER GUIDERAILS</p>	 <p>Jx2 HAMPER DOWELS</p>
 <p>Ox1 MATTRESS PAD</p>	 <p>Px3 BASKET BODY AND BOTTOM PANELS</p>	 <p>Qx1 HAMPER BAG AND BOTTOM PANEL</p>	 <p>Ø6x48mm Rx12</p>  <p>Ø6x28mm Sx12</p>
 <p>Ø4x19mm Tx10</p>			
 <p>Ux12</p>	<p>Vx1 METAL SUPPORT BAR</p>	<p>Wx1 SAFETY BELT</p>	<p>TOOL REQUIRED (NOT INCLUDED)</p>

1

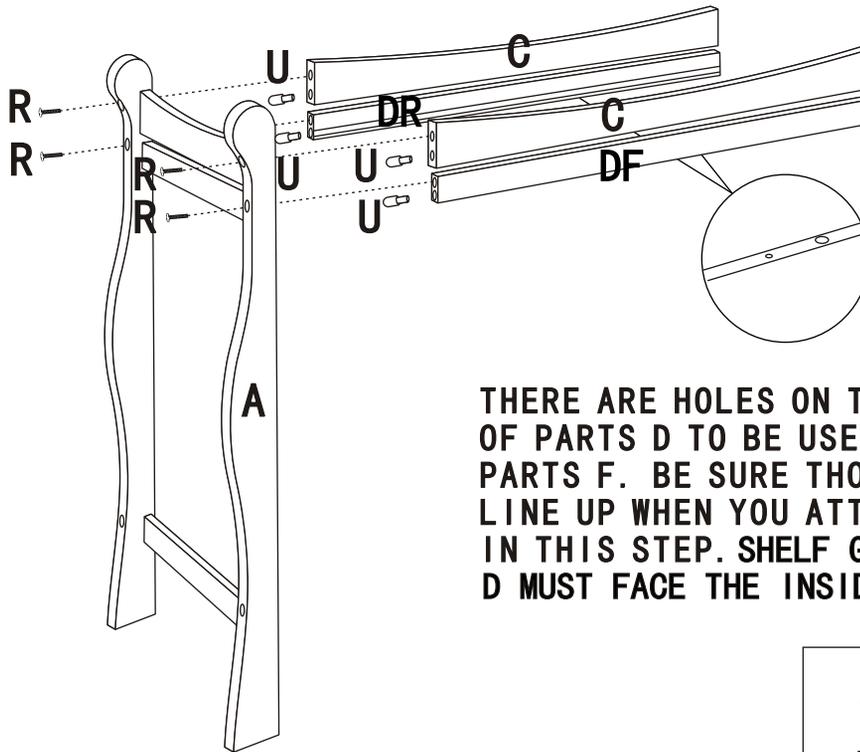

THERE ARE HOLES ON THE UNDERSIDE OF PARTS D TO BE USED IN STEP 2 FOR PARTS F. BE SURE THOSE TWO HOLES LINE UP WHEN YOU ATTACH THE RAILS IN THIS STEP. SHELF GROOVES ON PARTS D MUST FACE THE INSIDE.




Ux4



Ø6x48mm

Rx4

2

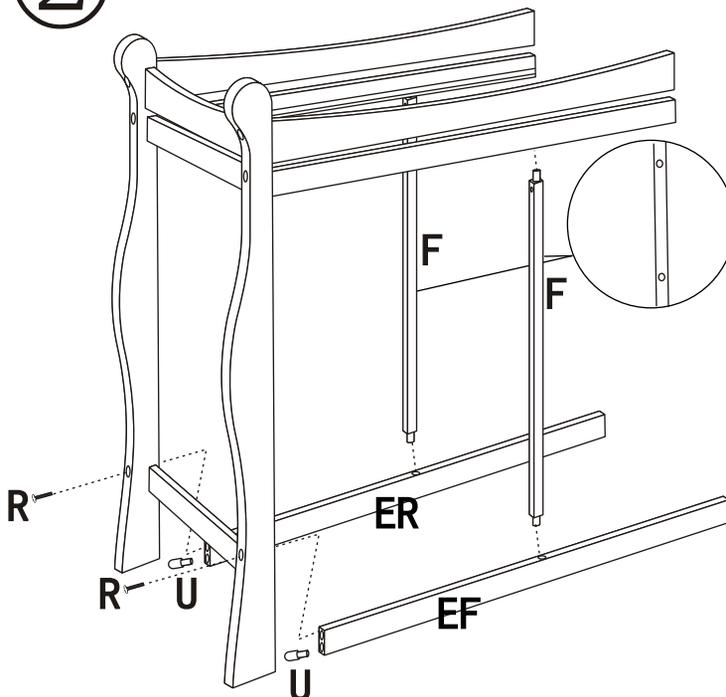

INSERT THE VERTICAL POSTS (PARTS F) INTO THE HOLES ON THE TOP AND BOTTOM RAILS (PARTS D AND E) BEFORE YOU ATTACH THE BOTTOM RAILS TO THE END PANEL (PART A). THE HOLES FOR THE POSTS ARE NOT CENTERED AND SHOULD BE POSITIONED CLOSER TO THE RIGHT SIDE PANEL (PART B THAT YOU WILL ATTACH IN THE NEXT STEP). ALSO, THERE ARE TWO HOLES ON THE LONG EDGES OF EACH PART F THAT MUST BE POSITIONED FACING PART B (WHICH YOU WILL ATTACH IN THE NEXT STEP).




Ux2




Ø6x48mm

Rx2


3

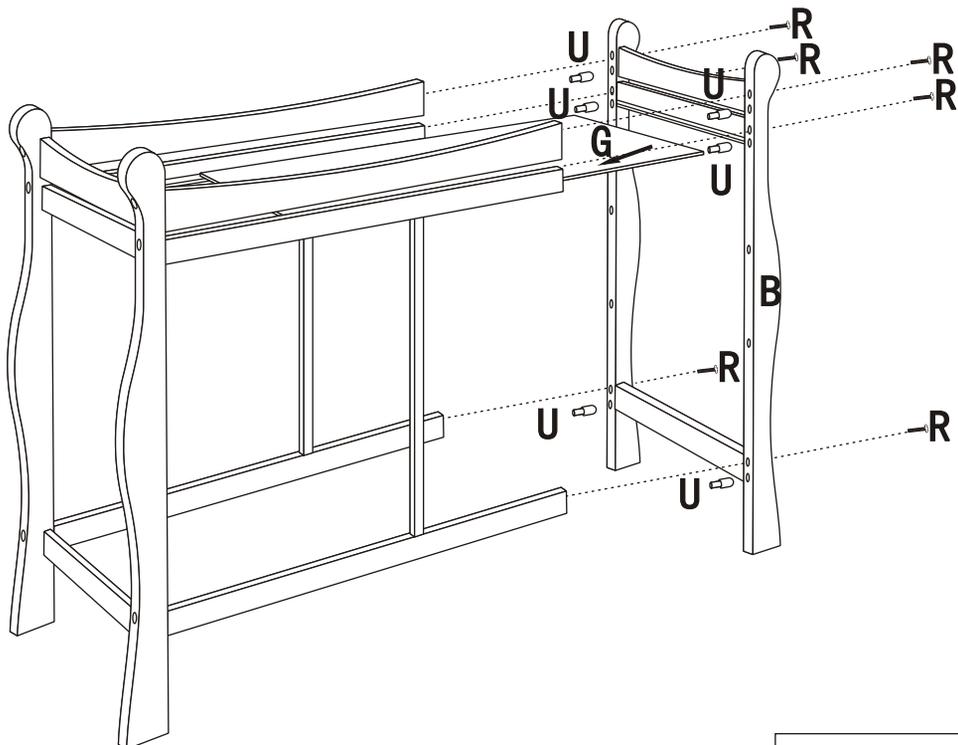

SLIDE THE SHELF PANEL (PART G) INTO THE GROOVES ON THE TOP SHELF RAILS (PARTS D) BEFORE ATTACHING THE RIGHT SIDE PANEL (PART B).

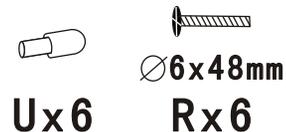



4

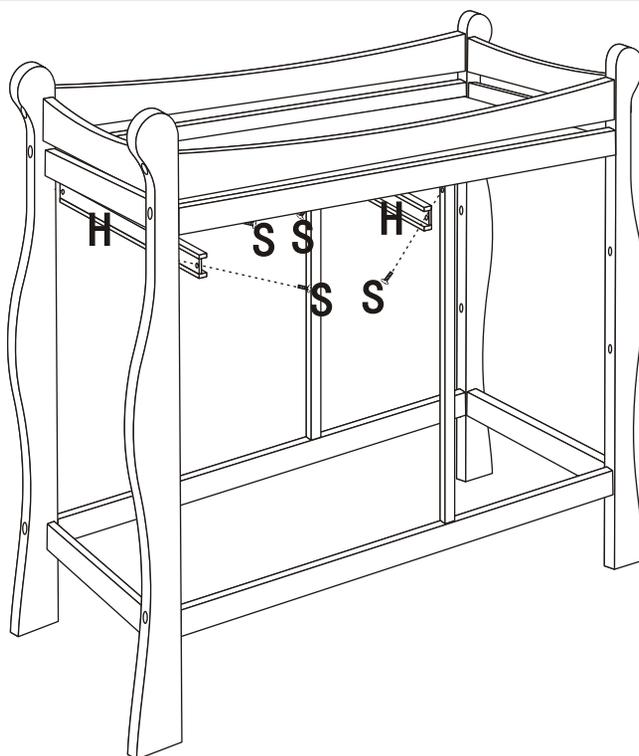

ATTACH THE HAMPER TRACKS TO THE LEFT SIDE PANEL (PART A) AND THE VERTICAL POSTS (PART F) MAKING SURE TO POSITION THE OPEN END OF THE TRACKS TOWARDS THE FRONT SO THE HAMPER GUIDERAILS WILL SLIDE INTO THE TRACKS IN STEP 9.



5

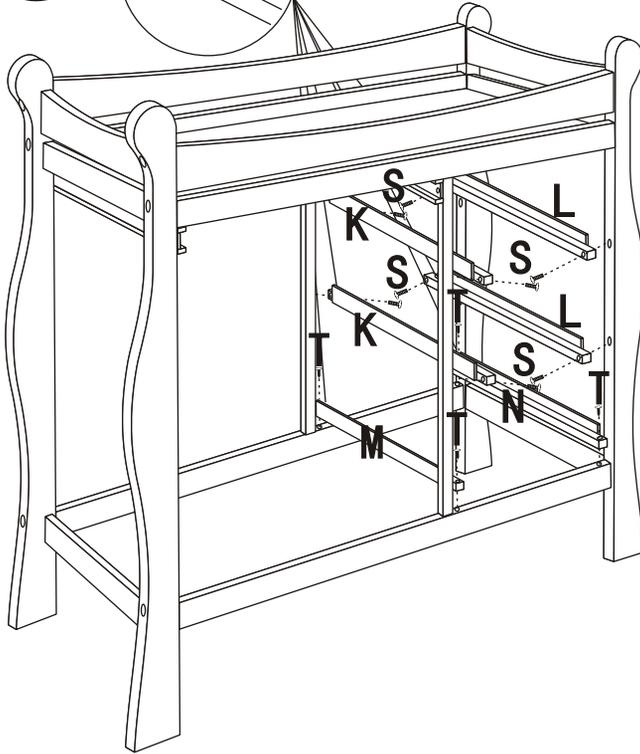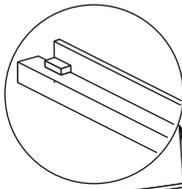


ATTACH THE TOP/MIDDLE BASKET TRACKS (PARTS K AND L) TO THE RIGHT SIDE PANEL (PART B) AND VERTICAL POSTS (PART F) USING PART S BOLTS. ATTACH THE BOTTOM BASKET TRACKS (PARTS M AND N) TO THE BOTTOM RAILS (PARTS E) USING PART T SCREWS.

THERE ARE DRAWER STOPPERS ON ALL OF THE K, L, M, AND N BASKET TRACKS WHICH MUST ALL BE POSITIONED AT THE BACK OF THE CHANGING TABLE.


Ø4x19mm
T x 4



Ø6x28mm
S x 8

6


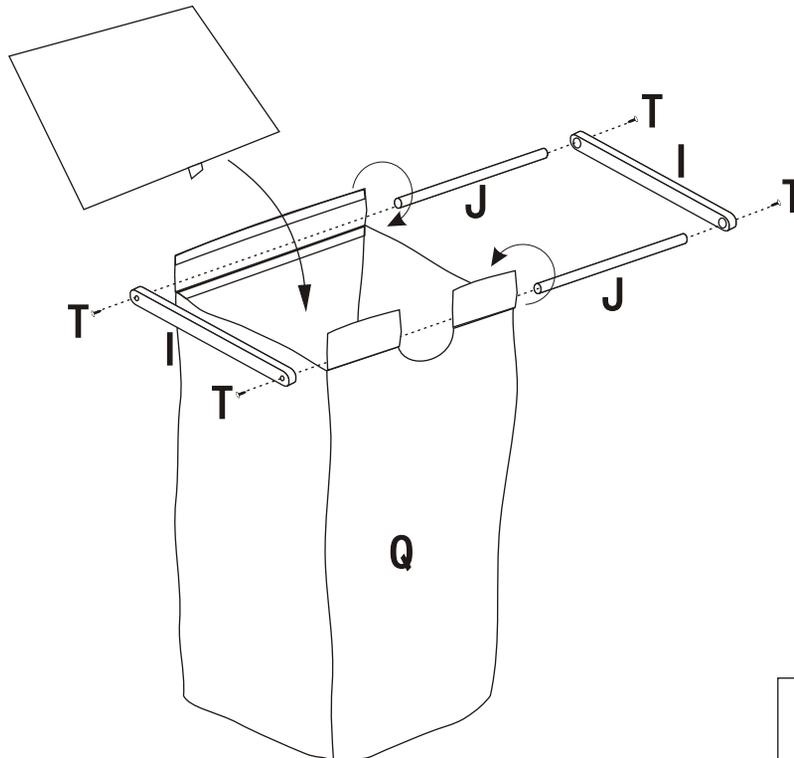



Ø4x19mm
T x 4

7

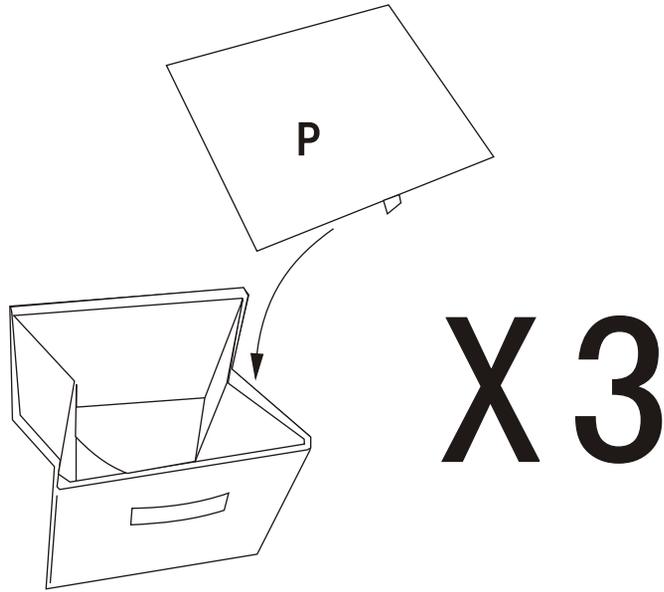


8

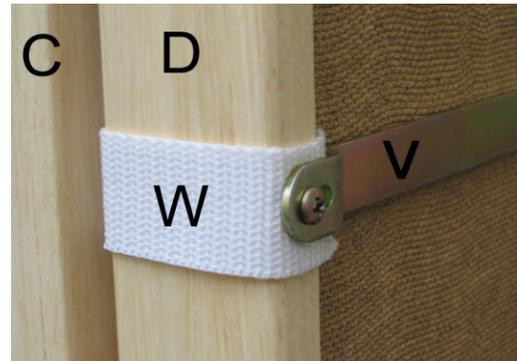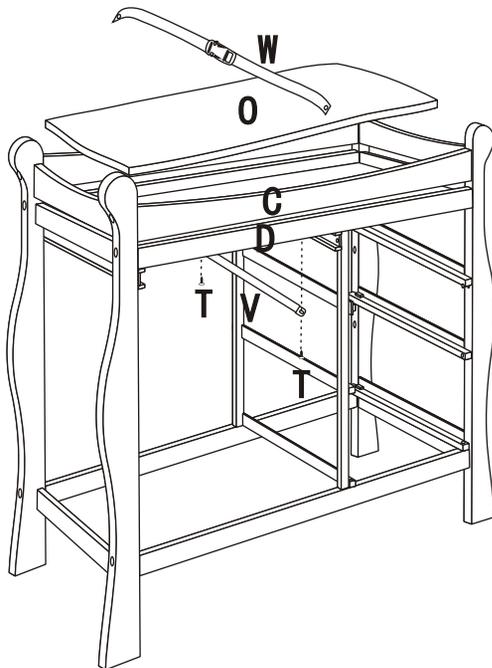

PLACE THE MATTRESS PAD (PART O) ON THE SHELF PANEL (PART G). SLIP THE ENDS OF THE SAFETY BELT (PART W) BETWEEN THE TOP RAILS AND TOP SHELF RAILS (PARTS C AND D). ON THE UNDERSIDE OF THE TOP SHELF, POSITION THE END OF THE METAL BAR (PART V) OVER THE ENDS OF THE SAFETY BELT AND SECURE IN PLACE WITH TWO OF THE PART T SCREWS AS SHOWN IN THE PHOTO.


Ø4x19mm
Tx2

9

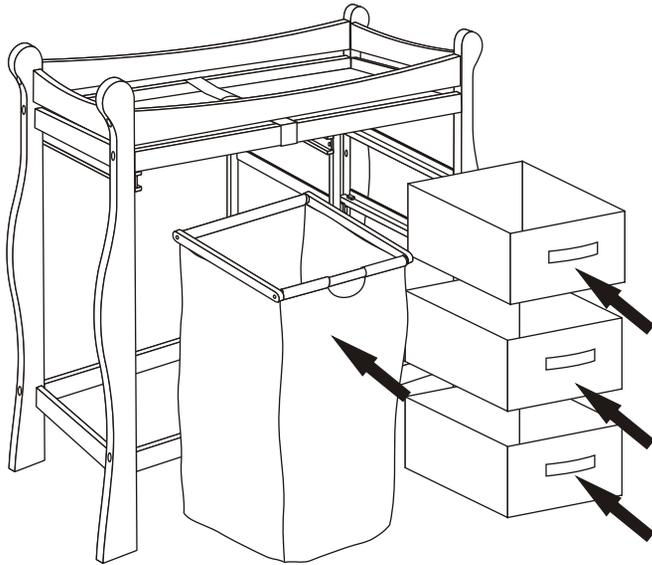

BUCKLE CHILD SECURELY USING THE SAFETY BELT (PART W) WHENEVER CHILD IS ON THE TABLE. UNCLIP AND SEPARATE THE BUCKLE BY SQUEEZING THE TABS ON THE SIDES TO RELEASE THE BUCKLE TONGUE FROM THE BUCKLE. PLACE CHILD ONTO CHANGING SURFACE AND SNAP THE BUCKLE AND BUCKLE TONGUE BACK TOGETHER. KEEP CHILD'S SKIN/BODY CLEAR OF THE BUCKLE WHEN SNAPPING AND UNSNAPPING TO PREVENT INJURY. BUCKLE IS NOT SECURELY FASTENED UNLESS YOU HEAR AN AUDIBLE "CLICK" TO INDICATE THE PARTS HAVE CONNECTED SECURELY TOGETHER.

NEVER ALLOW CHILD TO STAND UP ON THE TABLE DUE TO RISK OF FALLS AND INJURY OR DEATH. NEVER USE THE TABLE WITHOUT THE SAFETY BELT (PART W) AND METAL BAR (PART V) IN PLACE.

ALWAYS SECURE THE CHANGING PAD TO THE CHANGING SURFACE BY PLACING IT ONTO THE TOP SHELF AND ENSURING THAT IT'S UNDERNEATH, NOT ON TOP OF, THE SAFETY BELT.