


## Record Player Stand CF1185



## PARTS LIST

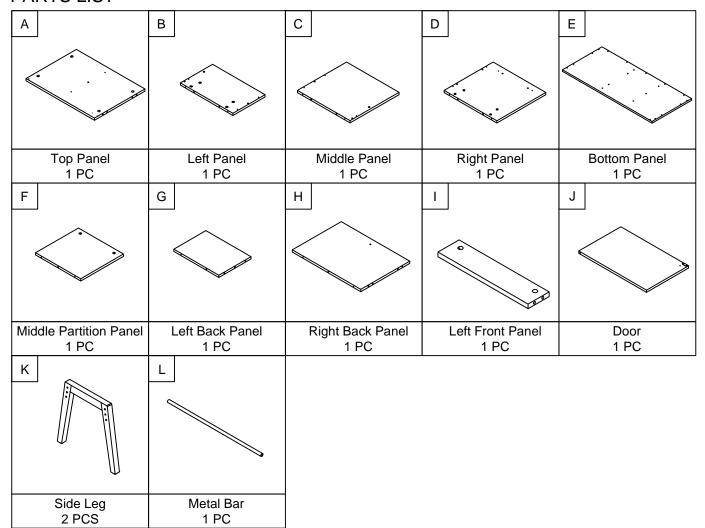

## HARDWARE LIST

#1	#2	#3	#4	#5
			0	
	<b>*</b>	1/4"*25mm	1/4"*10mm	1/4"*13mm
Knob 1 PC	Magnet 1 PC	Bolt 8 PCS (Extra 1)	Spring Washer 8 PCS (Extra 1)	Flat Washer 8 PCS (Extra 1)
#6 <b>6 Juliu</b>	#7	#8	#9	#10
7*38mm	(a)	*	8*30mm	5/32"*20mm
Tapping Bolt 12 PCS (Extra 1)	Cam Bolt 16 PCS (Extra 1)	Cam Lock 16 PCS (Extra 1)	Wood Dowel 26 PCS (Extra 1)	Round Head Bolt 1 PC (Extra 1)
#11	#12	#13		
6*3*15mm		M4		
Round Head Screw 2 PCS (Extra 1)	Cam Sticker 24 PCS (Extra 1)	Allen Wrench 1 PC		

## ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Insert cam bolts (part #7) into pre-drilled holes of panels (parts A, B & D) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

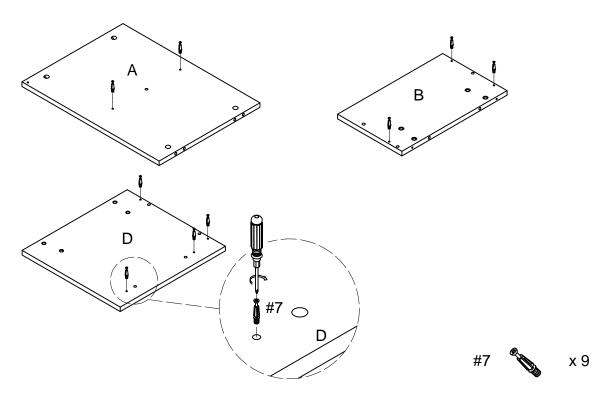

Step 2. Insert cam bolts (part #7) into pre-drilled holes of middle panel (part C) using phillips head screwdriver. Attach magnet (part #2) to middle panel (part C) using round head screws (part #11) and phillips head screwdriver.

Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt

are no longer visible.

#11

#11

#2

c


the control of the side of the control o

4

#11

x 2

Step 3. Attach knob (part #1) to door (part J) using round head bolt (part #10) and phillips head screwdriver.

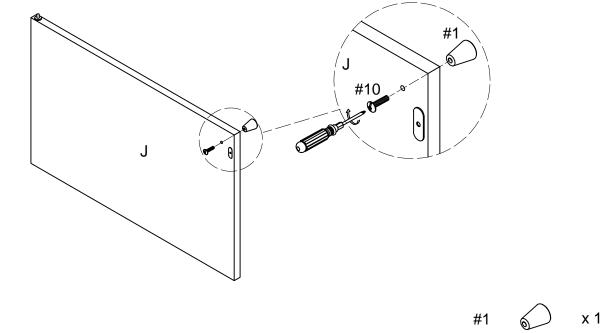


#10

x 1


Step 4. Attach panels (parts A & H) to right panel (part D) using cam locks (part #8), wood dowels (part #9) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

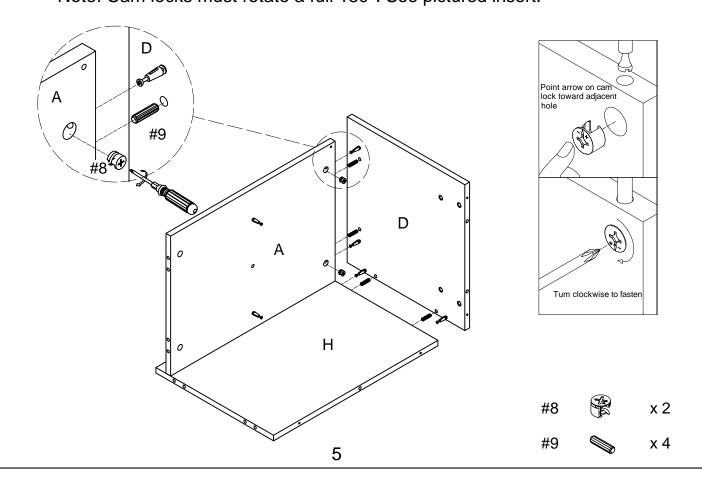


Step 5. Attach middle partition panel (part F) to top panel (part A) using cam locks (part #8), wood dowel (part #9) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

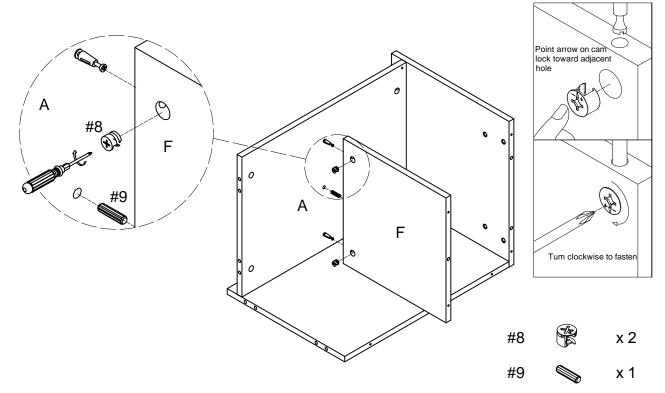

Step 6. Attach middle panel (part C) to assembled unit (parts A & H) using cam locks (part #8), wood dowels (part #9) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

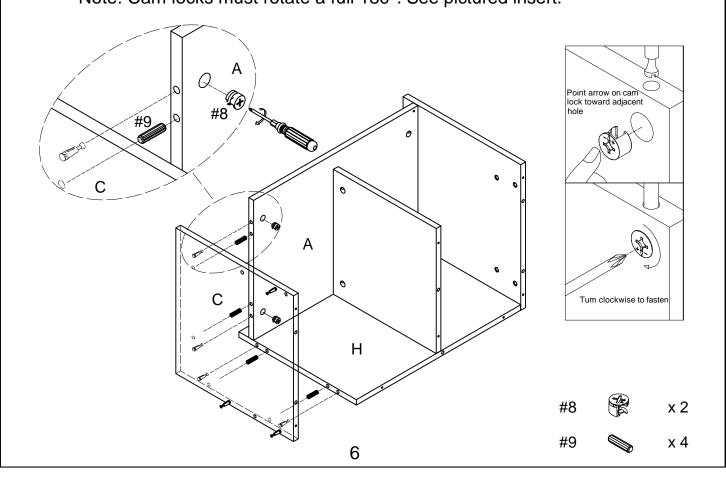



Step 7. Secure right back panel (part H) using cam locks (part #8), tapping bolt (part #6), allen wrench (part #13) and phillips head screwdriver.

Attach panels (parts G & I) to middle panel (part C) using cam locks (part #8),

wood dowels (part #9) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

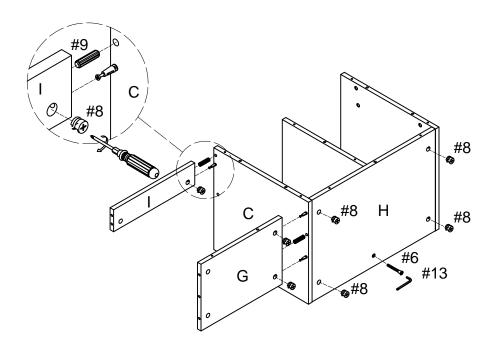


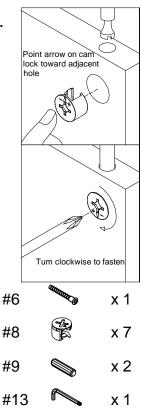


Step 8. Attach left panel (part B) and metal bar (part L) to assembled unit (parts C, G & I) using cam locks (part #8), wood dowels (part #9) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

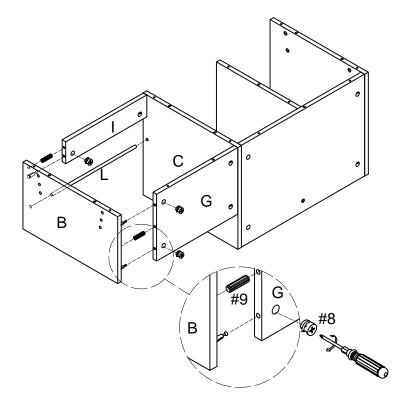


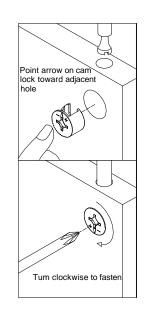


Step 9. Attach bottom panel (part E) to assembled unit (parts B, C, D, F, G & H) using tapping bolts (part #6), wood dowels (part #9) and allen wrench (part #13).

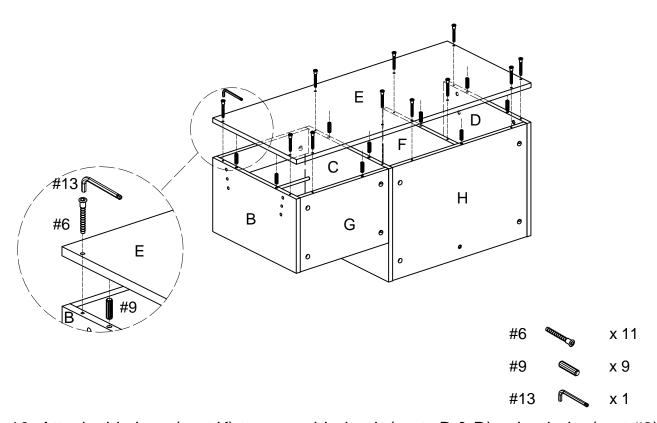

Step 10. Attach side legs (part K) to assembled unit (parts B & D) using bolts (part #3), spring washers (part #4), flat washers (part #5), wood dowels (part #9) and allen wrench (part #13).

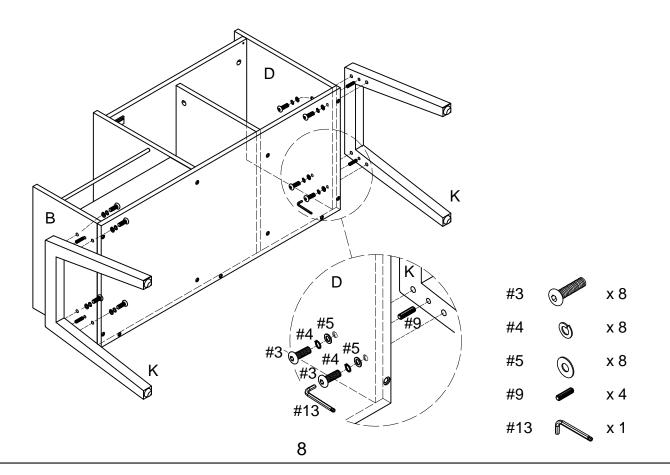

Step 11. Carefully turn unit upright. Attach door (part J) by placing pin hinge (preinstalled in door) in the pre-drilled hole of bottom panel (part E). Then depress the top spring-loaded pin hinge in the pre-drilled hole of top panel (part A).

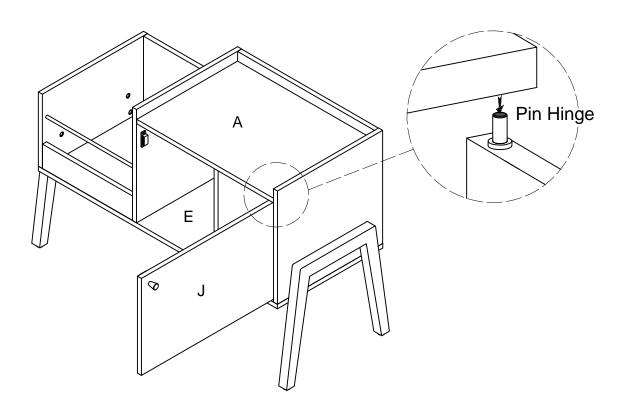

Step 12. Using cam stickers (part #12) cover bolts (part #3) and cam locks (part #8).

NOTE: It is important to adjust levelers once fully assembled and upright.

Extend adjustable leveler until it's firmly in contact with the floor.

If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

