

ASSEMBLY INSTRUCTIONS



CAUTION

◆ Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.

◆ Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

TOOLS REQUIRED



Ladder



Safety glasses



Electrical tape




Phillips screwdriver



Flat blade screwdriver




Pliers




Wire strippers

HARDWARE INCLUDED



Fixture

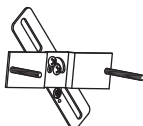

Mounting Unit



Ball Nuts



Rubber Rings




Mounting Screws



Wire Nuts

***PARTS SHOWN MAY DIFFER SLIGHTLY PER LIGHT FIXTURE**


EXPLODED PARTS

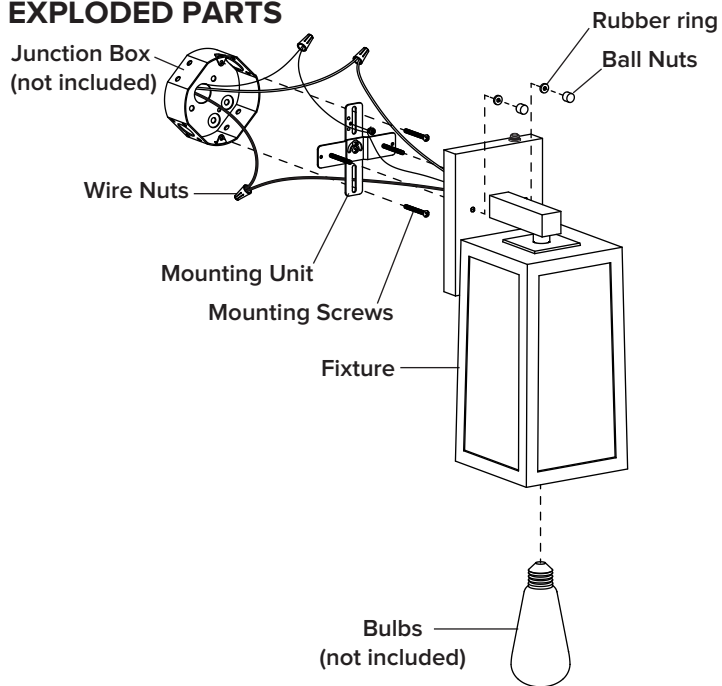

INSTALLATION


STEP 1

Unscrew the **rubber rings** and **ball nuts** from the **mounting unit**. Use the **mounting screws** to attach the **mounting unit** to the junction box (not included).

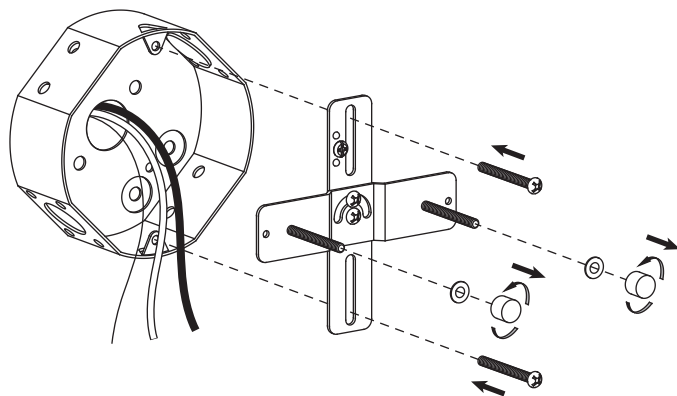

STEP 2

Make the electrical connection from the junction box (not included) to the **fixture**. Connect the ground wire to the **mounting unit** using the preinstalled green ground screw. Next, connect the positive, negative and ground wires with the supplied **wire nuts**. Secure with electrical tape.

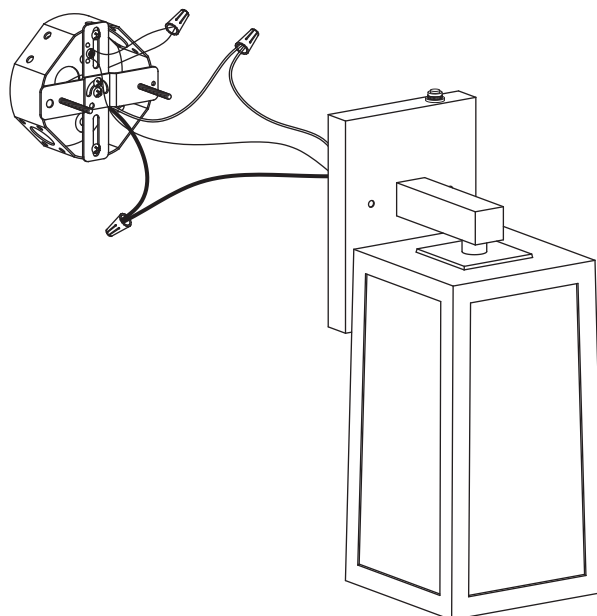

Black or Red wire (hot)
from the junction box

Black wire from
the fixture


White wire (neutral)
from the junction box

White wire from
the fixture

Bare or Green ground wire
from the junction box

Ground wire from
the Fixture

*Green Ground Screw




*Sealing tape
(not included)

ASSEMBLY INSTRUCTIONS (INSTALLATION)

STEP 3


Attach the **fixture** to the **mounting unit** through screw holes as shown, and secure it with **rubber rings** and **ball nuts**.

NOTICE: Please use caulk in the back plate and wall mounting surface to prevent water from entering.

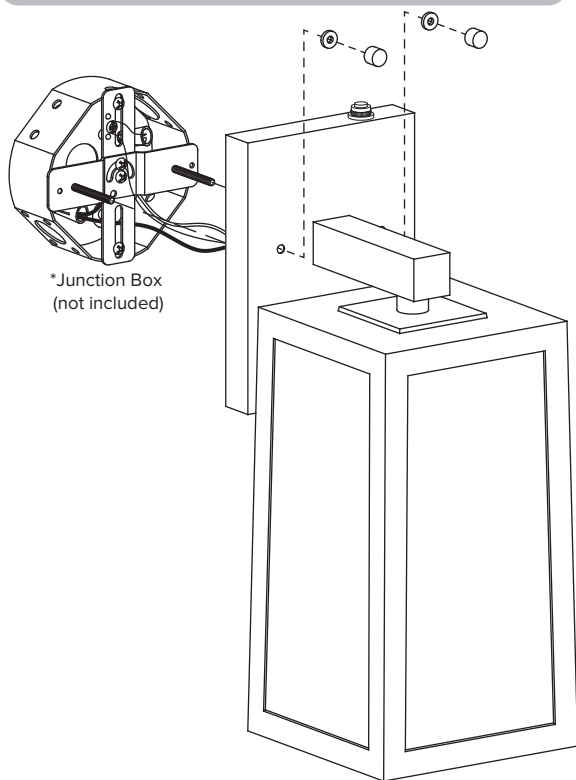

STEP 4

Install bulbs (not included).

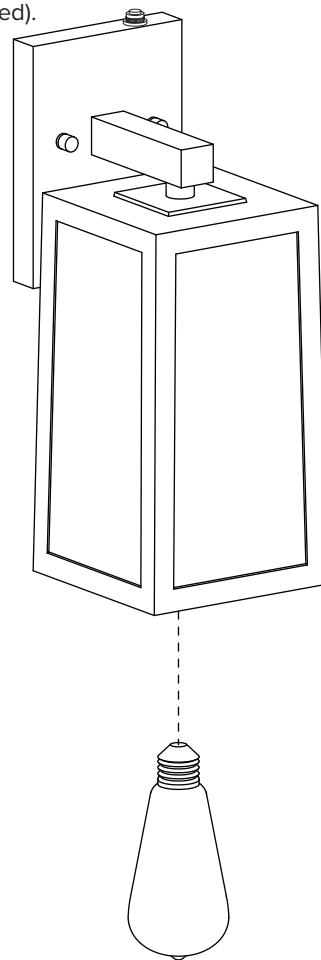

OPERATING INSTRUCTIONS

1. Light control switch is an automatic controller, can be used for outdoor and indoor light control automatic lighting, when the night comes illuminance $\leq 10\text{Lux}$, the lamp will be automatically lit, and in the day when the illumination $\geq 30\text{Lux}$, the lamp will automatically turn off the lamp.

2. Rated voltage: 120VAC/60Hz; The bulb should be installed at less than the rated power of the sensor; Energy-saving lamp/ballast /LED 39W; Incandescent lamp 60W.

3. The photosensor should be installed in a place with good photosensitivity, without obstacles affecting its acceptance of natural light, and backlit with the lamp source, so as to prevent the product from jumping when sensing its own light.

4. There should be no swinging objects in front of the photosensor.

